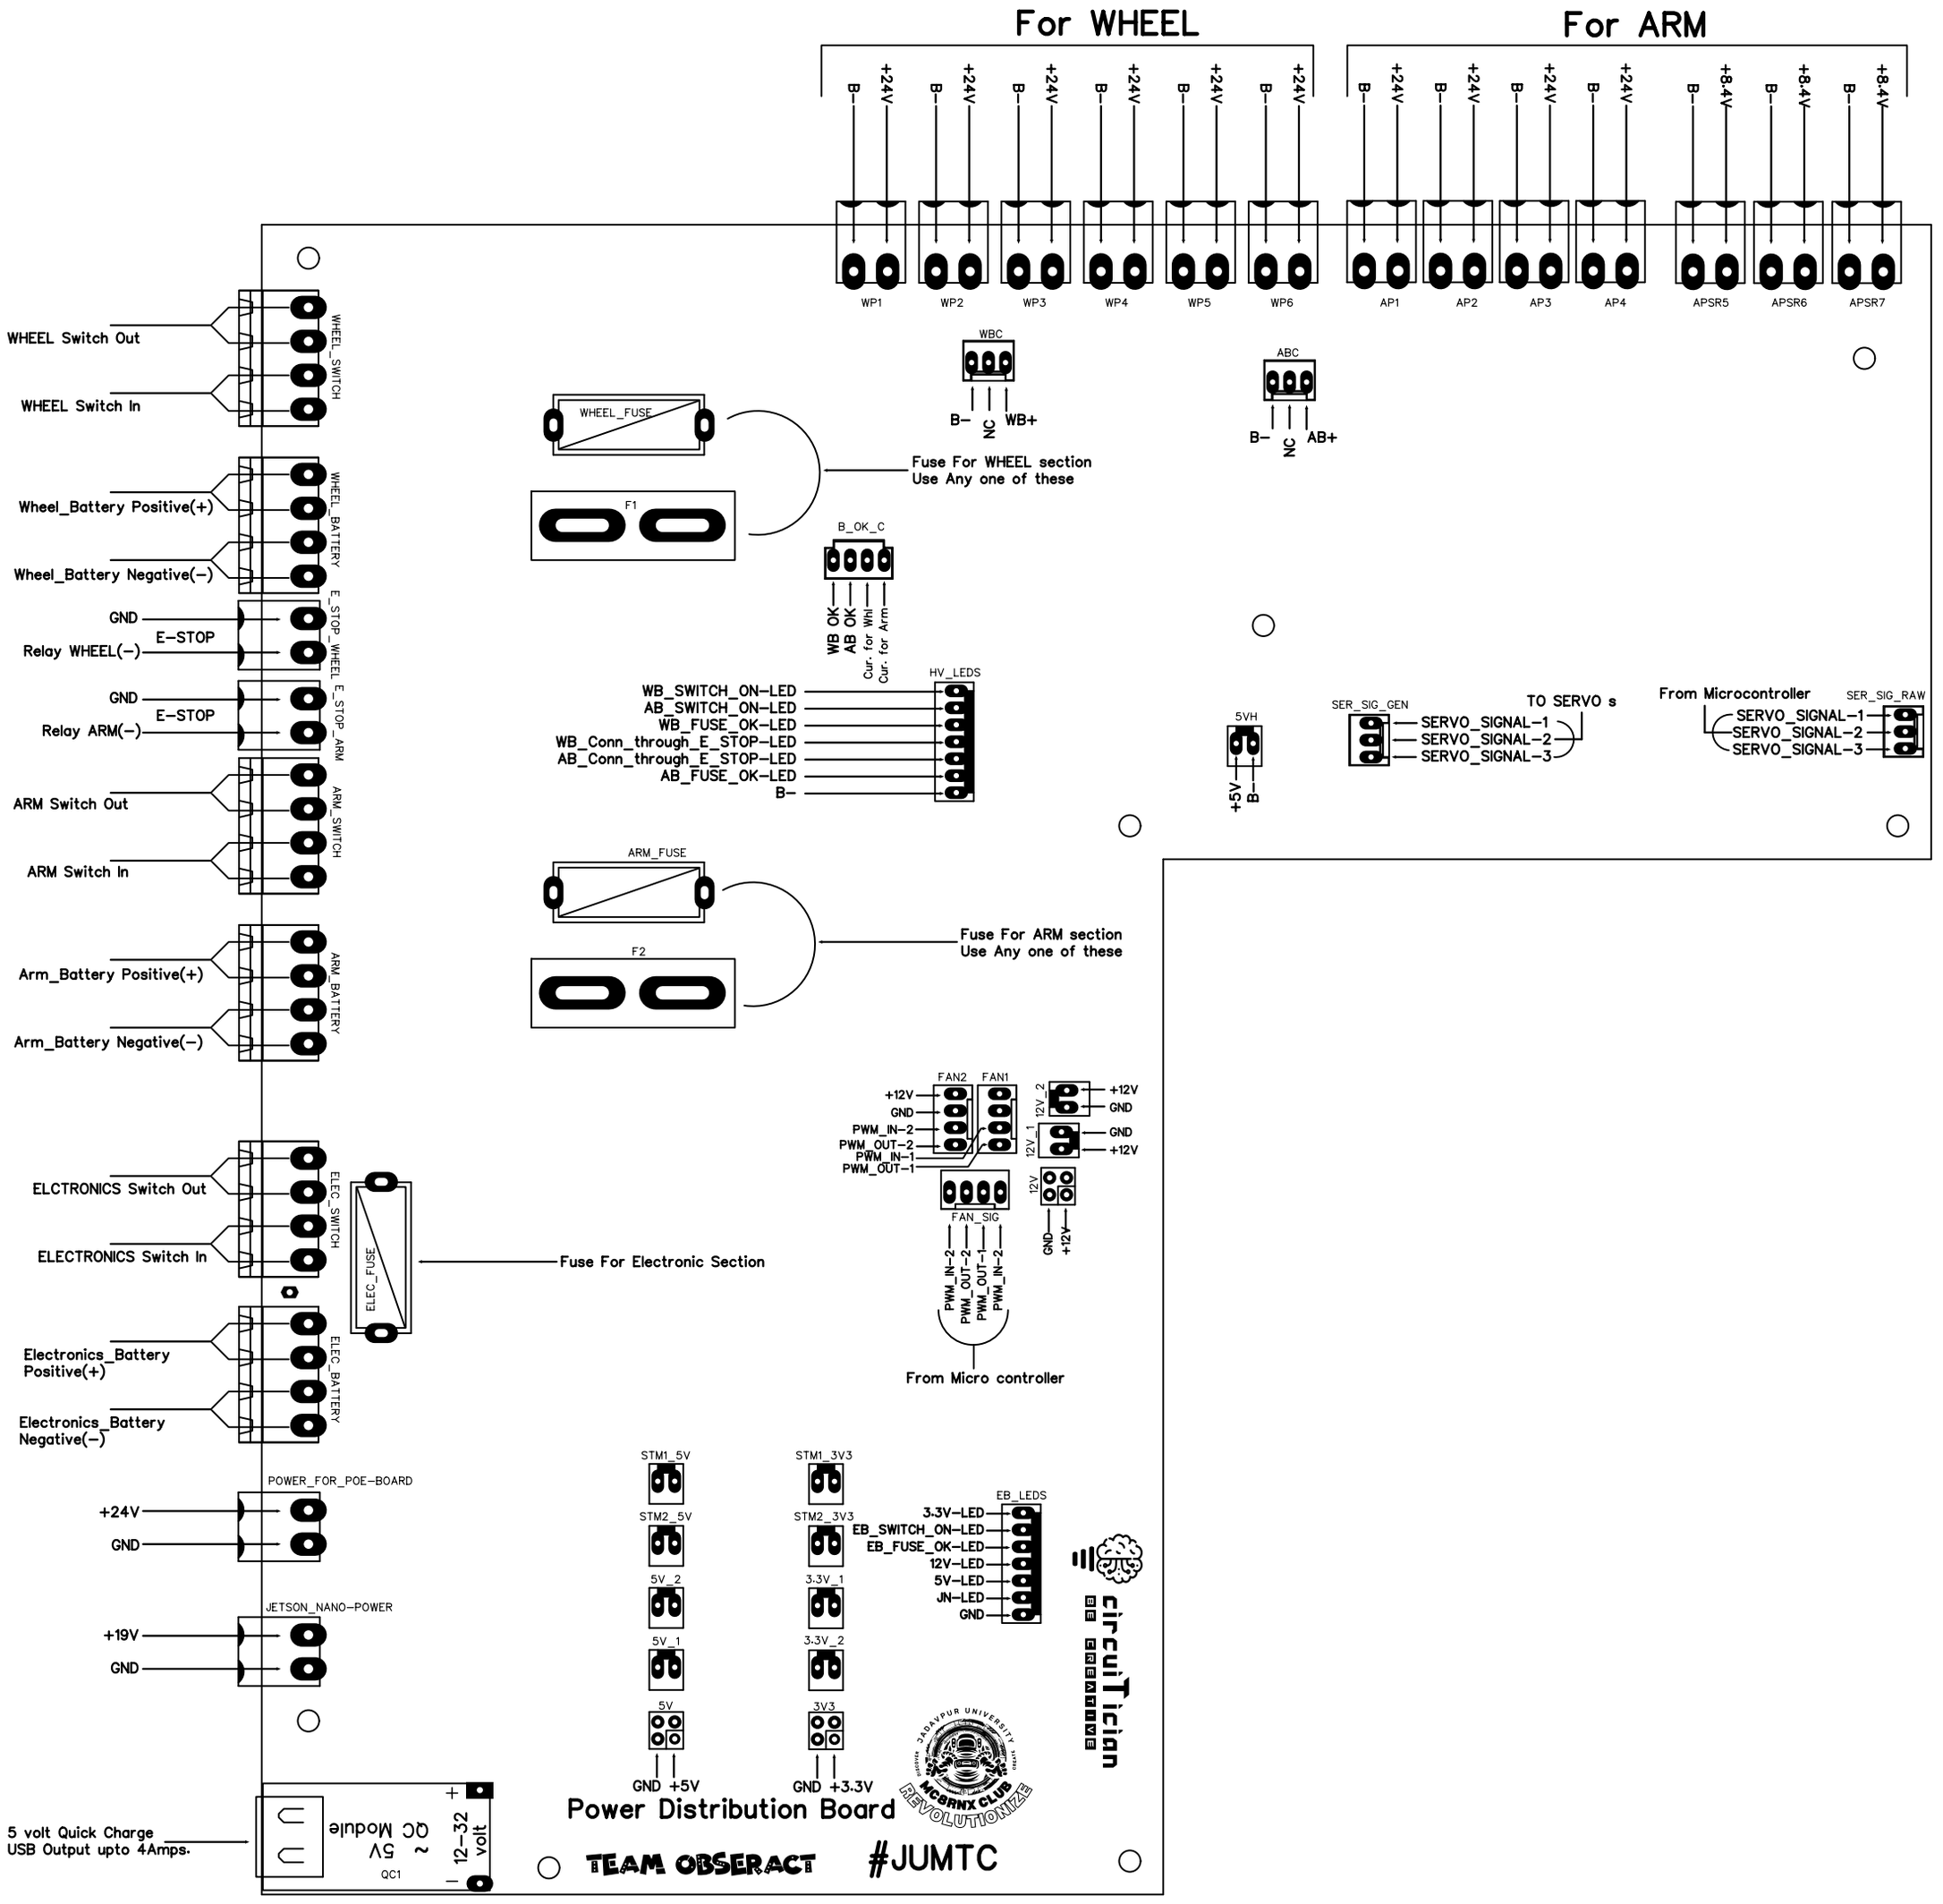

For WHEEL
For ARM
B−
+24V
+8.4V
WP1
WP2
WP3
WP4
WP5
WP6
AP1
AP2
AP3
AP4
APSR5
APSR6
APSR7
WBC
B− NC WB+
ABC
B− NC AB+
WHEEL_SWITCH
WHEEL Switch Out
WHEEL Switch In
WHEEL_BATTERY
Wheel_Battery Positive(+)
Wheel_Battery Negative(−)
E_STOP_WHEEL
GND
E−STOP
Relay WHEEL(−)
E_STOP_ARM
GND
E−STOP
Relay ARM(−)
ARM_SWITCH
ARM Switch Out
ARM Switch In
ARM_BATTERY
Arm_Battery Positive(+)
Arm_Battery Negative(−)
WHEEL_FUSE
F1
Fuse For WHEEL section
Use Any one of these
B_OK_C
WB OK
AB OK
Cur. for Whl
Cur. for Arm
HV_LEDS
WB_SWITCH_ON−LED
AB_SWITCH_ON−LED
WB_FUSE_OK−LED
WB_Conn_through_E_STOP−LED
AB_Conn_through_E_STOP−LED
AB_FUSE_OK−LED
B−
5VH
+5V
B−
SER_SIG_GEN
SERVO_SIGNAL−1
SERVO_SIGNAL−2
SERVO_SIGNAL−3
TO SERVO s
From Microcontroller
SER_SIG_RAW
SERVO_SIGNAL−1
SERVO_SIGNAL−2
SERVO_SIGNAL−3
ARM_FUSE
F2
Fuse For ARM section
Use Any one of these
ELCTRONICS Switch Out
ELECTRONICS Switch In
ELEC_SWITCH
ELEC_FUSE
Fuse For Electronic Section
Electronics_Battery
Positive(+)
Electronics_Battery
Negative(−)
ELEC_BATTERY
POWER_FOR_POE−BOARD
+24V
GND
JETSON_NANO−POWER
+19V
GND
5 volt Quick Charge
USB Output upto 4Amps.
QC Module
5V
12−32 volt
QC1
FAN2
FAN1
+12V
GND
PWM_IN−2
PWM_OUT−2
PWM_IN−1
PWM_OUT−1
FAN_SIG
12V_2
12V_1
12V
From Micro controller
STM1_5V
STM2_5V
5V_2
5V_1
5V
GND +5V
STM1_3V3
STM2_3V3
3.3V_1
3.3V_2
3V3
GND +3.3V
EB_LEDS
3.3V−LED
EB_SWITCH_ON−LED
EB_FUSE_OK−LED
12V−LED
5V−LED
JN−LED
GND
Power Distribution Board
TEAM OBSERACT
#JUMTC
JADAVPUR UNIVERSITY
MCGRNX CLUB
REVOLUTIONIZE
circuiTician