TRIUMPH CHURCH PRODUCTION RIG

Operator Guide

Running a Sunday from the Stream Deck, and what to do when something does not work

Read off the live rig October 27, 2026 at 6:09 PM · Companion 5.0.7+9763-stable-cec2f88e6f

Contents

1. About this guide
2. What you are driving
3. How the deck is laid out
4. What happens on its own on a Sunday
5. Before the service
6. During the service
7. After the service
8. When something is wrong

About this guide

How to run a Sunday from the Stream Deck, and what to do when something does not work. You do not need to know how any of it is built: that is the Reference and the Recovery Guide.


What you are driving

	Where	What it is for
The deck	The Stream Deck + XL at the desk, and the smaller Stream Deck + beside it	Every control: switcher, cameras, slides, lights, sound, screens, power
The board	The booth screen, or **http://production/** on any device on the AV network	One verdict ("Ready for 10:30", "2 things need attention") and what to do about each problem. Its **Deck** tab is the same Stream Deck on an iPad
Companion	**http://10.23.0.242:8000**	The software behind the deck. Look, don't edit, unless the Recovery Guide sends you there

All three only work on the **AV network** (the church's production LAN, addresses starting `10.23.0.`). Church Wi-Fi is not enough.

How the deck is laid out

- **The top row is the folder row**, the same on every page: **Home, Power, PP1, MA2, ATEM, SQ7, VW, PTZ, System**. Press one to jump there.
- **The three rows under it are keys.** Below them is **the touchstrip** (readouts), and under that **six knobs** that turn and press.
- **Some keys open a sub-page** that has no folder-row key of its own:
  Home → **Dante** (is every microphone reaching the desk?), also from SQ7
  SQ7 → the fader folders **DCA 1-4**, **DCA 5-8**, **Leads**, **BGV**, **Lav** and **FX**
  PP1 → **Tracks** (walk-in music)
  PTZ → **CAM 1**, **CAM 3**, their **Setup** pages, and **Worship** / **Sermon** (both cameras on one page)
- **Colours mean the same thing everywhere:** green is on, running or healthy; red is live, recording or a fault; amber is a warning (a route down, no card); grey is off or idle.
- **The deck comes back on the page it was left on** after a restart, so check which page you are on before pressing anything.

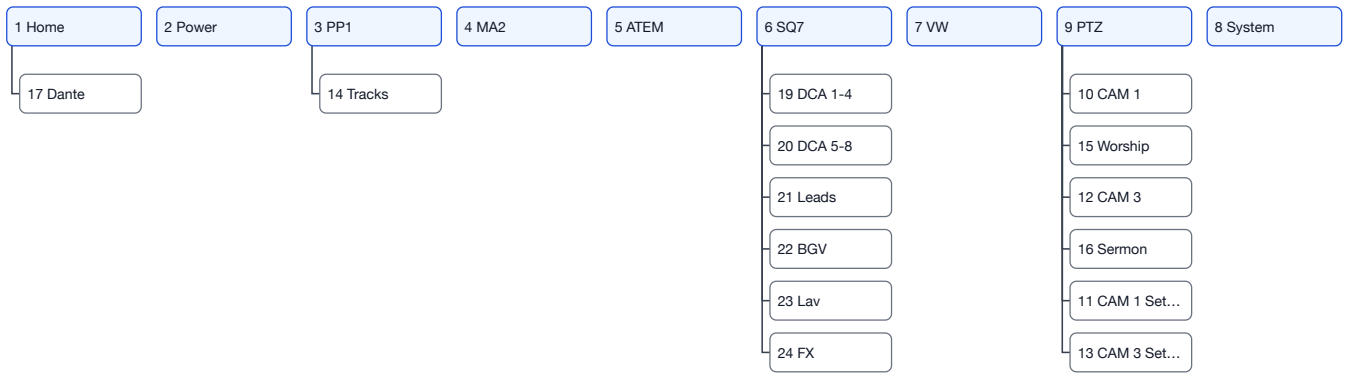

The Home page, where the deck should be left:



What happens on its own on a Sunday

Companion runs these at the times shown; you do not press anything. The board's "Run" card shows the same list with a tick as each one lands.

Time	What happens
8:05	Projectors and PA power **on** (never off: this only ever switches on)
10:00	Walk-in music starts on the PP1 iMac. ProPresenter shows **Pre-Service** and the switcher cuts to **PP1**
10:00:20	If Pre-Service did not start, it is fired once more
10:24:57	**Countdown** plays; the router puts **Program** on the recorder; the **HyperDeck starts recording**; the **stream starts**
10:29:56	Walk-in music fades out over four seconds and pauses

What still needs a person: ending the stream and the recording after the service, cameras, cuts, slides, lights and the mix, and powering down.

Before the service


Work down this list from about 9:30.

1. **Look at the board.** It should say *Ready for 10:30* with everything green. Anything it lists under *needs attention* comes with what to do about it; do that first.
2. **Home page:** Projectors and PA green. If not, see *Power* below.
3. **Recording:** the **Record** key on Home shows the hours left on the card. **NO CARD** in amber means there is no SD card in the HyperDeck: put one in (format it in the deck) before 10:24.
4. **Dante** key on Home is green. Red means a microphone source is not reaching the desk: open it and see which.
5. **Cameras:** press **PTZ**, check both cameras answer (their pan/tilt/zoom readouts move when you nudge). Put each on its first preset.
6. **Slides:** ProPresenter is on the Sunday Service playlist.
7. **Lights:** MA2 page, turn the **Lights** knob to the level you want. That one fader runs all the lighting, and setting it once also lines the strip up with the desk.
8. Go back to the **Home** page and leave the deck there.

The full engineering checklist (camera formats, exposure, audio levels) is in the Reference, *Engineering notes: Checklists*. It is for setting the rig up, not for every Sunday.


During the service

Switching (ATEM page)

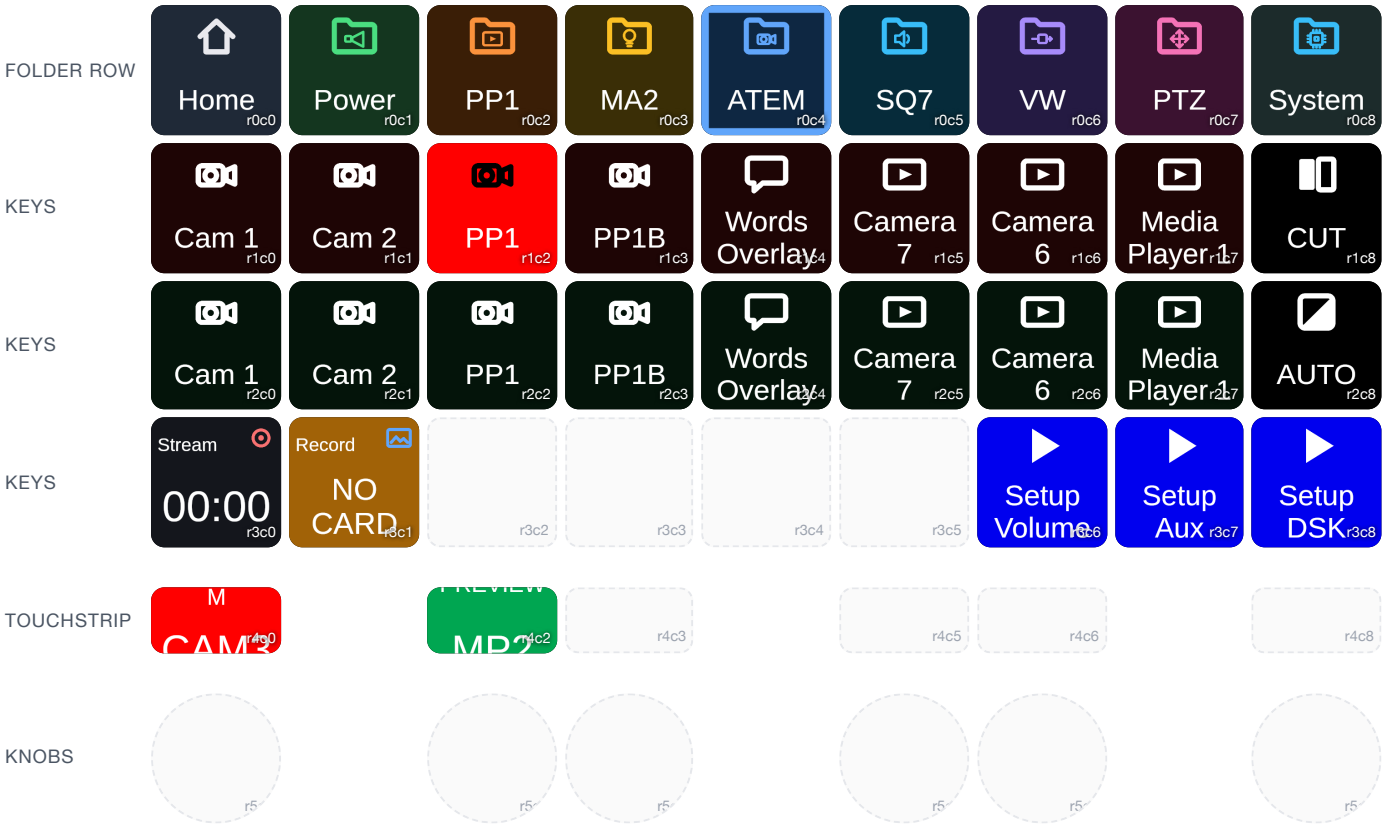

- **Top row: what is on Program** (live). **Second row: Preview** (next). Press a Preview key to choose the next shot, then **CUT** (instant) or **AUTO** (a mix).
- The keys are captioned with the switcher's own input names (Cam 1, Cam 2, PP1, ...).
- **Stream** has a two-step guard: press once to arm, again to fire. It starts by itself at 10:24:57; you only need it to **stop** the stream at the end.
- **Record** starts and stops the HyperDeck. It turns red and counts while recording. One press stops it, so leave it alone until the service is over.

Cameras (PTZ page)

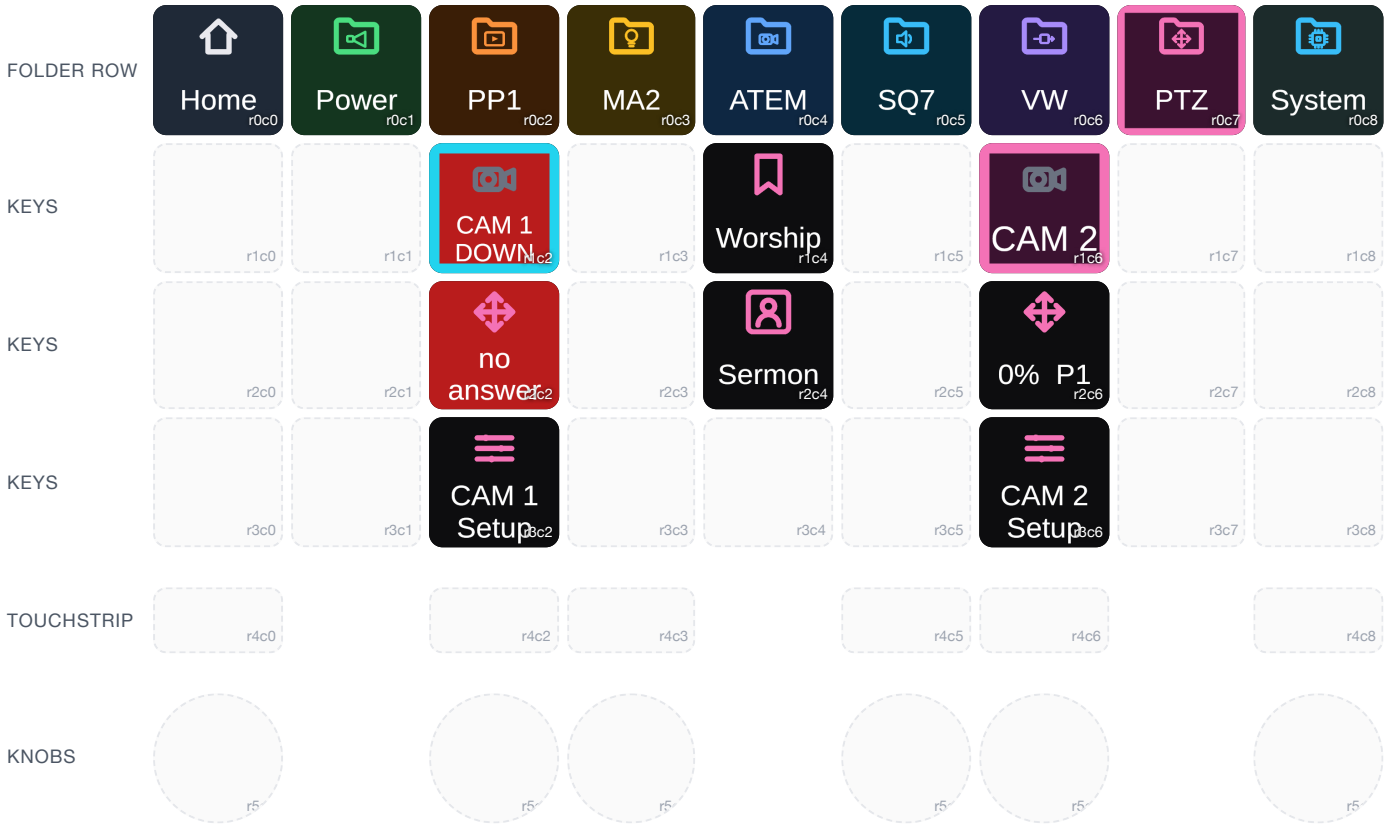


The Worship page, both cameras side by side:



- The PTZ page is a **chooser**: pick **CAM 1** or **CAM 3** for one camera, or **Worship** / **Sermon** for both side by side.
- **Preset keys** (1 Wide, 2 Stage, ...) move the camera to a saved shot. **Only move a camera that is not live**: cut away first. A camera key turns **red and says LIVE** while it is on Program.
- To save a new shot: press **Save** (it arms), then the preset key to save into.

- The knobs pan, tilt, zoom and focus. Pressing a knob stops it.
- Do not change white balance on the cameras: it is set by hand and stays put.

Slides (PP1 page)

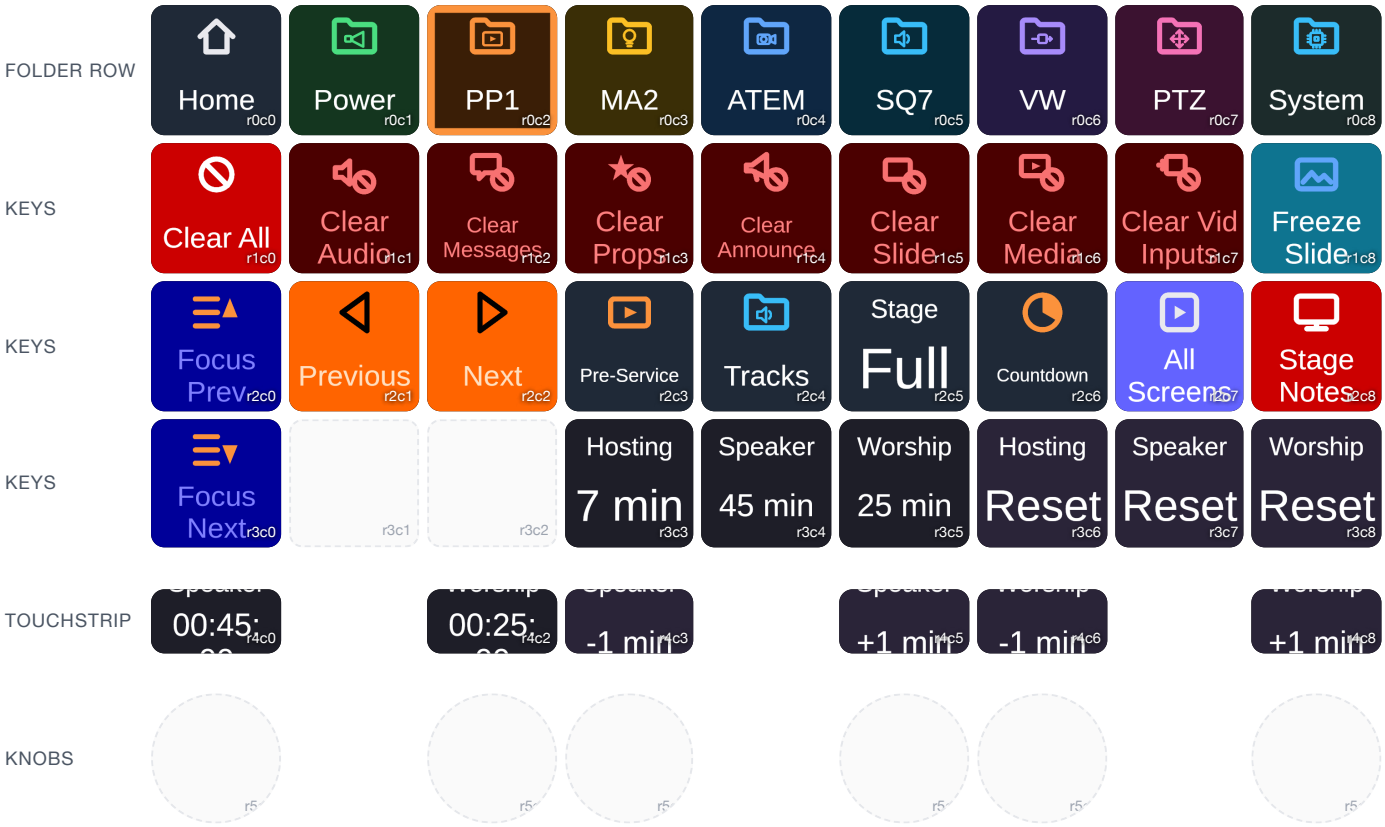


- **Next / Previous** step the slides. **Clear** keys clear one layer (audio, messages, props, announcements, slide, media, video inputs); **Clear All** clears everything.
- **Freeze Slide** holds the audience screens and the stream overlay on the current slide while you work ahead; **All Screens** releases it.
- **Hosting / Speaker / Worship** set and start the stage timers (7, 45 and 25 minutes). The touchstrip shows them, with a key either side of each clock to take off or add a minute.
- **Tracks** opens the walk-in music page: play/pause, skip, fade out, and a volume knob.

Sound (SQ7 page)



- DCA 1–8 across the top with their level and mute state. **Mute DCAs** mutes them together.
- The touchstrip reads the Stream, Foyer and Main levels.
- The bottom row opens the **fader folders**: **DCA 1-4**, **DCA 5-8**, **Leads** (CH 1–4), **BGV** (CH 5–8), **Lav** (CH 13–14) and **FX** (FX returns 1–4). In each, a knob is one fader: turn it for level, 1 dB a click, and press it to mute or unmute. The strip above shows the desk's own reading and goes red when that fader is muted. Leads, BGV, Lav and FX set the level into Main, what the room hears.

Lights (MA2 page)

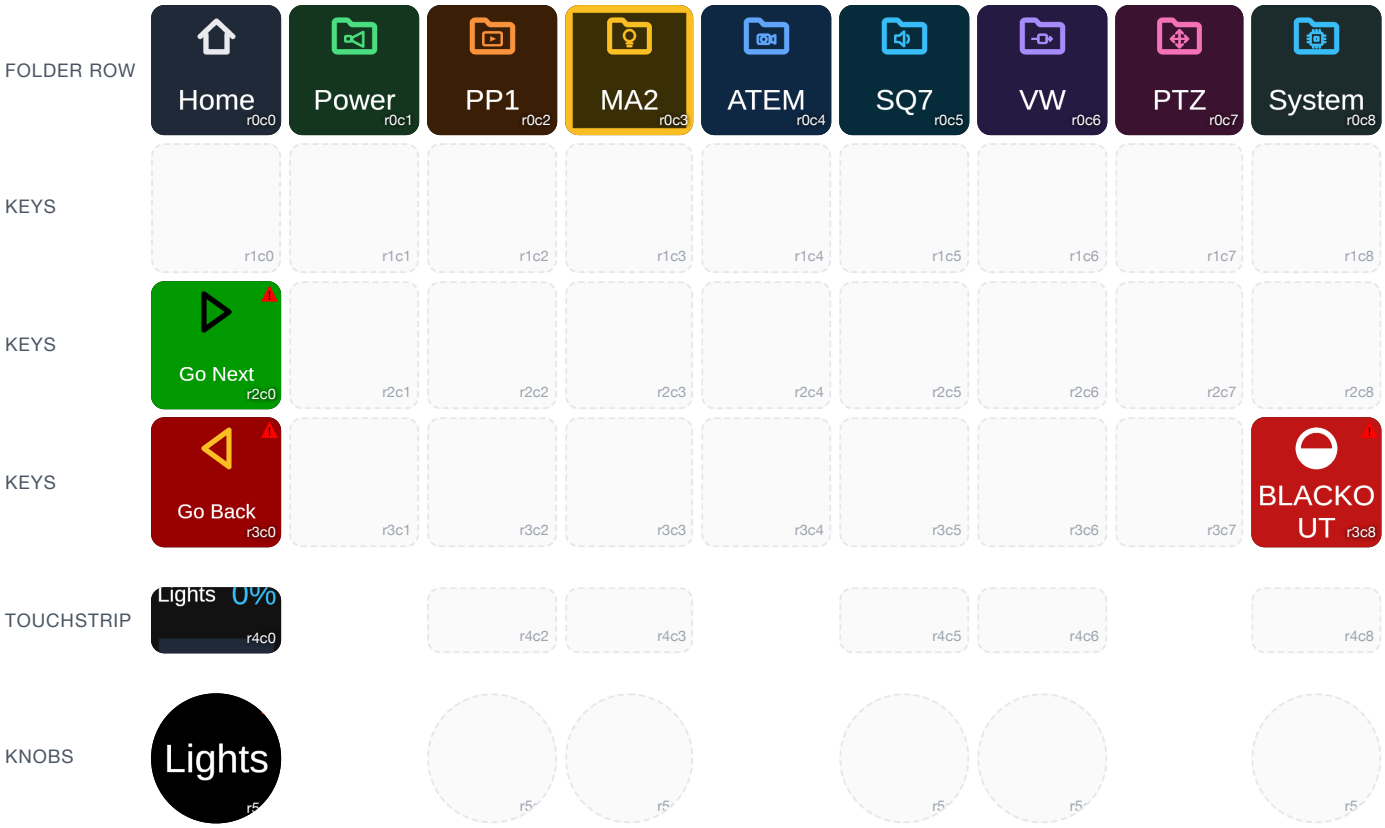

- All the lighting, house and stage, is one fader on the lighting desk: **Fader 1 on fader page 5**. The first knob, **Lights**, is that fader. Turn it to bring the lights up or down, 5% a click. The strip above it shows the level.
- The strip shows the level **the deck last set**. It does not read the desk. If someone moves the fader on the desk, the strip is wrong until the knob is turned again, and that turn starts from the strip's number.
- **Go Next** (green) and **Go Back** (red), on the left, step that fader's cues forward and back.
- **BLACKOUT** turns every light in the building off at once. Press it only if you mean that.

Screens (VW page)



- VW is the whole video router: every **output** (OUT 1–16) on the top two rows, every **input** (IN 1–16) on the bottom two. Each key shows the router's own name for it, and an output also shows what is feeding it.
- Tap an **output** to select it (violet), then an **input** to send there at once. The input already feeding the selected output is green. VW has no folder row: **Home**, top right, leaves.
- Outputs **1–6 feed the switcher's inputs 1–6**, so routing to them changes what the switcher sees. Do not touch them during a service unless you mean to.
- The touchstrip reads what the projectors, LED wall and back wall show; the knob sets the LED wall's brightness.

After the service

1. **Stop the stream:** ATEM page, **Stream**, press twice.
2. **Stop the recording: Record** (Home or ATEM). It goes back to showing hours left.
3. **Power page:** Projectors off, PA off.
4. Hand the SD card to whoever edits, or leave it in the HyperDeck as agreed.
5. Write anything that went wrong in a note for the team (what, when, which page).

When something is wrong

What you see	What to do
A key does nothing, or a page's readouts are blank	The device behind it is off or has a new address. Check the board: it names the device. Power it on; if it is on and still blank, see *When one thing breaks* in the Recovery Guide
The whole deck is dark or frozen	Companion is restarting (it **updates itself**, sometimes on a Sunday). Wait two minutes. If it does not come back, unplug and replug the deck's USB; then see *When one thing breaks* in the Recovery Guide
Board says the switcher is down	Check the ATEM in the rack has power. Cuts can still be made on its front panel
Recording did not start at 10:24:57	Press **Record** on Home. If it shows **NO CARD**, there is no SD card: put one in
Stream did not start	ATEM page, **Stream**: press, then press again
Projectors or PA did not come on	**Power** page: press the key; it works out from the gear's own state whether to switch on or off. If nothing changes, the power relay or projector is unreachable: switch it on by hand
Walk-in music silent	**Tracks** page, **Play / Pause**. If that fails, play it on the PP1 iMac directly (YouTube Music in Chrome)
A camera does not move	Is it LIVE? Then it is fine: cut away first. Otherwise check its readouts: if they are red the camera is not answering. Check it has power
Slides do not advance	Is ProPresenter running on the PP1 iMac? Advance it there
Dante key red	A microphone receiver or computer is missing from the audio network. Open the Dante page: the red key names it

If nothing here helps: **every device has its own front panel or app.** The deck is a convenience, not the only way in. The Reference lists every device and its address.