© GRIMM AND PARKER, P.C. 2014

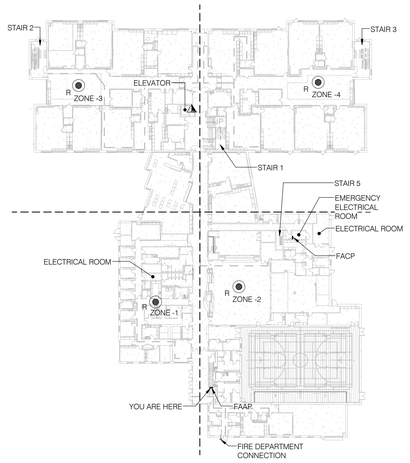

FIRST FLOOR

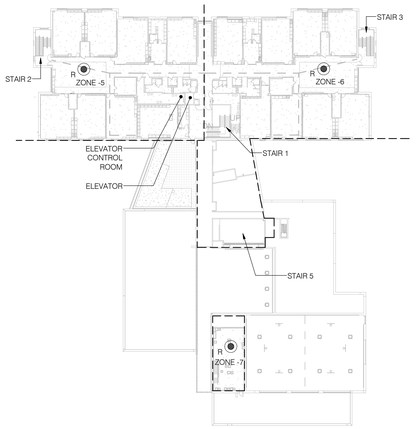

SECOND FLOOR

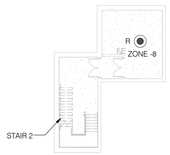

BASEMENT

ALARM DEVICES

- R MANUAL PULL STATION
- R SMOKE DETECTOR
- A DUCT SMOKE DETECTOR
- A HEAT DETECTOR
- A FIRE SERVICE LINE
- R SPRINKLER FLOW SWITCH
- A TAMPER SWITCH
- A STANDPIPE FLOW
- R ELEVATOR LOBBY SMOKE DETECTOR
- R ELEVATOR CONTROL ROOM
- R ELEVATOR CONTROL ROOM SMOKE DETECTOR
- A STAIR 1
- A STAIR 2
- A STAIR 3
- A STAIR 5
- A SPARE
- A SPARE

FLOORS

- R SECOND FLOOR
- R FIRST FLOOR
- R BASEMENT
- R SPARE
- R SPARE

SYSTEM CONTROL

- G POWER ON
- A SYSTEM TROUBLE
- G GENERATOR RUN
- A GENERATOR NOT IN AUTOMATIC MODE
- A BATTERY CHARGER NOT FUNCTIONING
- A EMERGENCY SYSTEM GROUND FAULT
- G FIRE PUMP RUN
- A FIRE PUMP FAULT
- A FIRE PUMP DISCONNECT OPEN
- A FIRE PUMP NOT IN AUTOMATIC MODE
- R SPARE

SYSTEM CONTROL

LAMP TEST, TROUBLE SILENCE, RESET SWITCH, ALARM SIGNAL DEACTIVATION, SUPERVISORY SYSTEM SILENCE

EMERGENCY GENERATOR

ON / AUTO; G RUNNING; R OFF; EPO

N

FIRE ALARM ANNUNCIATOR PANEL

HOLABIRD ACADEMY
200 E North Ave room 407A
Baltimore MD 21012

SYSTEMS INPUT	GENERAL EVACUATION ALARM	OUTPUT TO FIRE ALARM SYSTEM	AUDIBLE & VISUAL ALARM SIGNAL AT FACP	AUDIBLE & VISUAL SUPERVISORY SIGNAL AT FACP	OUTPUT SIGNAL TO ELEVATOR CONTROLLER FOR ELEVATOR RECALL	OUTPUT SIGNAL FOR ELEVATOR POWER SHUTDOWN	OUTPUT SIGNAL TO SHUT DOWN AIR HANDLING UNIT	TRANSMIT ALARM TO SCC	TRANSMIT TROUBLE TO SCC	TRANSMIT SUPERVISORY SIGNAL TO SCC	ACTUATE COMMON TROUBLE SIGNAL INDICATOR AT FACP	ACTUATE AUDIBLE COMMON TROUBLE SIGNAL TO FACP
	SYSTEMS OUTPUT											
AREA/ROOM SMOKE DETECTOR	●	●	●					●				
DUCT SMOKE DETECTOR				●			●			●		
WATER FLOW SWITCH	●	●	●					●				
MONITOR SWITCH (VALVE TAMPER)				●					●			
MANUAL PULL STATION	●	●	●					●				
SMOKE DETECTOR AT ELEVATOR LOBBY *	●	●	●		●			●				
ELEVATOR SHAFT SMOKE DETECTOR *	●	●	●		●			●				
ELEVATOR SHAFT HEAT DETECTOR *		●	●			●		●				
FIRE PUMP RUNNING SIGNAL				●								
FIRE PUMP LOSS OF PHASE SIGNAL				●								
FIRE PUMP PHASE REVERSAL SIGNAL				●								
FIRE ALARM AC POWER FAILURE											●	●
FIRE ALARM SYSTEM LOW BATTERY											●	●
OPEN CIRCUIT											●	●
GROUND FAULT											●	●
NOTIFICATION APPLIANCE CIRCUIT SHORT											●	●

FIRE ALARM OPERATIONAL MATRIX

* UNDER FIRE CONDITION - ELEVATOR EMERGENCY OPERATION SHALL BE AS FOLLOWS:

A. ELEVATOR SHAFT SMOKE DETECTORS SHALL ACTIVATE RECALL OF ELEVATOR WITHIN SHAFT, SOUND GENERAL ALARM, ANNUNCIATE APPROPRIATE LAMPS AT ANNUNCIATOR PANEL.

B. ELEVATOR MACHINE ROOM SMOKE DETECTOR SHALL ACTIVATE RECALL OF ELEVATOR, SOUND GENERAL ALARM, ANNUNCIATE APPROPRIATE LAMPS AT ANNUNCIATOR PANEL.

C. ELEVATOR SHAFT HEAT DETECTORS SHALL DISCONNECT POWER TO ELEVATOR MOTOR WITHIN THAT SHAFT AND ANNUNCIATE TROUBLE AT ANNUNCIATOR PANEL.

D. ELEVATOR MACHINE ROOM HEAT DETECTOR SHALL DISCONNECT POWER TO ELEVATOR AND ANNUNCIATE TROUBLE AT ANNUNCIATOR PANEL.

E. ELEVATOR MACHINE ROOM SPRINKLER FLOW SWITCH SHALL SOUND GENERAL ALARM, ANNUNCIATE APPROPRIATE LAMPS AT ANNUNCIATOR PANEL AND DISCONNECT ELEVATOR POWER.

ABBREVIATIONS

- FAAP FIRE ALARM ANNUNCIATOR PANEL
- FACP FIRE ALARM CONTROL PANEL
- MH MOUNTING HEIGHT
- AFF ABOVE FINISHED FLOOR

ANNUNCIATOR

- R RED LAMP
- G GREEN LAMP
- A AMBER LAMP
- KEY PUSH BUTTON
- KEY SWITCH
- BUZZER

SETTY
ONE SOUTH STREET, SUITE 1110
BALTIMORE, MARYLAND 21202
TEL 667-329-8035
MAINTENANCE MANAGEMENT
ENERGY MANAGEMENT SERVICES • DESIGN BUILD SERVICES
CONSULTING • ENGINEERING • CONSTRUCTION
DISTRICT OF COLUMBIA • MARYLAND
www.SETTY.com

PROJECT NUMBER: SA2017-F-0-F-F

11720 Beltsville Drive
Suite 600
Calverton, MD 20705
Tel: 301.595.1000
www.grimmandparker.com
GRIMM AND PARKER

GP# 21553

FIRE ALARM ANNUNICATOR PANEL

HOLABIRD ACADEMY PK-8
CITY OF BALTIMORE, MARYLAND

DATE	DESCRIPTION

E-5.3H

03/13/2017
BID SET

© GRIMM AND PARKER, P.C. 2014