E4 "Single Server" Power Meter System

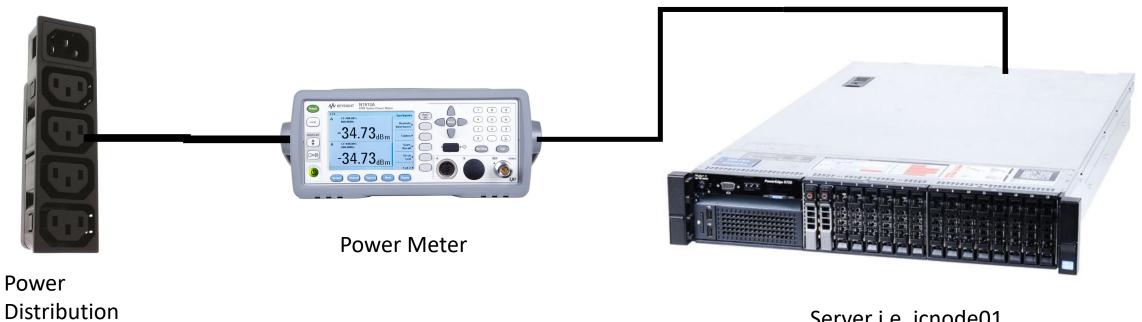Power Meter

Power
Distribution
Unit
(PDU)

Server i.e. icnode01

How to read the power

- Power meter is available on demand and can measure one single senrve overall power.

- Every user that request the system can be added to sudoers to do: *sudo /opt/share/sw/zes/power.py*

- In the working directory there is a file with the output "results.csv", the interesting values are: "Time" and "active power".

- To read GPU power consumption use *"nvidia-smi –L"*