


How to Run Server in Last Known Good Configuration

1. Login with Captain account to the Server
2. Click on Start and then Click on Shutdown and wait for the system to the shutdown properly.
3. Connect a Keyboard, Mouse and a Monitor directly to the server.
4. Press the power button of the Server to Start.
5. When you see that the Lenovo screen disappeared in the monitor start pressing F8 key in keyboard (Press and release F8 intermittently) to enter into the Advanced Boot Options.
6. Select **Last Known Good Configuration** and press Enter.

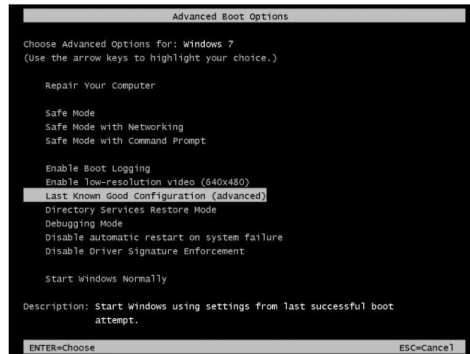

7. Wait for the Windows to Start.
8. Once the window starts then open the Chrome or Firefox in the Server and then check whether the Dialog Webpage is opening or not.
9. Also open the other software's and check the status, whether opening or not.

PiscesER1 Marine Infotech Pvt. Ltd.

CIN U74999MH2016PTC274416

805, Vakratunda Corporate Park, Goregaon (E), Mumbai, 400063. Maharashtra, India. PIN 400063.

www.pisceser1marine.com. Email: operations@pisceser1marine.com, Voice: +91 22 6236 4599