

As we suspect that the RAM is causing the unexpected restarting of the SERVER.

Kindly follow the below procedure to remove the RAM from the Server.

- 1, Inform all the crew to save their work after confirming.
- 2, Shut down the server.
- 3, Remove all the cables which are connected with the server kindly mark **the LAN cable from which port your removing connect back in the LAN cable in the SAME PORT.**
- 4, open the side door of the SERVER.
- 5, Find the location of the RAM inside the server.



Above image is for your reference there will be TWO RAM inside the server each have 8 GB of capacity.


PiscesER1 Marine Infotech Pvt. Ltd.

CIN U74999MH2016PTC274416

805, Vakratunda Corporate Park. Goregaon (E), Mumbai, 400063. Maharashtra, India. PIN 400063.

www.pisceser1marine.com. Email: operations@pisceser1marine.com, Voice: +91 22 62215299

6, Remove the affected RAM which is shown in the below picture.

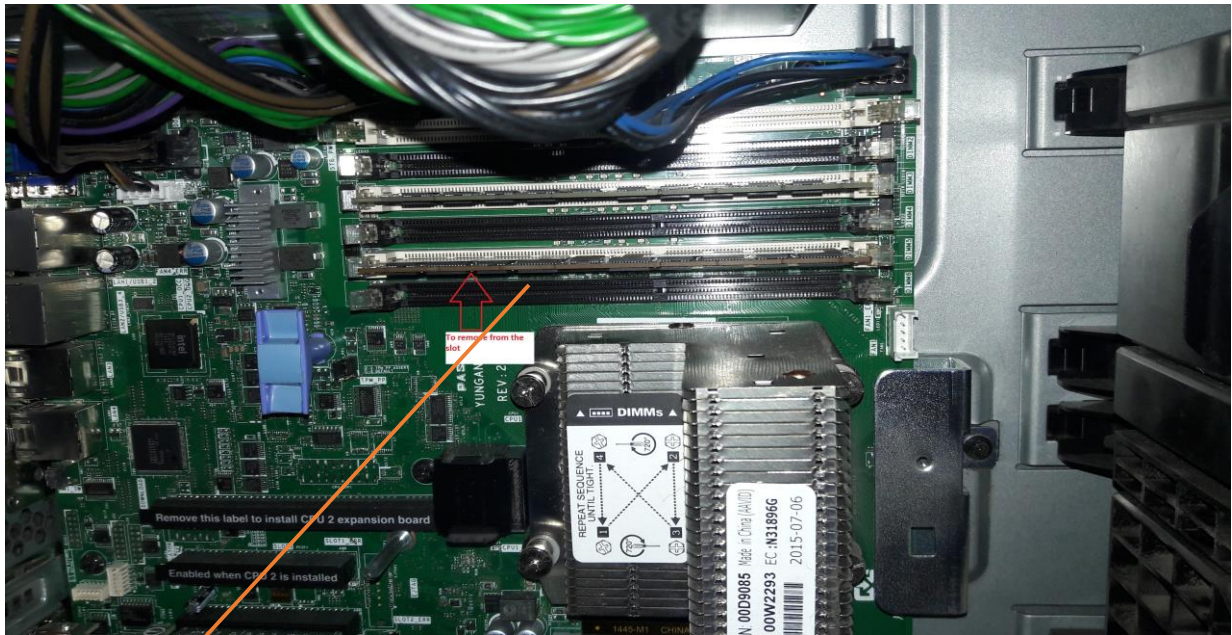

7, Below RAM which is marked in the Picture is affected (which need to be removed) open the side the clip of the RAM Slot (press the clip towards outside it will open).

8, Once all the above done kindly box off the server and connect all the cables then start the Server.

Kindly send the removed RAM image and confirm the working status of the server

PiscesER1 Marine Infotech Pvt. Ltd.

CIN U74999MH2016PTC274416

805, Vakratunda Corporate Park, Goregaon (E), Mumbai, 400063. Maharashtra, India. PIN 400063.

www.pisceser1marine.com. Email: operations@pisceser1marine.com, Voice: +91 22 62215299