


Upgrade the RAM in the Server:

- Shut down the server.
- Remove all the cables which are connected with the server kindly mark the **LAN cable from which port your removing connect back in the LAN cable in the SAME PORT.**
- Open the side door of the SERVER.
- Find the location of the RAM inside the server.

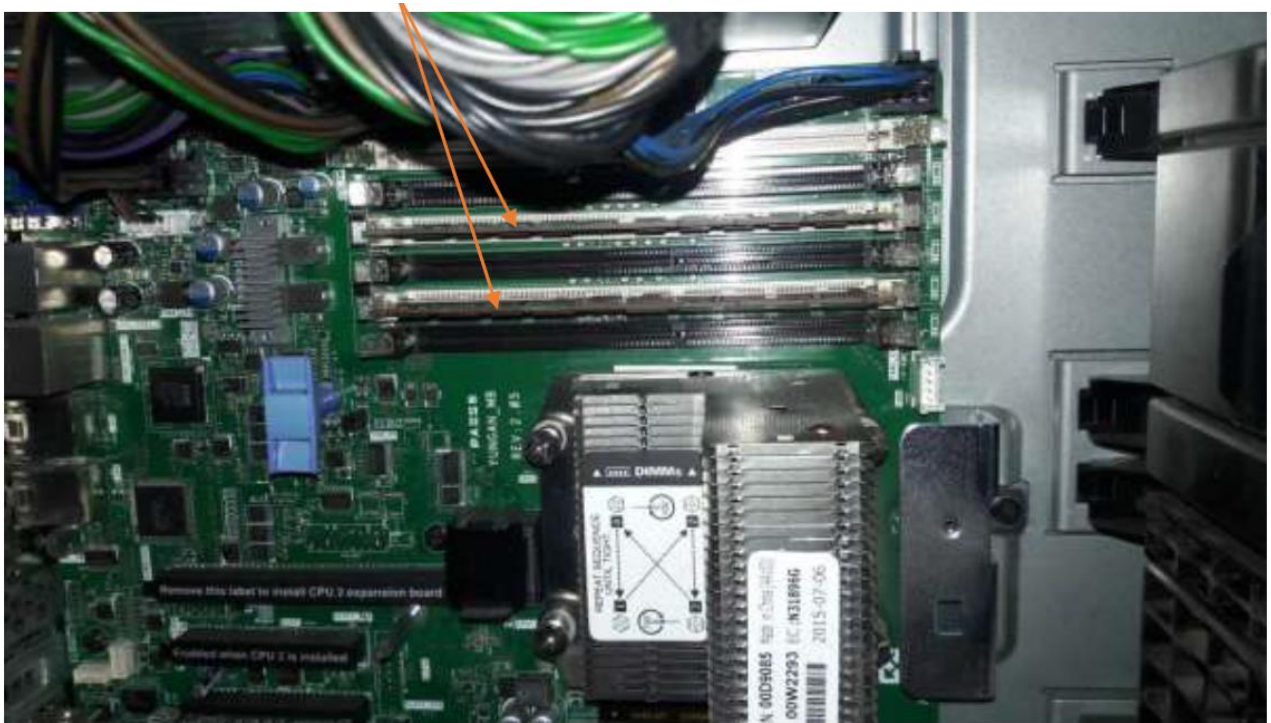

- Above image is for your reference there will be TWO RAM inside the server each have 4 GB of capacity.
- Insert RAM in below sequence
 - Slot 1: 4GB (OLD RAM)
 - Slot 1: 8GB (NEW RAM)
 - Slot 1: 4GB (OLD RAM)
 - Slot 1: 8GB (NEW RAM)
- Once all the above done kindly box off the server and connect all the cables then start the Server.