



# Dealer Management System

## User Manual

Service — Mobile App

---

**Document: USER MANUAL-MOBILE APP\_V1**

**Release Date: 10th Sept, 2026**

*Every application screen in this manual is annotated field by field, in the style of the JBM DMS screen guides.*

Prepared by



# Document Control

## Document History

| Version | Date of Prepare | Prepared / Updated By | Reviewed By | Reason for Change | Affected Sections |
|---------|-----------------|-----------------------|-------------|-------------------|-------------------|
| 1.0     | 10th Sept 2026  | Harbans Kumar         |             | Initial release   | All               |

## Revision History

| Version | Date of Revision | Prepared / Updated By | Reviewed By | Reason for Change | Affected Sections |
|---------|------------------|-----------------------|-------------|-------------------|-------------------|
|         |                  |                       |             |                   |                   |

## Approvals

| Version | Date of Revision | Prepared / Updated By | Reviewed By | Reason for Change | Affected Sections |
|---------|------------------|-----------------------|-------------|-------------------|-------------------|
|         |                  |                       |             |                   |                   |

# Contents

---

## 1. Introduction

1.1 Purpose · 1.2 Intended Users · 1.3 Prerequisite · 1.4 General Navigation

## 2. Login / Logout

i. Open the Application and Sign In · ii. Access the Home Dashboard · iii. Open the Menu and Select Logout · iv. Confirm the Logout

## 3. User Profile

v. View Your User Profile

## 4. Contact Us

vi. View JBM HQ Contact Details

## 5. Gate In / Gate Out

vii. Open Gate In / Gate Out and Find the Vehicle · viii. Gate In — Bus, Driver and Duty Details · ix. Gate In — Performance, SOC and Journey Details · x. Gate In — Schedule, Complaint and Vehicle Status · xi. Gate In — Wheel Condition, Attachments and Submit · xii. Gate Out — Select the Vehicle to Release · xiii. Gate Out — Shift and Journey Details · xiv. Gate Out — Wheel Condition, Attachments and Submit

## 6. Auto Job Cards (Daily / Ten-Day)

xv. Open the Auto Job Card List · xvi. View an Auto Job Card · xvii. Auto Job Card Statuses · xviii. Home Dashboard — Shift Engineer · xix. Open the Auto Job Card Inspection List · xx. Review and Process the Assigned Job · xxi. Validate Auto Job Card — Job Details · xxii. Validate Auto Job Card — Checklist

## 7. Assign Auto Job Cards

xxiii. Open Assign Auto Job Card and Select Jobs · xxiv. Review the Selected Job Card · xxv. Validation — Supervisor Required · xxvi. Select a Supervisor · xxvii. Confirm the Assignment · xxviii. Assignment Complete

## 8. DCR Charging

xxix. Open DCR Charging and Search Records · xxx. Search the Vehicle to Charge · xxxi. Vehicle and Charger Master Details · xxxii. Charger Details and Charge Timing · xxxiii. SOC, Energy and Final Status · xxxiv. Attachments and Submit

## 9. User Troubleshooting

## 10. JBM Officials Interviewed

# 1. Introduction

## 1.1 Purpose

The purpose of this manual is to provide step-by-step guidance to depot users for performing service-related activities through the JBM DMS Mobile Application.

The application enables depot users to:

- Access the application using authorized credentials.
- View and update permitted user profile information.
- Access JBM HQ contact details.
- Capture vehicle Gate-In and Gate-Out information.
- Identify vehicles using QR code, VIN, Bus Number, or Registration Number.
- Record driver complaints, breakdown and accidental information while gating in, along with other details.
- Trigger and manage auto-generated service jobs.
- Perform charging, vendor job card, and vehicle history activities, as enabled for the user.

## 1.2 Intended Users

| User                   | Access                        |
|------------------------|-------------------------------|
| JBM Service Depot User | Authorized service operations |
| JBM Vendor Depot User  | Authorized vendor operations  |

## 1.3 Prerequisite

The depot vehicle inventory must be available in the system before performing vehicle-related transactions. The inventory should contain the vehicle information required to identify and process depot vehicles, such as:

- Vehicle Identification Number
- Vehicle Registration Number
- Bus Number
- Assigned depot / vehicle mapping

## 1.4 General Navigation

The mobile application provides the following modules through the main menu or dashboard. The exact screen arrangement and labels are subject to the approved application design. Vendor Job Card, Vehicle History and Shift Remarks are opened from the same menu and dashboard, and are available where enabled for the user.

| Functionality      | Symbol / Icon                                                                       |
|--------------------|-------------------------------------------------------------------------------------|
| Login / Logout     |  |
| Menu Bar           |  |
| User Profile       |  |
| Contact Us         |  |
| Gate In / Gate Out |  |
| Auto Job Card List |  |
| Assign Auto Jobs   |  |
| DCR Charging       |  |
| Dashboard          |  |
| Scroll Right       |  |
| Scroll Left        |  |

## 2. Login / Logout

### Objective

To allow authorized JBM Service and JBM Vendor depot users to securely access the JBM DMS Mobile Application.

### In this section

#### i. Open the Application and Sign In

*Sign-in screen*

#### ii. Access the Home Dashboard

*Home page with Quick Links*

#### iii. Open the Menu and Select Logout

*Side navigation panel*

#### iv. Confirm the Logout

*Confirm Logout dialog*

### Login validations

| Validation                  | Expected behaviour                                |
|-----------------------------|---------------------------------------------------|
| Valid credentials           | User can access the application                   |
| Invalid username / password | Login is rejected                                 |
| Unauthorized user           | Access is not permitted                           |
| Blank mandatory fields      | System prompts the user to enter required details |

## i. Open the Application and Sign In

- Launch the JBM DMS Mobile Application by tapping the JBMDMS icon on your device.
- Enter your authorized username and password in the respective fields.
- Tap SIGN IN to authenticate.

LOGIN / LOGOUT · STEP 1 OF 4



Fig. 1 — Sign-in screen

**Note:** Access is subject to the credentials and permissions configured by your administrator.

## ii. Access the Home Dashboard

- On successful authentication the mobile application home page opens.
- Use Quick Links to open any module you are authorized for.
- Tap the menu icon at the top-left to open the side navigation panel.

LOGIN / LOGOUT · STEP 2 OF 4

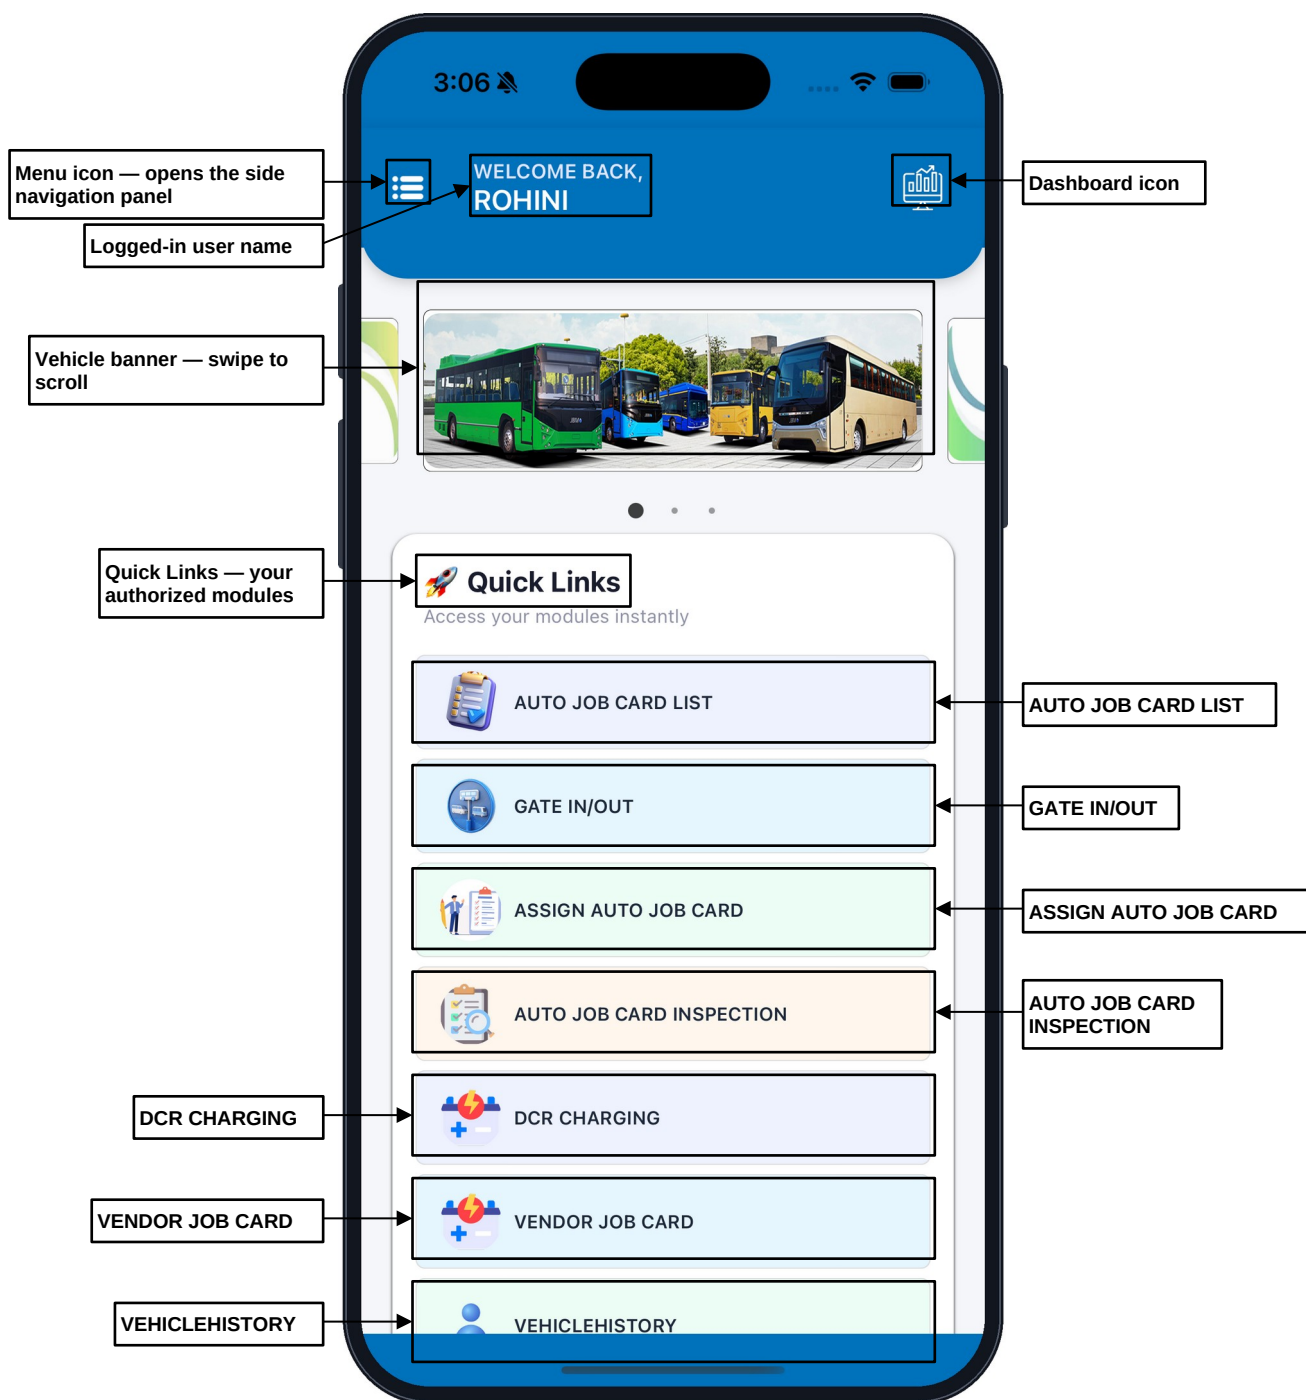


Fig. 2 — Home page with Quick Links

**Note:** Only the modules enabled for your role are listed; the arrangement may differ by user.

### iii. Open the Menu and Select Logout

- Tap the menu icon of the application.
- The side panel lists every module available to you, plus My Profile and Contact Us.
- Select LOGOUT at the bottom of the panel.

LOGIN / LOGOUT · STEP 3 OF 4

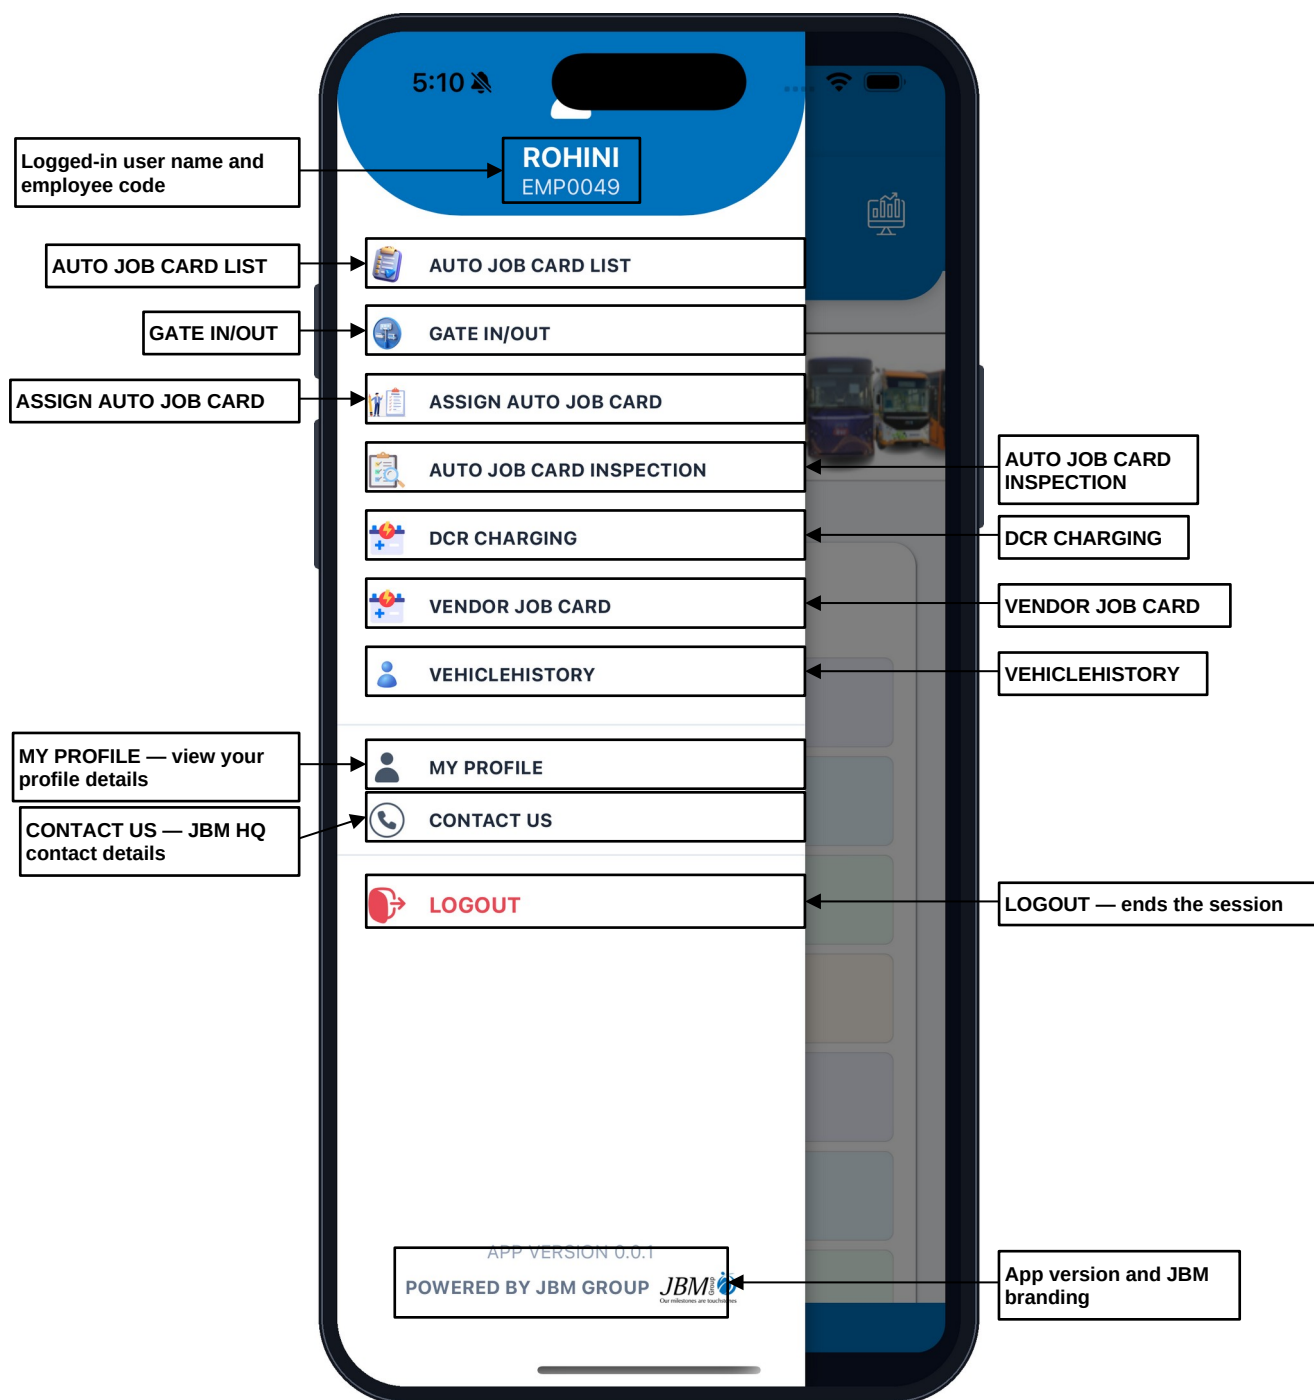


Fig. 3 — Side navigation panel

## iv. Confirm the Logout

- A confirmation dialog appears when you select Logout.
- Tap YES, LOG OUT to confirm; you are redirected to the login screen.
- Tap CANCEL to stay signed in and return to the home page.

LOGIN / LOGOUT · STEP 4 OF 4

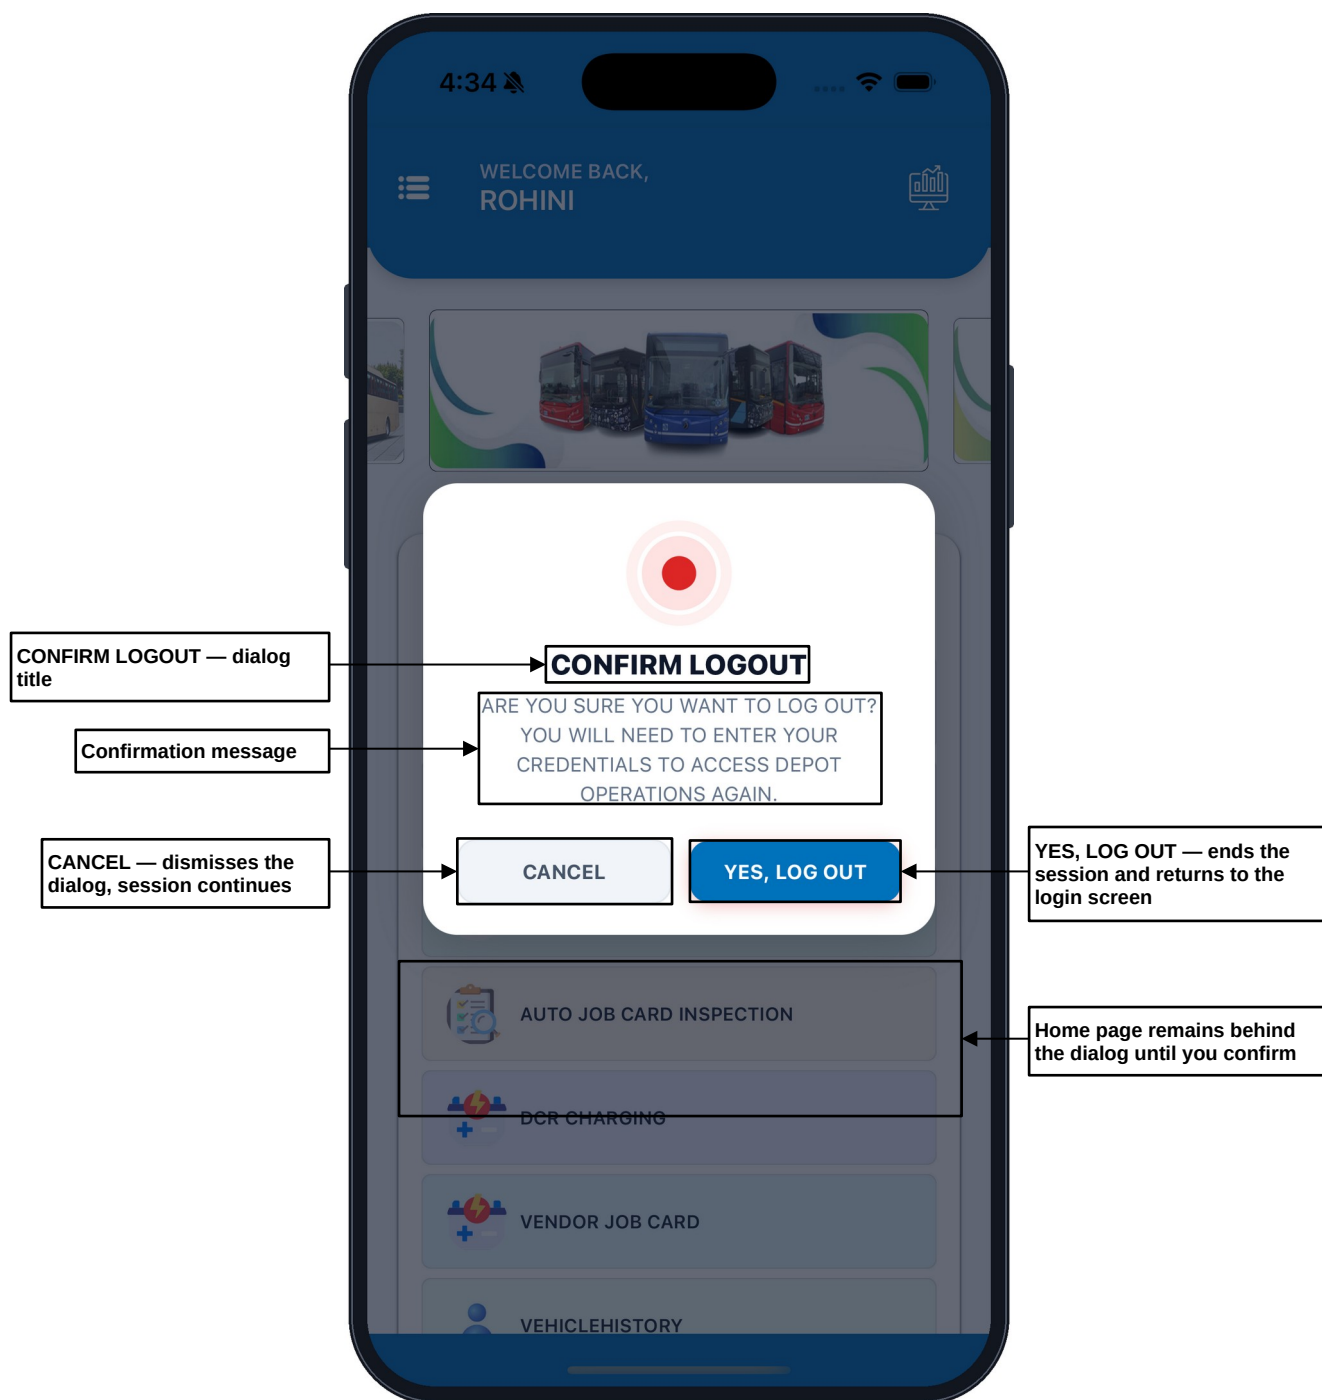


Fig. 4 — Confirm Logout dialog

**Note:** After logging out your credentials are required again to access depot operations.

## 3. User Profile

---

### Objective

To allow users to view their profile and update the parameters permitted by JBM.

### In this section

#### **v. View Your User Profile**

*User Profile screen*

## v. View Your User Profile

- Tap the menu icon and select My Profile to view your details.
- Review the profile parameters maintained for your user account.
- Tap the back arrow to return to the home page.

### USER PROFILE · STEP 1 OF 1



Fig. 5 — User Profile screen

**Note:** Only the parameters permitted by JBM can be updated; the rest are read-only.

## 4. Contact Us

---

### Objective

To provide depot users with JBM HQ contact information for support and communication.

### In this section

#### vi. View JBM HQ Contact Details

*Contact Us screen*

## vi. View JBM HQ Contact Details

- Tap the menu icon and select **Contact Us** to view the details.
- Use the displayed address, contact number or email ID for assistance.
- Tap **DROP US A LINE** to open your mail application with the JBM mail ID.

CONTACT US · STEP 1 OF 1

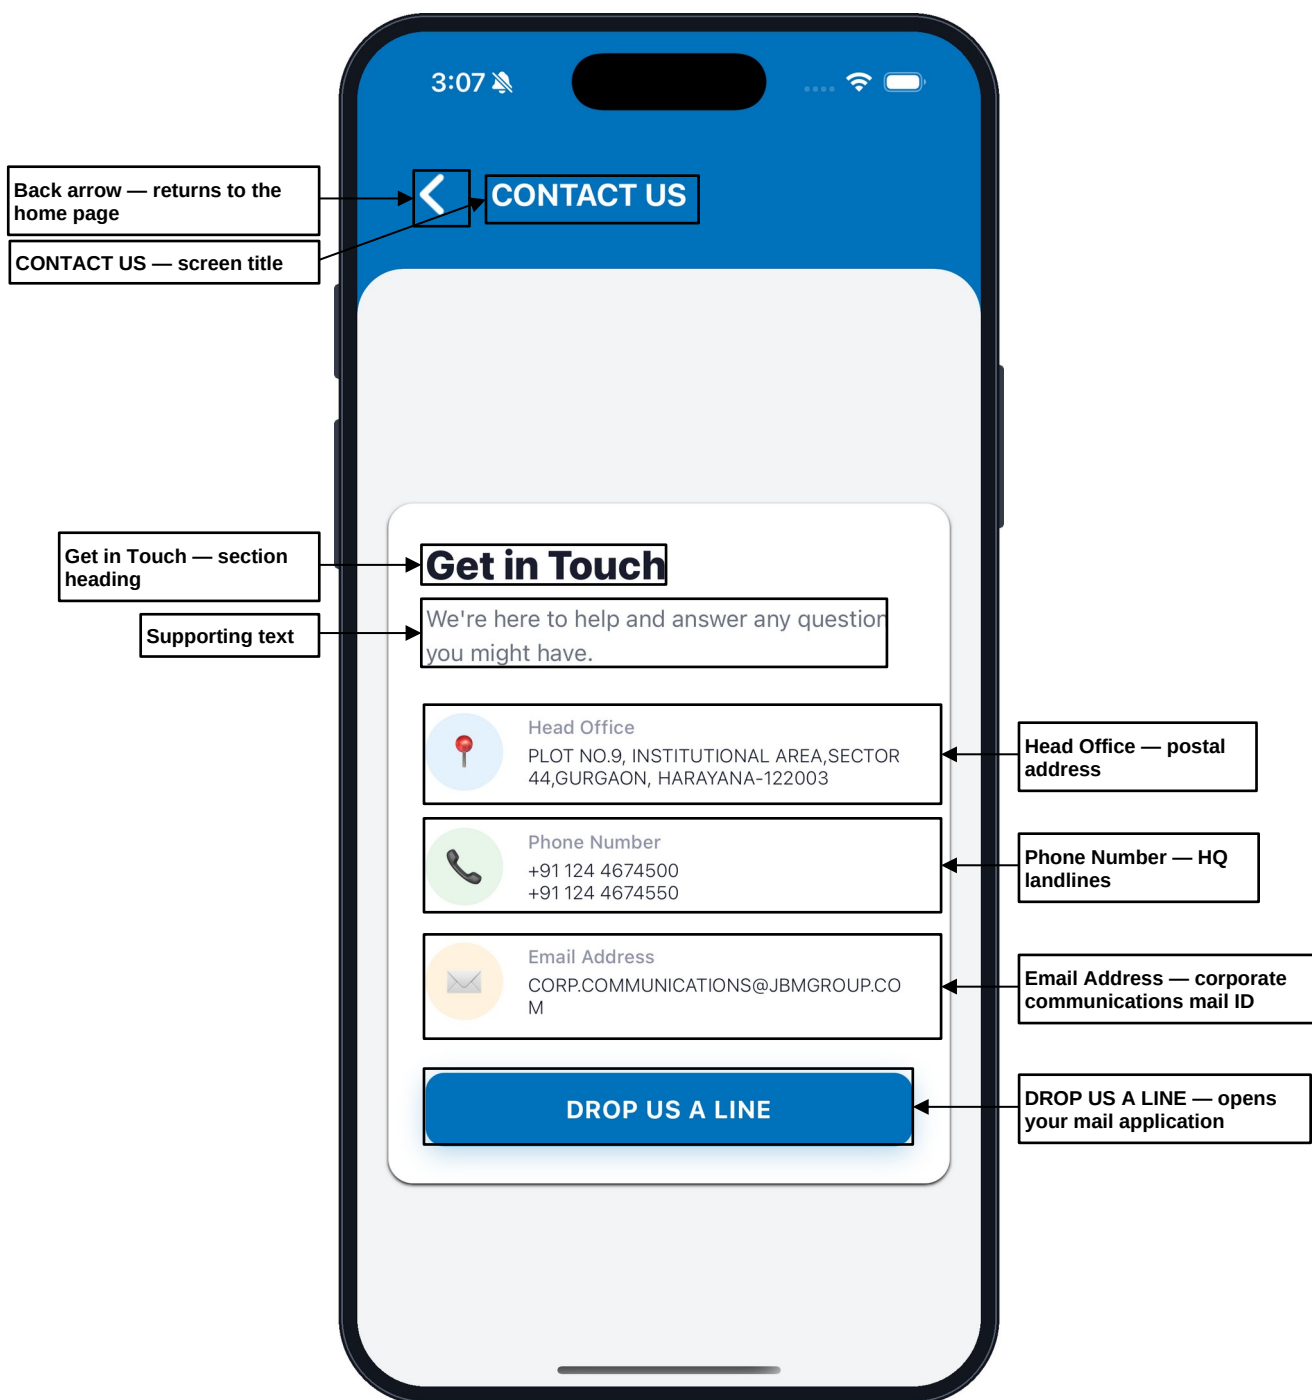


Fig. 6 — Contact Us screen

**Note:** Contact information is displayed from the data maintained by the authorized administrator / JBM team.

## 5. Gate In / Gate Out

---

### Objective

The Gate In / Gate Out module is used to record the arrival and release of depot vehicles, capture driver complaints, and support the service process before a vehicle is released for out-shedding.

### In this section

#### vii. Open Gate In / Gate Out and Find the Vehicle

*Gate In / Gate Out vehicle list*

#### viii. Gate In — Bus, Driver and Duty Details

*Gate In Details — bus identification and duty assignment*

#### ix. Gate In — Performance, SOC and Journey Details

*Gate In Details — SOC, shift and journey readings*

#### x. Gate In — Schedule, Complaint and Vehicle Status

*Gate In Details — driver complaint and vehicle status*

#### xi. Gate In — Wheel Condition, Attachments and Submit

*Gate In Details — attachments and submission*

#### xii. Gate Out — Select the Vehicle to Release

*Gate In / Gate Out list showing vehicles eligible for gate-out*

#### xiii. Gate Out — Shift and Journey Details

*Gate Out Details — journey readings*

#### xiv. Gate Out — Wheel Condition, Attachments and Submit

*Gate Out Details — attachments and submission*

## vii. Open Gate In / Gate Out and Find the Vehicle

- Tap GATE IN/OUT from Quick Links; the default list of all vehicles for your assigned branch is displayed.
- Identify the vehicle by QR / VIN barcode scan, Bus Number, Registration Number or VIN, then tap SEARCH.
- Verify the Bus Number, Registration Number and VIN, then tap GATE IN against the correct vehicle.

### GATE IN / GATE OUT · STEP 1 OF 8



Fig. 7 — Gate In / Gate Out vehicle list

**Note:** Assigned VIN access is controlled by the administrator — only vehicles mapped to your depot are listed.

## viii. Gate In — Bus, Driver and Duty Details

- The Bus Details section is filled from the vehicle you selected — verify every value before proceeding.
- Tick the Accident checkbox and describe the case if the vehicle has arrived with accident damage.
- Under Driver & Duty Information record the driver, badge, duty number, route and performance values.

### GATE IN / GATE OUT · STEP 2 OF 8

The screenshot displays the 'GATE IN DETAILS' screen of a mobile application. The screen is divided into two main sections: 'BUS DETAILS' and 'DRIVER & DUTY INFORMATION'. Callouts with arrows point to various fields, explaining their purpose and mandatory status.

**BUS DETAILS — vehicle identification and depot information**

- DEPOT CODE \***: BR0041 (Callout: DEPOT CODE — auto-filled from your mapped depot)
- DEPOT NAME \***: ROHINI -2 (Callout: DEPOT NAME)
- VIN NO. \***: M2701B3607HB... (Callout: VIN NO. — vehicle identification number)
- BUS NO. \***: DL51EV3203 (Callout: BUS NO.)
- REGISTRATION NO. \***: DL51EV3203 (Callout: REGISTRATION NO.)
- ACCIDENT**: ☒ ACCIDENT ☐ NO (Callout: ACCIDENT — tick to change the default No to Yes)

**DRIVER & DUTY INFORMATION — driver details and duty assignment**

- DRIVER NAME**: RAMESH -... (Callout: DRIVER NAME — select from the list)
- BADGE NO**: B01001 (Callout: BADGE NO.)
- DRIVER DUTY NO \***: PLEASE ENTER DRIV (Callout: DRIVER DUTY NO. (mandatory))
- ROUTE**: 164 | 164 |... (Callout: ROUTE)
- DRIVER PERF. 1 \***: PLEASE ENTER DRIV (Callout: DRIVER PERF. 1)
- DRIVER PERF. 2 \***: PLEASE ENTER DRIV (Callout: DRIVER PERF. 2)
- SOC IN % \***: (Callout: SOC IN % \*)

Fig. 8 — Gate In Details — bus identification and duty assignment

**Note:** Fields marked with an asterisk are mandatory and must be completed before the entry can be submitted.

## ix. Gate In — Performance, SOC and Journey Details

- Complete the driver performance values and select the SOC In % range.
- Tick Breakdown if the vehicle has arrived with a breakdown, then select the Shift.
- Journey Details records the system date and time along with the odometer and hour-meter readings.

### GATE IN / GATE OUT · STEP 3 OF 8

**DRIVER PERF. 1 \*** **DRIVER PERF. 2 \***

PLEASE ENTER DRIV PLEASE ENTER DRIV

**SOC IN % \***

PLEASE SELECT SOC RANGE(0-100)%

**BREAKDOWN** ☐ NO

**SHIFT**

SHIFT A

**JOURNEY DETAILS**  
ODOMETER READINGS AND TIMING INFORMATION

**SYSTEM DATE** **SYSTEM TIME**

15-09-2026 16:25

**ODOMETER READING \*** **HRS \***

10 5

**MANUAL DATE \*** **MANUAL TIME \***

15-09-2026 16:25

**FDS STATUS**

Select FDS Status \*

**SCHEDULE KMS \*** **KWH/KM(VP1) \***

110 PLEASE ENTER KWH

**DRIVER PERF. 1** **DRIVER PERF. 2**

**SOC IN % — select the 0-100% range**

**BREAKDOWN — tick to change the default No to Yes**

**SHIFT — the shift receiving the vehicle**

**JOURNEY DETAILS — odometer readings and timing information**

**SYSTEM DATE — set by the application** **SYSTEM TIME — set by the application**

**ODOMETER READING (mandatory)** **HRS — hour-meter reading**

**MANUAL DATE** **MANUAL TIME**

**FDS STATUS**

**SCHEDULE KMS** **KWH/KM (VP1)**

Fig. 9 — Gate In Details — SOC, shift and journey readings

**Note:** The odometer / hour-meter reading must not be lower than the previously recorded value; a lower reading is rejected.

## x. Gate In — Schedule, Complaint and Vehicle Status

- Select the FDS Status and enter the Schedule KMS and KWH/KM (VP1) values.
- Tick Driver Complaint and record the description in the Remark field, if any.
- Set Vehicle Status to Road Worthy or Not Road Worthy, then capture the four wheel temperatures.

GATE IN / GATE OUT · STEP 4 OF 8

The screenshot shows the 'GATE IN DETAILS' screen of a mobile application. The screen is titled 'GATE IN DETAILS' with a back arrow on the left. The form contains the following fields and sections:

- Select FDS Status \***: A dropdown menu. Callout: **FDS STATUS — select from the list**
- SCHEDULE KMS \***: A text input field containing '110'. Callout: **SCHEDULE KMS (mandatory)**
- KWH/KM (VP1) \***: A text input field containing 'PLEASE ENTER KWH'. Callout: **KWH/KM (VP1)**
- DRIVER COMPLAINT**: A checkbox labeled 'NO'. Callout: **DRIVER COMPLAINT — tick to change the default No to Yes**
- REMARK**: A text input field containing 'PLEASE ENTER REMARK'. Callout: **REMARK — description of the complaint**
- VEHICLE STATUS \***: A dropdown menu showing 'Road Worthy'. Callout: **VEHICLE STATUS — Road Worthy or Not Road Worthy**
- VEHICLE CONDITION**: A blue header section with the subtitle 'WHEEL TEMPERATURE STATUS MONITORING'. Callout: **VEHICLE CONDITION — wheel temperature status monitoring**
- FRONT LEFT \***: A text input field containing 'FRONT LEFT WEEL...'. Callout: **FRONT LEFT wheel temperature**
- FRONT RIGHT \***: A text input field containing 'FRONT RIGHT WE...'. Callout: **FRONT RIGHT wheel temperature**
- BACK LEFT \***: A text input field containing 'BACK LEFT WEEL...'. Callout: **BACK LEFT wheel temperature**
- BACK RIGHT \***: A text input field containing 'BACK RIGHT WEEL...'. Callout: **BACK RIGHT wheel temperature**
- ATTACHMENTS**: A blue header section with the subtitle 'UPLOAD REQUIRED PHOTOS AND DOCUMENTS'. Callout: **ATTACHMENTS — upload required photos and documents**
- Driver Duty Slip \***: A button labeled 'UPLOAD'.
- Dashboard Photo \***: A button labeled 'UPLOAD'.

Fig. 10 — Gate In Details — driver complaint and vehicle status

## xi. Gate In — Wheel Condition, Attachments and Submit

- Complete the four wheel temperature readings under Vehicle Condition.
- Upload every required photo and document under Attachments.
- Verify all mandatory fields, then tap **SUBMIT** to save the Gate-In entry.

GATE IN / GATE OUT · STEP 5 OF 8

The diagram illustrates the 'GATE IN DETAILS' screen in a mobile application. The screen is divided into several sections:

- REMARK:** A text input field at the top.
- VEHICLE STATUS \*:** A dropdown menu currently showing 'Road Worthy'.
- VEHICLE CONDITION — WHEEL TEMPERATURE STATUS MONITORING:** A blue header section containing four temperature input fields:
  - FRONT LEFT \* (FRONT LEFT WHEEL TEM)
  - FRONT RIGHT \* (FRONT RIGHT WHEEL T)
  - BACK LEFT \* (BACK LEFT WHEEL TEM)
  - BACK RIGHT \* (BACK RIGHT WHEEL TE)
- ATTACHMENTS — UPLOAD REQUIRED PHOTOS AND DOCUMENTS:** A blue header section containing six upload buttons:
  - Driver Duty Slip \*
  - Dashboard Photo \*
  - REAR PHOTO
  - FRONT PHOTO
  - LEFT PHOTO
  - RIGHT PHOTO
- SUBMIT:** A large blue button at the bottom of the screen.

Callouts from external boxes point to these specific elements, providing context for each field.

Fig. 11 — Gate In Details — attachments and submission

**Note:** On saving a Not Road Worthy entry an auto pre-job card opens with the logged complaints and the vehicle is recorded as Under Maintenance.

## xii. Gate Out — Select the Vehicle to Release

- Open the Gate In / Gate Out module and select the Gate-Out option.
- Search for the vehicle using Bus Number, Registration Number, VIN or QR scan.
- Tap GATE OUT against the vehicle that is to be released.

### GATE IN / GATE OUT · STEP 6 OF 8

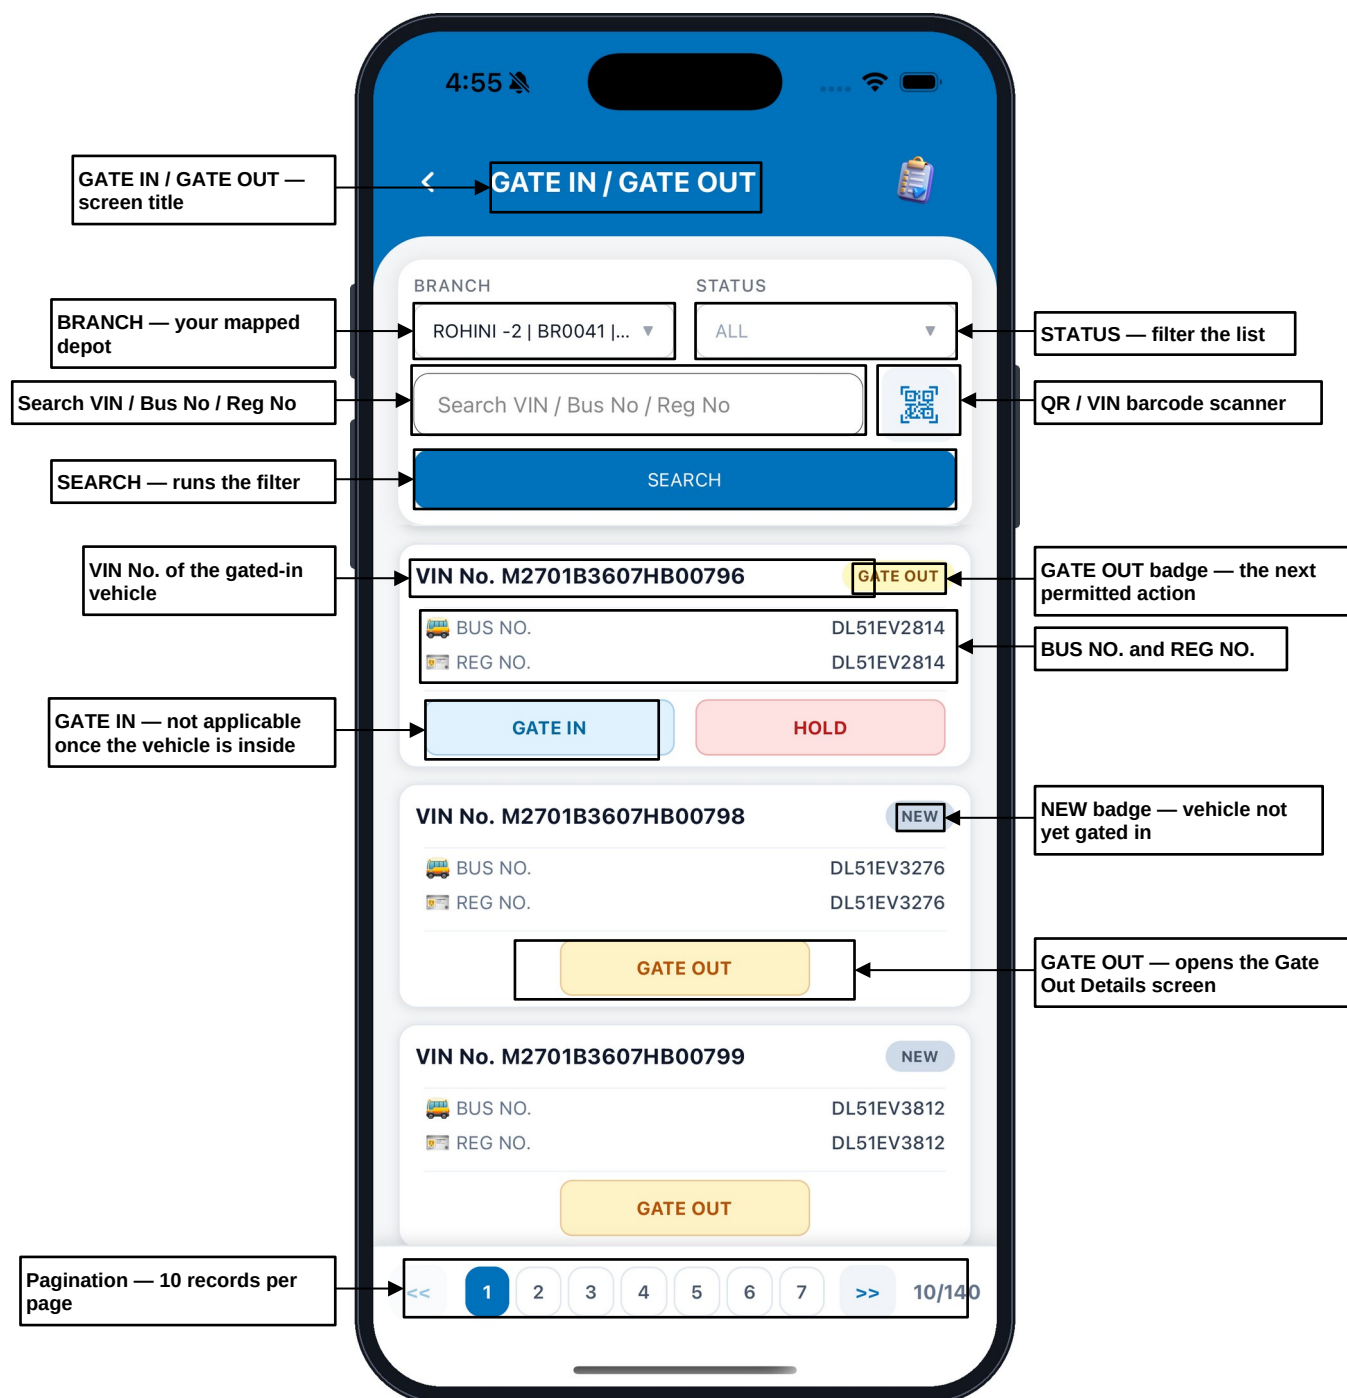


Fig. 12 — Gate In / Gate Out list showing vehicles eligible for gate-out

**Note:** The system allows Gate-Out only for vehicles that have already been gated in and whose job card is closed.

## xiii. Gate Out — Shift and Journey Details

- Select the Shift under which the vehicle is being released.
- Under Journey Details record the odometer reading, HRS, SOC Out % and the manual date and time.
- Enter the Schedule KMS, KWH/KM (VP1) and a remark for the transaction.

GATE IN / GATE OUT · STEP 7 OF 8

The screenshot shows the 'GATE OUT DETAILS' screen in a mobile app. The screen has a blue header with a back arrow and the title 'GATE OUT DETAILS'. Below the header, there is a 'SHIFT' section with a dropdown menu labeled 'Select Shift \*'. This is followed by a 'JOURNEY DETAILS' section with a blue header and the subtitle 'ODOMETER READINGS AND TIMING INFORMATION'. This section contains several input fields: 'SYSTEM DATE' (15-09-2026), 'SYSTEM TIME' (16:55), 'ODOMETER READING \*' (0), 'HRS \*' (0), 'SOC OUT % \*' (PLEASE SELECT SOC RANGE(0-100)%), 'MANUAL DATE \*' (15-09-2026), 'MANUAL TIME \*' (16:55), 'SCHEDULE KMS \*' (PLEASE ENTER SCHEDI), 'KWH/KM (VP1) \*' (PLEASE ENTER KWH/KI), and 'REMARK \*' (PLEASE ENTER REMARK). At the bottom of the 'JOURNEY DETAILS' section is a 'VEHICLE CONDITION' section with a blue header and the subtitle 'WHEEL TEMPERATURE STATUS MONITORING'. Annotations with arrows point to various fields: 'SHIFT — select the releasing shift' points to the 'Select Shift \*' dropdown; 'JOURNEY DETAILS — odometer readings and timing information' points to the 'JOURNEY DETAILS' header; 'SYSTEM DATE — set by the application' points to the 'SYSTEM DATE' field; 'SYSTEM TIME — set by the application' points to the 'SYSTEM TIME' field; 'ODOMETER READING (mandatory)' points to the 'ODOMETER READING \*' field; 'HRS — hour-meter reading' points to the 'HRS \*' field; 'SOC OUT % — select the 0-100% range' points to the 'SOC OUT % \*' field; 'MANUAL DATE' points to the 'MANUAL DATE \*' field; 'MANUAL TIME' points to the 'MANUAL TIME \*' field; 'SCHEDULE KMS' points to the 'SCHEDULE KMS \*' field; 'KWH/KM (VP1)' points to the 'KWH/KM (VP1) \*' field; 'REMARK (mandatory)' points to the 'REMARK \*' field; and 'VEHICLE CONDITION — wheel temperature status monitoring' points to the 'VEHICLE CONDITION' header.

Fig. 13 — Gate Out Details — journey readings

**Note:** Confirm the gate-out date and time before submitting — the readings are validated against the last Gate-In entry.

## xiv. Gate Out — Wheel Condition, Attachments and Submit

- Complete the four wheel temperature readings under Vehicle Condition.
- Upload the required photos and documents under Attachments.
- Tap SUBMIT to release the vehicle, or HOLD UP to keep the transaction pending.

GATE IN / GATE OUT · STEP 8 OF 8

**VEHICLE CONDITION**  
WHEEL TEMPERATURE STATUS MONITORING

FRONT LEFT \*  
FRONT LEFT WHEEL TE

FRONT RIGHT \*  
FRONT RIGHT WHEEL

BACK LEFT \*  
BACK LEFT WHEEL TE

BACK RIGHT \*  
BACK RIGHT WHEEL TE

**ATTACHMENTS**  
UPLOAD REQUIRED PHOTOS AND DOCUMENTS

Driver Duty Slip \*  
UPLOAD

Dashboard Photo \*  
UPLOAD

REAR PHOTO  
UPLOAD

FRONT PHOTO  
UPLOAD

LEFT PHOTO  
UPLOAD

RIGHT PHOTO  
UPLOAD

HOLD UP  
SUBMIT

Fig. 14 — Gate Out Details — attachments and submission

**Note:** On confirmation the gate-out entry is submitted and the vehicle is released for out-shedding.

## 6. Auto Job Cards (Daily / Ten-Day)

---

### Objective

To provide depot users with the list of auto-generated jobs based on daily and ten-day service schedules.

### In this section

#### xv. Open the Auto Job Card List

*Auto Job Card List with an expanded job card*

#### xvi. View an Auto Job Card

*View Auto Job Card — job details and checklist*

#### xvii. Auto Job Card Statuses

*Auto Job Card List — status of each job card*

#### xviii. Home Dashboard — Shift Engineer

*Home page for a shift engineer*

#### xix. Open the Auto Job Card Inspection List

*Auto Job Card Inspection list*

#### xx. Review and Process the Assigned Job

*Auto Job Card Inspection — expanded job card*

#### xxi. Validate Auto Job Card — Job Details

*Validate Auto Job Card — read-only job details*

#### xxii. Validate Auto Job Card — Checklist

*Validate Auto Job Card — checklist items*

## xv. Open the Auto Job Card List

- Select Auto Job Card List from Quick Links to view the auto-generated jobs for roadworthy vehicles.
- Filter the list by Branch and Status, or search by VIN, Bus Number or Registration Number.
- Expand a job card to review its details, then tap VIEW DETAILS.

### AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 1 OF 8



Fig. 15 — Auto Job Card List with an expanded job card

**Note:** Scheduling logic and auto-job generation rules follow the approved FRD and application configuration.

## xvi. View an Auto Job Card

- The Job Details section shows the branch, shift engineer, job card number and job card type.
- Verify the registration, bus and VIN numbers along with the vehicle status and the KM / HRS readings.
- Expand a Checklist group to review its inspection items and their selected status.

### AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 2 OF 8

**JOB DETAILS**  
INFORMATION ABOUT THE JOB CARD

|                                           |                                    |
|-------------------------------------------|------------------------------------|
| BRANCHNAME<br>ROHINI -2 (BR0041)          | SHIFT ENGINEER<br>EMP0049   ROHINI |
| JOB CARD NO.<br>AJC/<br>BR0041/2627/00078 | JOB CARD TYPE<br>DAILY INSPECTION  |
| REGISTRATION NO.<br>DL51EV2861            | BUS NO.<br>DL51EV2861              |
| VIN NO.<br>M2701B3607HB0079<br>2          | VEHICLE STATUS<br>OK               |
| STATUS<br>CLOSE                           | VEHICLE OPERATIONAL<br>YES         |
| KM READING<br>27                          | HRS READING<br>10                  |
| REMARKS<br>-                              |                                    |

**CHECKLIST**  
CHECKLIST ITEMS AND THEIR SELECTED STATUS

1. TRACTION COOLING SYSTEM >
2. WHEELS & TYRES >
3. BATTERY COOLING SYSTEM >
4. AIR CONDITIONING SYSTEM >
5. Dashboard >

**Callouts:**

- JOB DETAILS** — information about the job card
- BRANCHNAME**
- JOB CARD NO.**
- REGISTRATION NO.**
- VIN NO.**
- STATUS** — job card status
- KM READING**
- REMARKS**
- SHIFT ENGINEER**
- JOB CARD TYPE**
- BUS NO.**
- VEHICLE STATUS**
- VEHICLE OPERATIONAL**
- HRS READING**
- CHECKLIST** — checklist items and their selected status
- Checklist groups** — tap to expand

Fig. 16 — View Auto Job Card — job details and checklist

## xvii. Auto Job Card Statuses

- The list shows every auto-generated job card for the selected branch.
- The badge against each job card shows its current status — Close, Assigned or Open.
- Tap a job card, or its chevron, to open the job card details.

### AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 3 OF 8



Fig. 17 — Auto Job Card List — status of each job card

## xviii. Home Dashboard — Shift Engineer

- A shift engineer signs in to the same home page, with the modules enabled for that role.
- The Quick Links list differs by role — only authorized modules are displayed.
- Select Auto Job Card Inspection to process a job assigned to you.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 4 OF 8

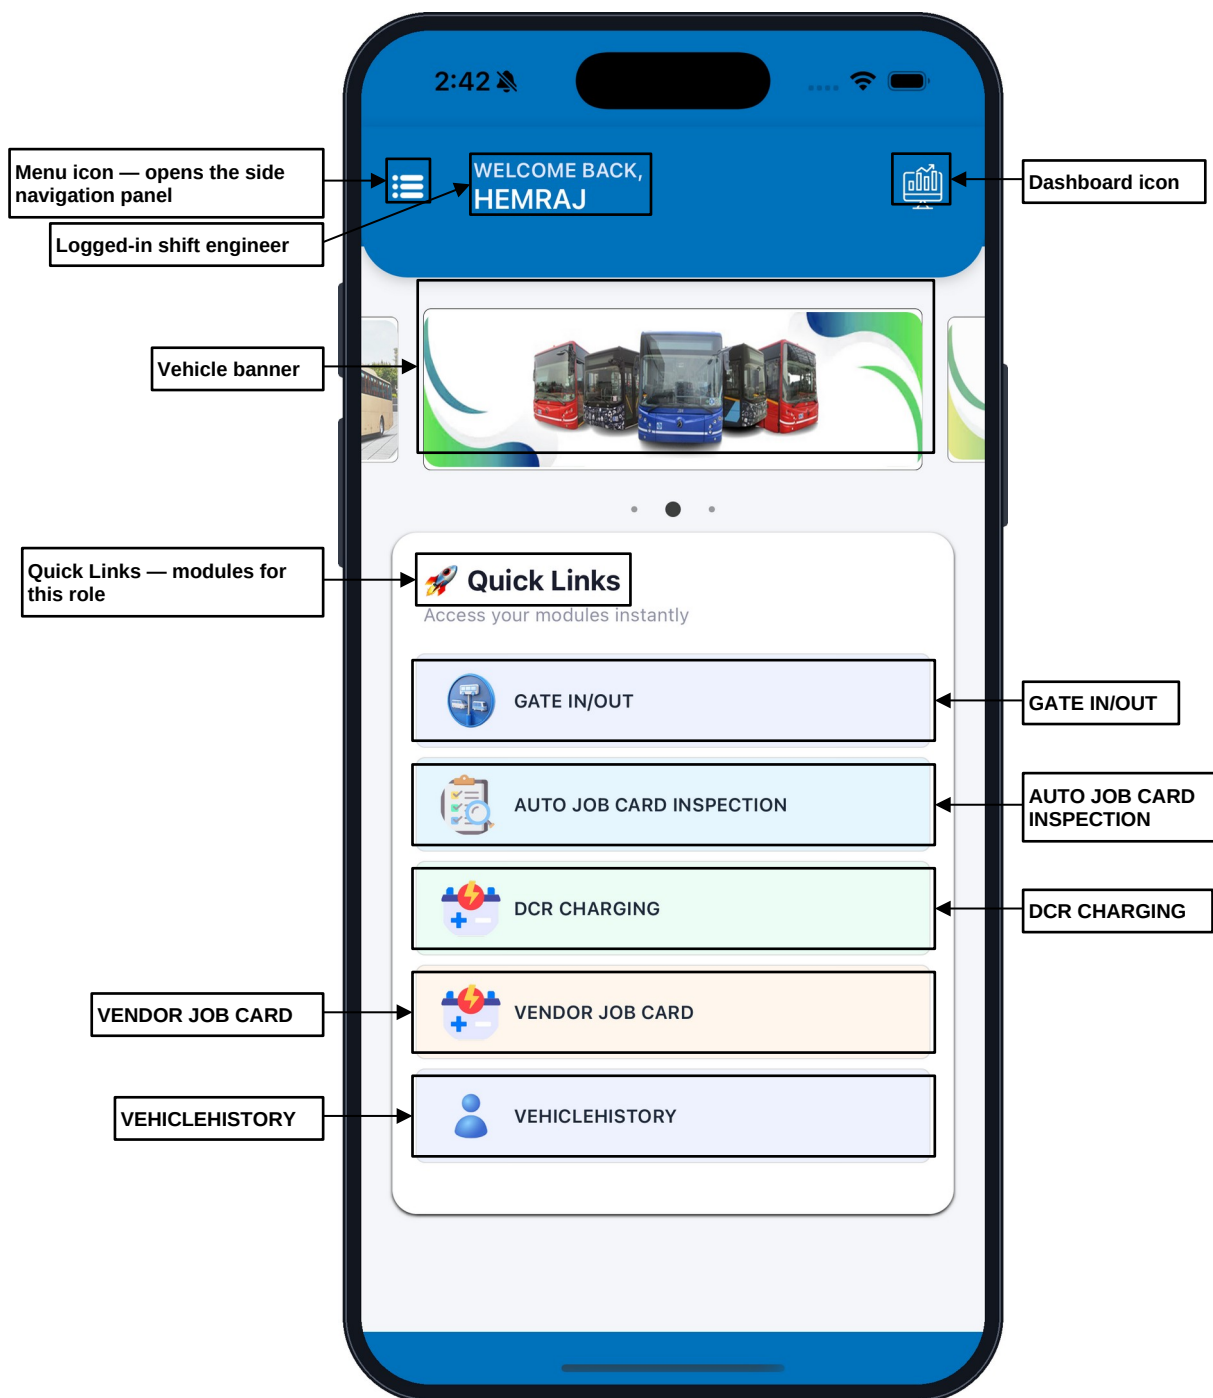


Fig. 18 — Home page for a shift engineer

## xix. Open the Auto Job Card Inspection List

- Select Auto Job Card Inspection from Quick Links.
- Filter by Branch and Status, or search by VIN, Bus Number or Registration Number.
- The list shows the job cards assigned to you, with their job type and status.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 5 OF 8

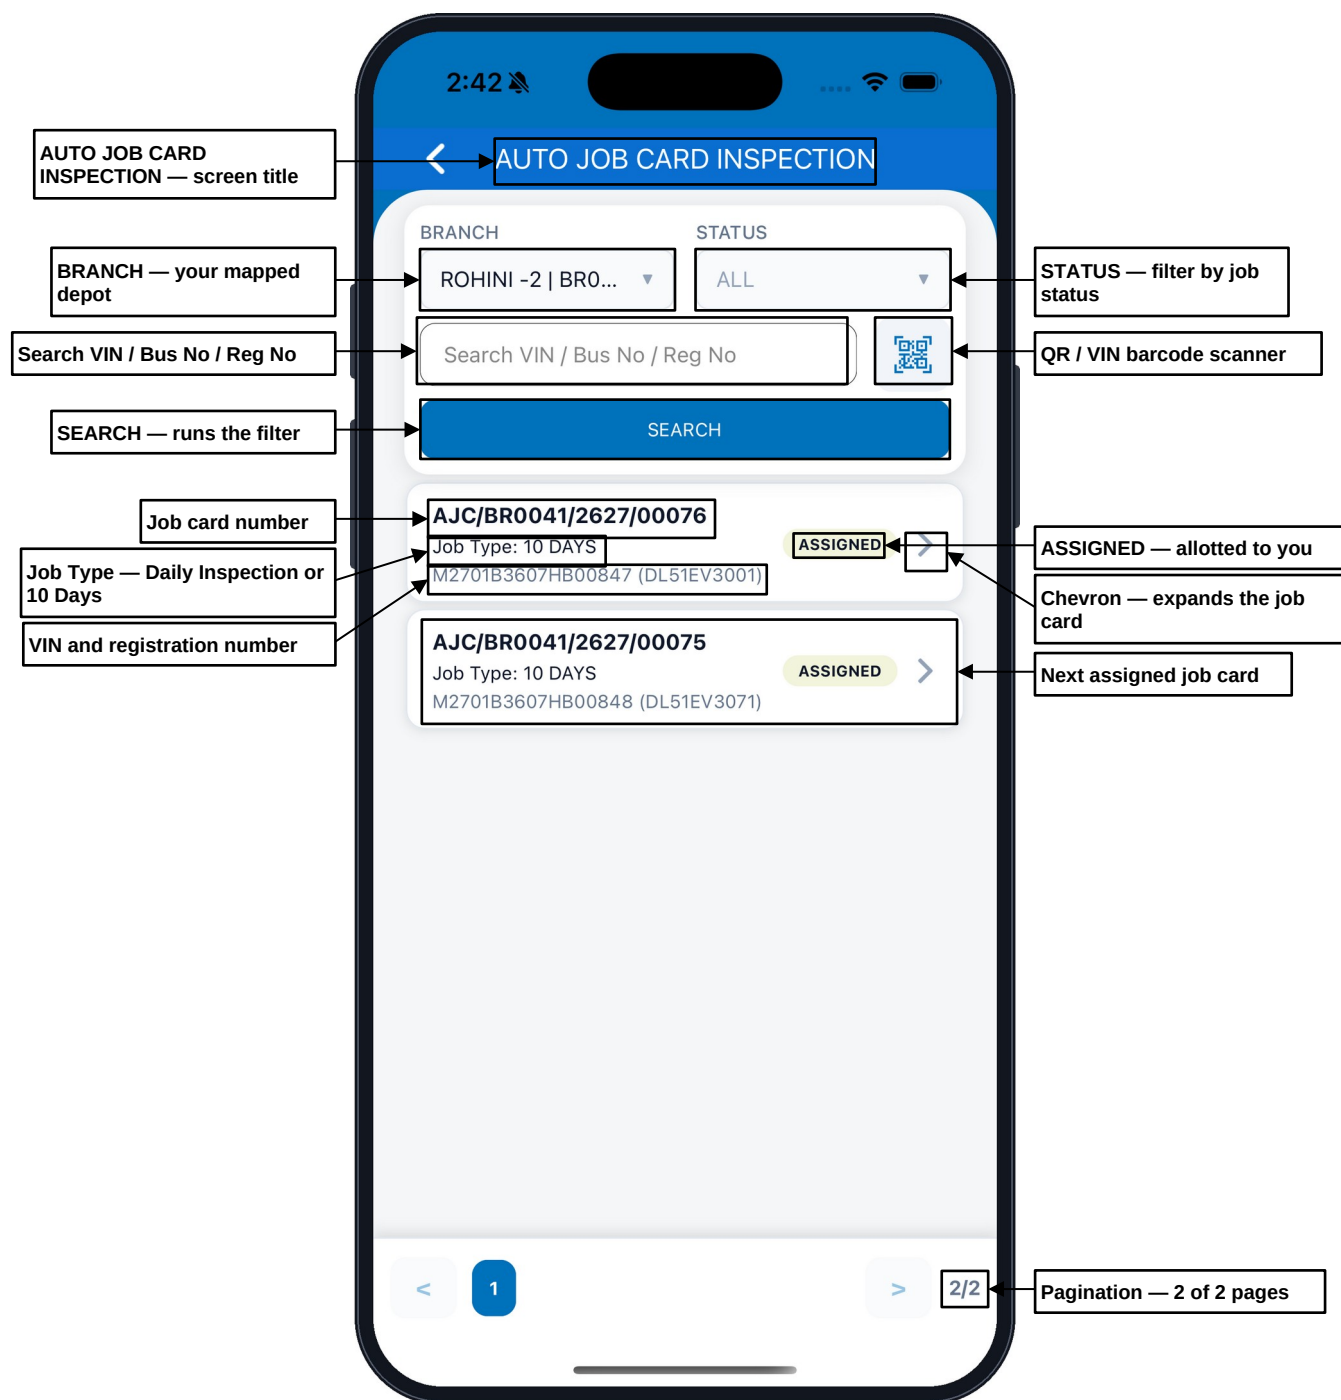


Fig. 19 — Auto Job Card Inspection list

## xx. Review and Process the Assigned Job

- Expand the assigned job card to review its full details.
- Verify the job type, branch, bus number, vehicle status and the shift engineer it is assigned to.
- Tap PROCESS JOB to begin validating the job card.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 6 OF 8



Fig. 20 — Auto Job Card Inspection — expanded job card

## xxi. Validate Auto Job Card — Job Details

- The Job Details section opens in read-only mode.
- Verify the job card number, shift engineer, job card type and vehicle identification.
- Scroll to the Checklist section to record the inspection results.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 7 OF 8

**VALIDATE AUTO JOB CARD**

**JOB DETAILS**  
INFORMATION ABOUT THE JOB CARD READ ONLY

**JOB DETAILS** — information about the job card

**READ ONLY** — these values cannot be edited here

**JOB CARD NO.** → AJC/BR0041/2627/00076

**SHIFT ENGINEER** → EMP0050 | HEMRAJ

**SHIFT ENGINEER** — the engineer processing the job

**JOB CARD TYPE** → 10 DAYS

**JOB CARD TYPE** — Daily Inspection or 10 Days

**VIN NO.** → M2701B3607HB00847

**REGISTRATION NO.** → DL51EV3001

**BUS NO.** → DL51EV3001

**REGISTRATION NO.**

**BUS NO.**

**STATUS** → ASSIGNED

**VEHICLE STATUS** → OK

**STATUS**

**VEHICLE STATUS**

**KM READING** → 0

**HRS READING** → 0

**KM READING**

**HRS READING**

**REMARK** → REMARK

**REMARK**

**CHECKLIST**  
VERIFY STATUS AND ENTER REMARKS ACTION REQUIRED

**CHECKLIST** — verify status and enter remarks

Fig. 21 — Validate Auto Job Card — read-only job details

## xxii. Validate Auto Job Card — Checklist

- Expand a checklist group to list the inspection items it contains.
- Set the Status for each item and enter a Remark where action is required.
- Complete every group before submitting the job card.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 8 OF 8

The screenshot shows a mobile app interface for validating an auto job card. The title bar is blue with a back arrow and the text 'VALIDATE AUTO JOB CARD'. The status bar at the top shows the time 2:42, signal strength, and battery level.

The main content area displays a checklist for the 'TRACTION COOLING SYSTEM' group, which is currently expanded. The group header shows the group name and a count of 4 items. Below the header, four inspection items are listed, each with a status dropdown and a remark field.

Annotations on the left side of the screen point to various UI elements:

- CHECKLIST** — verify status and enter remarks for each item (points to the checklist header)
- Checklist group** — tap to expand or collapse (points to the 'TRACTION COOLING SYSTEM' header)
- Item 1** — inspection description (points to '1 INSPECT APPEARANCE OF RADIATOR')
- STATUS** — select OK or the applicable result (points to the 'OK' status dropdown for Item 1)
- Item 2** — inspection description (points to '2 INSPECT AND REPLACE FOR ANY PIPE DAMAGE OR LEAKAGE')
- STATUS** (points to the 'OK' status dropdown for Item 2)
- Item 3** — inspection description (points to '3 INSPECT THE RADIATOR FINS FOR DAMAGE')
- STATUS** (points to the 'OK' status dropdown for Item 3)
- Item 4** — inspection description (points to '4 CHECK COOLANT LEVEL & ANY LEAKAGE AND TOP-UP (IF REQUIRED)')
- STATUS** (points to the 'OK' status dropdown for Item 4)

Annotations on the right side of the screen point to various UI elements:

- ACTION REQUIRED** — items still awaiting a status (points to the 'ACTION REQUIRED' button in the checklist header)
- Item count in this group** (points to the '4' in the group header)
- REMARK** — mandatory where action is required (points to the 'ENTER REMARK' field for Item 1)
- REMARK** (points to the 'ENTER REMARK' field for Item 2)
- REMARK** (points to the 'ENTER REMARK' field for Item 3)
- REMARK** (points to the 'ENTER REMARK' field for Item 4)
- Next checklist group** (points to the '2 WHEELS & TYRES' header at the bottom)

Fig. 22 — Validate Auto Job Card — checklist items

## 7. Assign Auto Job Cards

---

### Objective

To assign auto generated jobs to the appropriate service supervisor or authorized users.

### In this section

#### **xxiii. Open Assign Auto Job Card and Select Jobs**

*Assign Auto Job Card — selecting job cards*

#### **xxiv. Review the Selected Job Card**

*Assign Auto Job Card — expanded job details*

#### **xxv. Validation — Supervisor Required**

*Validation error raised when no supervisor is selected*

#### **xxvi. Select a Supervisor**

*SELECT SUPERVISOR list*

#### **xxvii. Confirm the Assignment**

*Confirm Submission dialog*

#### **xxviii. Assignment Complete**

*Assign Auto Job Card — supervisor selected*

## xxiii. Open Assign Auto Job Card and Select Jobs

- Open the Assign Auto Job Card module from Quick Links.
- Filter by Branch, Supervisor and Status to narrow the list of unassigned jobs.
- Tick each job card to be assigned; the ASSIGN NOW button shows how many are selected.

### ASSIGN AUTO JOB CARDS · STEP 1 OF 6

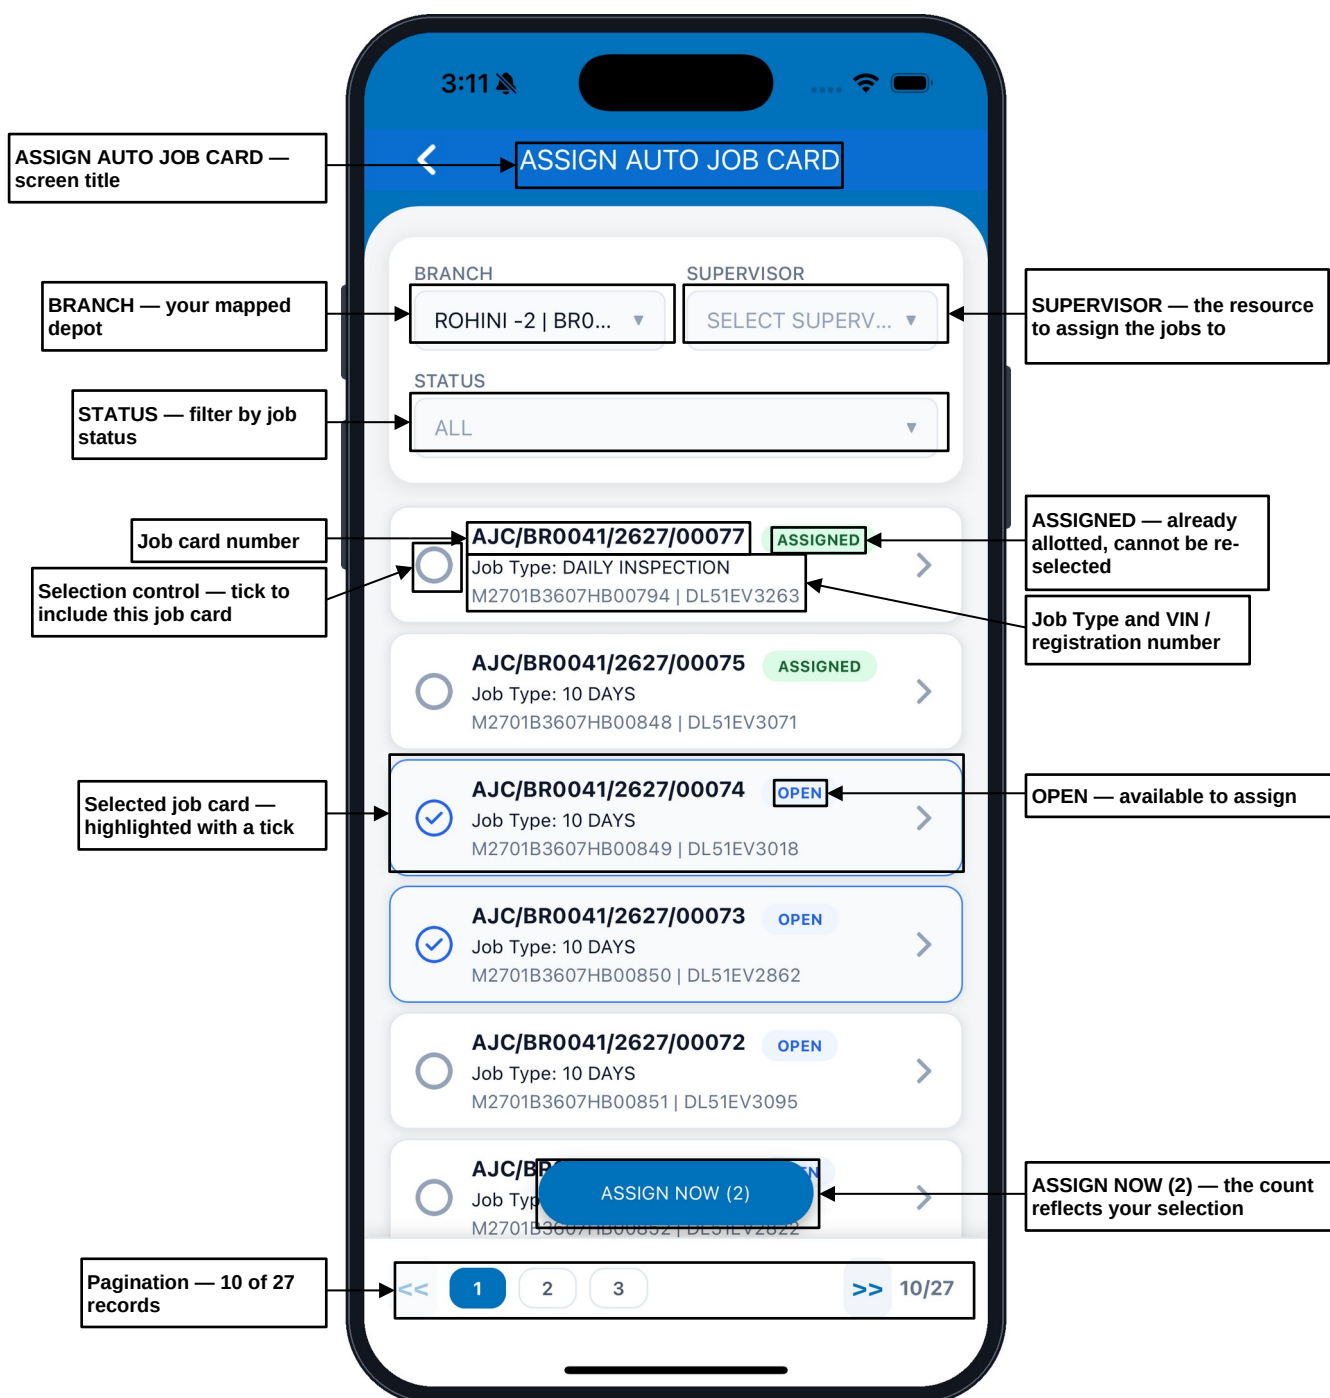


Fig. 23 — Assign Auto Job Card — selecting job cards

## xxiv. Review the Selected Job Card

- Tap the chevron on a selected job card to expand its details.
- Verify the job type, branch name, VIN, chassis and registration numbers before assigning.
- The selection count on ASSIGN NOW updates as you tick or untick job cards.

### ASSIGN AUTO JOB CARDS · STEP 2 OF 6



Fig. 24 — Assign Auto Job Card — expanded job details

## xxv. Validation — Supervisor Required

- Tapping **ASSIGN NOW** without choosing a supervisor raises a validation error.
- Tap **OK** to dismiss the message.
- Select a supervisor, then assign the job cards again.

### ASSIGN AUTO JOB CARDS · STEP 3 OF 6



Fig. 25 — Validation error raised when no supervisor is selected

## xxvi. Select a Supervisor

- Tap the Supervisor field to open the **SELECT SUPERVISOR** list.
- Choose the authorized person / service resource the jobs are to be assigned to.
- Tap the close icon to dismiss the list without selecting.

### ASSIGN AUTO JOB CARDS · STEP 4 OF 6

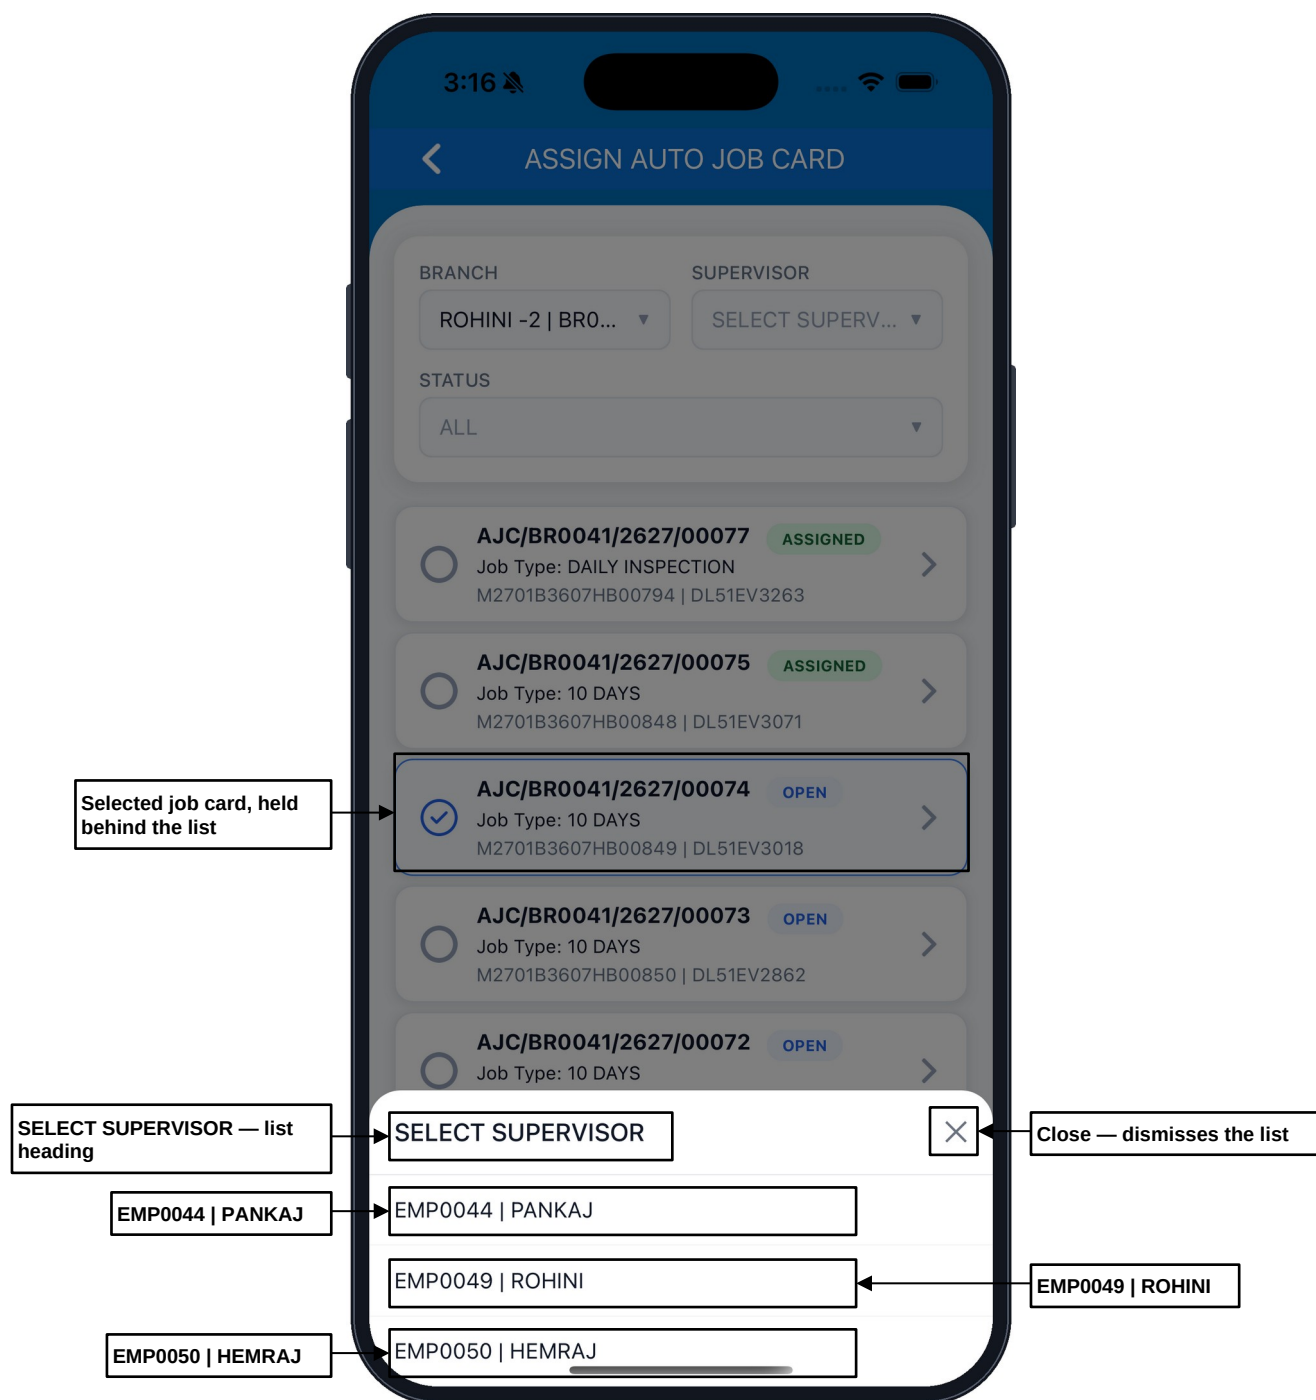


Fig. 26 — SELECT SUPERVISOR list

**Note:** Assignment rights are subject to the role and permissions configured for your user.

## xxvii. Confirm the Assignment

- With a supervisor selected, tap **ASSIGN NOW** to raise the confirmation.
- Tap **Yes** to assign the selected buses to that supervisor.
- Tap **Not now** to return to the list without assigning.

### ASSIGN AUTO JOB CARDS · STEP 5 OF 6



Fig. 27 — Confirm Submission dialog

## xxviii. Assignment Complete

- The selected supervisor is shown in the Supervisor field.
- Verify the job cards that remain ticked, then tap **ASSIGN NOW**.
- The auto job is assigned to the selected resource and becomes available for further service processing.

### ASSIGN AUTO JOB CARDS · STEP 6 OF 6

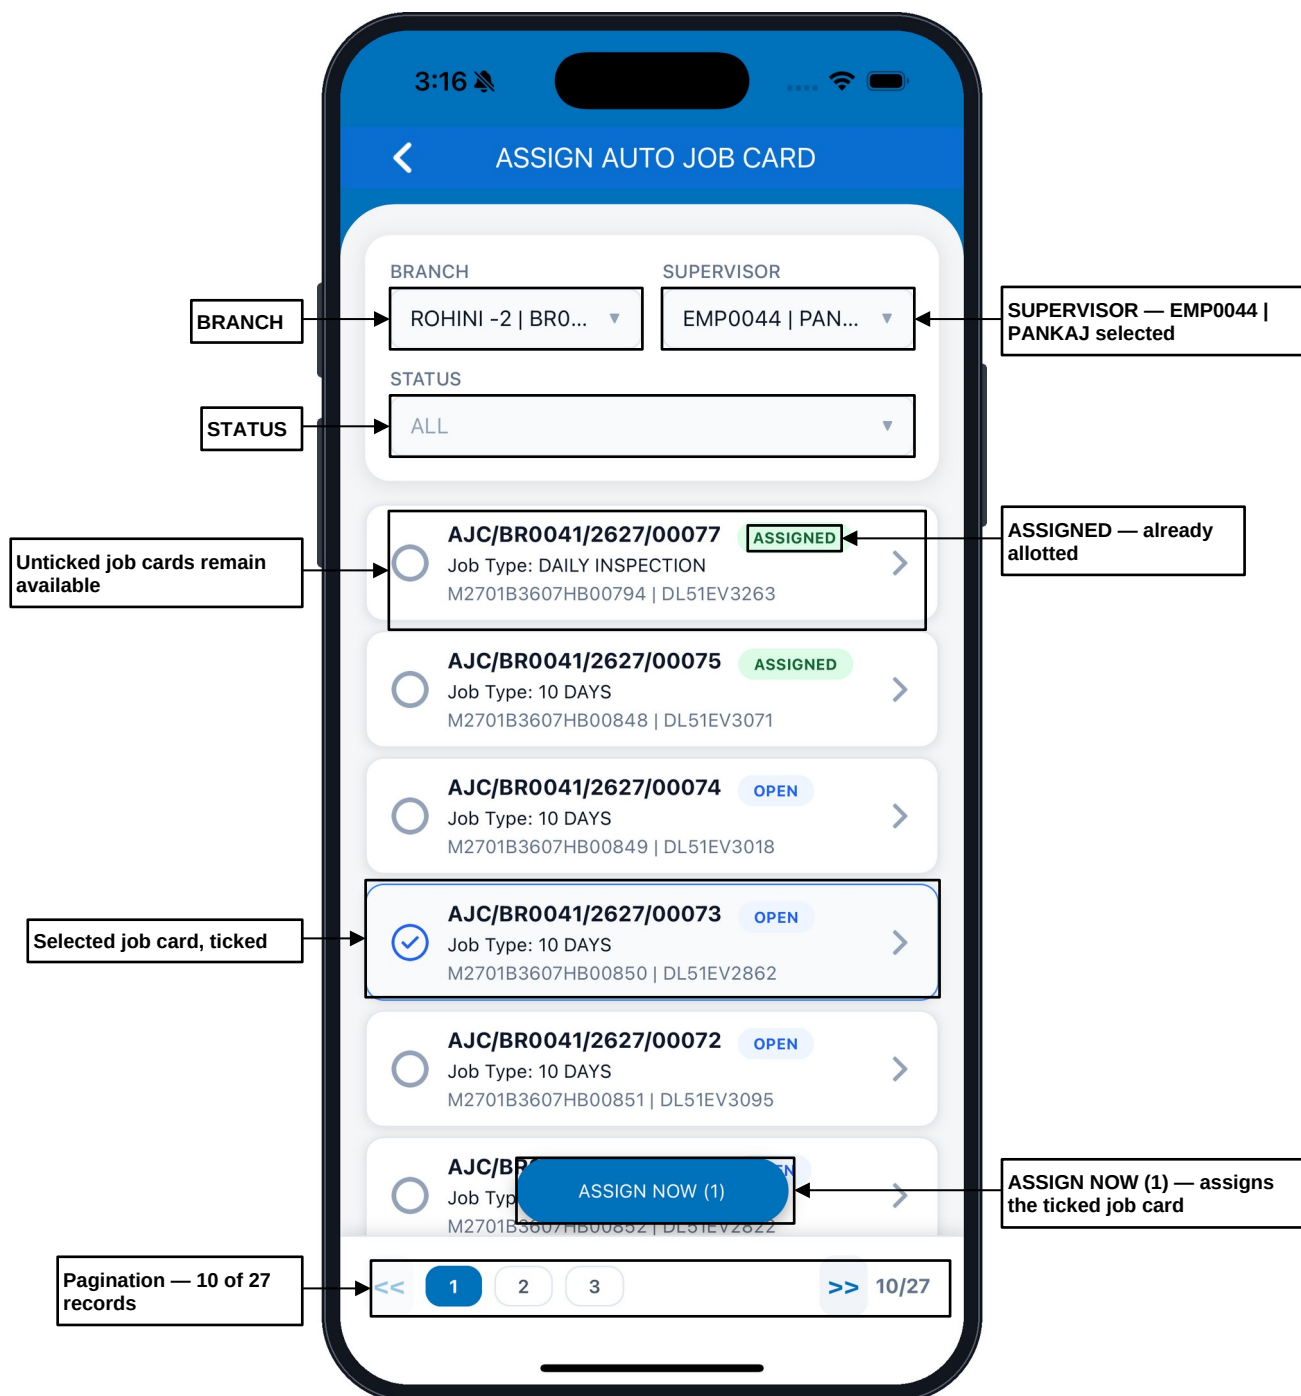


Fig. 28 — Assign Auto Job Card — supervisor selected

## 8. DCR Charging

---

### Objective

To allow depot users to view and capture vehicle charging-related information, as enabled by the JBM DMS application.

### In this section

#### **xxix. Open DCR Charging and Search Records**

*DCR Charging list*

#### **xxx. Search the Vehicle to Charge**

*DCR Charging Details — depot detail and vehicle search*

#### **xxxi. Vehicle and Charger Master Details**

*DCR Charging Details — vehicle details*

#### **xxxii. Charger Details and Charge Timing**

*DCR Charging Details — charger and timing*

#### **xxxiii. SOC, Energy and Final Status**

*DCR Charging Details — SOC, energy and final status*

#### **xxxiv. Attachments and Submit**

*DCR Charging Details — attachments and submission*

## xxix. Open DCR Charging and Search Records

- Select DCR Charging from Quick Links.
- Set the From Date, To Date, Branch and Status, then tap SEARCH.
- Tap the + button to create a new charging record.

### DCR CHARGING · STEP 1 OF 6



Fig. 29 — DCR Charging list

## xxx. Search the Vehicle to Charge

- Confirm the Branch in the Depot Detail & Search Vehicle section.
- Search the vehicle by VIN, Bus Number or Registration Number, or scan the QR / VIN barcode.
- Tap SEARCH to load the vehicle and its charging basics.

DCR CHARGING · STEP 2 OF 6



Fig. 30 — DCR Charging Details — depot detail and vehicle search

## xxxi. Vehicle and Charger Master Details

- The Vehicle Details section is filled from the vehicle you searched.
- Select who the vehicle was charged by, and record the KMS reading and shift number.
- Charger Master Details carries the charger selection and capacity settings.

### DCR CHARGING · STEP 3 OF 6

The screenshot shows the 'DCR CHARGING DETAILS' screen on a mobile app. The interface is divided into three main sections: 'DEPOT DETAIL & SEARCH VEHICLE', 'VEHICLE DETAILS', and 'CHARGER MASTER DETAILS'. Arrows from external labels point to specific fields within these sections.

**DEPOT DETAIL & SEARCH VEHICLE**

- BRANCH — depot and address** points to the 'BRANCH \*' dropdown menu showing 'ROHINI -2 | BR0041 | DEPOT | ROHINI SEC-37, WEST DELHI,'.
- Searched VIN number** points to the VIN input field containing 'M2701B3607HB00835'.
- SEARCH** points to the 'SEARCH' button.

**VEHICLE DETAILS**

- VIN NO.** points to the 'VIN NO.' field containing 'M2701B3607HB...'.
- BUS NO.** points to the 'BUS NO.' field containing 'DL51EV2812'.
- REGISTRATION NO.** points to the 'REGISTRATION NO.' field containing 'DL51EV2812'.
- PLEASE SELECT CHARGED BY** points to the 'Charged By' dropdown menu.
- KMS (READING)** points to the 'KMS (READING)' field containing '0'.
- SHIFT NO.** points to the 'SHIFT NO.' field containing 'SHIFT B'.

**CHARGER MASTER DETAILS**

- LAST CHARGE ON** points to the 'LAST CHARGE ON' field.

Fig. 31 — DCR Charging Details — vehicle details

## xxxii. Charger Details and Charge Timing

- Select the Charger and verify its location, capacity and rating.
- Confirm the charger gun make for each gun, the error status and the charging gun type.
- Under Charge Timing & SOC record the manual start and end date and time.

### DCR CHARGING · STEP 4 OF 6

The screenshot shows the 'DCR CHARGING DETAILS' screen. The top status bar displays the time 3:33, signal strength, and battery level. The app title 'DCR CHARGING DETAILS' is at the top. The form contains the following fields and sections:

- CHARGER \***: A dropdown menu showing 'CHM00004 | CCS2'. An annotation points to this field: 'CHARGER — select the charger and gun (mandatory)'.
- CHARGER LOCATION**: A text field showing 'ROHINI -2'. An annotation points to this field: 'CHARGER LOCATION'.
- CAPACITY**: A text field showing '60'. An annotation points to this field: 'CAPACITY'.
- RATING**: A text field showing '200'. An annotation points to this field: 'RATING'.
- CHARGER GUN MAKE FOR GUN #1**: A text field showing 'Delta'. An annotation points to this field: 'CHARGER GUN MAKE FOR GUN #1'.
- CHARGER GUN MAKE FOR GUN #2**: A text field showing 'Delta'. An annotation points to this field: 'CHARGER GUN MAKE FOR GUN #2'.
- ERROR ON CHARGER**: A text field showing 'No Error'. An annotation points to this field: 'ERROR ON CHARGER'.
- CHARGING GUN TYPE**: A text field showing 'CCS2'. An annotation points to this field: 'CHARGING GUN TYPE'.
- CHARGE TIMING & SOC**: A blue button with a clock icon and the text 'TIME, SOC, AND ENERGY TRACKING'. An annotation points to this button: 'CHARGE TIMING & SOC — time, SOC and energy tracking'.
- START DATE (SYSTEM)**: A text field showing '16-09-2026'. An annotation points to this field: 'START DATE (SYSTEM) — set by the application'.
- START TIME (SYSTEM)**: A text field showing '15:33'. An annotation points to this field: 'START TIME (SYSTEM) — set by the application'.
- START DATE (MANUAL) \***: A text field showing 'SELECT START DAT...'. An annotation points to this field: 'START DATE (MANUAL) — mandatory'.
- START TIME (MANUAL) \***: A text field showing 'SELECT START TIME...'. An annotation points to this field: 'START TIME (MANUAL) — mandatory'.
- END DATE (MANUAL) \***: A text field showing 'SELECT END DATE (...)'. An annotation points to this field: 'END DATE (MANUAL) — mandatory'.
- END TIME (MANUAL) \***: A text field showing 'SELECT END TIME (...)'. An annotation points to this field: 'END TIME (MANUAL) — mandatory'.
- REMARK**: A text field showing 'ENTER REMARK'. An annotation points to this field: 'REMARK'.

Fig. 32 — DCR Charging Details — charger and timing

## xxxiii. SOC, Energy and Final Status

- Enter the start and end SOC ranges together with the charging time and kWh consumed.
- Set the SOC Charged Status, then select the Final Status and the person to inform.
- Add the attachment details and remarks for the charging record.

### DCR CHARGING · STEP 5 OF 6

The screenshot displays the 'DCR CHARGING DETAILS' screen. The interface includes the following elements and their associated labels:

- START DATE (MANUAL)**: Points to the 'SELECT START DAT...' field.
- START TIME (MANUAL)**: Points to the 'SELECT START TIME...' field.
- END DATE (MANUAL)**: Points to the 'SELECT END DATE (...)' field.
- END TIME (MANUAL)**: Points to the 'SELECT END TIME (...)' field.
- REMARK**: Points to the 'ENTER REMARK' text input field.
- START SOC — 0–100% range (mandatory)**: Points to the 'START SOC RANGE' field.
- END SOC — 0–100% range (mandatory)**: Points to the 'END SOC RANGE(0-' field.
- CHARGING TIME — calculated by the application**: Points to the 'CALCULATED TIME' field.
- KWH CONSUMED — mandatory**: Points to the 'KWH CONSUMED' field.
- SOC Charged Status — toggle Yes or No**: Points to the 'SOC Charged Status' toggle switch.
- FINAL STATUS — submit status and hold reason details**: Points to the 'FINAL STATUS' button.
- SELECT STATUS — mandatory**: Points to the 'Select Status \*' dropdown menu.
- PLEASE SELECT INFORM TO**: Points to the 'Inform To \*' dropdown menu.
- ATTACHMENT — add attachment details and remarks**: Points to the 'ATTACHMENT' button.
- IMAGE 1 — upload**: Points to the 'IMAGE 1' upload area.
- IMAGE 2 — upload**: Points to the 'IMAGE 2' upload area.

Fig. 33 — DCR Charging Details — SOC, energy and final status

## xxxiv. Attachments and Submit

- Verify the SOC values, charging time and kWh consumed.
- Select the status and the Inform To recipient under Final Status.
- Upload the required images, then tap SUBMIT to save the charging record.

### DCR CHARGING · STEP 6 OF 6

The screenshot shows the 'DCR CHARGING DETAILS' screen with the following fields and annotations:

- START SOC RANGE:** Annotated as 'START SOC — 0–100% range'.
- END SOC RANGE(0-:** Annotated as 'END SOC — 0–100% range'.
- CHARGING TIME \* / CALCULATED TIME:** Annotated as 'CHARGING TIME — calculated by the application'.
- KWH CONSUMED \* / KWH CONSUMED:** Annotated as 'KWH CONSUMED'.
- SOC Charged Status:** A toggle switch currently set to 'No', annotated as 'SOC Charged Status — toggle Yes or No'.
- FINAL STATUS:** A blue button with a green checkmark, annotated as 'FINAL STATUS — submit status and hold reason details'.
- SELECT STATUS:** A dropdown menu with 'Select Status \*' selected, annotated as 'SELECT STATUS — mandatory'.
- PLEASE SELECT INFORM TO:** A dropdown menu with 'Inform To \*' selected, annotated as 'PLEASE SELECT INFORM TO'.
- ATTACHMENT:** A blue button with a paperclip icon, annotated as 'ATTACHMENT — add attachment details and remarks'.
- IMAGE 1 / IMAGE 2:** Two image upload areas, each with an 'UPLOAD' button. 'IMAGE 1' is annotated as 'IMAGE 1 — upload' and 'IMAGE 2' as 'IMAGE 2 — upload'.
- SUBMIT:** A blue button at the bottom, annotated as 'SUBMIT — saves the charging record'.

Fig. 34 — DCR Charging Details — attachments and submission

**Note:** The exact fields, validations and charging integration follow the approved Charging Details screen and functional requirements.

## 9. User Troubleshooting

| Issue                     | Recommended action                                                      |
|---------------------------|-------------------------------------------------------------------------|
| Unable to login           | Verify credentials and contact administrator if access is denied.       |
| Vehicle not found         | Verify Bus Number, Registration Number, or VIN.                         |
| VIN not authorized        | Contact admin for assigned VIN access.                                  |
| Odometer validation error | Enter a reading not less than the previous recorded reading.            |
| Duplicate Gate-In error   | Complete the previous Gate-Out loop first.                              |
| Gate-Out not allowed      | Verify Gate-In status and job card closure.                             |
| Wheel temperature alert   | Inform Shift Supervisor / Depot Manager and follow the service process. |
| Complaint not visible     | Verify the Gate-In complaint was saved against the correct VIN.         |
| Job card not available    | Verify auto-job generation and assigned access.                         |

## 10. JBM Officials Interviewed

| Persons interviewed | Department | Remarks |
|---------------------|------------|---------|
| Mr. Puneet Sharma   |            |         |
| Mr. Gaurav Singla   |            |         |
| Mr. Dinesh Kumar    |            |         |
| Mr. Vinit Chavan    |            |         |