



Dealer Management System

User Manual

Service — Mobile App

Document: USER MANUAL-MOBILE APP_V1

Release Date: 10th Sept, 2026

Every application screen in this manual is annotated field by field, in the style of the JBM DMS screen guides.

Prepared by



Document Control

Document History

Version	Date of Prepare	Prepared / Updated By	Reviewed By	Reason for Change	Affected Sections
1.0	10th Sept 2026	Harbans Kumar		Initial release	All

Revision History

Version	Date of Revision	Prepared / Updated By	Reviewed By	Reason for Change	Affected Sections

Approvals

Version	Date of Revision	Prepared / Updated By	Reviewed By	Reason for Change	Affected Sections

Contents

1. Introduction

1.1 Purpose · 1.2 Intended Users · 1.3 Prerequisite · 1.4 General Navigation

2. Login / Logout

i. Open the Application and Sign In · ii. Access the Home Dashboard · iii. Open the Menu and Select Logout · iv. Confirm the Logout

3. User Profile

v. View Your User Profile

4. Contact Us

vi. View JBM HQ Contact Details

5. Gate In / Gate Out

vii. Open Gate In / Gate Out and Find the Vehicle · viii. Gate In — Bus, Driver and Duty Details · ix. Gate In — Performance, SOC and Journey Details · x. Gate In — Schedule, Complaint and Vehicle Status · xi. Gate In — Wheel Condition, Attachments and Submit · xii. Gate Out — Select the Vehicle to Release · xiii. Gate Out — Shift and Journey Details · xiv. Gate Out — Wheel Condition, Attachments and Submit

6. Auto Job Cards (Daily / Ten-Day)

xv. Open the Auto Job Card List · xvi. View an Auto Job Card · xvii. Auto Job Card Statuses · xviii. Home Dashboard — Shift Engineer · xix. Open the Auto Job Card Inspection List · xx. Review and Process the Assigned Job · xxi. Validate Auto Job Card — Job Details · xxii. Validate Auto Job Card — Checklist

7. Assign Auto Job Cards

xxiii. Open Assign Auto Job Card and Select Jobs · xxiv. Review the Selected Job Card · xxv. Validation — Supervisor Required · xxvi. Select a Supervisor · xxvii. Confirm the Assignment · xxviii. Assignment Complete

8. DCR Charging

xxix. Open DCR Charging and Search Records · xxx. Search the Vehicle to Charge · xxxi. Vehicle and Charger Master Details · xxxii. Charger Details and Charge Timing · xxxiii. SOC, Energy and Final Status · xxxiv. Attachments and Submit

9. User Troubleshooting

10. JBM Officials Interviewed

1. Introduction

1.1 Purpose

The purpose of this manual is to provide step-by-step guidance to depot users for performing service-related activities through the JBM DMS Mobile Application.

The application enables depot users to:

- Access the application using authorized credentials.
- View and update permitted user profile information.
- Access JBM HQ contact details.
- Capture vehicle Gate-In and Gate-Out information.
- Identify vehicles using QR code, VIN, Bus Number, or Registration Number.
- Record driver complaints, breakdown and accidental information while gating in, along with other details.
- Trigger and manage auto-generated service jobs.
- Perform charging, vendor job card, and vehicle history activities, as enabled for the user.

1.2 Intended Users

User	Access
JBM Service Depot User	Authorized service operations
JBM Vendor Depot User	Authorized vendor operations

1.3 Prerequisite

The depot vehicle inventory must be available in the system before performing vehicle-related transactions. The inventory should contain the vehicle information required to identify and process depot vehicles, such as:

- Vehicle Identification Number
- Vehicle Registration Number
- Bus Number
- Assigned depot / vehicle mapping

1.4 General Navigation

The mobile application provides the following modules through the main menu or dashboard. The exact screen arrangement and labels are subject to the approved application design. Vendor Job Card, Vehicle History and Shift Remarks are opened from the same menu and dashboard, and are available where enabled for the user.

Functionality	Symbol / Icon
Login / Logout	
Menu Bar	
User Profile	
Contact Us	
Gate In / Gate Out	
Auto Job Card List	
Assign Auto Jobs	
DCR Charging	
Dashboard	
Scroll Right	
Scroll Left	

2. Login / Logout

Objective

To allow authorized JBM Service and JBM Vendor depot users to securely access the JBM DMS Mobile Application.

In this section

i. Open the Application and Sign In

Sign-in screen

ii. Access the Home Dashboard

Home page with Quick Links

iii. Open the Menu and Select Logout

Side navigation panel

iv. Confirm the Logout

Confirm Logout dialog

i. Open the Application and Sign In

- Launch the JBM DMS Mobile Application by tapping the JBMDMS icon on your device.
- Enter your authorized username and password in the respective fields.
- Tap SIGN IN to authenticate.

LOGIN / LOGOUT · STEP 1 OF 4

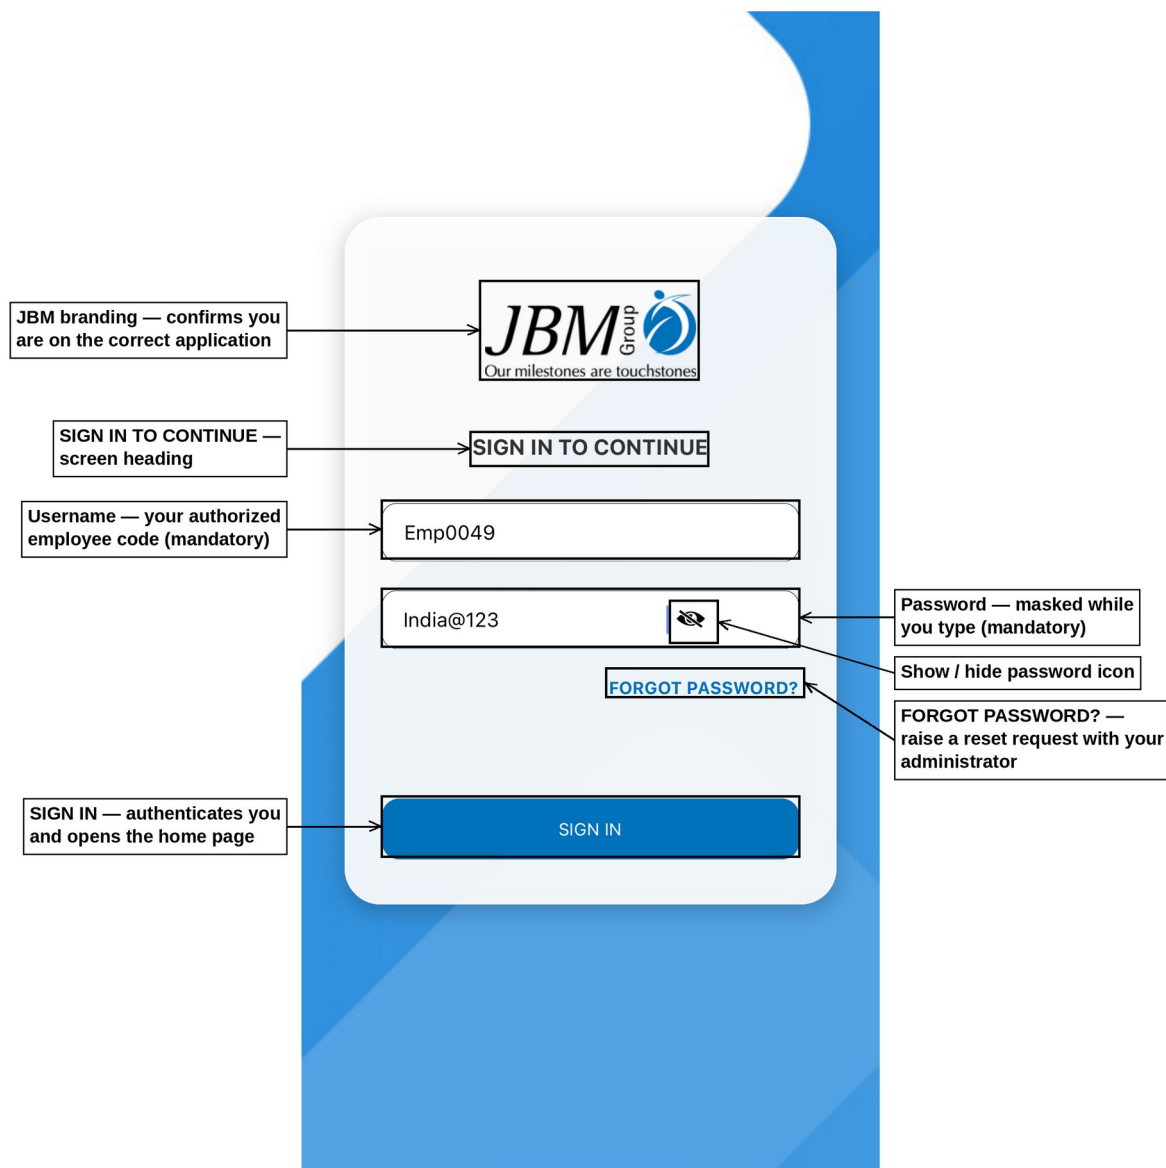


Fig. 1 — Sign-in screen

Note: Access is subject to the credentials and permissions configured by your administrator.

ii. Access the Home Dashboard

- On successful authentication the mobile application home page opens.
- Use Quick Links to open any module you are authorized for.
- Tap the menu icon at the top-left to open the side navigation panel.

LOGIN / LOGOUT · STEP 2 OF 4

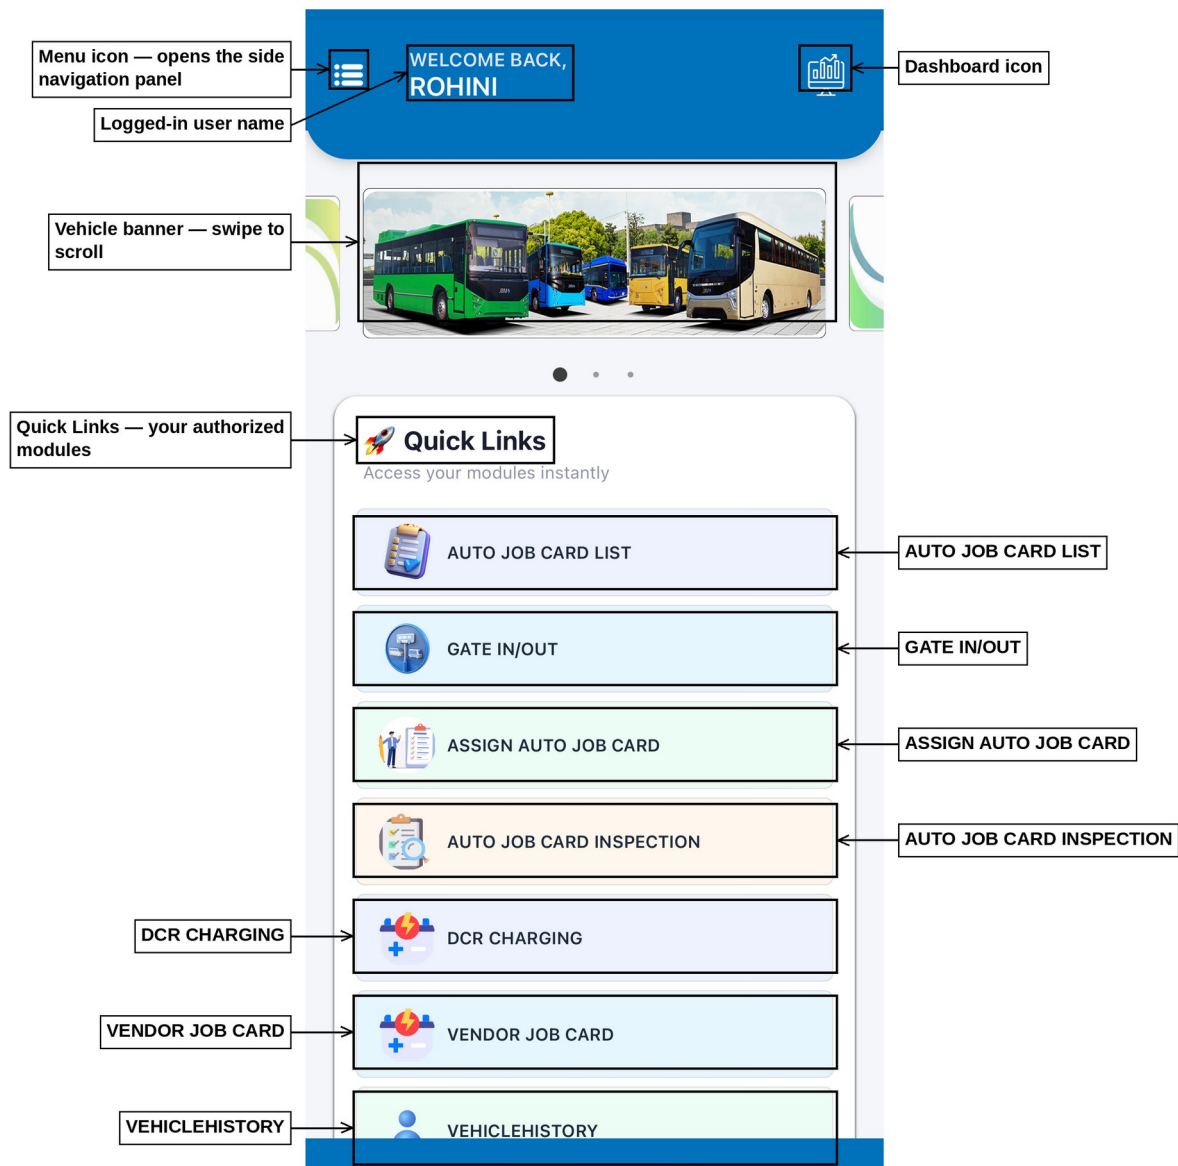


Fig. 2 — Home page with Quick Links

Note: Only the modules enabled for your role are listed; the arrangement may differ by user.

iii. Open the Menu and Select Logout

- Tap the menu icon of the application.
- The side panel lists every module available to you, plus My Profile and Contact Us.
- Select LOGOUT at the bottom of the panel.

LOGIN / LOGOUT · STEP 3 OF 4

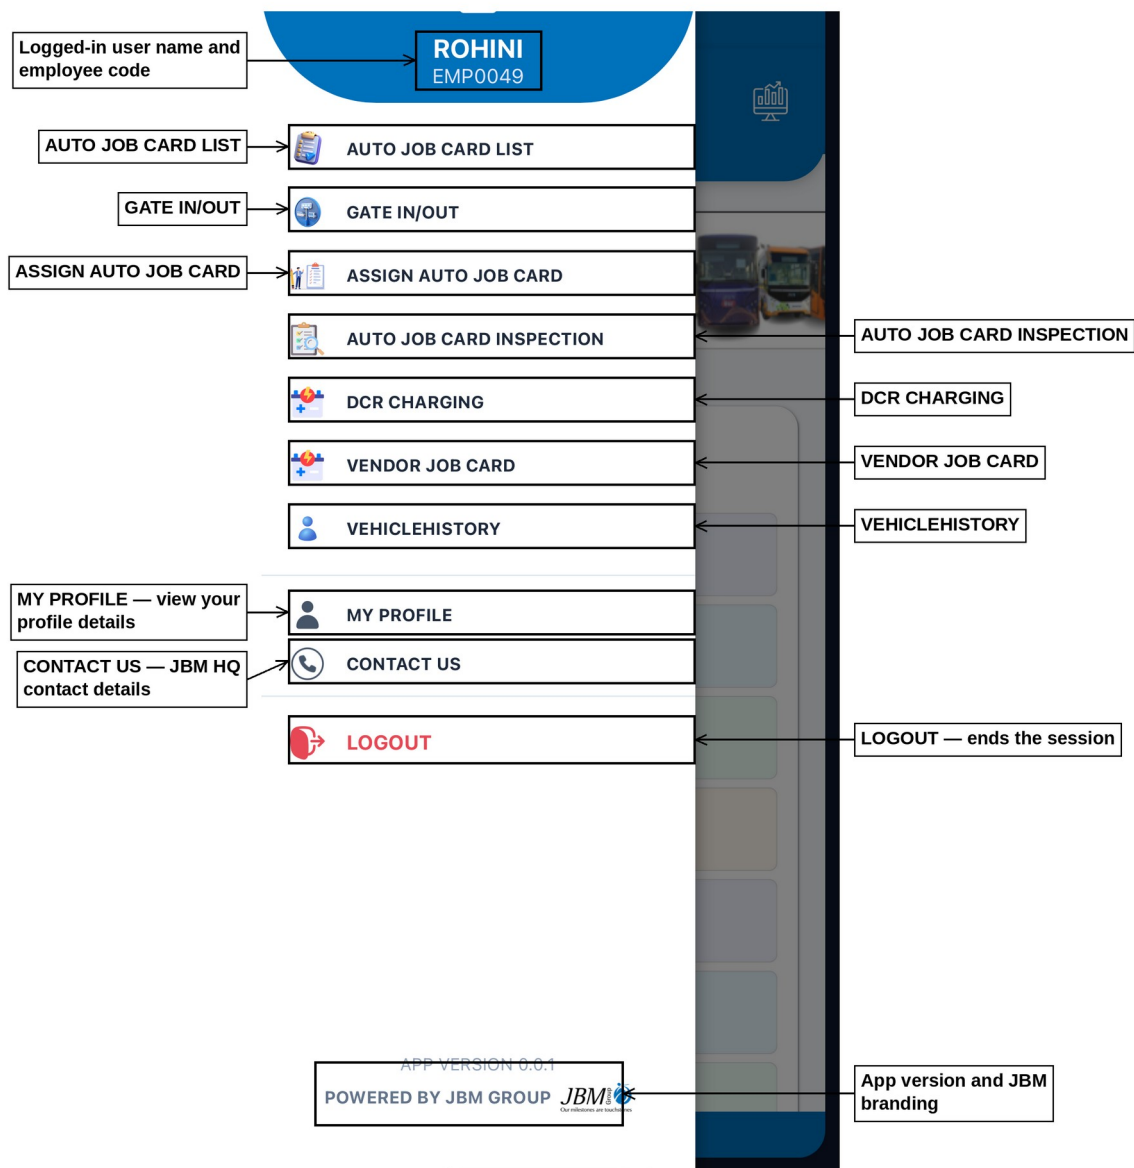


Fig. 3 — Side navigation panel

iv. Confirm the Logout

- A confirmation dialog appears when you select Logout.
- Tap YES, LOG OUT to confirm; you are redirected to the login screen.
- Tap CANCEL to stay signed in and return to the home page.

LOGIN / LOGOUT · STEP 4 OF 4

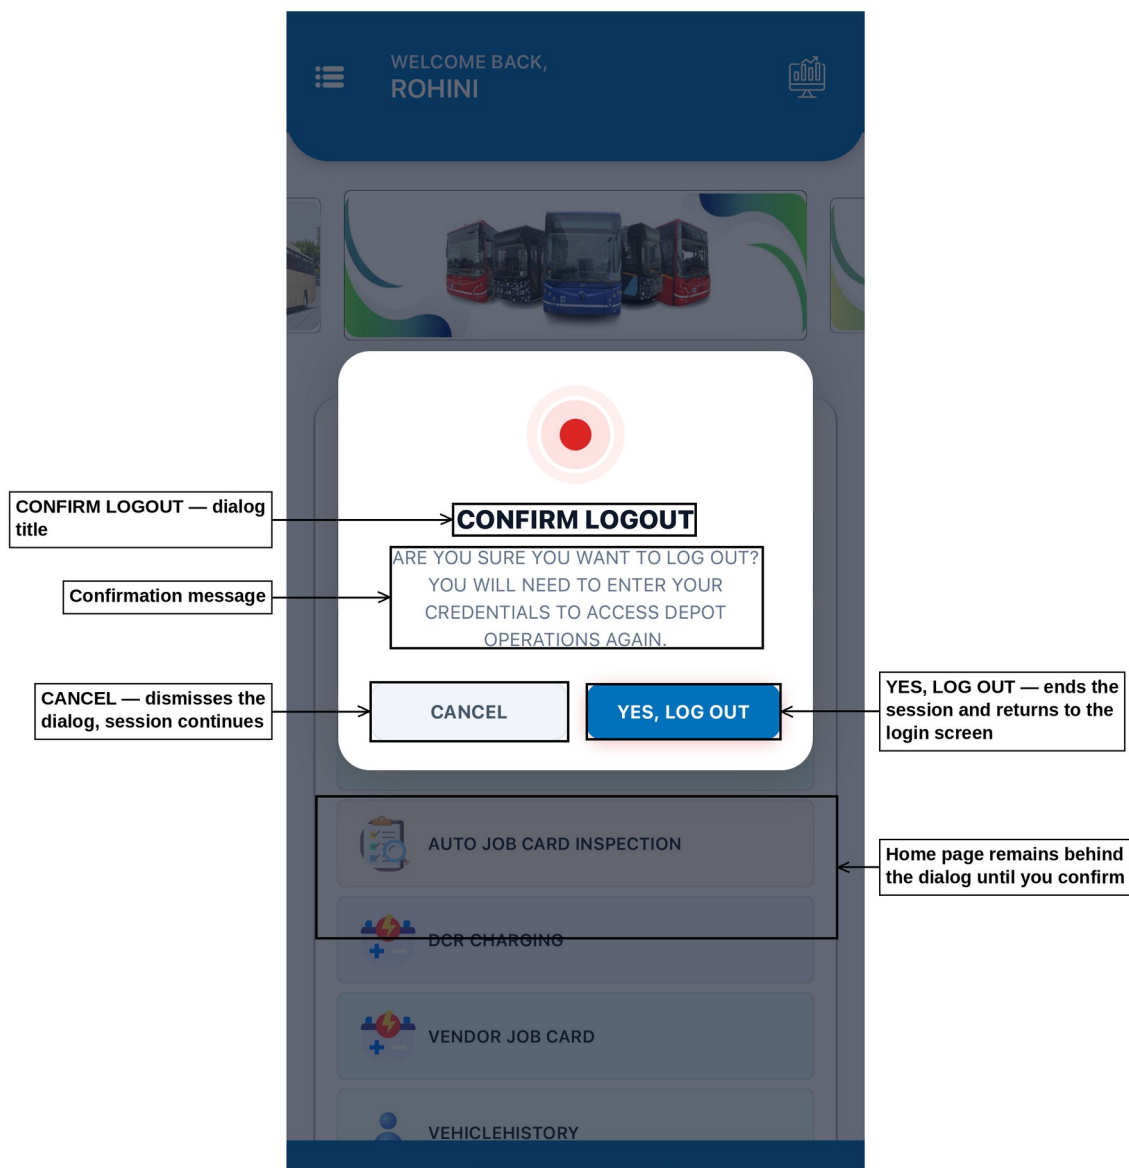


Fig. 4 — Confirm Logout dialog

Note: After logging out your credentials are required again to access depot operations.

Login validations

Validation	Expected behaviour
Valid credentials	User can access the application
Invalid username / password	Login is rejected
Unauthorized user	Access is not permitted
Blank mandatory fields	System prompts the user to enter required details

3. User Profile

Objective

To allow users to view their profile and update the parameters permitted by JBM.

In this section

v. View Your User Profile

User Profile screen

v. View Your User Profile

- Tap the menu icon and select My Profile to view your details.
- Review the profile parameters maintained for your user account.
- Tap the back arrow to return to the home page.

USER PROFILE · STEP 1 OF 1

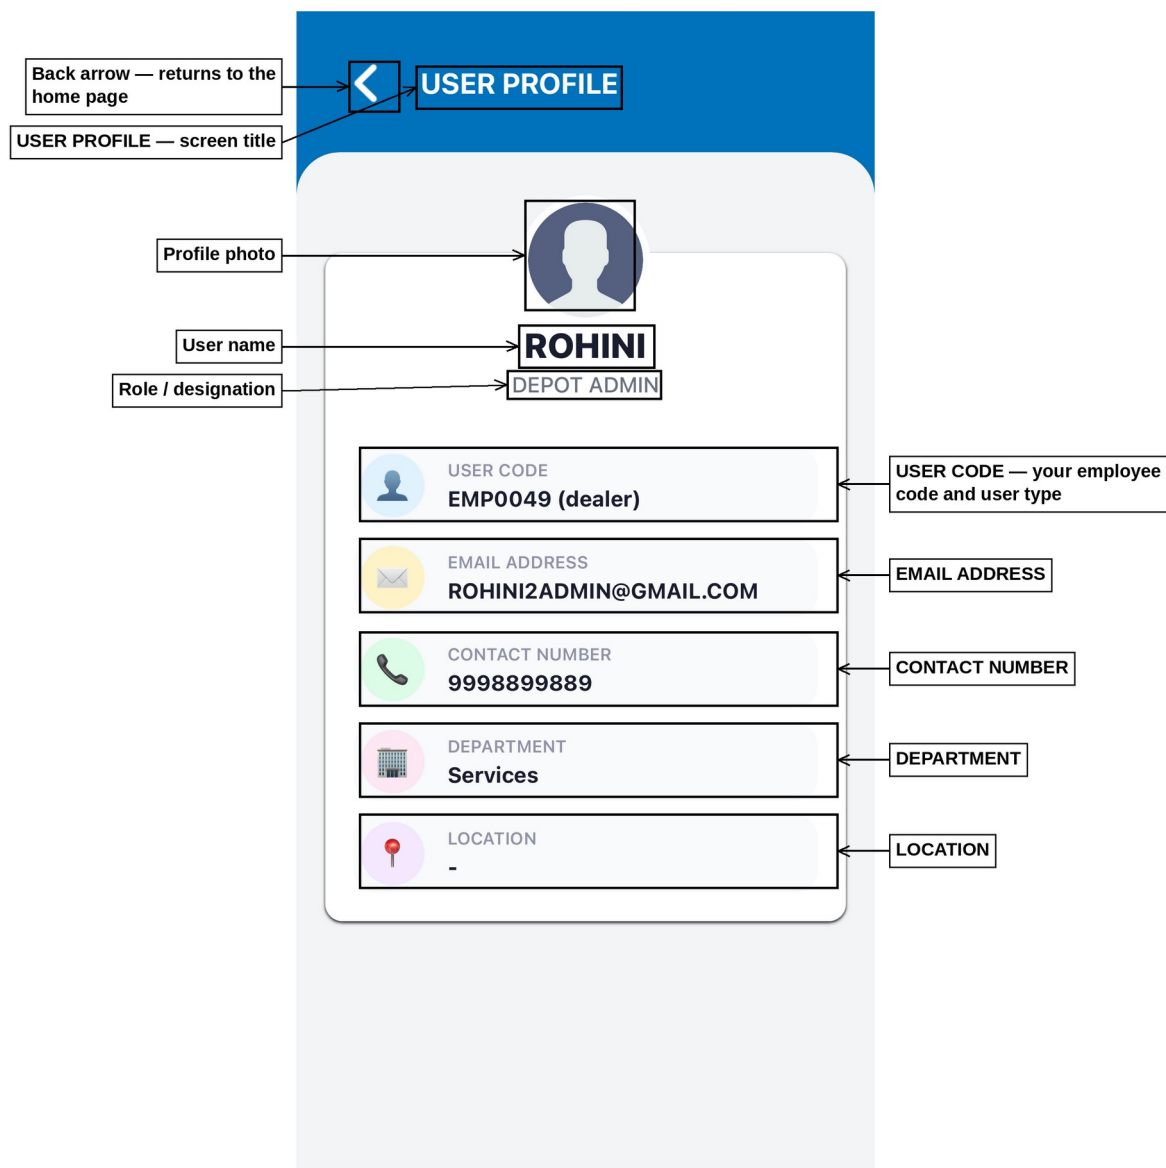


Fig. 5 — User Profile screen

Note: Only the parameters permitted by JBM can be updated; the rest are read-only.

4. Contact Us

Objective

To provide depot users with JBM HQ contact information for support and communication.

In this section

vi. View JBM HQ Contact Details

Contact Us screen

vi. View JBM HQ Contact Details

- Tap the menu icon and select **Contact Us** to view the details.
- Use the displayed address, contact number or email ID for assistance.
- Tap **DROP US A LINE** to open your mail application with the JBM mail ID.

CONTACT US · STEP 1 OF 1

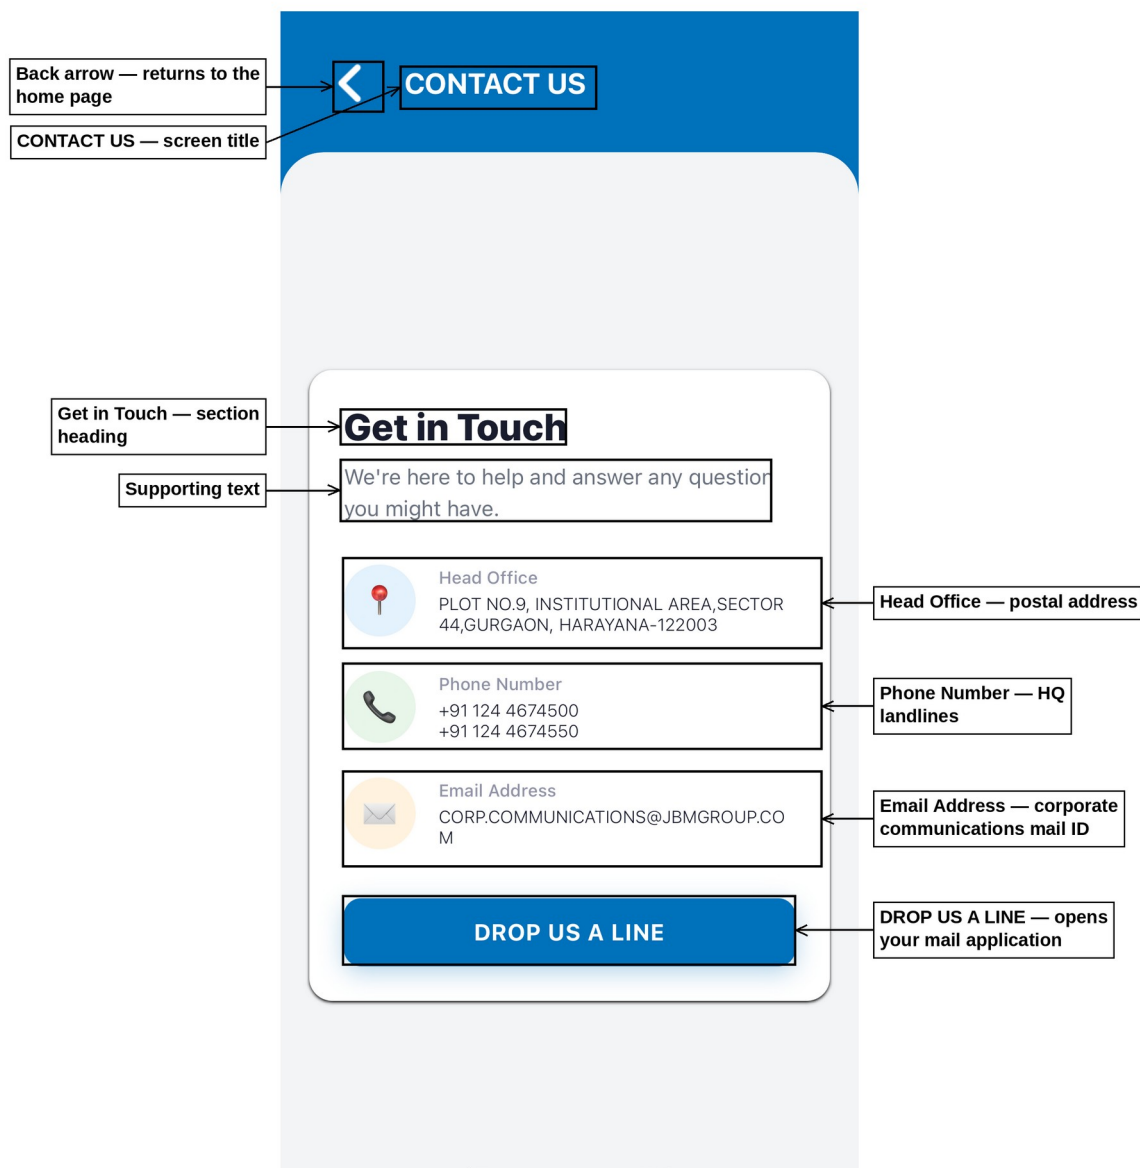


Fig. 6 — Contact Us screen

Note: Contact information is displayed from the data maintained by the authorized administrator / JBM team.

5. Gate In / Gate Out

Objective

The Gate In / Gate Out module is used to record the arrival and release of depot vehicles, capture driver complaints, and support the service process before a vehicle is released for out-shedding.

In this section

vii. Open Gate In / Gate Out and Find the Vehicle

Gate In / Gate Out vehicle list

viii. Gate In — Bus, Driver and Duty Details

Gate In Details — bus identification and duty assignment

ix. Gate In — Performance, SOC and Journey Details

Gate In Details — SOC, shift and journey readings

x. Gate In — Schedule, Complaint and Vehicle Status

Gate In Details — driver complaint and vehicle status

xi. Gate In — Wheel Condition, Attachments and Submit

Gate In Details — attachments and submission

xii. Gate Out — Select the Vehicle to Release

Gate In / Gate Out list showing vehicles eligible for gate-out

xiii. Gate Out — Shift and Journey Details

Gate Out Details — journey readings

xiv. Gate Out — Wheel Condition, Attachments and Submit

Gate Out Details — attachments and submission

vii. Open Gate In / Gate Out and Find the Vehicle

- Tap GATE IN/OUT from Quick Links; the default list of all vehicles for your assigned branch is displayed.
- Identify the vehicle by QR / VIN barcode scan, Bus Number, Registration Number or VIN, then tap SEARCH.
- Verify the Bus Number, Registration Number and VIN, then tap GATE IN against the correct vehicle.

GATE IN / GATE OUT · STEP 1 OF 8

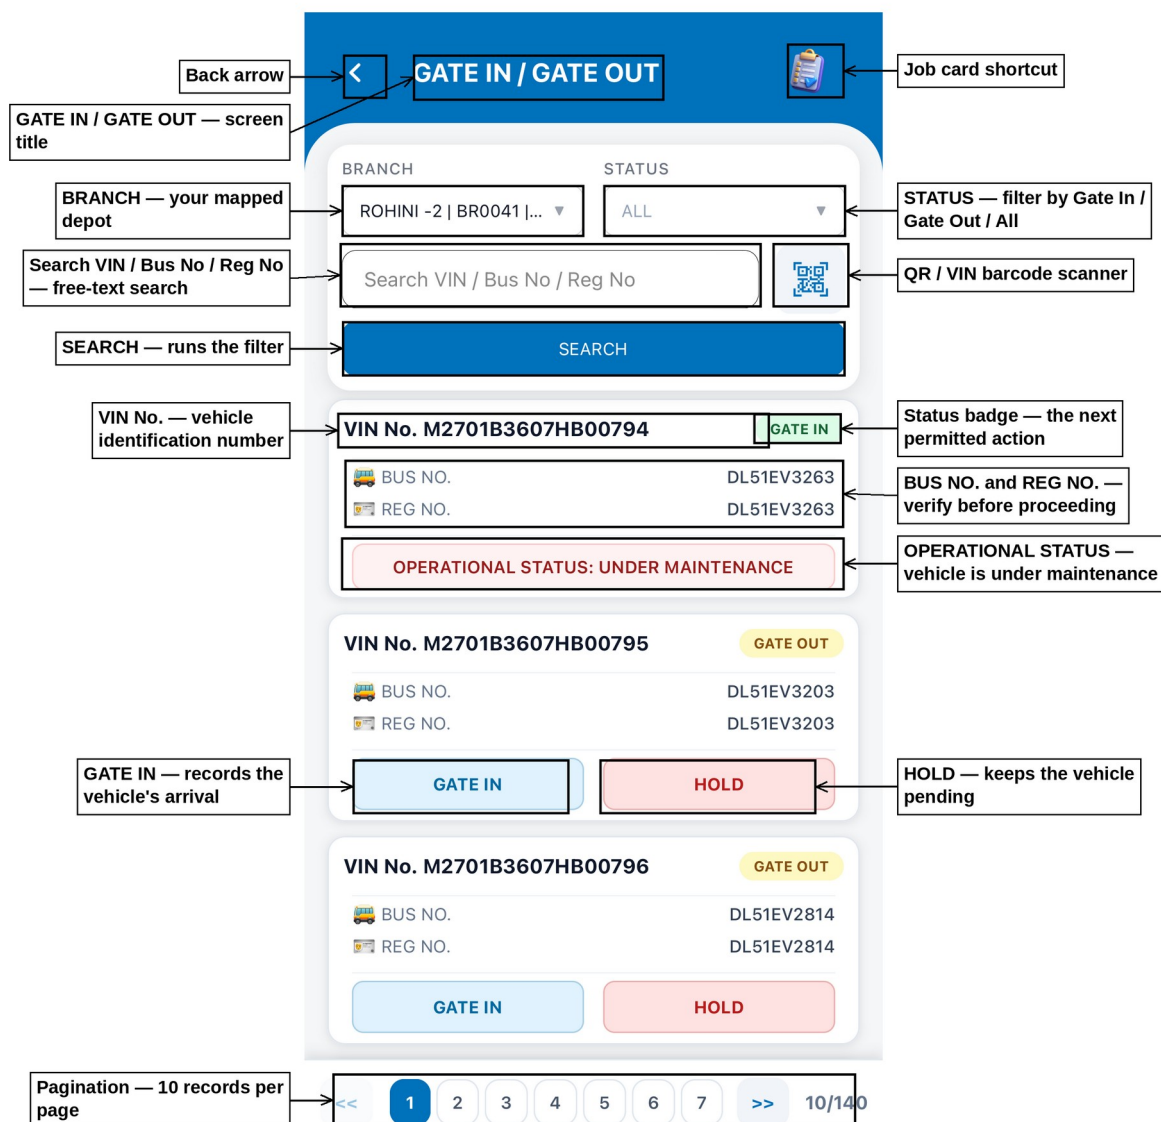


Fig. 7 — Gate In / Gate Out vehicle list

Note: Assigned VIN access is controlled by the administrator — only vehicles mapped to your depot are listed.

viii. Gate In — Bus, Driver and Duty Details

- The Bus Details section is filled from the vehicle you selected — verify every value before proceeding.
- Tick the Accident checkbox and describe the case if the vehicle has arrived with accident damage.
- Under Driver & Duty Information record the driver, badge, duty number, route and performance values.

GATE IN / GATE OUT · STEP 2 OF 8

GATE IN DETAILS

BUS DETAILS
VEHICLE IDENTIFICATION AND DEPOT INFORMATION

DEPOT CODE * DEPOT NAME *

VIN NO. * BUS NO. *

REGISTRATION NO. *

ACCIDENT — tick to change the default No to Yes

DRIVER & DUTY INFORMATION
DRIVER DETAILS AND DUTY ASSIGNMENT

DRIVER NAME BADGE NO

DRIVER DUTY NO * ROUTE

DRIVER PERF. 1 * DRIVER PERF. 2 *

SOC IN % *

Annotations:

- BUS DETAILS — vehicle identification and depot information** (points to the BUS DETAILS header)
- DEPOT CODE — auto-filled from your mapped depot** (points to DEPOT CODE)
- DEPOT NAME** (points to DEPOT NAME)
- VIN NO. — vehicle identification number** (points to VIN NO.)
- BUS NO.** (points to BUS NO.)
- REGISTRATION NO.** (points to REGISTRATION NO.)
- ACCIDENT — tick to change the default No to Yes** (points to the ACCIDENT checkbox)
- DRIVER & DUTY INFORMATION — driver details and duty assignment** (points to the DRIVER & DUTY INFORMATION header)
- DRIVER NAME — select from the list** (points to DRIVER NAME)
- BADGE NO.** (points to BADGE NO)
- DRIVER DUTY NO. (mandatory)** (points to DRIVER DUTY NO)
- ROUTE** (points to ROUTE)
- DRIVER PERF. 1** (points to DRIVER PERF. 1)
- DRIVER PERF. 2** (points to DRIVER PERF. 2)

Fig. 8 — Gate In Details — bus identification and duty assignment

Note: Fields marked with an asterisk are mandatory and must be completed before the entry can be submitted.

ix. Gate In — Performance, SOC and Journey Details

- Complete the driver performance values and select the SOC In % range.
- Tick Breakdown if the vehicle has arrived with a breakdown, then select the Shift.
- Journey Details records the system date and time along with the odometer and hour-meter readings.

GATE IN / GATE OUT · STEP 3 OF 8

The screenshot shows the 'GATE IN DETAILS' form with the following fields and annotations:

- DRIVER PERF. 1 ***: Annotation: DRIVER PERF. 1. Field: PLEASE ENTER DRIV
- DRIVER PERF. 2 ***: Annotation: DRIVER PERF. 2. Field: PLEASE ENTER DRIV
- SOC IN % ***: Annotation: SOC IN % — select the 0–100% range. Field: PLEASE SELECT SOC RANGE(0-100)%
- BREAKDOWN**: Annotation: BREAKDOWN — tick to change the default No to Yes. Field: ☐ NO
- SHIFT**: Annotation: SHIFT — the shift receiving the vehicle. Field: SHIFT A
- JOURNEY DETAILS**: Annotation: JOURNEY DETAILS — odometer readings and timing information. Section header: JOURNEY DETAILS, ODOMETER READINGS AND TIMING INFORMATION
- SYSTEM DATE**: Annotation: SYSTEM DATE — set by the application. Field: 15-09-2026
- SYSTEM TIME**: Annotation: SYSTEM TIME — set by the application. Field: 16:25
- ODOMETER READING ***: Annotation: ODOMETER READING (mandatory). Field: 10
- HRS ***: Annotation: HRS — hour-meter reading. Field: 5
- MANUAL DATE ***: Annotation: MANUAL DATE. Field: 15-09-2026
- MANUAL TIME ***: Annotation: MANUAL TIME. Field: 16:25
- FDS STATUS**: Annotation: FDS STATUS. Field: Select FDS Status *
- SCHEDULE KMS ***: Annotation: SCHEDULE KMS. Field: 110
- KWH/KM (VP1) ***: Annotation: KWH/KM (VP1). Field: PLEASE ENTER KWH/KM

Fig. 9 — Gate In Details — SOC, shift and journey readings

Note: The odometer / hour-meter reading must not be lower than the previously recorded value; a lower reading is rejected.

x. Gate In — Schedule, Complaint and Vehicle Status

- Select the FDS Status and enter the Schedule KMS and KWH/KM (VP1) values.
- Tick Driver Complaint and record the description in the Remark field, if any.
- Set Vehicle Status to Road Worthy or Not Road Worthy, then capture the four wheel temperatures.

GATE IN / GATE OUT · STEP 4 OF 8

The screenshot shows the 'GATE IN DETAILS' screen with the following fields and annotations:

- FDS STATUS** — select from the list: Points to the 'Select FDS Status *' dropdown menu.
- SCHEDULE KMS (mandatory)**: Points to the 'SCHEDULE KMS *' text box containing '110'.
- KWH/KM (VP1)**: Points to the 'KWH/KM(VP1) *' text box containing 'PLEASE ENTER KWH'.
- DRIVER COMPLAINT** — tick to change the default No to Yes: Points to the 'DRIVER COMPLAINT' checkbox, which is currently unchecked and labeled 'NO'.
- REMARK** — description of the complaint: Points to the 'REMARK' text box containing 'PLEASE ENTER REMARK'.
- VEHICLE STATUS** — Road Worthy or Not Road Worthy: Points to the 'VEHICLE STATUS *' dropdown menu, which is currently set to 'Road Worthy'.
- VEHICLE CONDITION** — wheel temperature status monitoring: Points to the blue 'VEHICLE CONDITION' header box.
- FRONT LEFT wheel temperature**: Points to the 'FRONT LEFT *' text box containing 'FRONT LEFT WEEL...'.
- FRONT RIGHT wheel temperature**: Points to the 'FRONT RIGHT *' text box containing 'FRONT RIGHT WE...'.
- BACK LEFT wheel temperature**: Points to the 'BACK LEFT *' text box containing 'BACK LEFT WEEL...'.
- BACK RIGHT wheel temperature**: Points to the 'BACK RIGHT *' text box containing 'BACK RIGHT WEEL...'.
- ATTACHMENTS** — upload required photos and documents: Points to the blue 'ATTACHMENTS' header box.
- Driver Duty Slip**: Points to the 'Driver Duty Slip *' text box with an 'UPLOAD' button below it.
- Dashboard Photo**: Points to the 'Dashboard Photo *' text box with an 'UPLOAD' button below it.

Fig. 10 — Gate In Details — driver complaint and vehicle status

xi. Gate In — Wheel Condition, Attachments and Submit

- Complete the four wheel temperature readings under Vehicle Condition.
- Upload every required photo and document under Attachments.
- Verify all mandatory fields, then tap **SUBMIT** to save the Gate-In entry.

GATE IN / GATE OUT · STEP 5 OF 8

The screenshot shows the 'GATE IN DETAILS' screen with the following fields and annotations:

- REMARK**: Points to the 'PLEASE ENTER REMARK' text input field.
- VEHICLE STATUS — Road Worthy or Not Road Worthy**: Points to the 'VEHICLE STATUS *' dropdown menu, which currently shows 'Road Worthy'.
- VEHICLE CONDITION — wheel temperature status monitoring**: Points to the 'VEHICLE CONDITION' section header, which includes 'WHEEL TEMPERATURE STATUS MONITORING'.
- FRONT LEFT wheel temperature**: Points to the 'FRONT LEFT *' input field, labeled 'FRONT LEFT WHEEL TE'.
- FRONT RIGHT wheel temperature**: Points to the 'FRONT RIGHT *' input field, labeled 'FRONT RIGHT WHEEL T'.
- BACK LEFT wheel temperature**: Points to the 'BACK LEFT *' input field, labeled 'BACK LEFT WHEEL TEM'.
- BACK RIGHT wheel temperature**: Points to the 'BACK RIGHT *' input field, labeled 'BACK RIGHT WHEEL TE'.
- ATTACHMENTS — upload required photos and documents**: Points to the 'ATTACHMENTS' section header, which includes 'UPLOAD REQUIRED PHOTOS AND DOCUMENTS'.
- Driver Duty Slip — mandatory upload**: Points to the 'Driver Duty Slip *' upload button.
- Dashboard Photo — mandatory upload**: Points to the 'Dashboard Photo *' upload button.
- REAR PHOTO**: Points to the 'REAR PHOTO' upload button.
- FRONT PHOTO**: Points to the 'FRONT PHOTO' upload button.
- LEFT PHOTO**: Points to the 'LEFT PHOTO' upload button.
- RIGHT PHOTO**: Points to the 'RIGHT PHOTO' upload button.
- SUBMIT — saves the Gate-In transaction**: Points to the 'SUBMIT' button at the bottom of the screen.

Fig. 11 — Gate In Details — attachments and submission

Note: On saving a Not Road Worthy entry an auto pre-job card opens with the logged complaints and the vehicle is recorded as Under Maintenance.

xii. Gate Out — Select the Vehicle to Release

- Open the Gate In / Gate Out module and select the Gate-Out option.
- Search for the vehicle using Bus Number, Registration Number, VIN or QR scan.
- Tap GATE OUT against the vehicle that is to be released.

GATE IN / GATE OUT · STEP 6 OF 8

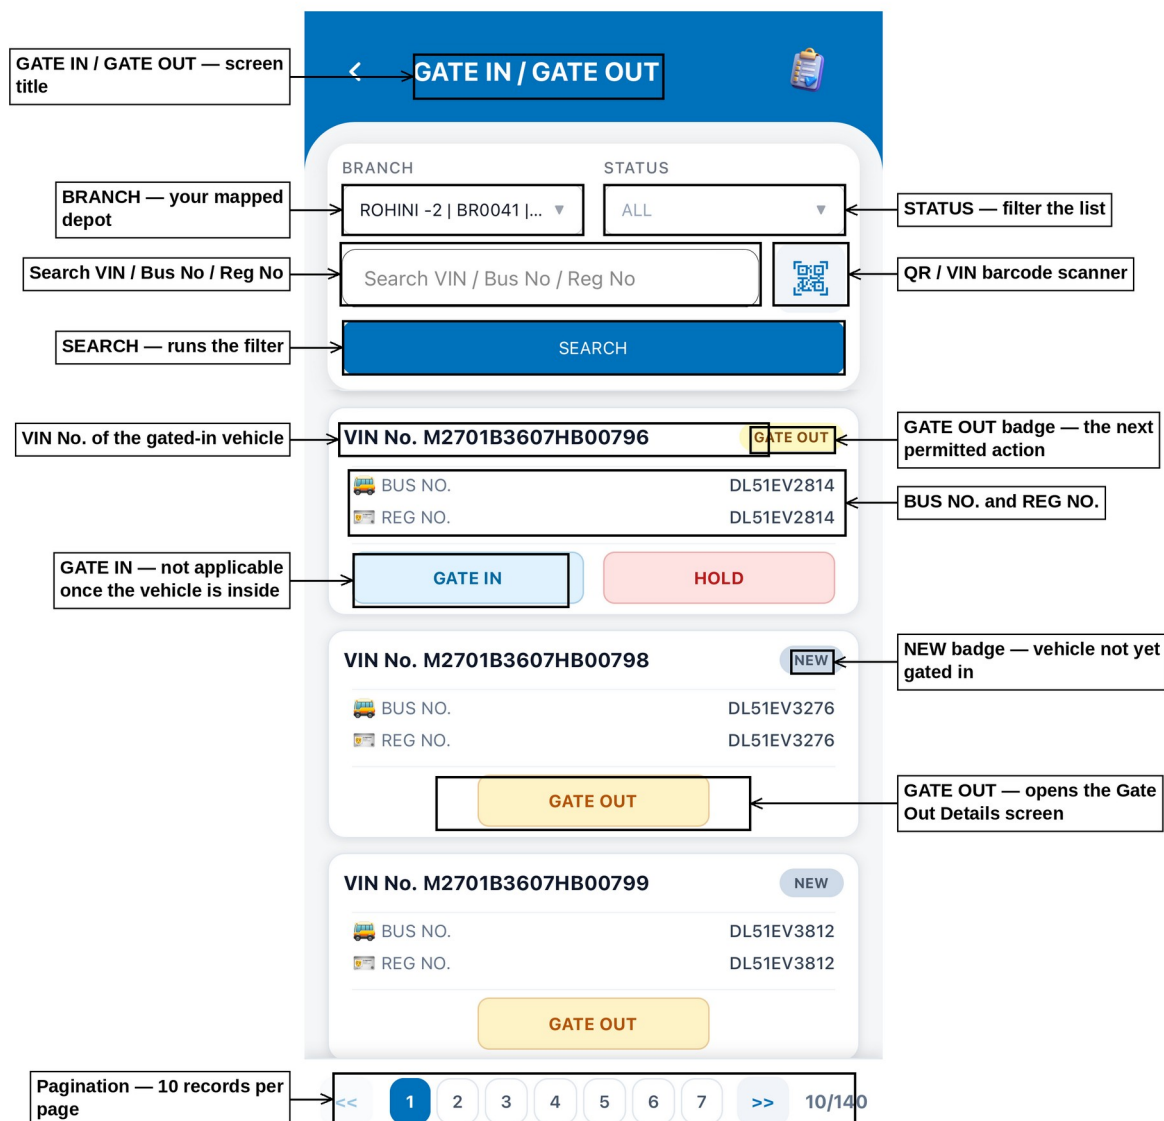


Fig. 12 — Gate In / Gate Out list showing vehicles eligible for gate-out

Note: The system allows Gate-Out only for vehicles that have already been gated in and whose job card is closed.

xiii. Gate Out — Shift and Journey Details

- Select the Shift under which the vehicle is being released.
- Under Journey Details record the odometer reading, HRS, SOC Out % and the manual date and time.
- Enter the Schedule KMS, KWH/KM (VP1) and a remark for the transaction.

GATE IN / GATE OUT · STEP 7 OF 8

The screenshot shows the 'GATE OUT DETAILS' screen with the following fields and annotations:

- SHIFT** — select the releasing shift: Points to the 'Select Shift *' dropdown menu.
- JOURNEY DETAILS** — odometer readings and timing information: Points to the 'JOURNEY DETAILS' header section.
- SYSTEM DATE** — set by the application: Points to the '15-09-2026' date field.
- SYSTEM TIME** — set by the application: Points to the '16:55' time field.
- ODOMETER READING (mandatory)**: Points to the '0' odometer reading field.
- HRS** — hour-meter reading: Points to the '0' HRS field.
- SOC OUT %** — select the 0-100% range: Points to the 'PLEASE SELECT SOC RANGE(0-100)%' dropdown.
- MANUAL DATE**: Points to the '15-09-2026' manual date field.
- MANUAL TIME**: Points to the '16:55' manual time field.
- SCHEDULE KMS**: Points to the 'PLEASE ENTER SCHEDI' field.
- KWH/KM (VP1)**: Points to the 'PLEASE ENTER KWH/KI' field.
- REMARK (mandatory)**: Points to the 'PLEASE ENTER REMARK' text area.
- VEHICLE CONDITION** — wheel temperature status monitoring: Points to the 'VEHICLE CONDITION' header section.

Fig. 13 — Gate Out Details — journey readings

Note: Confirm the gate-out date and time before submitting — the readings are validated against the last Gate-In entry.

xiv. Gate Out — Wheel Condition, Attachments and Submit

- Complete the four wheel temperature readings under Vehicle Condition.
- Upload the required photos and documents under Attachments.
- Tap SUBMIT to release the vehicle, or HOLD UP to keep the transaction pending.

GATE IN / GATE OUT · STEP 8 OF 8

The diagram illustrates the 'GATE OUT DETAILS' screen layout. It features a blue header with a back arrow and the title 'GATE OUT DETAILS'. The main content area is divided into two primary sections: 'VEHICLE CONDITION' and 'ATTACHMENTS'.

VEHICLE CONDITION (WHEEL TEMPERATURE STATUS MONITORING): This section contains four input fields for wheel temperatures: 'FRONT LEFT *', 'FRONT RIGHT *', 'BACK LEFT *', and 'BACK RIGHT *'. Each field has a corresponding label box with an arrow pointing to it: 'FRONT LEFT wheel temperature', 'FRONT RIGHT wheel temperature', 'BACK LEFT wheel temperature', and 'BACK RIGHT wheel temperature'. A label 'VEHICLE CONDITION — wheel temperature status monitoring' points to the entire section.

ATTACHMENTS (UPLOAD REQUIRED PHOTOS AND DOCUMENTS): This section contains six upload buttons arranged in a 3x2 grid: 'Driver Duty Slip *', 'Dashboard Photo *', 'REAR PHOTO', 'FRONT PHOTO', 'LEFT PHOTO', and 'RIGHT PHOTO'. Each button has a corresponding label box with an arrow pointing to it: 'Driver Duty Slip — mandatory upload', 'Dashboard Photo — mandatory upload', 'REAR PHOTO', 'FRONT PHOTO', 'LEFT PHOTO', and 'RIGHT PHOTO'. A label 'ATTACHMENTS — upload required photos and documents' points to the entire section.

At the bottom of the screen, there are two large blue buttons: 'HOLD UP' and 'SUBMIT'. A label 'HOLD UP — keeps the transaction pending' points to the 'HOLD UP' button, and a label 'SUBMIT — releases the vehicle' points to the 'SUBMIT' button.

Fig. 14 — Gate Out Details — attachments and submission

Note: On confirmation the gate-out entry is submitted and the vehicle is released for out-shedding.

6. Auto Job Cards (Daily / Ten-Day)

Objective

To provide depot users with the list of auto-generated jobs based on daily and ten-day service schedules.

In this section

xv. Open the Auto Job Card List

Auto Job Card List with an expanded job card

xvi. View an Auto Job Card

View Auto Job Card — job details and checklist

xvii. Auto Job Card Statuses

Auto Job Card List — status of each job card

xviii. Home Dashboard — Shift Engineer

Home page for a shift engineer

xix. Open the Auto Job Card Inspection List

Auto Job Card Inspection list

xx. Review and Process the Assigned Job

Auto Job Card Inspection — expanded job card

xxi. Validate Auto Job Card — Job Details

Validate Auto Job Card — read-only job details

xxii. Validate Auto Job Card — Checklist

Validate Auto Job Card — checklist items

xv. Open the Auto Job Card List

- Select Auto Job Card List from Quick Links to view the auto-generated jobs for roadworthy vehicles.
- Filter the list by Branch and Status, or search by VIN, Bus Number or Registration Number.
- Expand a job card to review its details, then tap VIEW DETAILS.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 1 OF 8

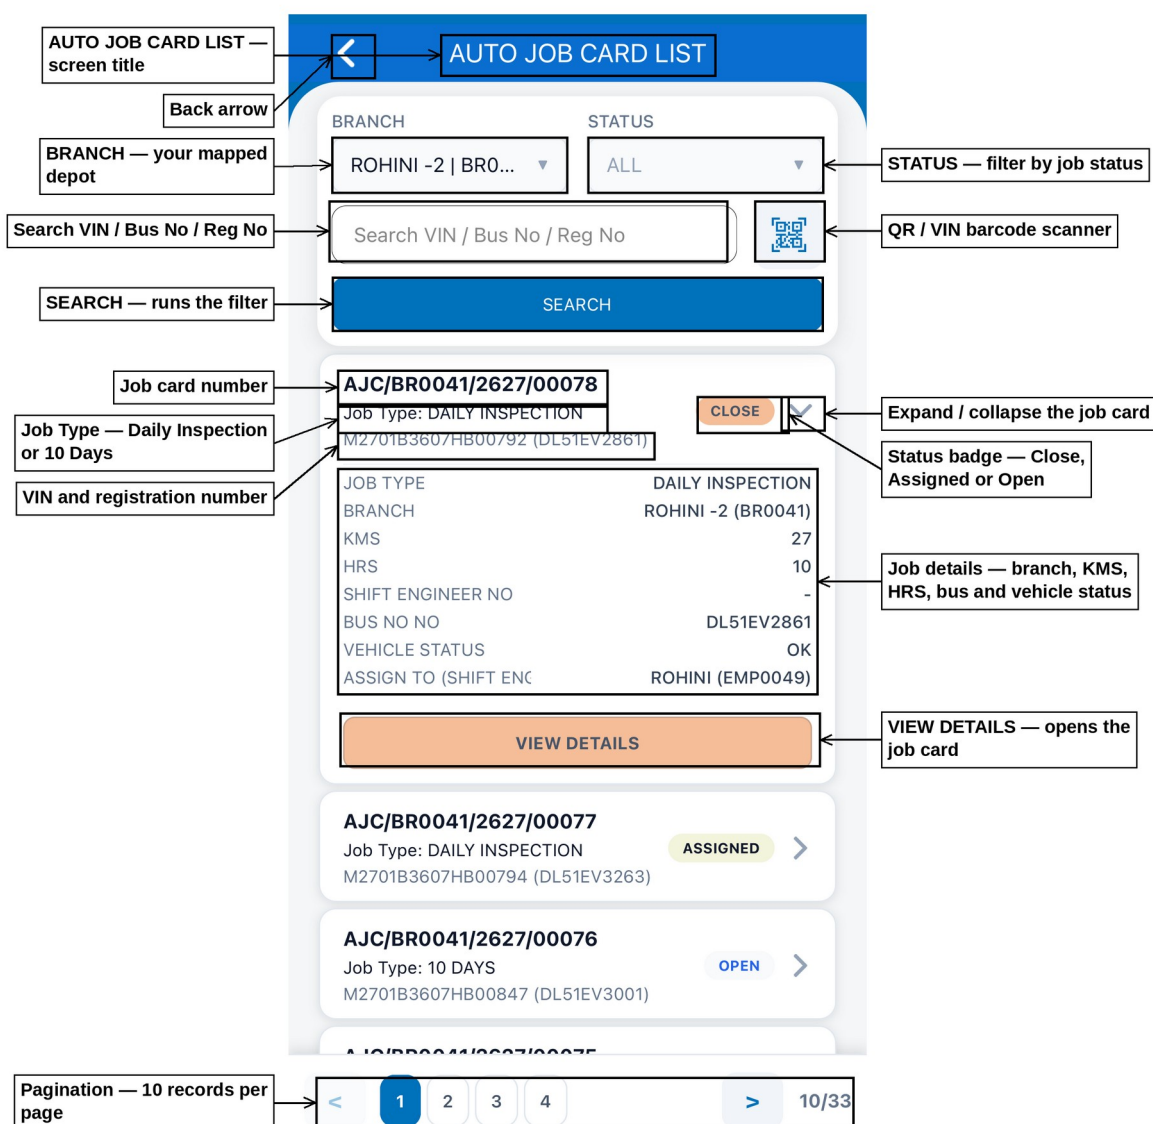


Fig. 15 — Auto Job Card List with an expanded job card

Note: Scheduling logic and auto-job generation rules follow the approved FRD and application configuration.

xvi. View an Auto Job Card

- The Job Details section shows the branch, shift engineer, job card number and job card type.
- Verify the registration, bus and VIN numbers along with the vehicle status and the KM / HRS readings.
- Expand a Checklist group to review its inspection items and their selected status.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 2 OF 8

The screenshot displays the 'VIEW AUTO JOB CARD' interface. At the top, a blue header bar contains a back arrow and the title 'VIEW AUTO JOB CARD'. Below this, the 'JOB DETAILS' section is titled 'INFORMATION ABOUT THE JOB CARD'. It contains a table with the following data:

BRANCHNAME	ROHINI -2 (BR0041)	SHIFT ENGINEER	EMP0049 ROHINI
JOB CARD NO.	AJC/ BR0041/2627/00078	JOB CARD TYPE	DAILY INSPECTION
REGISTRATION NO.	DL51EV2861	BUS NO.	DL51EV2861
VIN NO.	M2701B3607HB0079	VEHICLE STATUS	OK
STATUS — job card status	CLOSE	VEHICLE OPERATIONAL	YES
KM READING	27	HRS READING	10
REMARKS	-		

Below the job details is a 'CHECKLIST' section titled 'CHECKLIST ITEMS AND THEIR SELECTED STATUS'. It lists five items, each with a right-pointing arrow:

1. TRACTION COOLING SYSTEM
2. WHEELS & TYRES
3. BATTERY COOLING SYSTEM
4. AIR CONDITIONING SYSTEM
5. Dashboard

Annotations on the left side of the screen point to various fields: 'JOB DETAILS — information about the job card' points to the 'JOB DETAILS' header; 'BRANCHNAME', 'JOB CARD NO.', 'REGISTRATION NO.', 'VIN NO.', 'STATUS — job card status', 'KM READING', and 'REMARKS' point to their respective fields in the job details table. Annotations on the right side point to 'SHIFT ENGINEER', 'JOB CARD TYPE', 'BUS NO.', 'VEHICLE STATUS', 'VEHICLE OPERATIONAL', 'HRS READING', 'CHECKLIST — checklist items and their selected status', and 'Checklist groups — tap to expand'.

Fig. 16 — View Auto Job Card — job details and checklist

xvii. Auto Job Card Statuses

- The list shows every auto-generated job card for the selected branch.
- The badge against each job card shows its current status — Close, Assigned or Open.
- Tap a job card, or its chevron, to open the job card details.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 3 OF 8

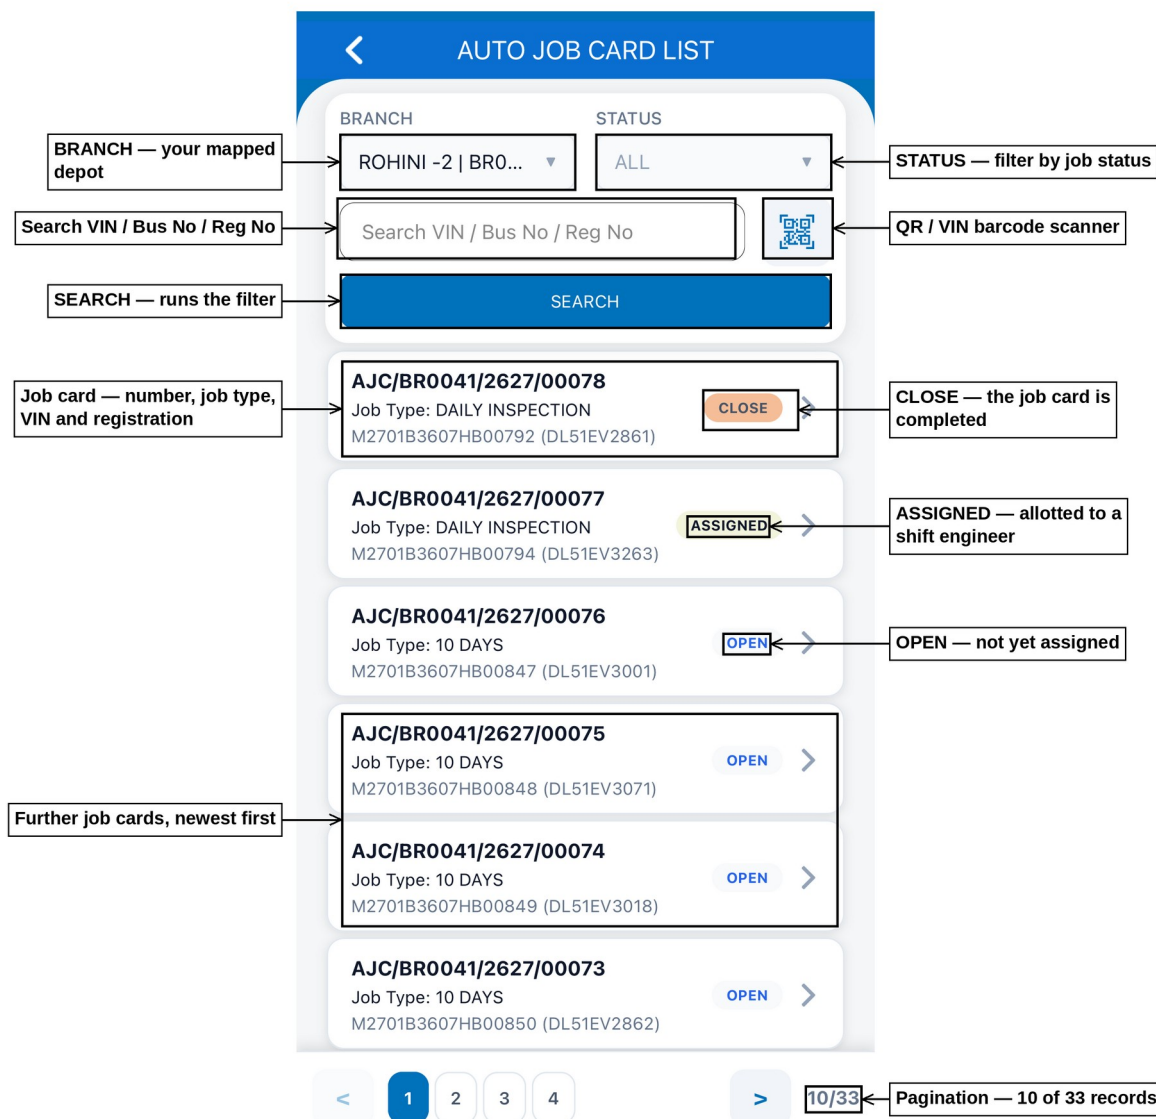


Fig. 17 — Auto Job Card List — status of each job card

xviii. Home Dashboard — Shift Engineer

- A shift engineer signs in to the same home page, with the modules enabled for that role.
- The Quick Links list differs by role — only authorized modules are displayed.
- Select Auto Job Card Inspection to process a job assigned to you.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 4 OF 8

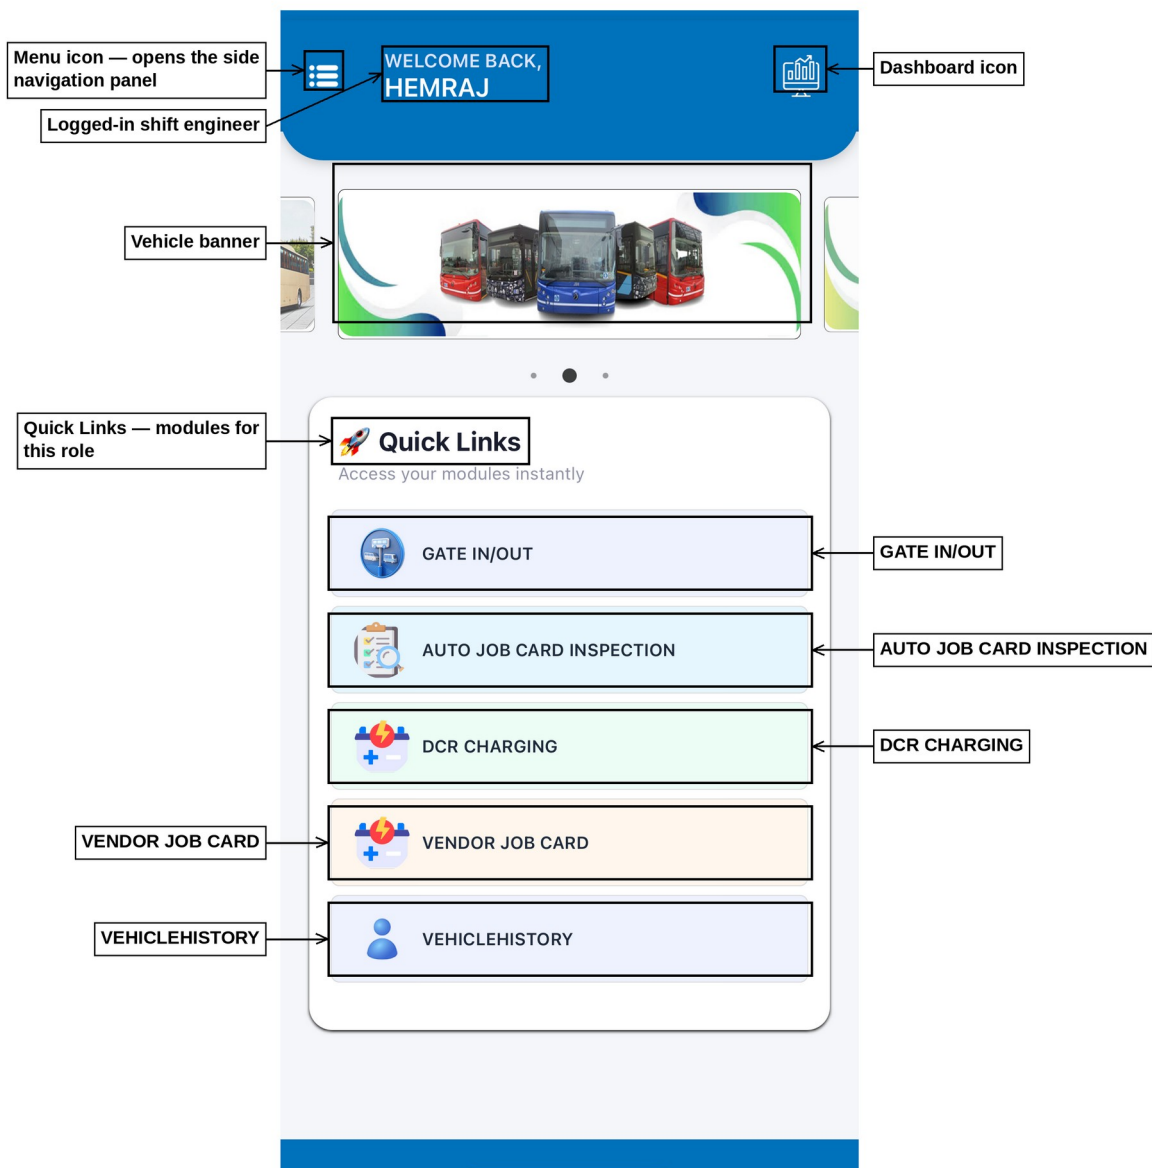


Fig. 18 — Home page for a shift engineer

xix. Open the Auto Job Card Inspection List

- Select Auto Job Card Inspection from Quick Links.
- Filter by Branch and Status, or search by VIN, Bus Number or Registration Number.
- The list shows the job cards assigned to you, with their job type and status.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 5 OF 8

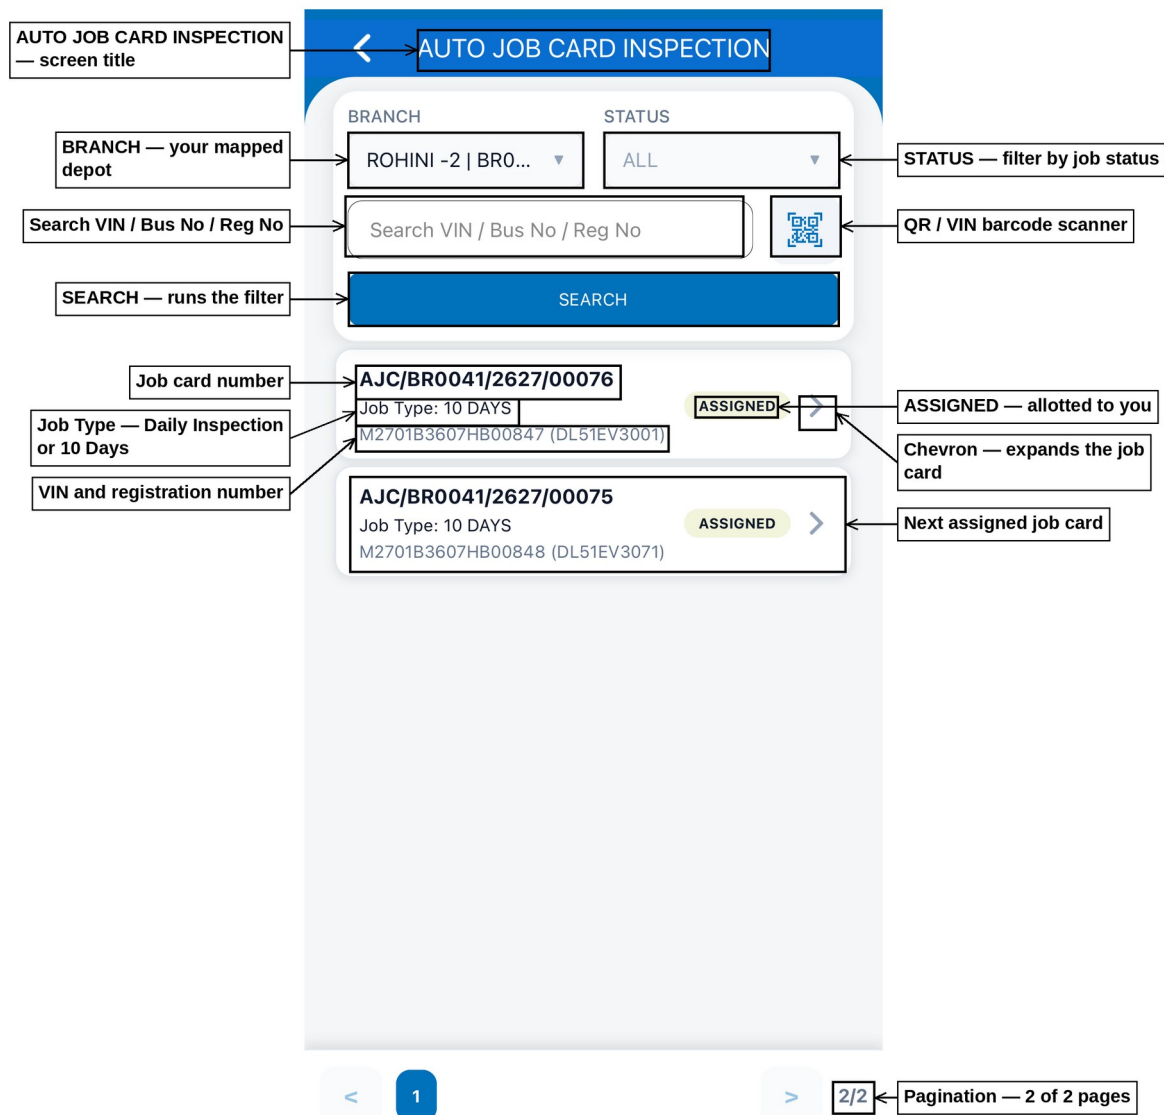


Fig. 19 — Auto Job Card Inspection list

xx. Review and Process the Assigned Job

- Expand the assigned job card to review its full details.
- Verify the job type, branch, bus number, vehicle status and the shift engineer it is assigned to.
- Tap PROCESS JOB to begin validating the job card.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 6 OF 8

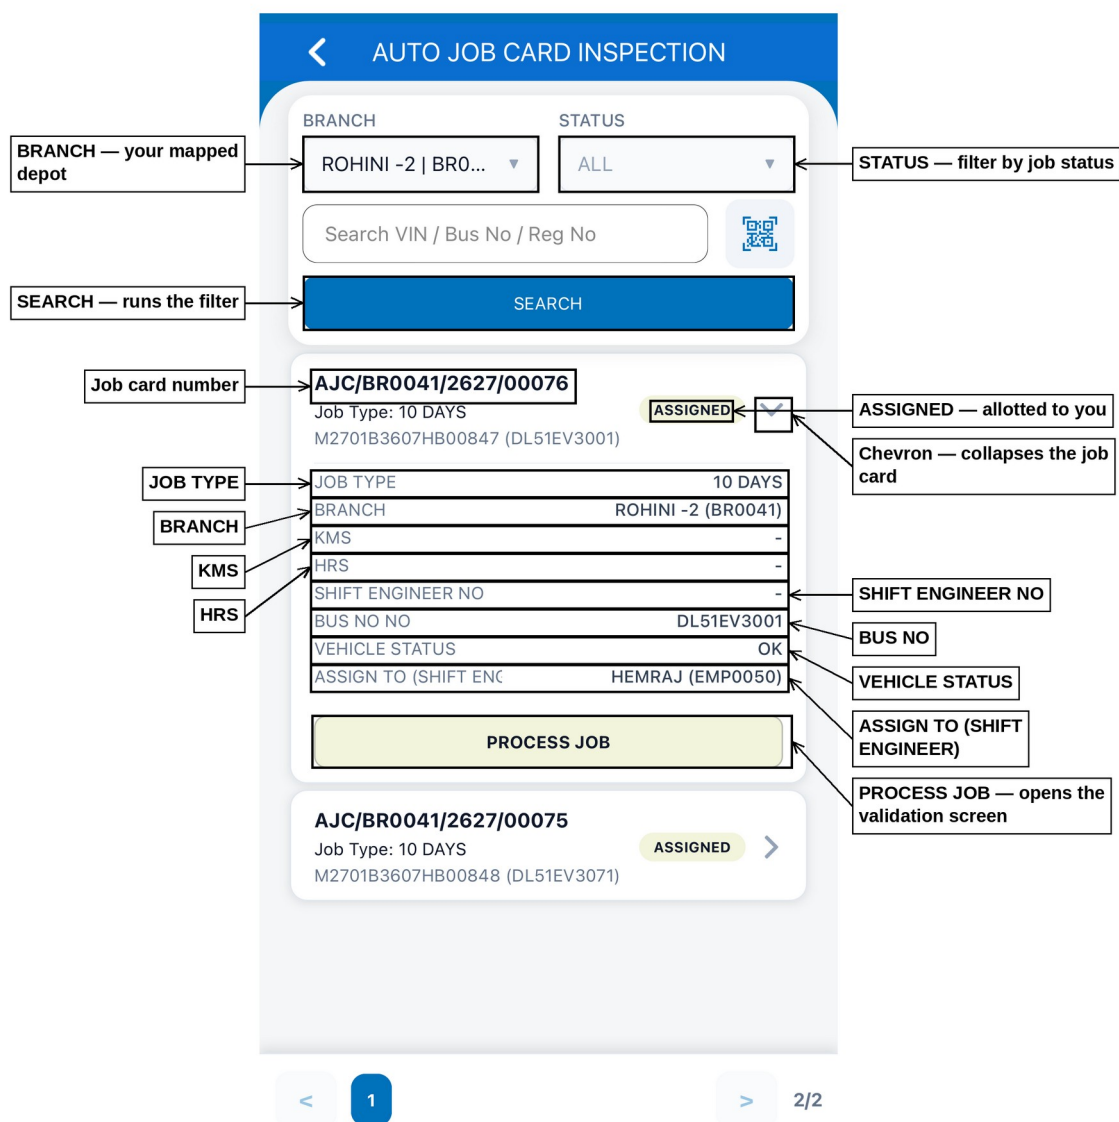


Fig. 20 — Auto Job Card Inspection — expanded job card

xxi. Validate Auto Job Card — Job Details

- The Job Details section opens in read-only mode.
- Verify the job card number, shift engineer, job card type and vehicle identification.
- Scroll to the Checklist section to record the inspection results.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 7 OF 8

VALIDATE AUTO JOB CARD

JOB DETAILS
INFORMATION ABOUT THE JOB CARD READ ONLY

JOB DETAILS — information about the job card

READ ONLY — these values cannot be edited here

JOB CARD NO. → AJC/BR0041/2627/00076

SHIFT ENGINEER → EMP0050 | HEMRAJ

SHIFT ENGINEER — the engineer processing the job

JOB CARD TYPE → 10 DAYS

JOB CARD TYPE — Daily Inspection or 10 Days

VIN NO. → M2701B3607HB00847

REGISTRATION NO. → DL51EV3001

BUS NO. → DL51EV3001

BUS NO.

STATUS → ASSIGNED

VEHICLE STATUS → OK

VEHICLE STATUS

KM READING → 0

HRS READING → 0

HRS READING

REMARK → REMARK

CHECKLIST
VERIFY STATUS AND ENTER ACTION REQUIRED

CHECKLIST — verify status and enter remarks

Fig. 21 — Validate Auto Job Card — read-only job details

xxii. Validate Auto Job Card — Checklist

- Expand a checklist group to list the inspection items it contains.
- Set the Status for each item and enter a Remark where action is required.
- Complete every group before submitting the job card.

AUTO JOB CARDS (DAILY / TEN-DAY) · STEP 8 OF 8

The screenshot displays the 'VALIDATE AUTO JOB CARD' interface. At the top, a blue header bar contains a back arrow and the title 'VALIDATE AUTO JOB CARD'. Below this, a 'CHECKLIST' section is shown, which includes a sub-header 'VERIFY STATUS AND ENTER REMARKS FOR EACH ITEM' and a red 'ACTION REQUIRED' label. The first checklist group is '1 TRACTION COOLING SYSTEM', which is expanded to show four items. Each item has a description, a 'STATUS' dropdown menu (with 'OK' selected), and a 'REMARK' text input field. The second group, '2 WHEELS & TYRES', is collapsed. Callouts provide additional context: 'CHECKLIST — verify status and enter remarks for each item' points to the checklist header; 'Checklist group — tap to expand or collapse' points to the 'TRACTION COOLING SYSTEM' group header; 'Item 1 — inspection description' points to the first item's description; 'STATUS — select OK or the applicable result' points to the 'OK' status; 'ACTION REQUIRED — items still awaiting a status' points to the red label; 'Item count in this group' points to the number '4' next to the group header; 'REMARK — mandatory where action is required' points to the remark field for the first item; and 'Next checklist group' points to the 'WHEELS & TYRES' group header.

Fig. 22 — Validate Auto Job Card — checklist items

7. Assign Auto Job Cards

Objective

To assign auto generated jobs to the appropriate service supervisor or authorized users.

In this section

xxiii. Open Assign Auto Job Card and Select Jobs

Assign Auto Job Card — selecting job cards

xxiv. Review the Selected Job Card

Assign Auto Job Card — expanded job details

xxv. Validation — Supervisor Required

Validation error raised when no supervisor is selected

xxvi. Select a Supervisor

SELECT SUPERVISOR list

xxvii. Confirm the Assignment

Confirm Submission dialog

xxviii. Assignment Complete

Assign Auto Job Card — supervisor selected

xxiii. Open Assign Auto Job Card and Select Jobs

- Open the Assign Auto Job Card module from Quick Links.
- Filter by Branch, Supervisor and Status to narrow the list of unassigned jobs.
- Tick each job card to be assigned; the ASSIGN NOW button shows how many are selected.

ASSIGN AUTO JOB CARDS · STEP 1 OF 6

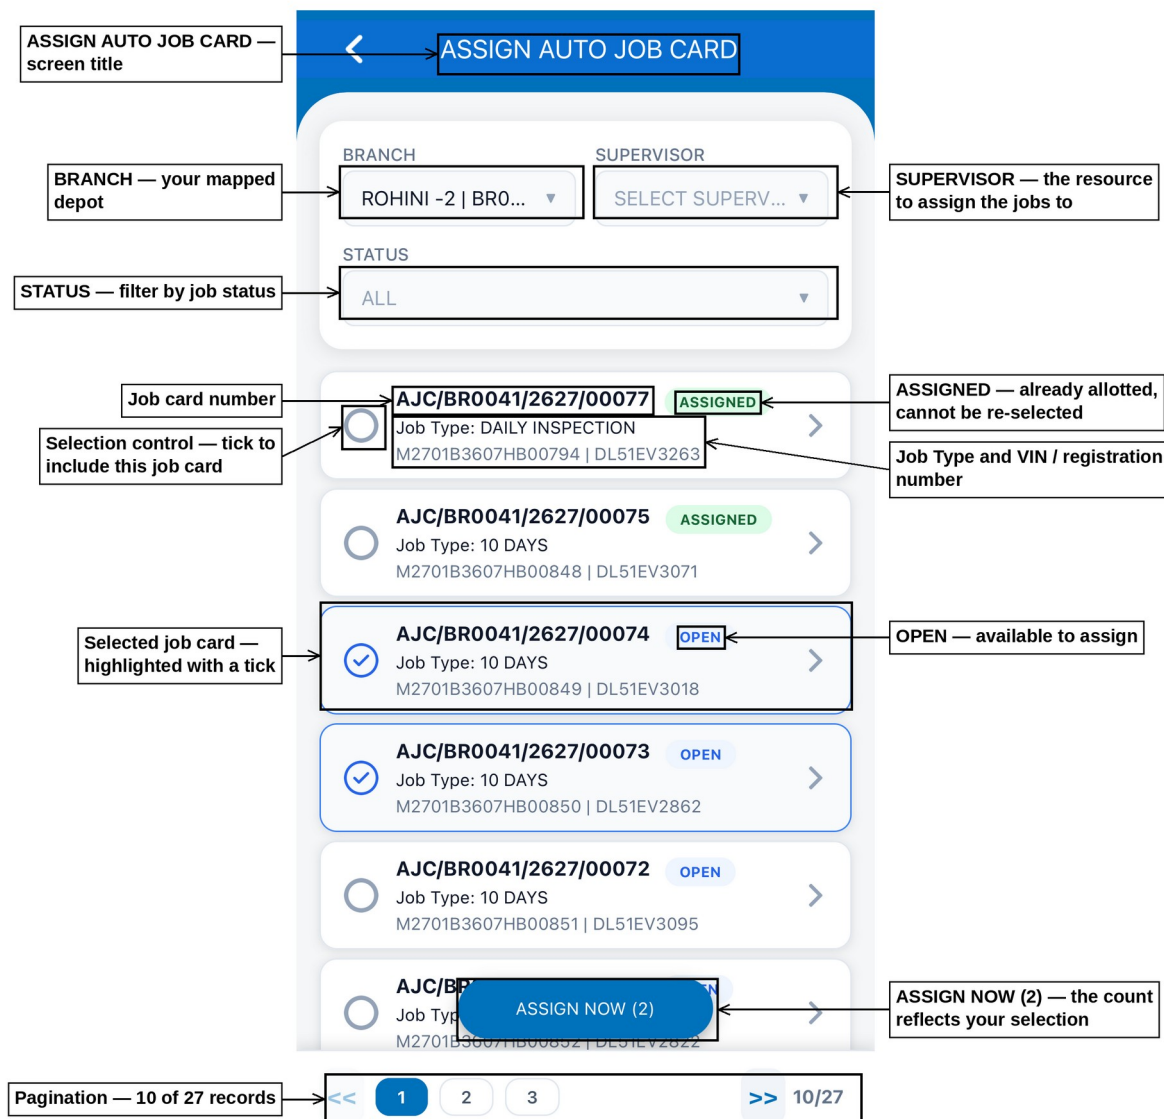


Fig. 23 — Assign Auto Job Card — selecting job cards

xxiv. Review the Selected Job Card

- Tap the chevron on a selected job card to expand its details.
- Verify the job type, branch name, VIN, chassis and registration numbers before assigning.
- The selection count on ASSIGN NOW updates as you tick or untick job cards.

ASSIGN AUTO JOB CARDS · STEP 2 OF 6

The screenshot displays the 'ASSIGN AUTO JOB CARD' interface. At the top, there are filters for 'BRANCH' (set to 'ROHINI -2 | BR0...') and 'SUPERVISOR' (set to 'SELECT SUPERV...'). Below these is a 'STATUS' filter set to 'ALL'. A list of job cards follows, each with a status indicator (radio button or checkmark) and a chevron. The third job card, 'AJC/BR0041/2627/00074', is expanded, showing a table of details: JOB TYPE (10 DAYS), BRANCH NAME (ROHINI -2 (BR0041)), VIN NO (M2701B3607HB00849), CHASSIS NO (M2701B3607HB00849), REGISTRATION NO (DL51EV3018), KMS, and HRS. At the bottom, an 'ASSIGN NOW (2)' button is visible, indicating two selected job cards. Navigation arrows and a page indicator '10/27' are at the very bottom.

Annotations in the image include:

- BRANCH**: Points to the 'ROHINI -2 | BR0...' dropdown.
- SUPERVISOR**: Points to the 'SELECT SUPERV...' dropdown.
- SUPERVISOR — not yet selected**: Points to the 'SELECT SUPERV...' dropdown.
- STATUS**: Points to the 'ALL' dropdown.
- Expanded job card**: Points to the expanded job card header.
- JOB TYPE**: Points to the '10 DAYS' value.
- BRANCH NAME**: Points to the 'ROHINI -2 (BR0041)' value.
- VIN NO**: Points to the 'M2701B3607HB00849' value.
- CHASSIS NO**: Points to the 'M2701B3607HB00849' value.
- REGISTRATION NO**: Points to the 'DL51EV3018' value.
- KMS**: Points to the 'KMS' field.
- HRS**: Points to the 'HRS' field.
- ASSIGN NOW (2)**: Points to the 'ASSIGN NOW (2)' button.
- ASSIGN NOW (2) — assigns every ticked job card**: Points to the 'ASSIGN NOW (2)' button.

Fig. 24 — Assign Auto Job Card — expanded job details

xxv. Validation — Supervisor Required

- Tapping **ASSIGN NOW** without choosing a supervisor raises a validation error.
- Tap **OK** to dismiss the message.
- Select a supervisor, then assign the job cards again.

ASSIGN AUTO JOB CARDS · STEP 3 OF 6

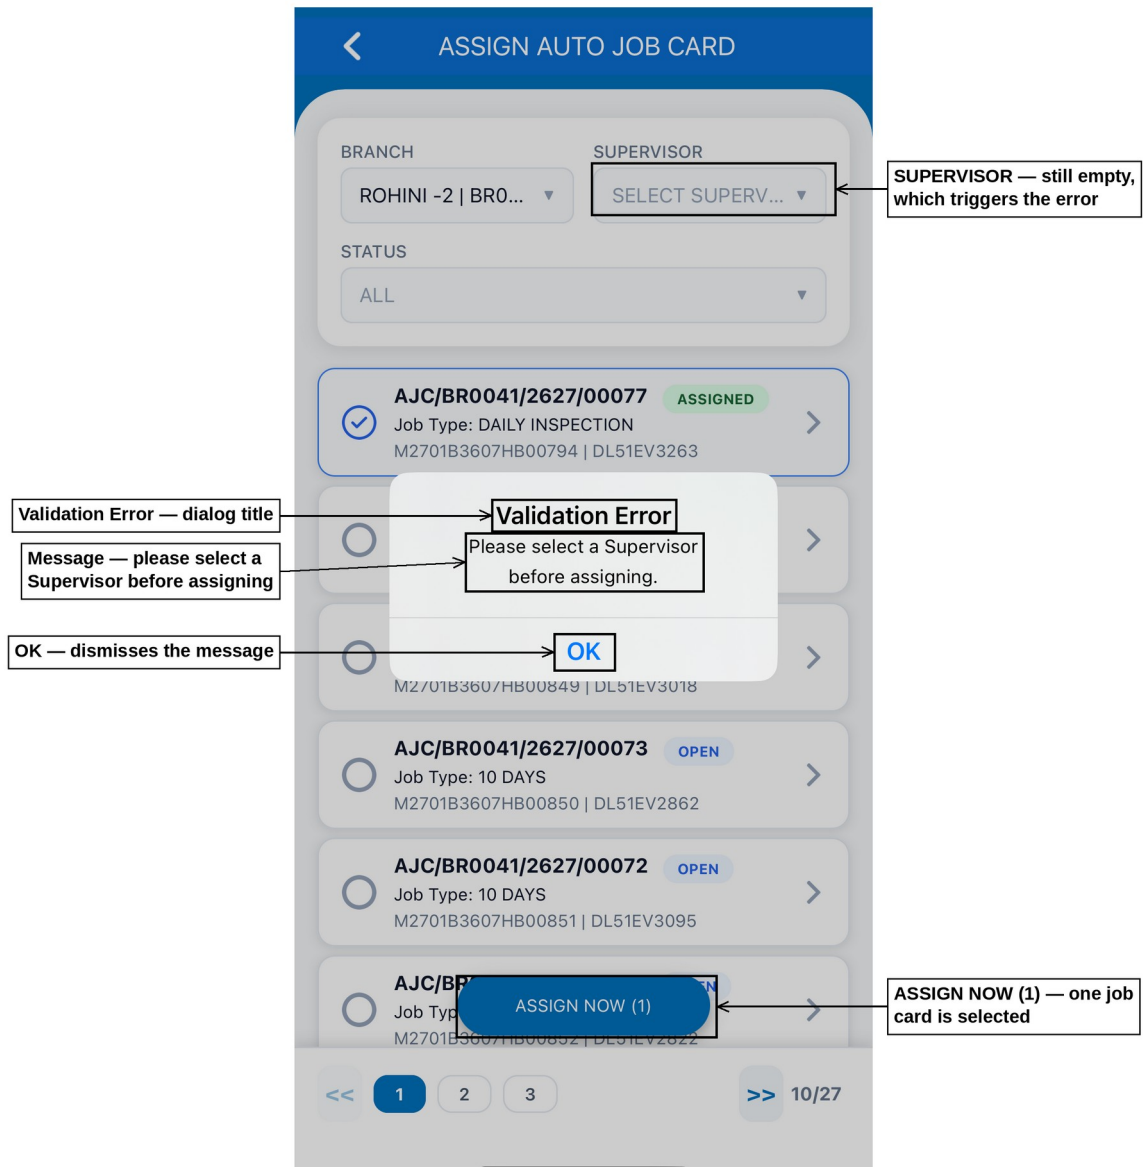


Fig. 25 — Validation error raised when no supervisor is selected

xxvi. Select a Supervisor

- Tap the Supervisor field to open the **SELECT SUPERVISOR** list.
- Choose the authorized person / service resource the jobs are to be assigned to.
- Tap the close icon to dismiss the list without selecting.

ASSIGN AUTO JOB CARDS · STEP 4 OF 6

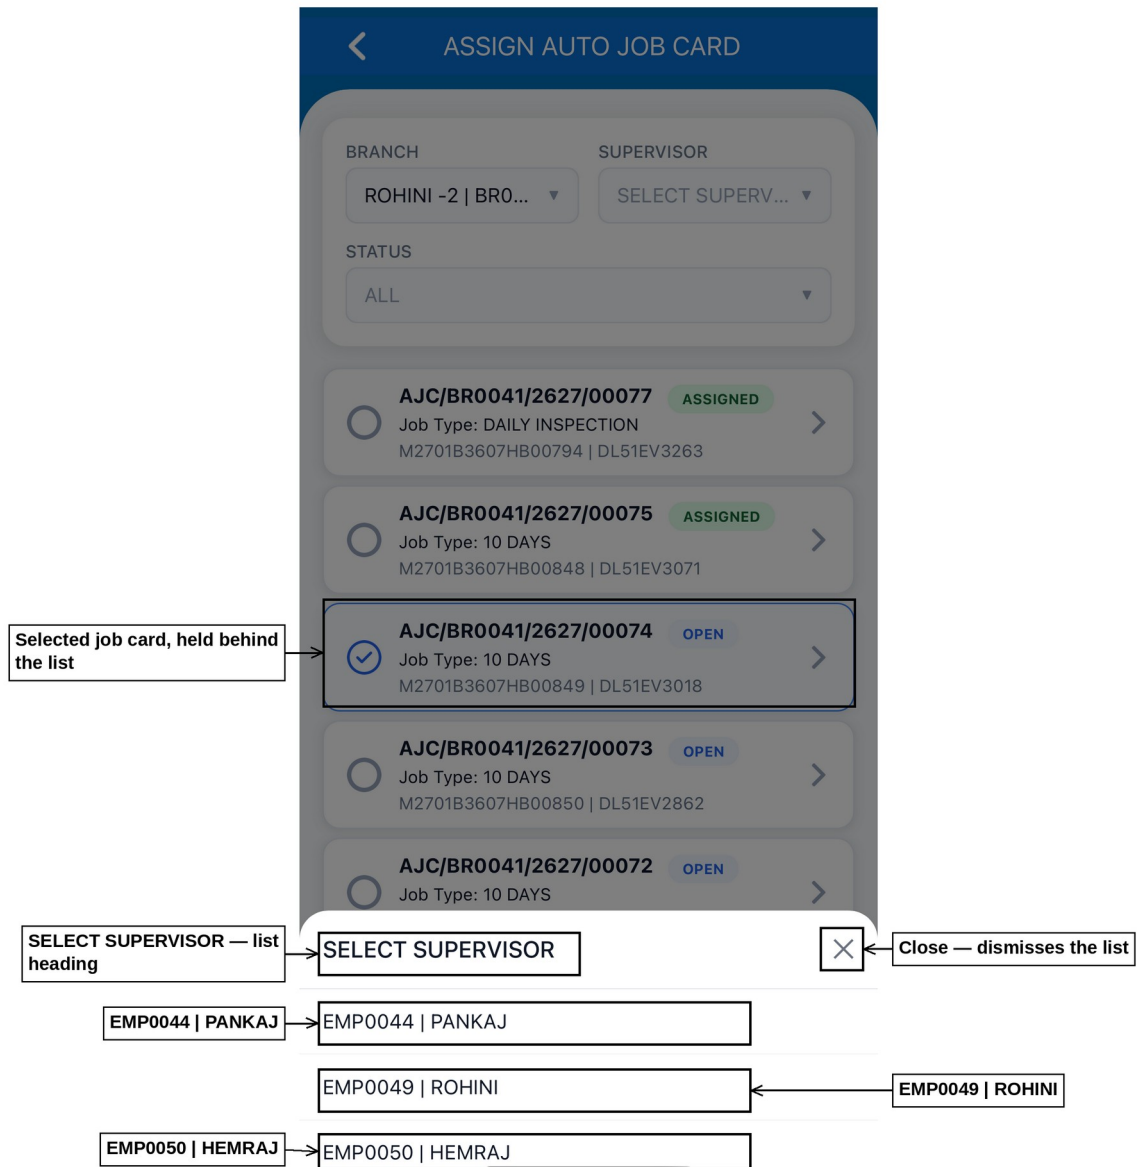


Fig. 26 — SELECT SUPERVISOR list

Note: Assignment rights are subject to the role and permissions configured for your user.

xxvii. Confirm the Assignment

- With a supervisor selected, tap **ASSIGN NOW** to raise the confirmation.
- Tap **Yes** to assign the selected buses to that supervisor.
- Tap **Not now** to return to the list without assigning.

ASSIGN AUTO JOB CARDS · STEP 5 OF 6

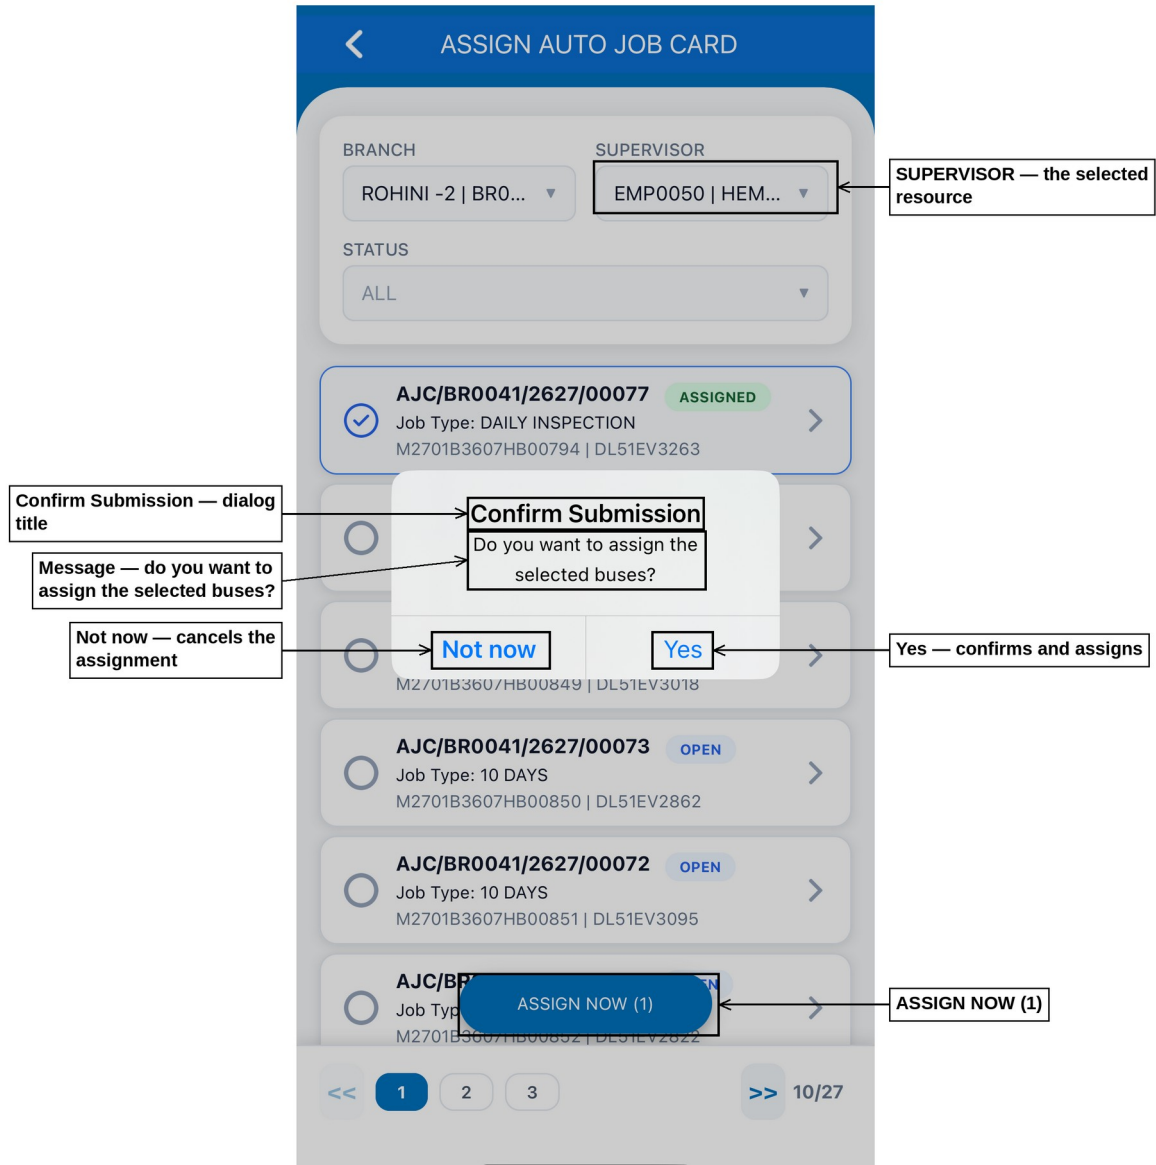


Fig. 27 — Confirm Submission dialog

xxviii. Assignment Complete

- The selected supervisor is shown in the Supervisor field.
- Verify the job cards that remain ticked, then tap **ASSIGN NOW**.
- The auto job is assigned to the selected resource and becomes available for further service processing.

ASSIGN AUTO JOB CARDS · STEP 6 OF 6

The screenshot displays the 'ASSIGN AUTO JOB CARD' interface. At the top, there's a blue header with a back arrow and the title 'ASSIGN AUTO JOB CARD'. Below this, there are two dropdown menus: 'BRANCH' (selected: ROHINI -2 | BR0...) and 'SUPERVISOR' (selected: EMP0044 | PAN...). A 'STATUS' dropdown is set to 'ALL'. A list of job cards follows, each with a radio button, a job ID, a job type, and a status label. The job card 'AJC/BR0041/2627/00073' is selected (radio button is checked) and has an 'OPEN' status. At the bottom, there's a blue 'ASSIGN NOW (1)' button and a pagination bar showing '10 of 27 records' with page numbers 1, 2, 3, and a '10/27' indicator.

Fig. 28 — Assign Auto Job Card — supervisor selected

8. DCR Charging

Objective

To allow depot users to view and capture vehicle charging-related information, as enabled by the JBM DMS application.

In this section

xxix. Open DCR Charging and Search Records

DCR Charging list

xxx. Search the Vehicle to Charge

DCR Charging Details — depot detail and vehicle search

xxxi. Vehicle and Charger Master Details

DCR Charging Details — vehicle details

xxxii. Charger Details and Charge Timing

DCR Charging Details — charger and timing

xxxiii. SOC, Energy and Final Status

DCR Charging Details — SOC, energy and final status

xxxiv. Attachments and Submit

DCR Charging Details — attachments and submission

xxix. Open DCR Charging and Search Records

- Select DCR Charging from Quick Links.
- Set the From Date, To Date, Branch and Status, then tap SEARCH.
- Tap the + button to create a new charging record.

DCR CHARGING · STEP 1 OF 6

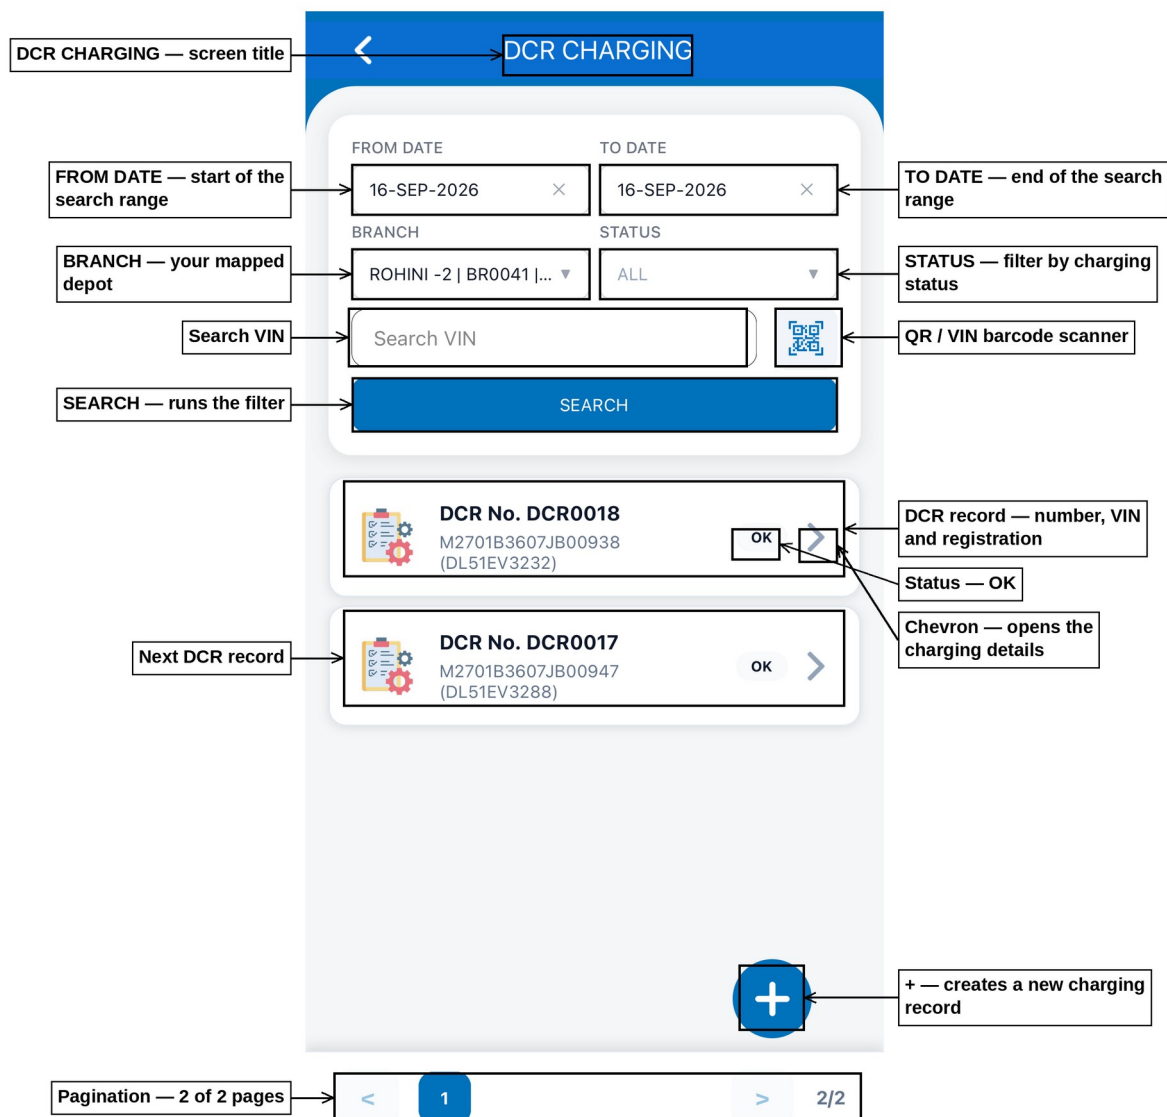


Fig. 29 — DCR Charging list

xxx. Search the Vehicle to Charge

- Confirm the Branch in the Depot Detail & Search Vehicle section.
- Search the vehicle by VIN, Bus Number or Registration Number, or scan the QR / VIN barcode.
- Tap SEARCH to load the vehicle and its charging basics.

DCR CHARGING · STEP 2 OF 6

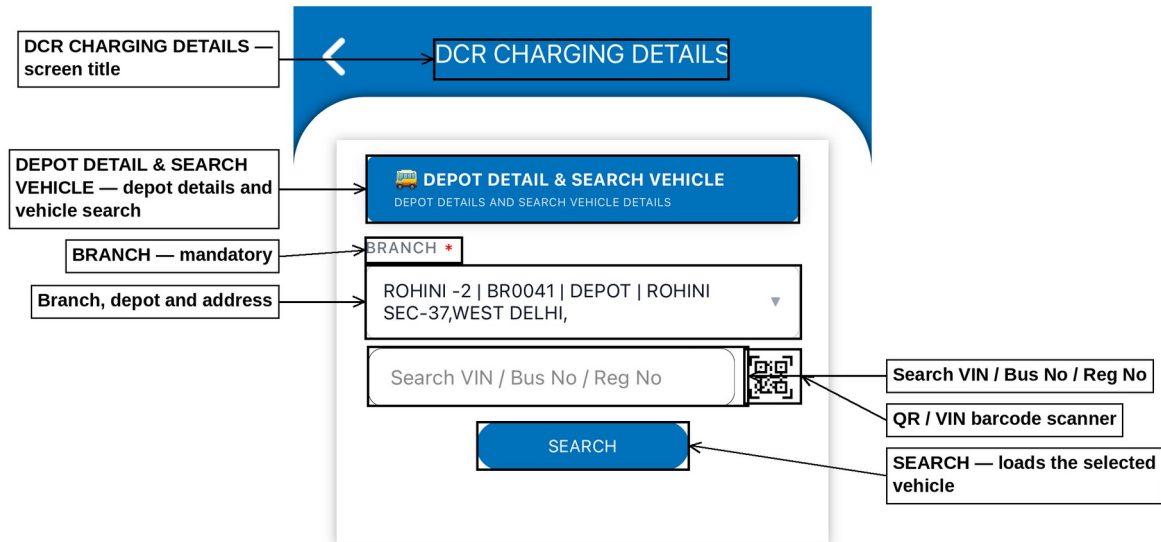


Fig. 30 — DCR Charging Details — depot detail and vehicle search

xxxi. Vehicle and Charger Master Details

- The Vehicle Details section is filled from the vehicle you searched.
- Select who the vehicle was charged by, and record the KMS reading and shift number.
- Charger Master Details carries the charger selection and capacity settings.

DCR CHARGING · STEP 3 OF 6

DCR CHARGING DETAILS

DEPOT DETAIL & SEARCH VEHICLE
DEPOT DETAILS AND SEARCH VEHICLE DETAILS

BRANCH *
ROHINI -2 | BR0041 | DEPOT | ROHINI SEC-37, WEST DELHI

Searched VIN number
M2701B3607HB00835

SEARCH

VEHICLE DETAILS
BUS REGISTRATION AND CHARGING BASICS

VIN NO. M2701B3607HB... BUS NO. DL51EV2812

REGISTRATION NO. DL51EV2812

PLEASE SELECT CHARGED BY
Charged By

KMS (READING) 0 SHIFT NO. SHIFT B

CHARGER MASTER DETAILS
CHARGER SELECTION AND CAPACITY SETTINGS

LAST CHARGE ON

Fig. 31 — DCR Charging Details — vehicle details

xxxii. Charger Details and Charge Timing

- Select the Charger and verify its location, capacity and rating.
- Confirm the charger gun make for each gun, the error status and the charging gun type.
- Under Charge Timing & SOC record the manual start and end date and time.

DCR CHARGING · STEP 4 OF 6

The screenshot shows the 'DCR CHARGING DETAILS' form with the following fields and annotations:

- CHARGER ***: CHM00004 | CCS2 (Annotation: CHARGER — select the charger and gun (mandatory))
- CHARGER LOCATION**: ROHINI -2 (Annotation: CHARGER LOCATION)
- CAPACITY**: 60 (Annotation: CAPACITY)
- RATING**: 200 (Annotation: RATING)
- CHARGER GUN MAKE FOR GUN #1**: Delta (Annotation: CHARGER GUN MAKE FOR GUN #1)
- CHARGER GUN MAKE FOR GUN #2**: Delta (Annotation: CHARGER GUN MAKE FOR GUN #2)
- ERROR ON CHARGER**: No Error (Annotation: ERROR ON CHARGER)
- CHARGING GUN TYPE**: CCS2 (Annotation: CHARGING GUN TYPE)
- CHARGE TIMING & SOC**: TIME, SOC, AND ENERGY TRACKING (Annotation: CHARGE TIMING & SOC — time, SOC and energy tracking)
- START DATE (SYSTEM)**: 16-09-2026 (Annotation: START DATE (SYSTEM) — set by the application)
- START TIME (SYSTEM)**: 15:33 (Annotation: START TIME (SYSTEM) — set by the application)
- START DATE (MANUAL) ***: SELECT START DAT... (Annotation: START DATE (MANUAL) — mandatory)
- START TIME (MANUAL) ***: SELECT START TIME... (Annotation: START TIME (MANUAL) — mandatory)
- END DATE (MANUAL) ***: SELECT END DATE (... (Annotation: END DATE (MANUAL) — mandatory)
- END TIME (MANUAL) ***: SELECT END TIME (... (Annotation: END TIME (MANUAL) — mandatory)
- REMARK**: (Annotation: REMARK)

Fig. 32 — DCR Charging Details — charger and timing

xxxiii. SOC, Energy and Final Status

- Enter the start and end SOC ranges together with the charging time and kWh consumed.
- Set the SOC Charged Status, then select the Final Status and the person to inform.
- Add the attachment details and remarks for the charging record.

DCR CHARGING · STEP 5 OF 6

The screenshot shows the 'DCR CHARGING DETAILS' screen with the following elements and annotations:

- START DATE (MANUAL)**: Points to the 'SELECT START DAT...' button.
- START TIME (MANUAL)**: Points to the 'SELECT START TIME...' button.
- END DATE (MANUAL)**: Points to the 'SELECT END DATE (...)' button.
- END TIME (MANUAL)**: Points to the 'SELECT END TIME (...)' button.
- REMARK**: Points to the 'ENTER REMARK' text field.
- START SOC — 0–100% range (mandatory)**: Points to the 'START SOC RANGE' button.
- END SOC — 0–100% range (mandatory)**: Points to the 'END SOC RANGE(0-' button.
- CHARGING TIME — calculated by the application**: Points to the 'CALCULATED TIME' button.
- KWH CONSUMED — mandatory**: Points to the 'KWH CONSUMED' button.
- SOC Charged Status — toggle Yes or No**: Points to the 'SOC Charged Status' toggle switch, which is currently set to 'No'.
- FINAL STATUS — submit status and hold reason details**: Points to the 'FINAL STATUS' button, which has a green checkmark and the text 'SUBMIT STATUS AND HOLD REASON DETAILS'.
- SELECT STATUS — mandatory**: Points to the 'SELECT STATUS' dropdown menu, which currently shows 'Select Status *'.
- PLEASE SELECT INFORM TO**: Points to the 'PLEASE SELECT INFORM TO' dropdown menu, which currently shows 'Inform To *'.
- ATTACHMENT — add attachment details and remarks**: Points to the 'ATTACHMENT' button, which has a paperclip icon and the text 'ADD ATTACHMENT DETAILS AND REMARKS'.
- IMAGE 1 — upload**: Points to the 'IMAGE 1' button.
- IMAGE 2 — upload**: Points to the 'IMAGE 2' button.

Fig. 33 — DCR Charging Details — SOC, energy and final status

xxxiv. Attachments and Submit

- Verify the SOC values, charging time and kWh consumed.
- Select the status and the Inform To recipient under Final Status.
- Upload the required images, then tap **SUBMIT** to save the charging record.

DCR CHARGING · STEP 6 OF 6

The screenshot shows the 'DCR CHARGING DETAILS' screen with the following fields and annotations:

- START SOC — 0–100% range** points to the **START SOC RANGE** field.
- END SOC — 0–100% range** points to the **END SOC RANGE(0-** field.
- CHARGING TIME — calculated by the application** points to the **CALCULATED TIME** field.
- KWH CONSUMED** points to the **KWH CONSUMED** field.
- SOC Charged Status — toggle Yes or No** points to the **SOC Charged Status** toggle switch, which is currently set to **No**.
- FINAL STATUS — submit status and hold reason details** points to the **FINAL STATUS** button, which has a green checkmark and the text **SUBMIT STATUS AND HOLD REASON DETAILS**.
- SELECT STATUS — mandatory** points to the **SELECT STATUS** dropdown menu, which shows **Select Status ***.
- PLEASE SELECT INFORM TO** points to the **PLEASE SELECT INFORM TO** dropdown menu, which shows **Inform To ***.
- ATTACHMENT — add attachment details and remarks** points to the **ATTACHMENT** button, which has a paperclip icon and the text **ADD ATTACHMENT DETAILS AND REMARKS**.
- IMAGE 1 — upload** points to the **IMAGE 1** upload button, which has an **UPLOAD** label.
- IMAGE 2 — upload** points to the **IMAGE 2** upload button, which has an **UPLOAD** label.
- SUBMIT — saves the charging record** points to the **SUBMIT** button at the bottom of the screen.

Fig. 34 — DCR Charging Details — attachments and submission

Note: The exact fields, validations and charging integration follow the approved Charging Details screen and functional requirements.

9. User Troubleshooting

Issue	Recommended action
Unable to login	Verify credentials and contact administrator if access is denied.
Vehicle not found	Verify Bus Number, Registration Number, or VIN.
VIN not authorized	Contact admin for assigned VIN access.
Odometer validation error	Enter a reading not less than the previous recorded reading.
Duplicate Gate-In error	Complete the previous Gate-Out loop first.
Gate-Out not allowed	Verify Gate-In status and job card closure.
Wheel temperature alert	Inform Shift Supervisor / Depot Manager and follow the service process.
Complaint not visible	Verify the Gate-In complaint was saved against the correct VIN.
Job card not available	Verify auto-job generation and assigned access.

10. JBM Officials Interviewed

Persons interviewed	Department	Remarks
Mr. Puneet Sharma		
Mr. Gaurav Singla		
Mr. Dinesh Kumar		
Mr. Vinit Chavan		