

SPACE MANAGEMENT IN MREF

IBM Maximo Real Estate and Facilities

System Details

Build Number

402158

Platform Version

9.1.3

Application Version

11.6

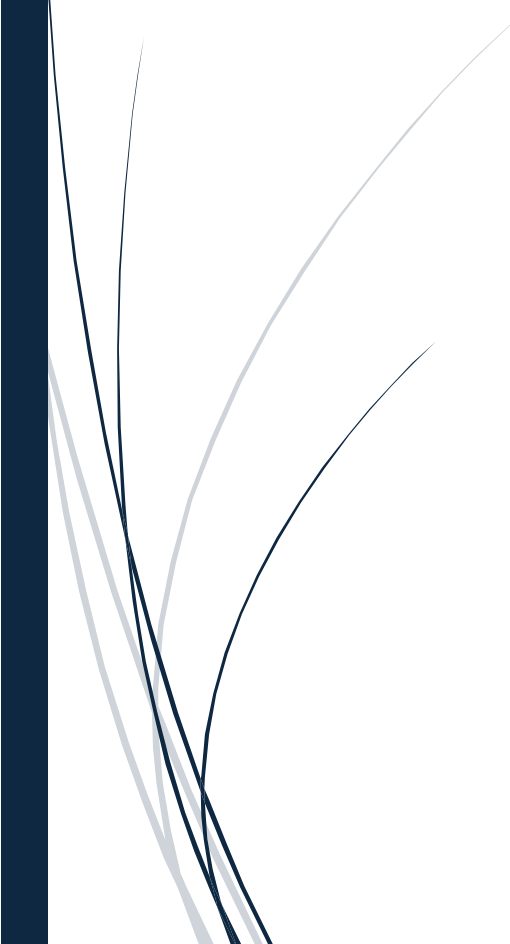


Table of Contents

Overview.....2

DYNAMIC SPACE PLANNING..... 3

EXERCISE 1. REVIEWING THE EXISTING FLOOR PLAN LAYOUT 4

SCENARIO PLANNING 6

EXERCISE 2. CREATE A SCENARIO PLAN FOR THE FLOOR 6

End..... 13

Overview

This lab exercise focuses on using the MREF application to manage various aspects of facility operations, including planning, space utilization, move coordination, and resource reservations.

Strategic Facility Planning: MREF Strategic Facility Planning is used to analyze business requirements, simplify complex planning processes, and develop actionable strategies for effective facility management.

Dynamic Space Planning: The MREF Dynamic Space Planning (DSP) module enables the creation and evaluation of spatial scenarios to optimize space utilization. Activities include analysing floors for social distancing, updating space classifications, reallocating departments and personnel, and defining reservable or dedicated areas. Scenario outputs can automatically update active space records to reflect the planned changes.

Managing Drawings: The Drawing Manager application provides a centralized platform within MREF for managing uploaded drawings. It supports functions such as searching, viewing, modifying, exporting to PDF, downloading, and deleting drawings, ensuring efficient drawing management and version control.

Managing Spaces and Moves: The MREF Space Management feature supports the creation and maintenance of space plans, tracking of utilization data, and management of people, assets, and property information. The Move Management feature facilitates the submission and processing of move requests, development of move designs, and organization of move projects. Integration with MREF CAD Integrator/Publisher allows direct synchronization between CAD applications and the MREF platform for streamlined updates.

Managing Reservations and Reservable Resources: The MREF Workplace Reservation Manager application enables the scheduling and management of shared rooms, workspaces, equipment, and vehicles. It supports reservation requests, processing of event and workspace bookings, and coordination of related services such as room setup, catering, and equipment delivery. Integration with Microsoft Exchange and Outlook provides additional flexibility for managing room and resource reservations.

Dynamic Space Planning

The Dynamic Space Planning (DSP) app is used to create visual scenarios for analysing and managing floor layouts. It allows scenarios to be designed for social distancing, space classification updates, and organization or personnel rearrangements. Spaces can be marked as reservable or dedicated within these scenarios. The scenario data can then be applied to automatically update active space details to match the planned layout.


Exercise 1. Reviewing the existing floor plan layout

In this exercise we will learn how to view, filter, and analyse floor plan data using the Dynamic Space Planning features.


1. Login to Maximo Application Suite and Launch Real Estate and Facilities as space planner.

- Username: **pplanner**
- Password: **xxxxxxxxxx**

2. Go to **Portfolio-> Locations**.

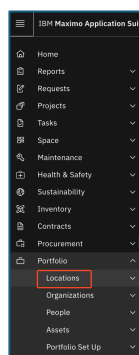

3. Expand **Offices** -> **North America** -> Open **Charlotte Watson Center Building**.

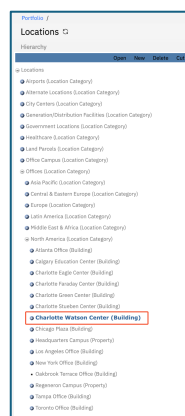

4. Navigate to **Area Measurements** tab and open the floor record.

Building: Charlotte Water Center

General

Contact Details

Graphic

Area Measurements

Contracts

Assessment

Maintenance

Financial Summary

Reserve

(Summary): Review the Area Summary for the Building.


Building Area Measurements

Gross Area	188796.32	square-feet	Gross Area (Imperial)	188796.32	square-feet
Rentable Area	151211.7	square-feet	Rentable Area (Imperial)	151211.7	square-feet
Usable Area	147403.04	square-feet	Usable Area (Imperial)	147403.04	square-feet
Proration Rule	Balance To Measured				

Floors

ID	Floor	Floor Class	Capacity	Headcount	Rentable Area
Contains	Contains	Contains	Equals	Equals	Equals
☐ NA004-00	00 - Parking Floor		0	0	29802.96 square-feet
☐ NA004-01	01 - First Floor	Office	178	8	28253.35 square-feet
☐ NA004-02	02 - Second Floor	Office	312	127	29639.99 square-feet
☐ NA004-03	03 - Third Floor	Office	132	1	29677.65 square-feet
☐ NA004-04	04 - Fourth Floor	Office	0	0	29638.16 square-feet
☐ NA004-05	Roof	Roof	0	0	3199.59 square-feet
			622	136	151211.7 square-feet


5. In the floor record open **Dynamic Space Planning** tab.

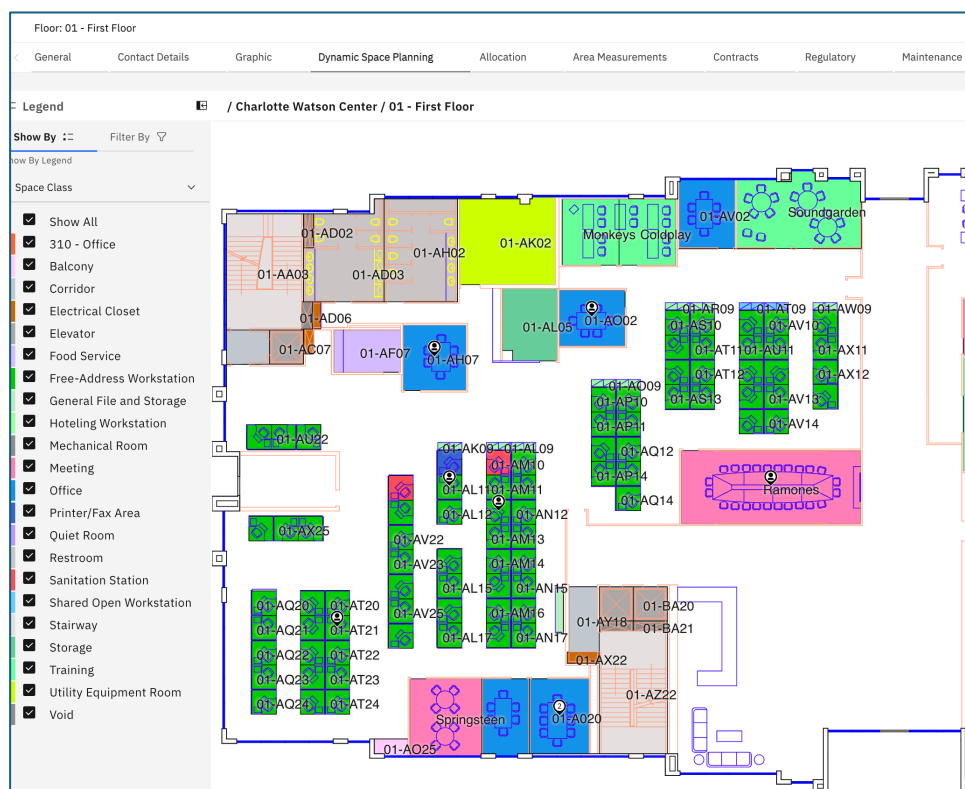


6. To view specific types of space information on the floor plan, use the **Legend** options-

On the **left side** of the horizontal toolbar, select the **Legend** icon or arrow to open the **Legend sidebar**. The sidebar includes the following options:


- a. **Show By** – Displays spaces based on criteria such as Charge to Org, Occupancy Org by People, Occupancy by People, Space Class, or Work Points.
- b. **Filter By** – Filters spaces using options like Charge to Org, Occupancy Org, Occupancy by People, Reservable Flag, Work Points, or Available Spaces.

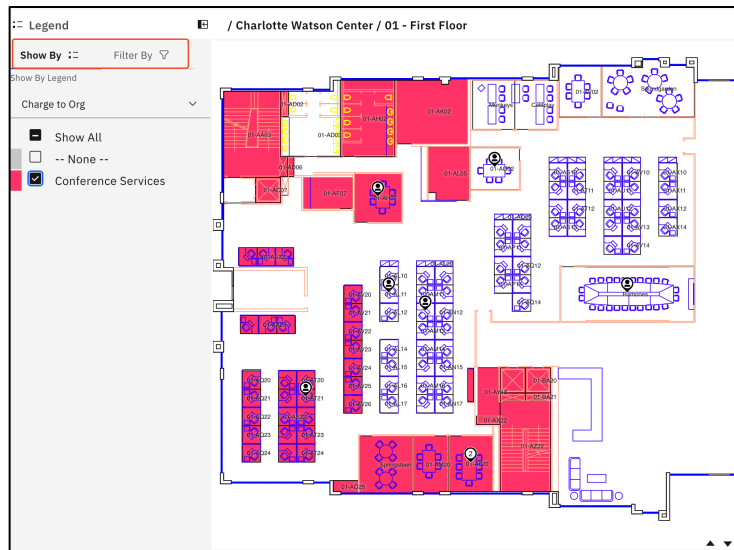

7. To view workstation assignments for specific people on the floor plan:
 - a. On the **right side** of the horizontal toolbar, select the **People** icon or arrow to open the **People sidebar**.
 - b. On the toolbar, use the **Show/Hide People** icon to display or hide people on the floor plan.
 - c. In the **People sidebar**, choose the **All** tab to view all people or the **Removed** tab to view people who were removed from the plan.

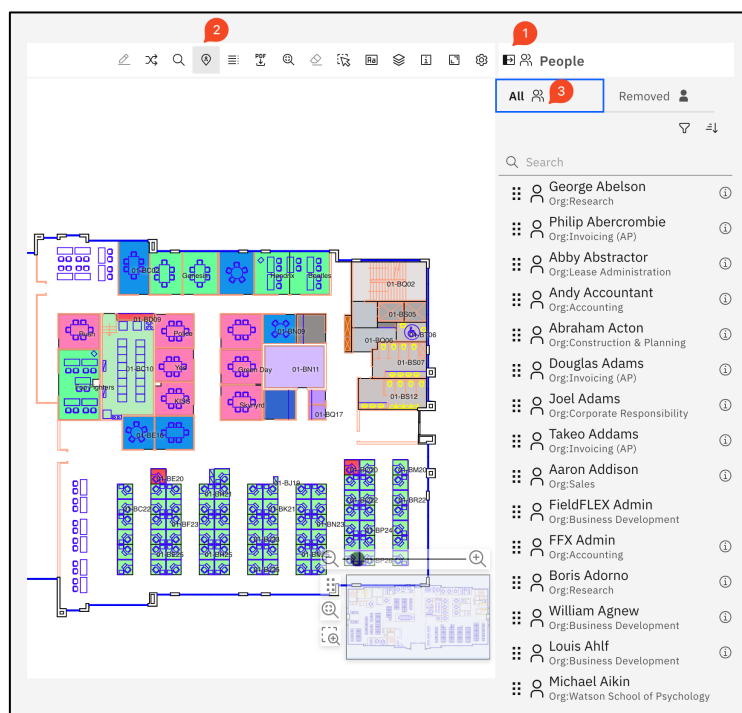

8. To view additional space details on the floor plan:
 - a. On the **horizontal toolbar**, select the **Layers** icon to turn on or off specific layers from the source CAD drawing.
 - b. On the **horizontal toolbar**, select the **Open Record** icon to enable space selection.
 - c. Click on a space in the floor plan to open its corresponding record and view detailed information.

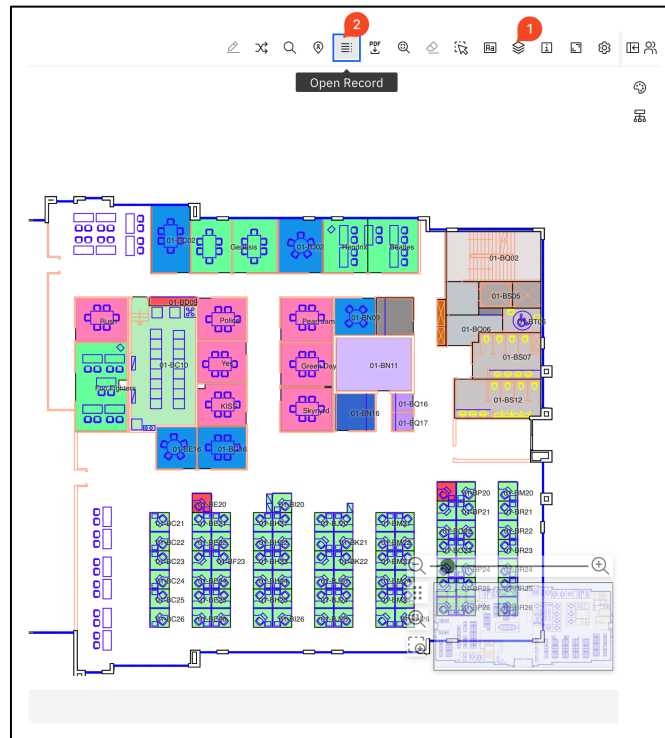

Scenario Planning

Scenario Planning is used to create and analyse different space layout options before making real changes. It allows planners to test “what-if” situations, such as rearranging people, updating space types, or adjusting organizational allocations. These scenarios help visualize the impact of changes on space utilization without affecting live data. Once a scenario is finalized, it can be applied to update the active floor plan automatically, supporting better planning and decision-making for workplace management.

Exercise 2. Creating a Scenario Plan for the floor

1. Open the floor record in the CWC building.

Floor: 01 - First Floor

General Contact Details Graphic **Dynamic Space Planning** Allocation Area Measurements Contracts Regulatory Maintenance

(Required): General Information for this floor.

General

ID: NA004-01 Status: Active Image

Name: 01 - First Floor

Description: First Floor

Hierarchy Path: \Locations\Offices\North America\Charlotte Watson Center\01 - First Floor

Details

Bar Code Entry: NA004-01 Control Number: 1000277

Floor Level: 1 Floor Maintained: ☒

Ground Level Exit: ☒ Capacity: 178

Cost per Sq Unit: \$35.00 US Dollars Headcount: 8


Tenure: Leased

Floor Class: Office

Primary Use: Office


Accounting Cost Center: NA004-01

2. In the floor record, select the **Dynamic Space Planning** tab.

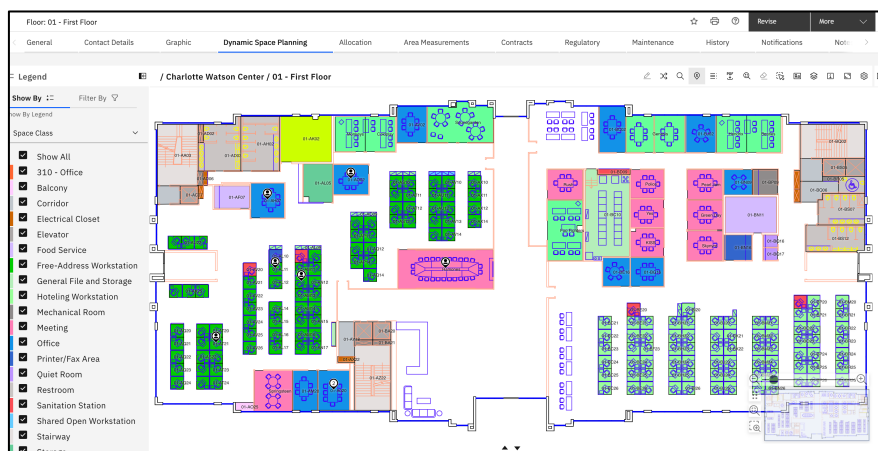

3. To create a new scenario for the floor plan, you can take the following steps:

- a) On the secondary toolbar, select the **Create Scenario** icon at bottom.

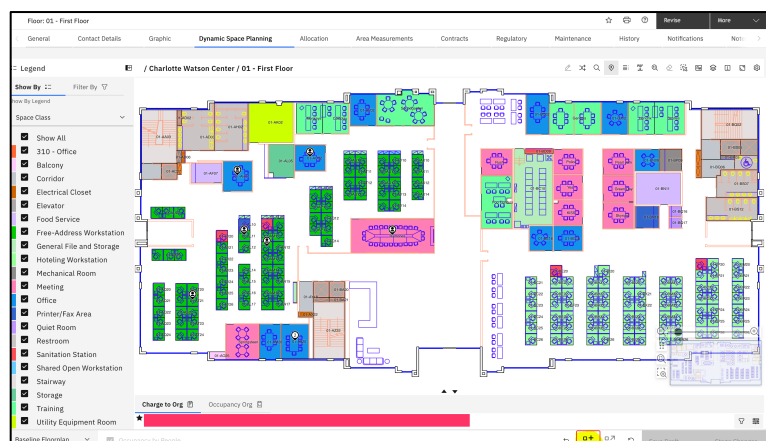

- b) In the dialog box, enter the **Scenario Name**, then click **Create**.

Create Scenario

Edit the name and click Create to create a new scenario

Scenario Name

Demo Scenario

Description

The Marketing department is growing and needs additional workstations on the 1st floor.

Initialize new scenario from:

☐ Baseline ☒ Current State

Cancel Create

c) In the lower-left area of the tab, select the name of the new scenario.

Progressive 25%

Progressive 50%

Squad A

Squad B

Demo Scenario

Demo Scenario

Workstation

Room

Charge to Org

★

Occupancy by People

4. To move people from one workstation to another workstation, you can take the following steps:

a) On the right side of the horizontal toolbar, select the **People** icon or arrow to expand the People sidebar.

People

All Removed

Search

George Abelson
Org: Research


Philip Abercrombie
Org: Invoicing (AP)

Abby Abstractor
Org: Lease Administration

Andy Accountant
Org: Accounting


Abraham Acton
Org: Construction & Planning

b) Click and drag each person from one workstation to another workstation.

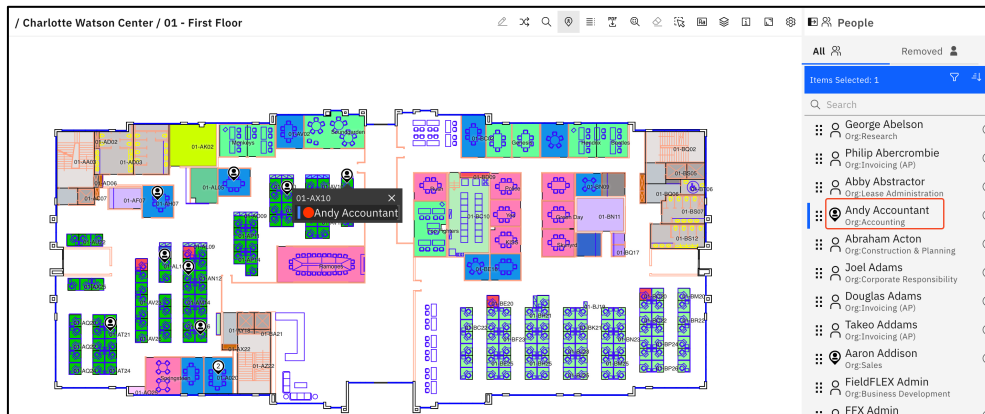


5. To change the available (workpoint) and unavailable (non-workpoint) spaces that are shown, you can take the following steps:

- On the left side of the horizontal toolbar, select the **Legend** icon or arrow to expand the Legend sidebar.
- Select **Filter By** -> **Available Spaces** and choose **Show All**, **Available**, or **Not Available**.

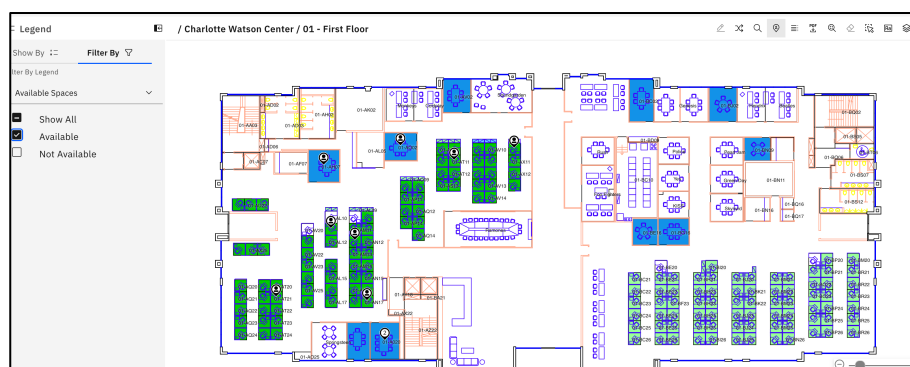

6. To remove people from workstations, you can take the following steps:

- On the horizontal toolbar, select the **Enable drag selection** icon to enable it.

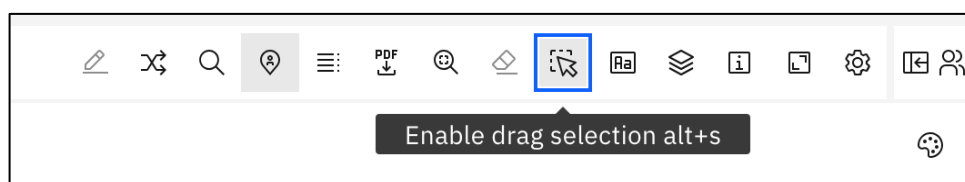


- Click and drag your cursor over a rectangular area of workstations with people.

Tip: To clear the selected spaces, click the **Clear Selection** icon.

- On the horizontal toolbar, select the **Edit** icon, then **Remove People**.

- d) In the dialog box, select all people or select one or more organizations, then click **Remove**.

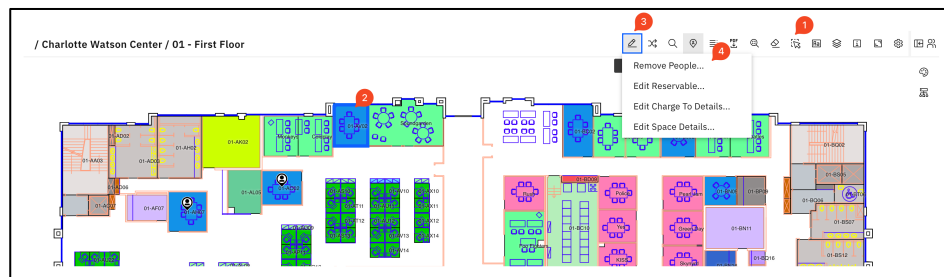

7. To convert workstations into reservable spaces, you can take the following steps:

- a) On the horizontal toolbar, select the **Enable drag selection** icon to enable it.
b) Click and drag your cursor over a rectangular area of workstations without people.




Hint: To clear the selected spaces, click the **Clear Selection** icon.

- c) On the horizontal toolbar, select the **Edit** icon, then **Edit Reservable**.

- d) In the dialog box, click **Update**.



Hint: To confirm, use the left-side **Filter By** to filter spaces by the **Reservable Flag**.

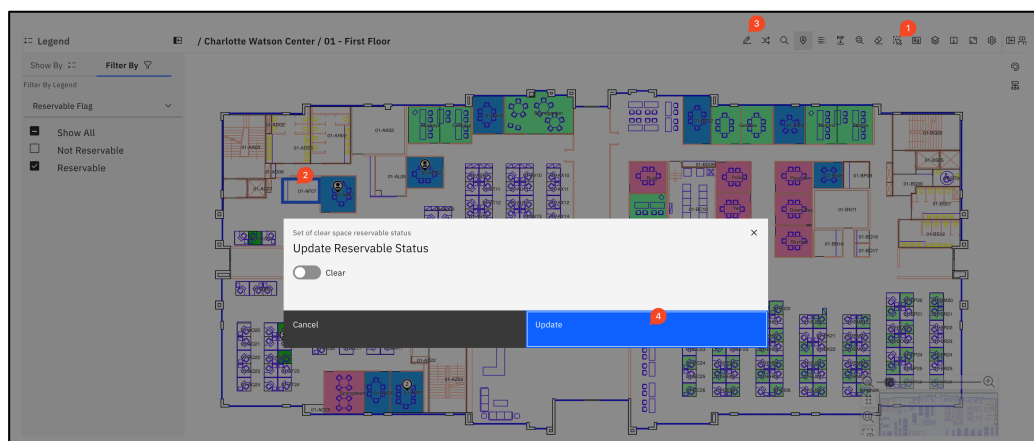

8. To update the space classifications of spaces, you can take the following steps:

- a) On the horizontal toolbar, select the **Enable drag selection** icon to enable it.
b) Click and drag your cursor over a rectangular area of spaces to select them.
c) On the horizontal toolbar, select the **Edit** icon, then **Edit Space Details**.


d) In the dialog box, enter the new details, then click **Update**.



Hint: To confirm, use the left-side **Show By** to show spaces by the **Space Class** classification.



Hint: As an alternative, when the People sidebar is collapsed, you can select the **Space Classes** icon to display a palette or list of space classes. Drag the colored dot of the space class to your selected spaces.

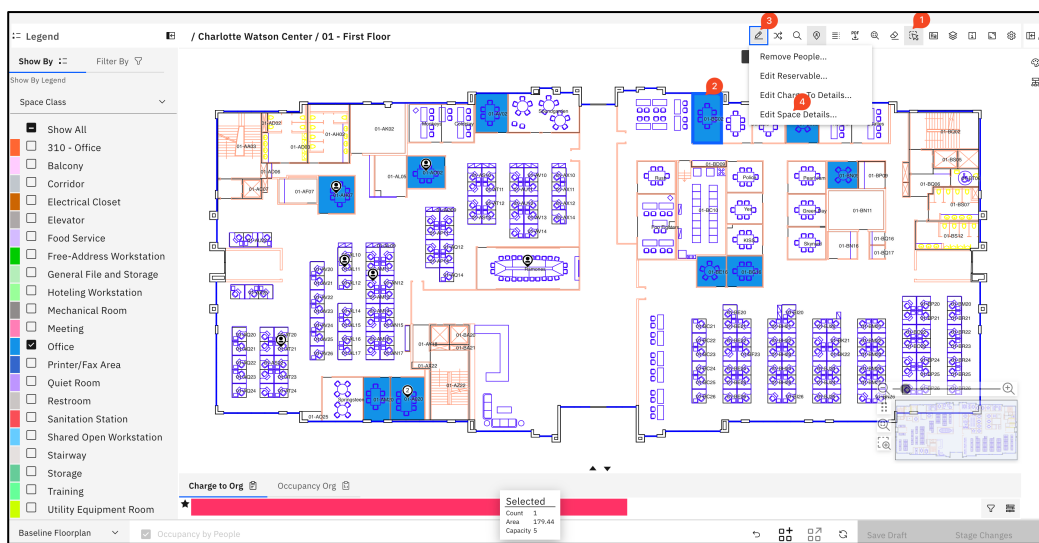

9. To replace the **Charge To** organization allocation of spaces, you can take the following steps:


- On the horizontal toolbar, select the **Enable drag selection** icon to enable it.
- Click and drag your cursor over a rectangular area of spaces to select them.
- On the horizontal toolbar, select the **Edit** icon, then **Edit Charge To Details**.
- In the dialog box, select the new organization, then click **Replace**.



Hint: To confirm, use the left-side **Show By** to show spaces by the **Charge to Org** organization.



Hint: As an alternative, when the People sidebar is collapsed, you can select the **Charge to Org** icon to display a palette or list of chargeback organizations. Drag the colored dot of the chargeback organization to your selected spaces.

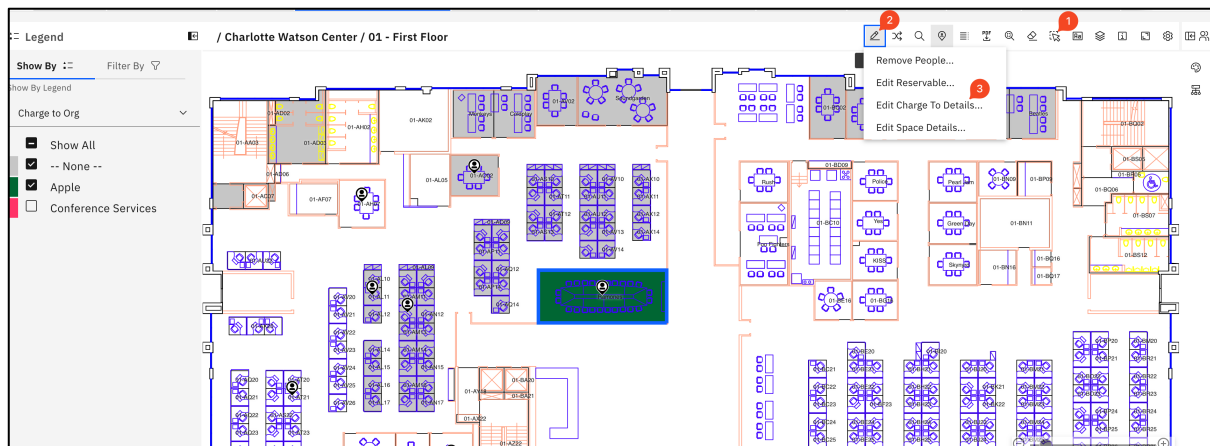

10. To add another **Charge To** organization allocation to spaces, you can take the following steps:

- Again, select the **Edit** icon, then **Edit Charge To Details**.
- In the dialog box, select the new organization, then click **Add**.

Hint: To confirm, use the left-side **Show By** to show spaces by the **Charge to Org** organization.

Hint: As an alternative, when the People sidebar is collapsed, you can select the **Charge to Org** icon to display a palette or list of chargeback organizations. While you press the **Shift** key, drag the colored dot of the chargeback organization to your selected spaces.


11. To remove the **Charge To** organization allocation from spaces, you can take the following steps:

- Again, select the **Edit** icon, then **Edit Charge To Details**.
- In the dialog box, select the organization to remove, then click **Clear**.

Hint: To confirm, use the left-side **Show By** to show spaces by the **Charge to Org** organization.

12. Click **Save Draft**.

13. When you're ready, click **Stage Changes** to create a staged Floor Scenario record with a summary of the scenario changes.

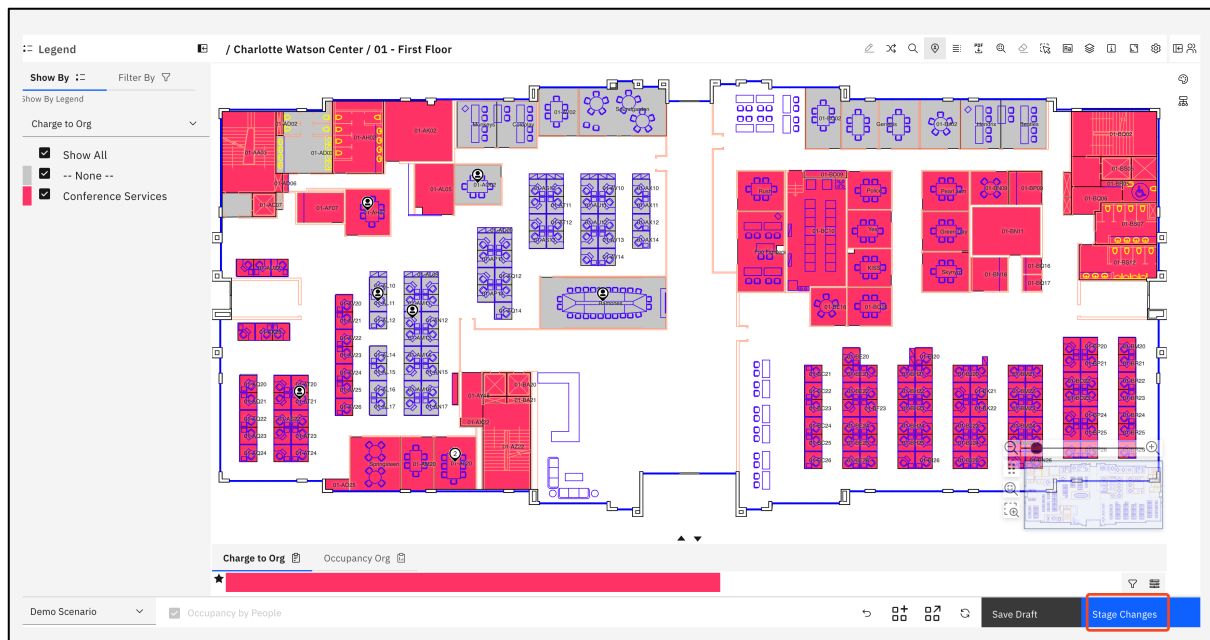

-----END-----

References: <https://www.ibm.com/docs/en/tririga/11.6.0?topic=moves-dynamic-space-planning>