

SECHE-LINGE : VENTILE & à CONDENSATION


Fonctionnement PROGRAMME TEST

Branchez le raccordement électrique et assurez-vous que l'appareil fonctionne correctement:

Appuyez sur "Départ / Pause " pour démarrer le programme.

Annuler le programme en appuyant sur "Départ / Pause " pendant 3 sec.

1- Éteignez l'appareil avec le M/A.

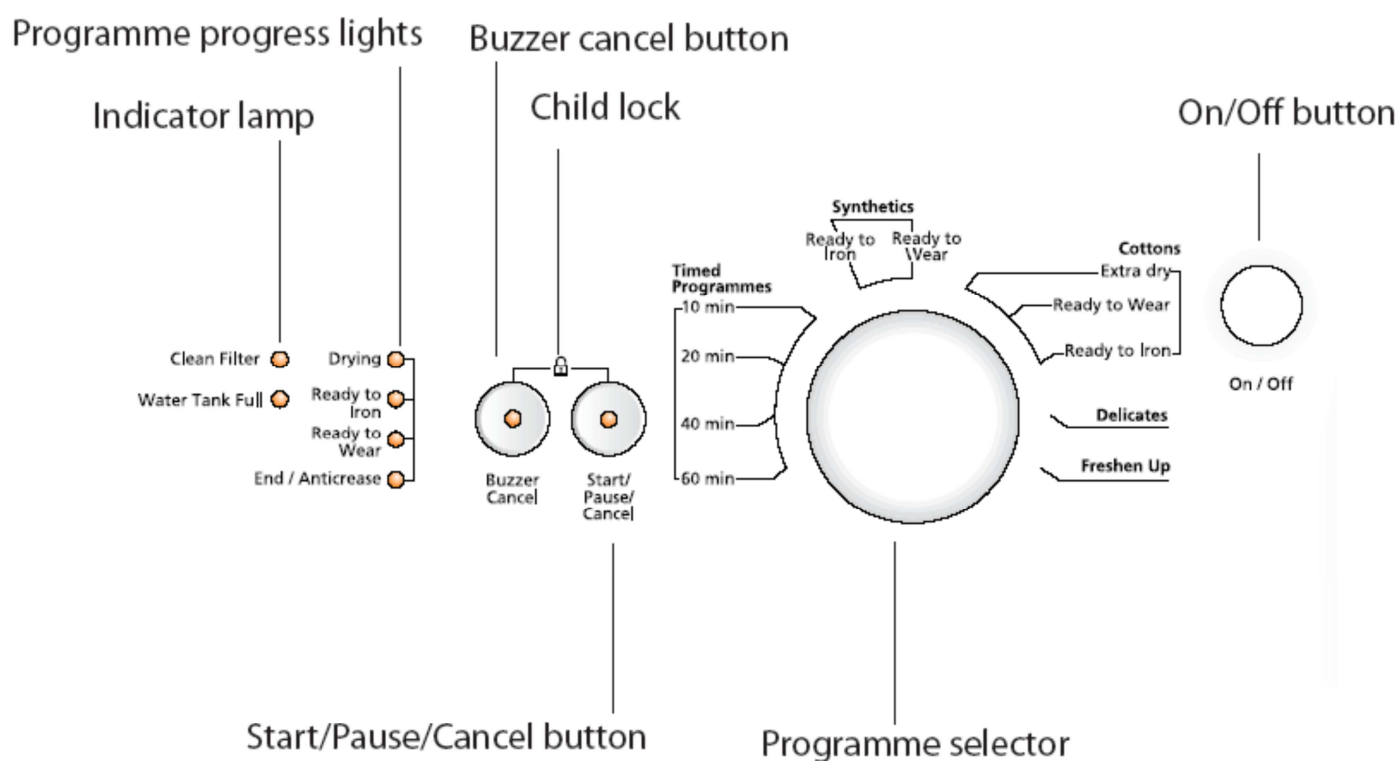

2- Réglez le sélecteur de programme (potentiomètre) sur la **position délicat** (après les programmes Coton).

3- **Allumez l'appareil avec le bouton M/A (ON/OFF) tout en maintenant la touche « Annulation Sonnerie » enfoncée pendant 3 à 5sec. , jusqu'à tous les voyants clignotent.**

4- **Appuyez sur "Start / Stop "** pour suivre les étapes du programme de service, à **chaque impulsion**, il teste les différents éléments de l'appareil :

5- Le moteur tourne dans le sens **anti-horaire**.

6- **Pendant que le moteur tourne, le chauffage 1400W (7 A) est alimenté et la pompe de relevage fonctionne, sur les modèles existants.**


7- **Pendant que le moteur tourne, le chauffage 2000 W (9,6 A) est alimenté et la pompe de relevage fonctionne, sur les modèles existants.**

8- Le moteur tourne dans le sens **horaire**.

9- Pour sortir du programme Test, éteindre l'appareil avec le **M/A**.


SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

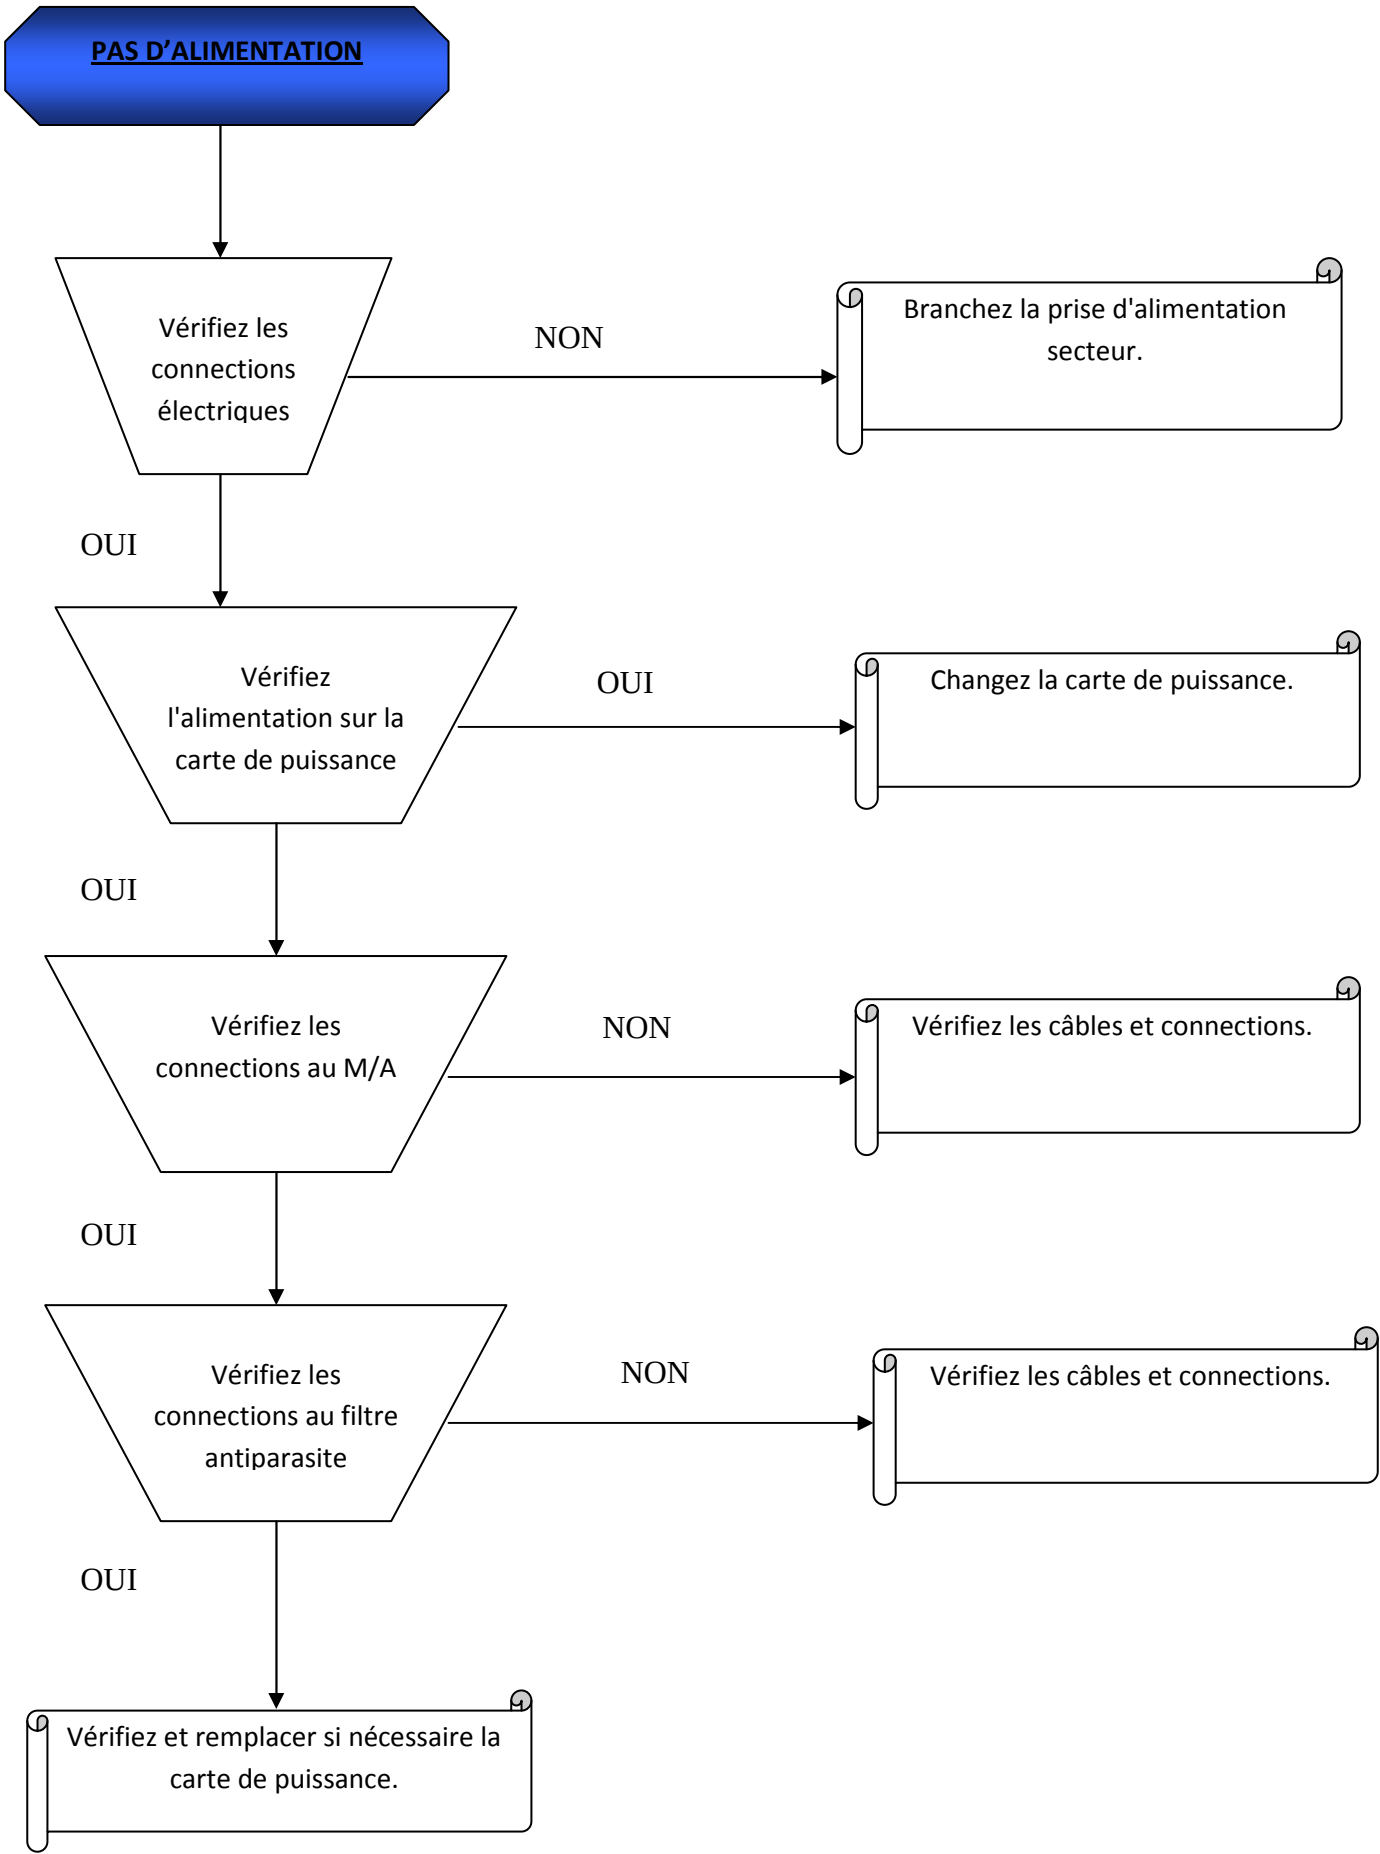


SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

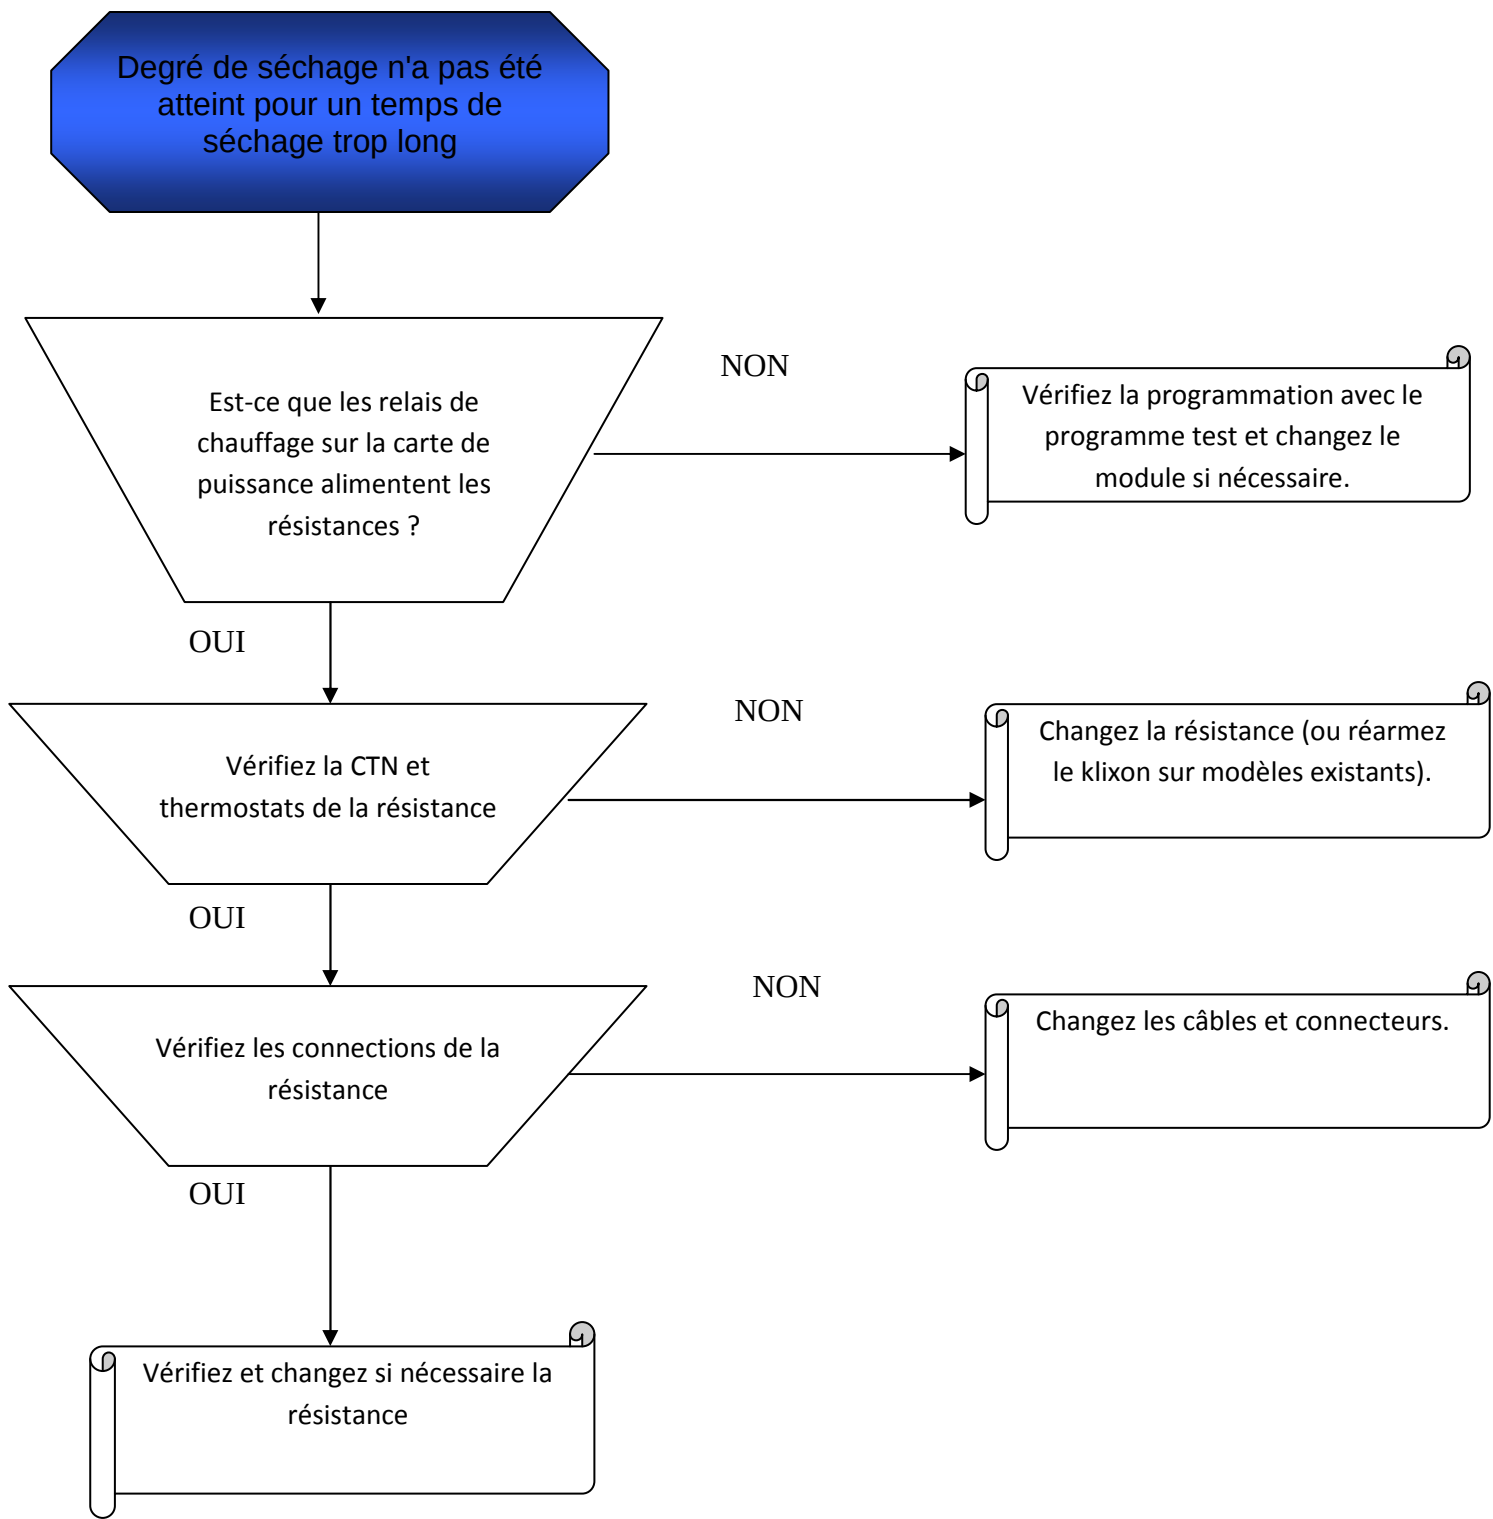


SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

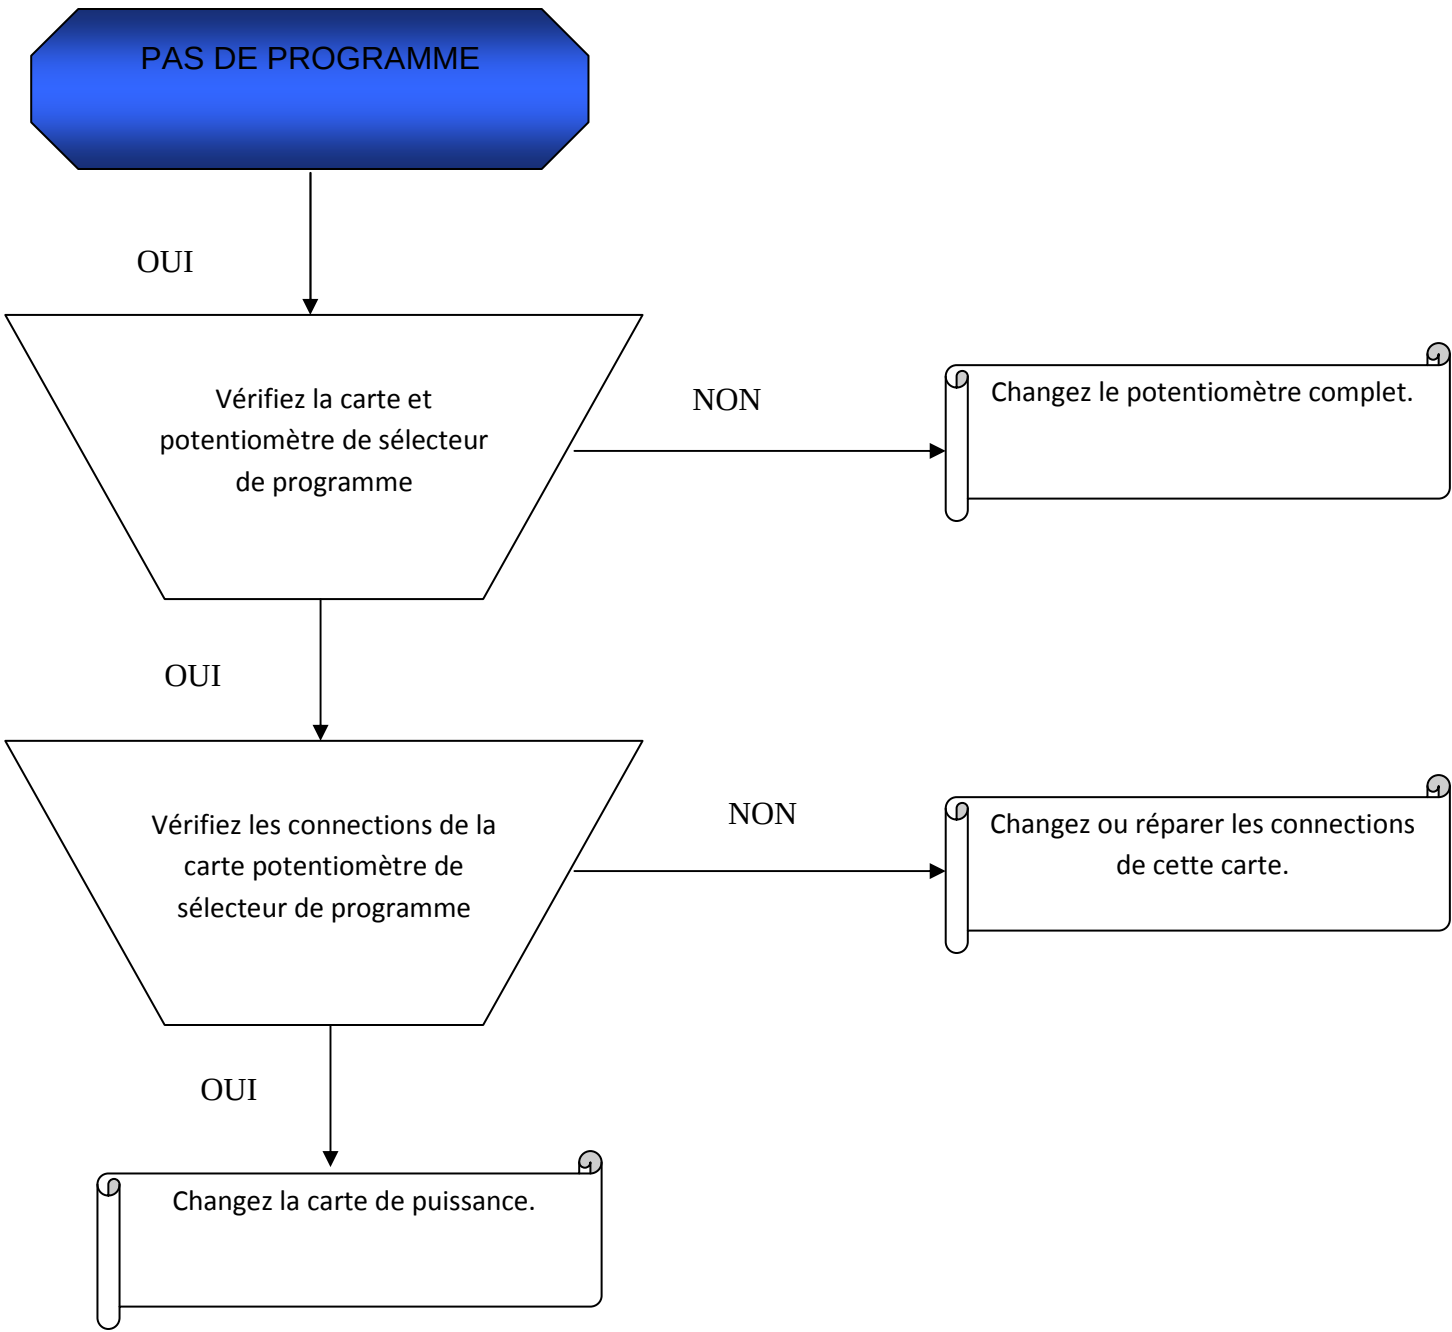


SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

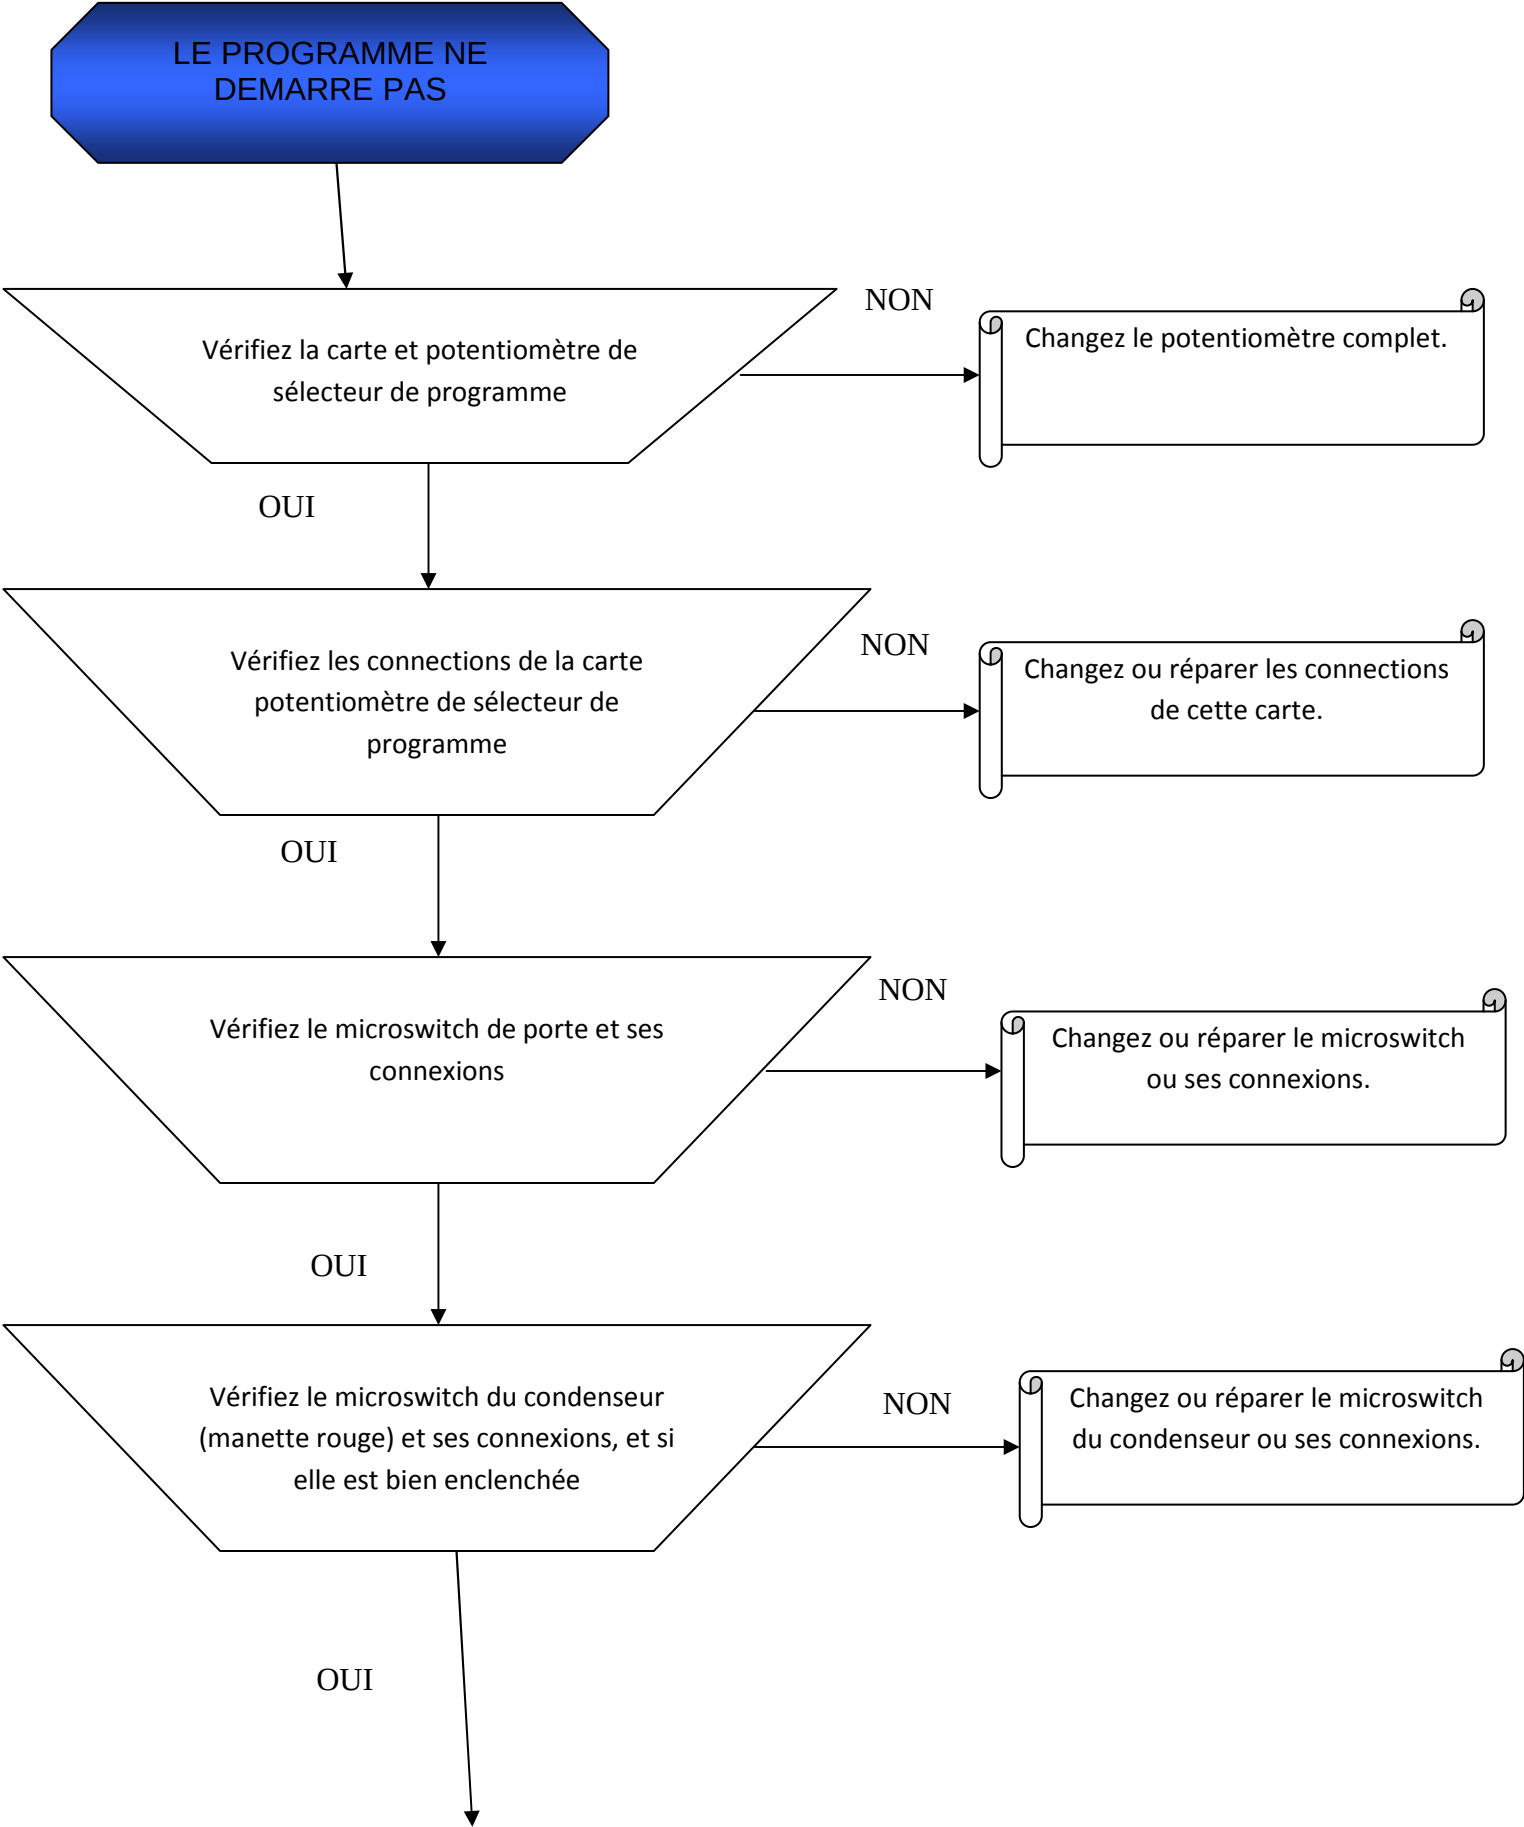


SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

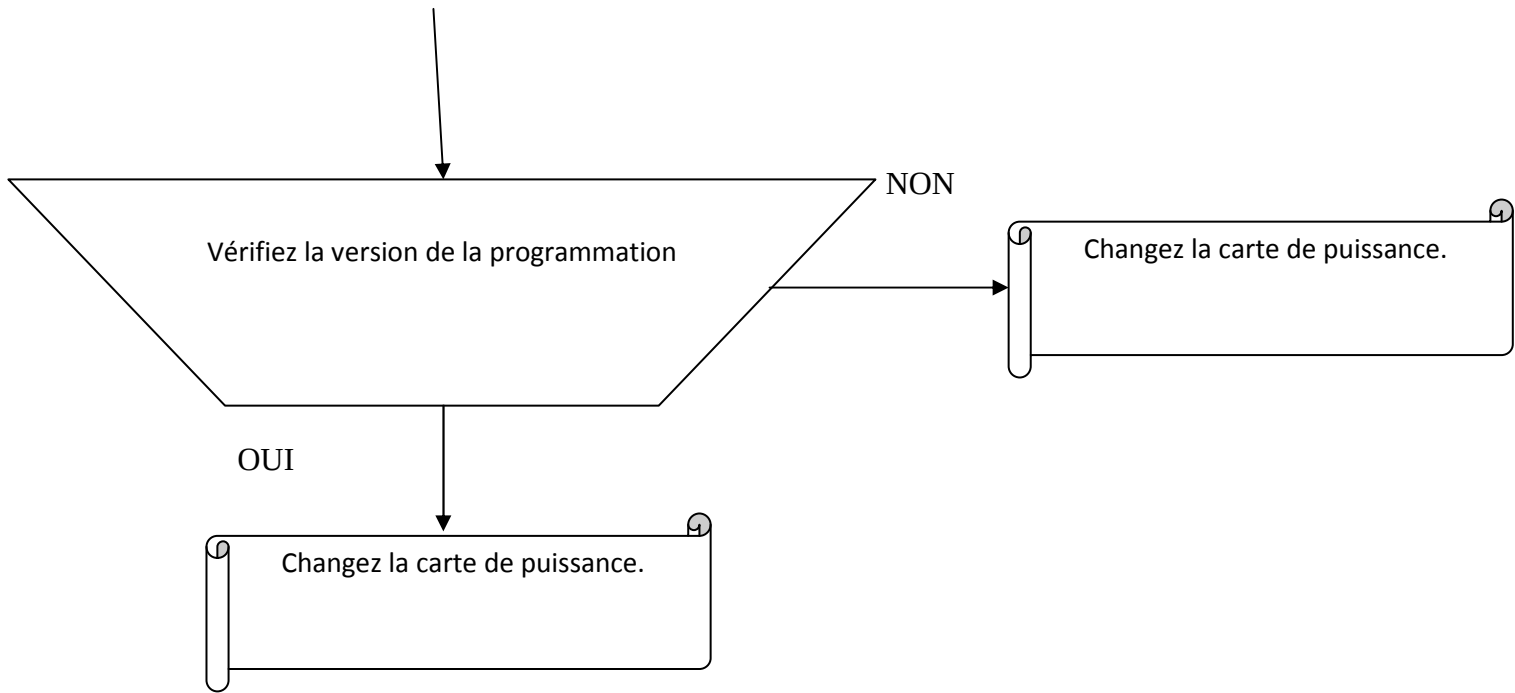


SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

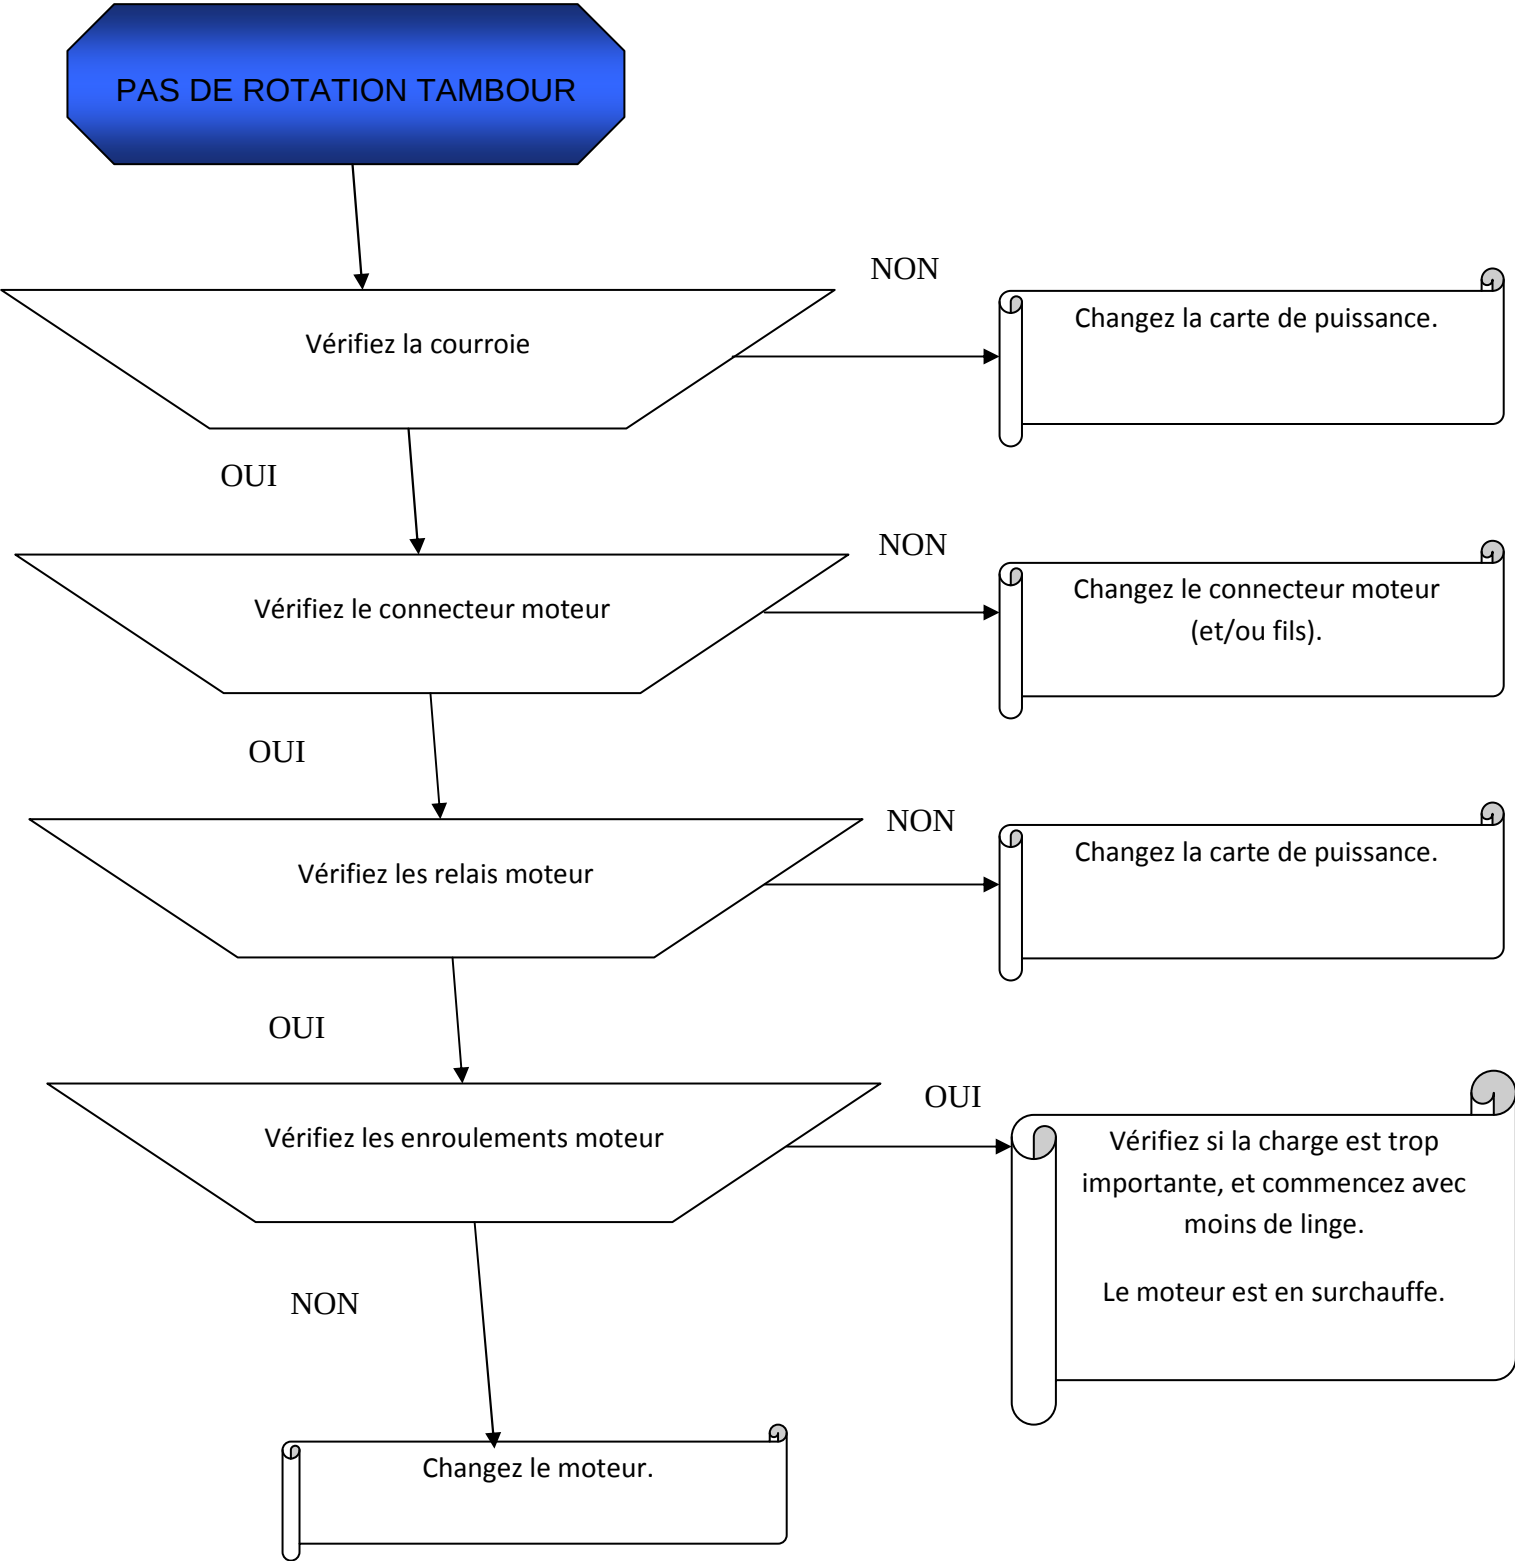


SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

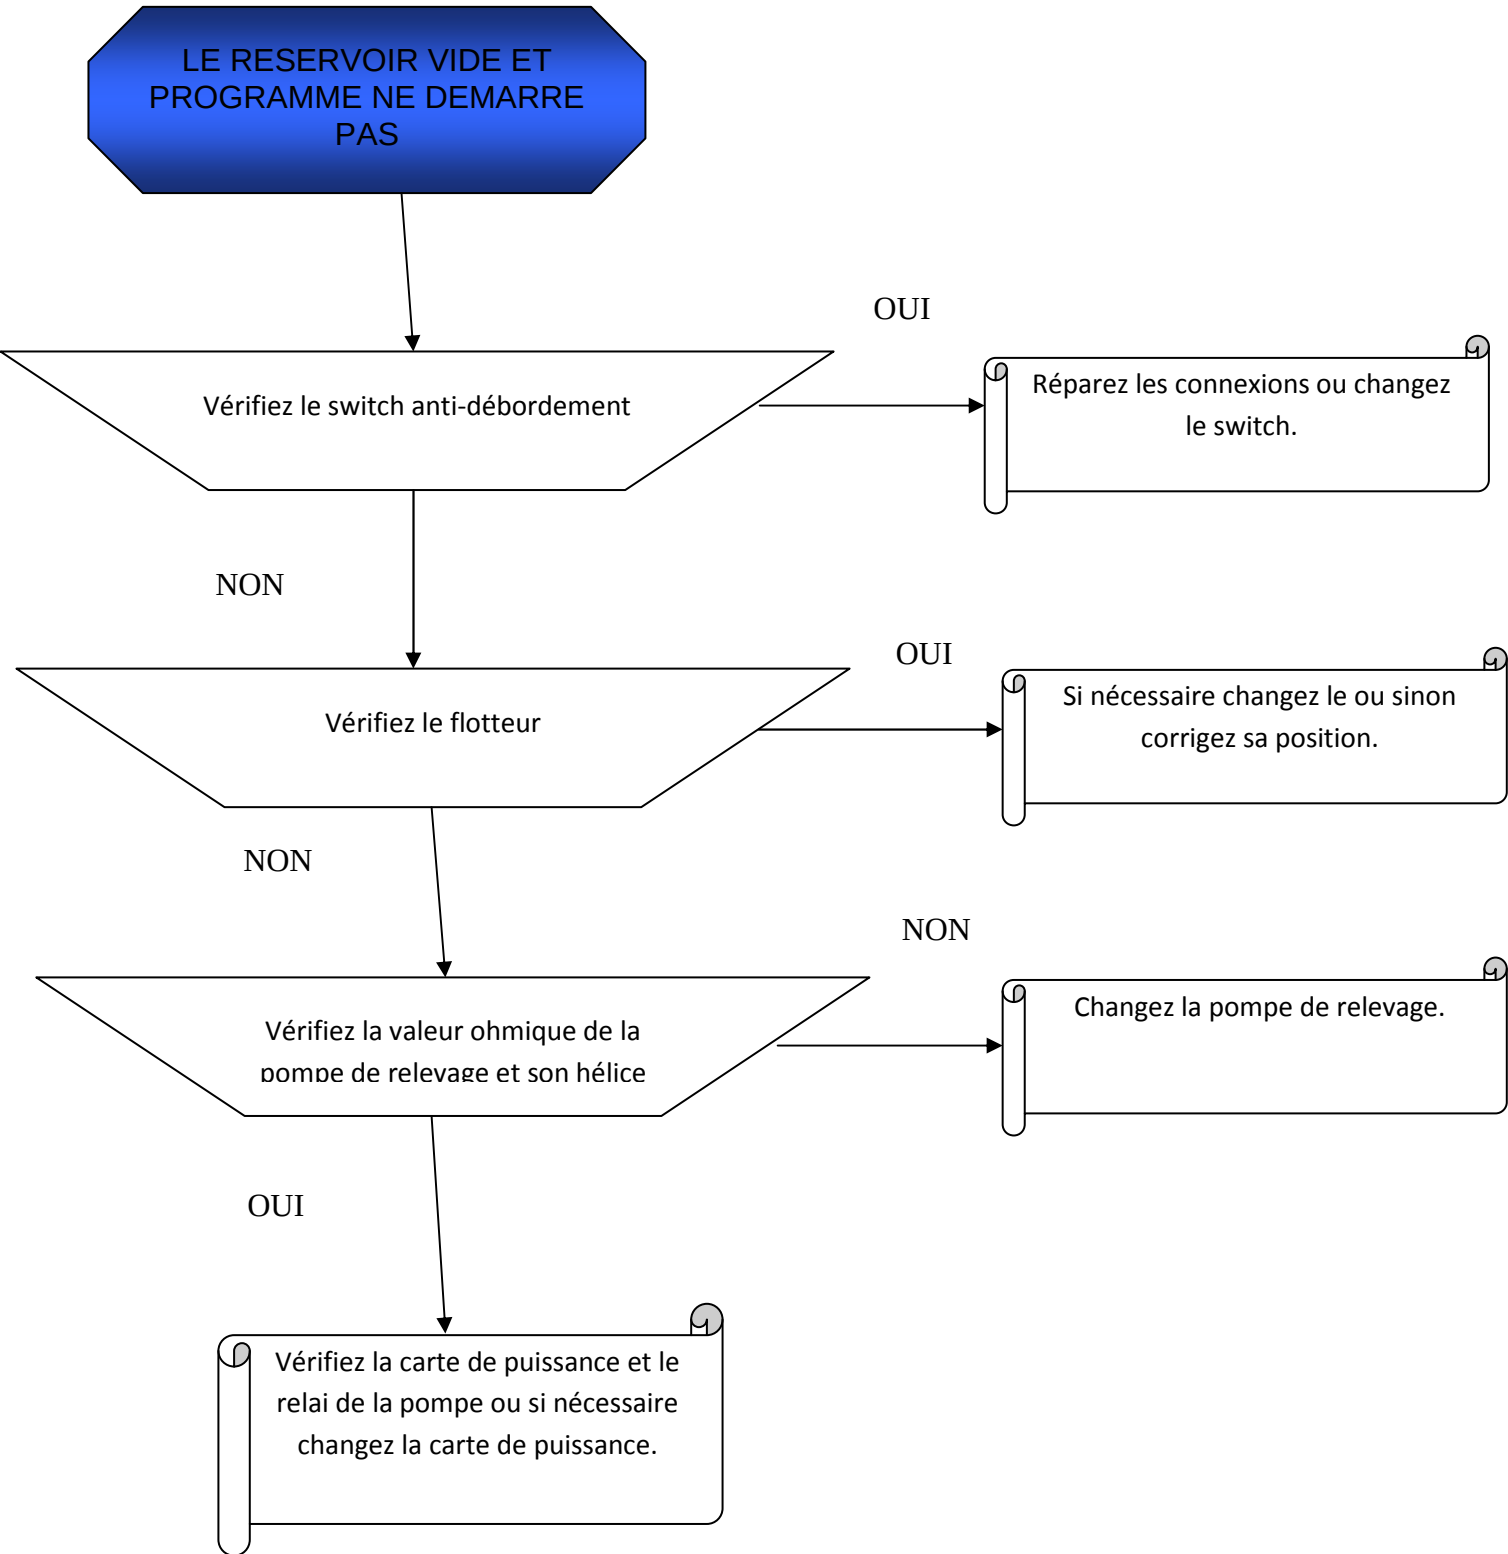


SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

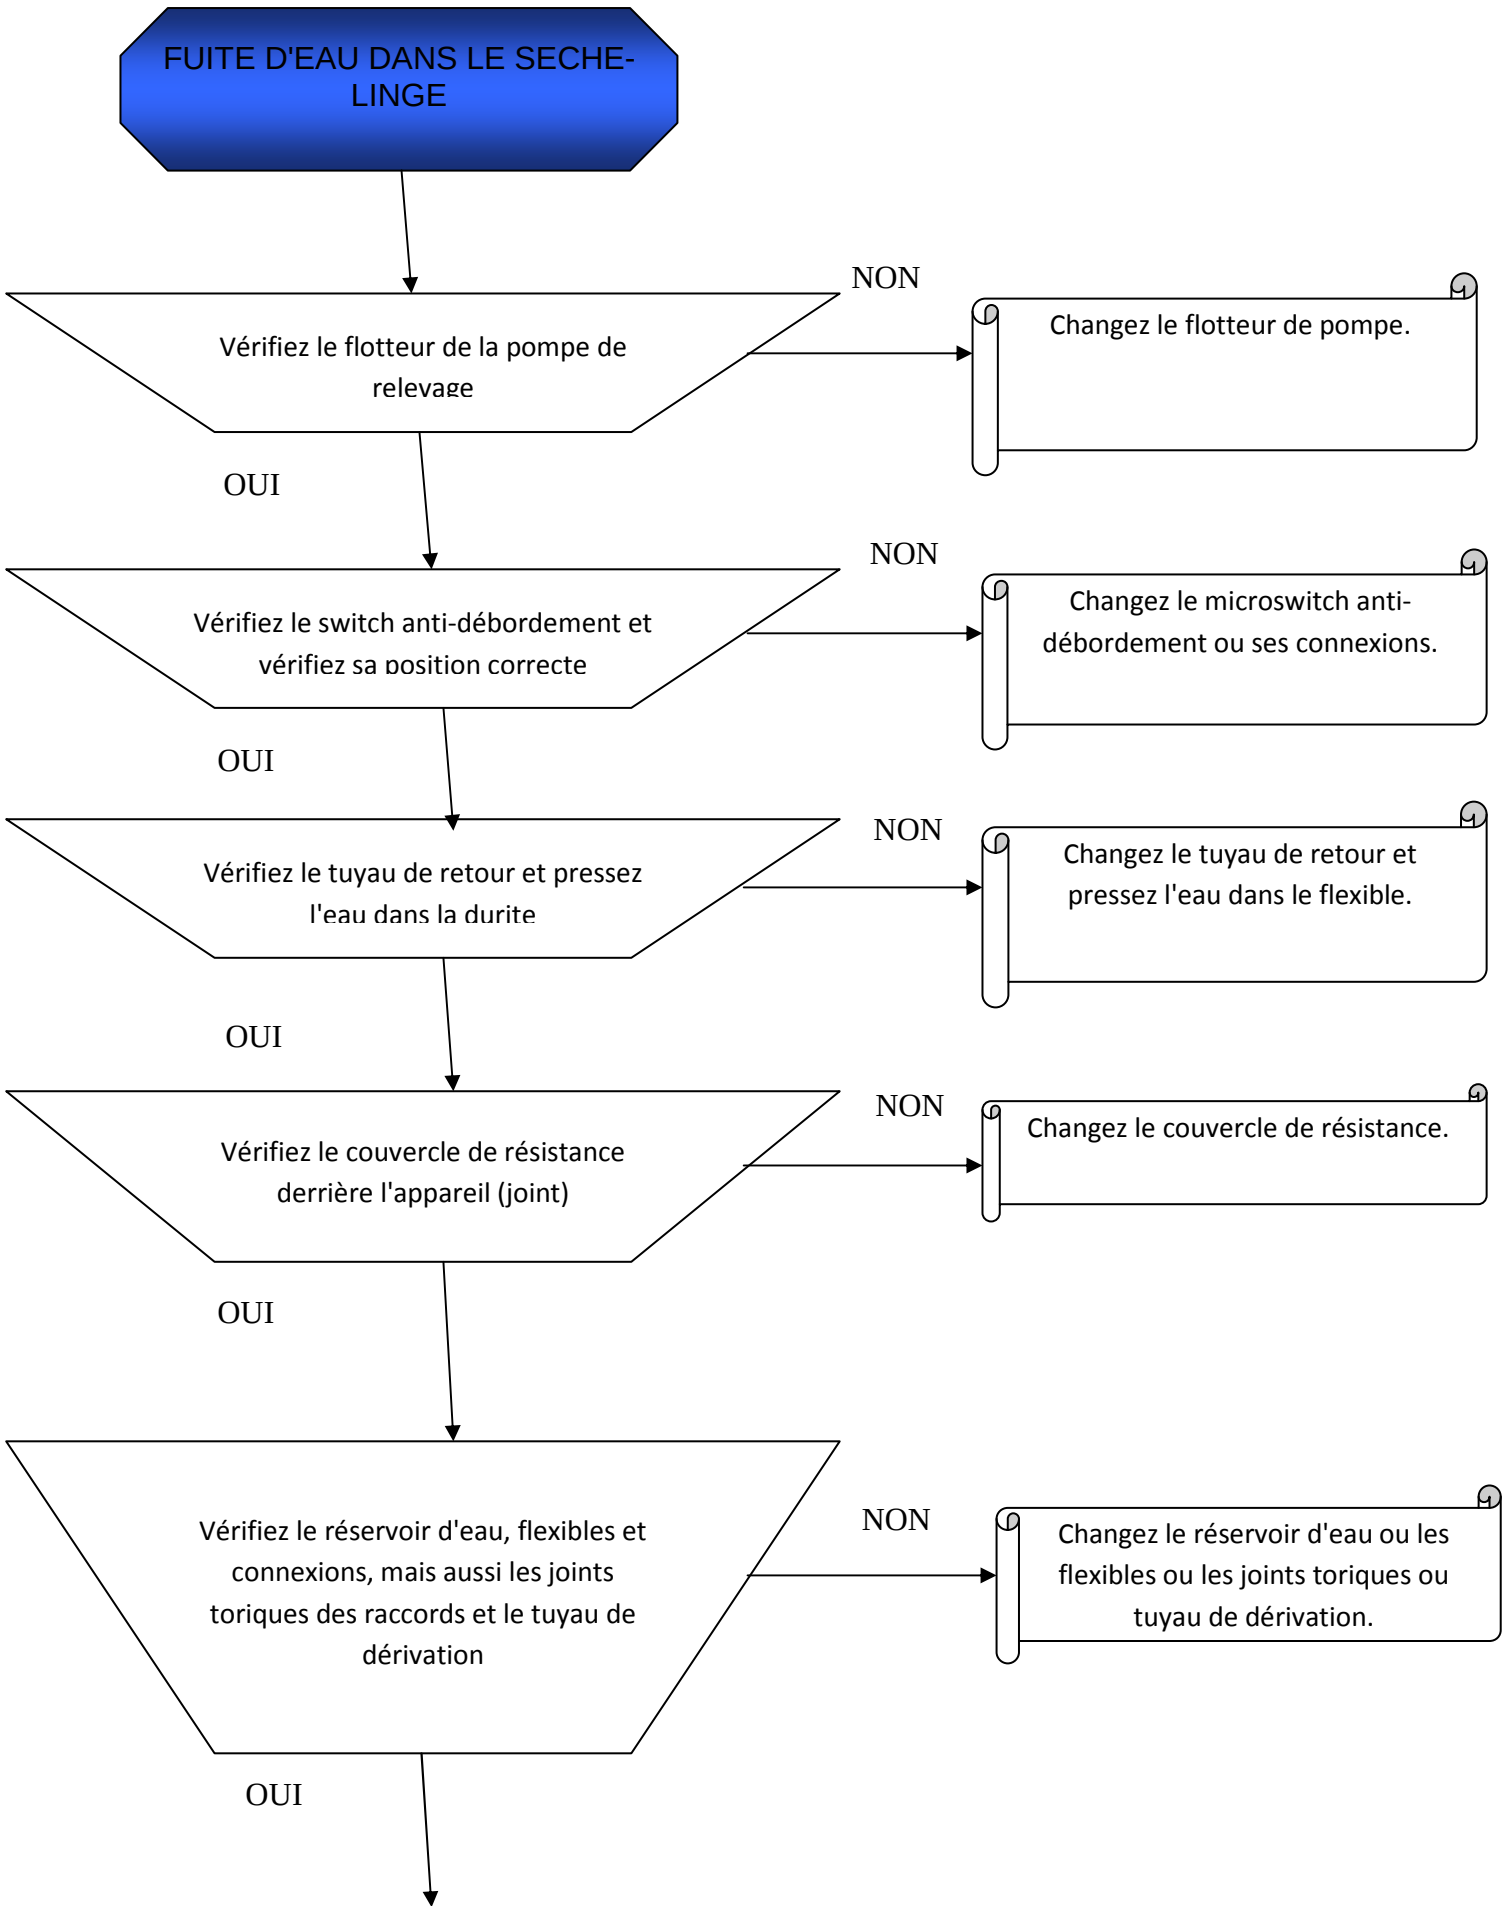

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

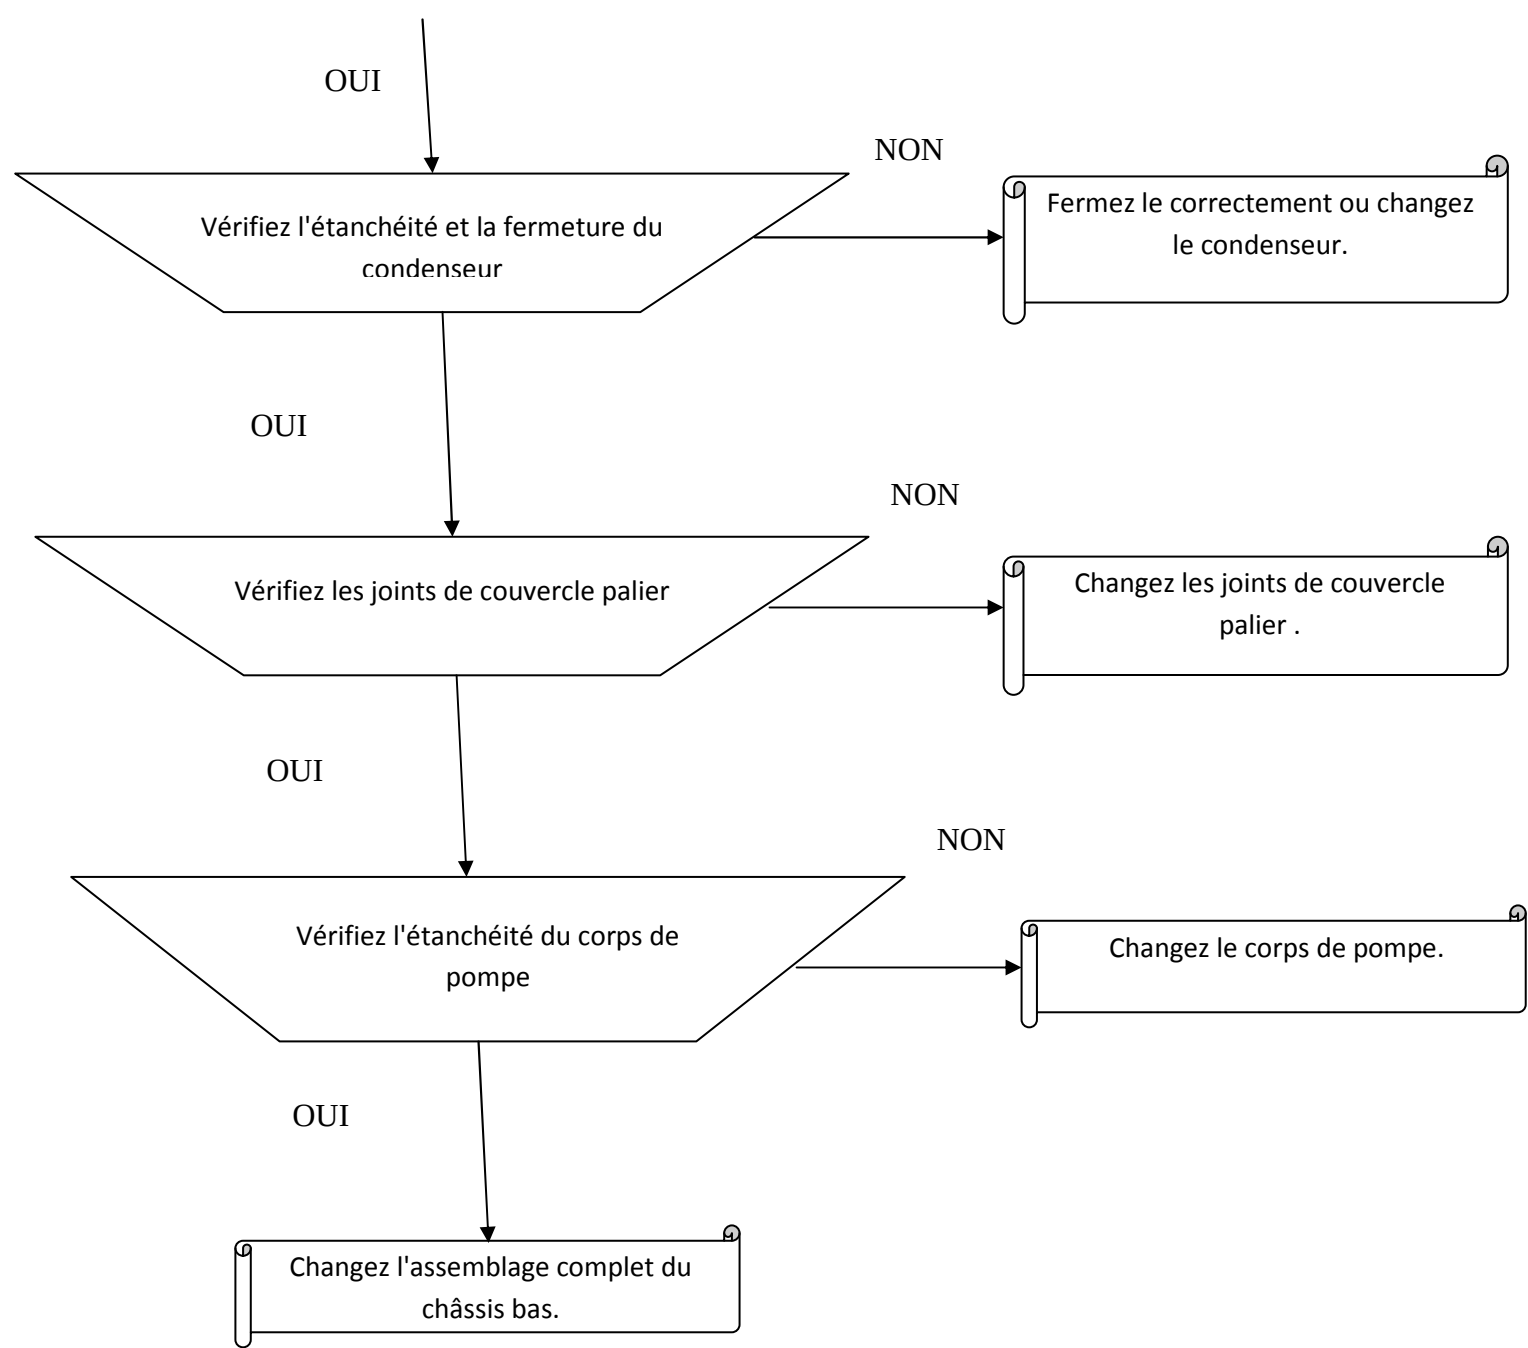

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

Principe de fonctionnement : **Modèles à condensation**

La grande différence par rapport au modèle à évacuation ventilé, c'est que le sèche-linge condenseur a deux circuits d'air.

Un circuit d'air chaud en circuit fermé. L'air sortant du tambour a, après avoir repris l'humidité du linge, une humidité relative proche de 100%.

Cet air chaud et humide passe par un condenseur, refroidis par air. Au début, le refroidissement se fait sans condensation, jusqu'à ce que la température de saturation de l'eau du mélange de vapeur est atteint. Lorsque cette température est atteinte, le refroidissement est assisté par la condensation et l'eau est récupérée dans un réservoir qui doit être drainée par le consommateur à la fin du cycle.


Un ventilateur fait circuler l'air saturé à la sortie du condenseur de l'élément chauffant. Au contact avec la résistance, l'air se réchauffe et entre à nouveau dans le tambour.

Un circuit d'air frais, où l'air ambiant est chauffé en passant par le condenseur est en contact avec l'air chaud dans les tubes du condenseur. Cet air est évacué par le sèche-linge. L'échangeur utilisé est un condenseur à air-air avec des circuits croisés, qui sont perpendiculaires chacun. Le condenseur contient des tubes et peut être retiré facilement de l'appareil. Ces tubes sont passés par le circuit d'air chaud et sont refroidis par le circuit d'air frais de l'extérieur.

Ce type de sèche-linge permet de ne point avoir d'air humide dans la l'habitat. Le sèche-linge est configuré pour fonctionner à 230 V AC. La tension et les exigences actuelles sont indiquées sur la plaque signalétique située à la face supérieure de l'ouverture de la porte.

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

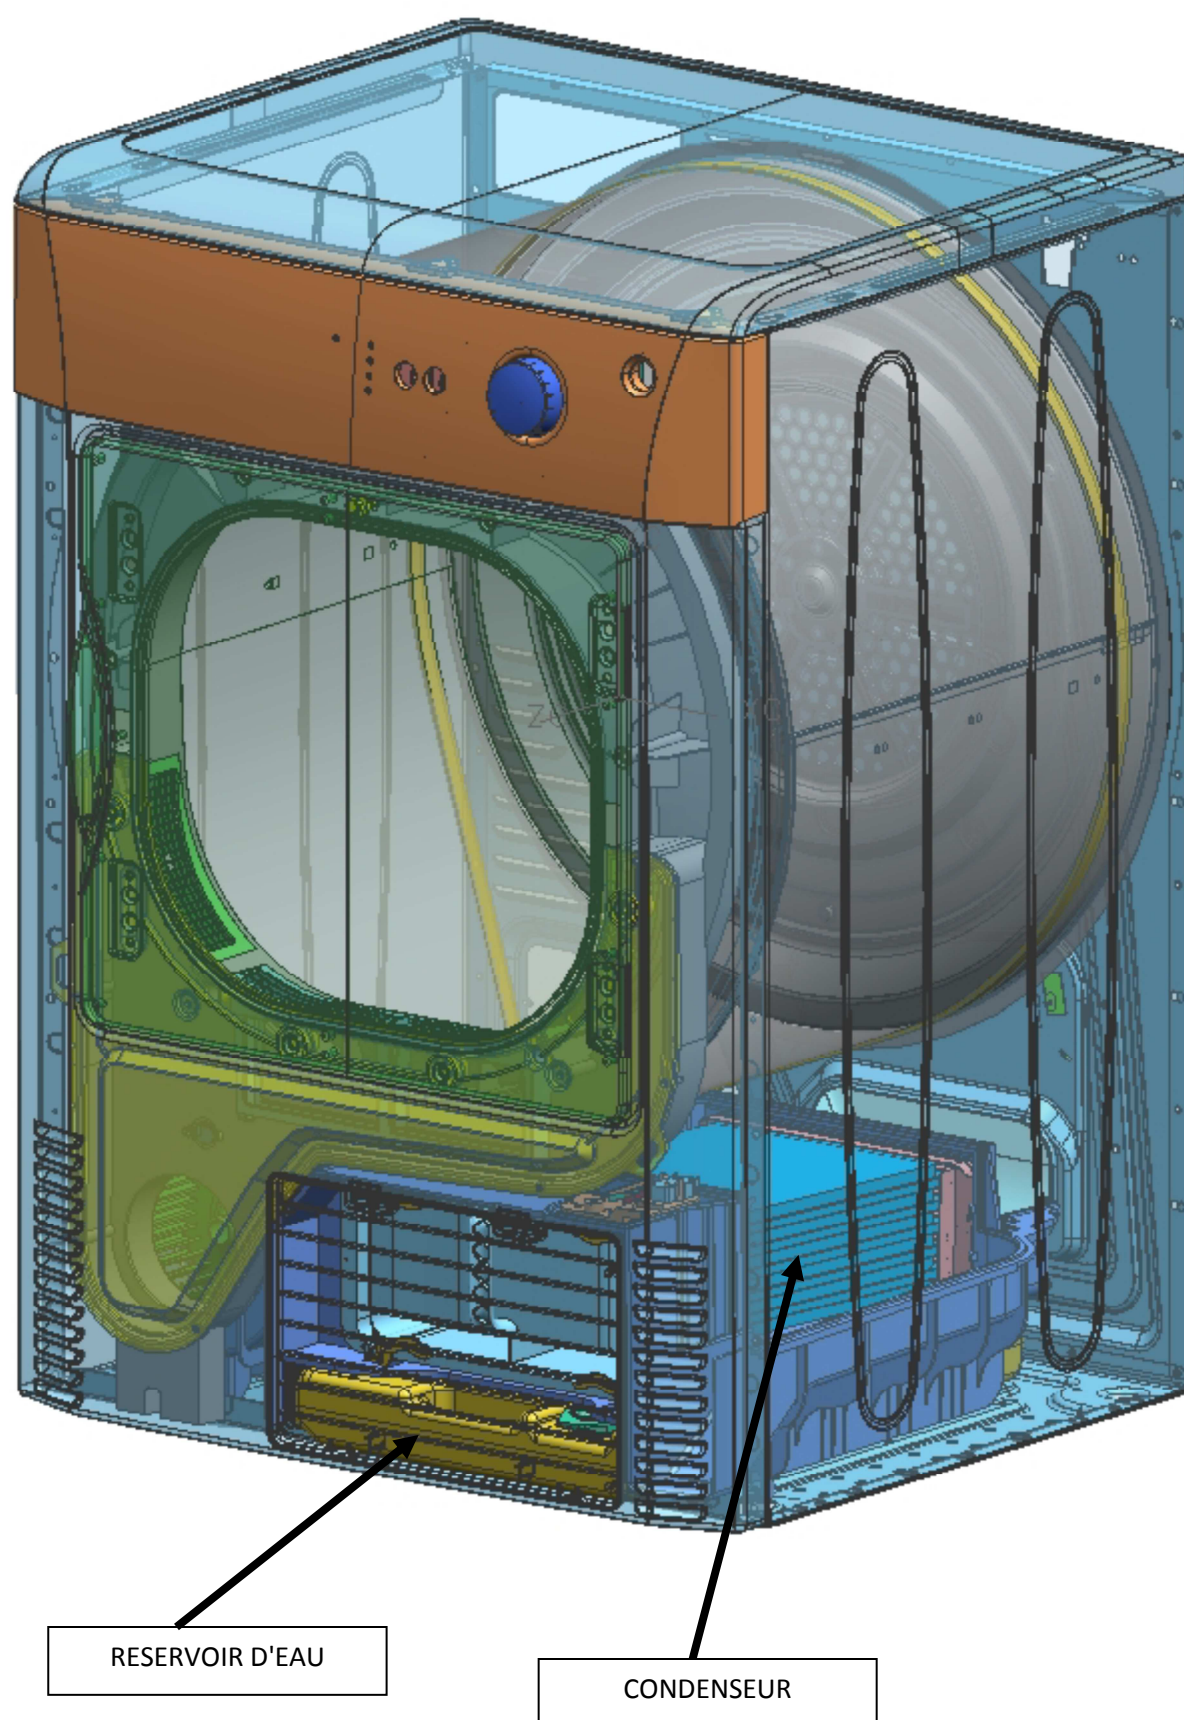

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

Technical Specifications / Energy Consumption Condenser models		
Load capacity (dry weight) - Cottons - Synthetics - Fluff/Refresh	max. 6.0 kg max. 3.0 kg max. 6.0 kg / 3.0 kg	
Dimensions • Height / height for built-under installation • Width - Depth / depth for built-under installation • Height adjustment of feet	85.0 cm / 82.0 cm 59.5 cm 54 cm 0.5 cm	
Weight, unpacked	approx. 35 kg	
Consumption 1) • Cottons linen cupboard dry 2) 3) • Cottons ironing dry 2) • Synthetics linen cupboard dry 2)	for spinning speed 800 min-1 800 min-1 1000 min-1	Energy For Condenser : 3.84 kWh : 3.40 kWh : 2.00 kWh

The Programme times for the Condenser type			Spun at	
White/coloured cottons	Programme	Load	800-900 rpm	1000-1200 rpm
Long wearing cotton and linen textiles	Linen cupboard dry	6 kg	150'	130'
		3 kg	80'-100'	60'- 80'
	Ready to Iron	6 kg	130'	100'-130'
		3 kg	60'- 80'	60'- 80'
Easy-care	Select "Low Heat" button		600 rpm	800 rpm
Synthetics (polyester, polyamide); mixed fabrics (with cotton)	Linen cupboard dry	3 kg	100'-130'	60'-80'
		1.5 kg	30'-60'	30'-60'

Terra Base / Timed Condenser				Remained moisture %	
Dryness Level	Dry Load	Initial moisture amount %	Duration	min.	max.
Cotton Cupboard Dry	3,0 Kg	60%	80 min.	-5%	5%
		70%	100 min.	-5%	5%
	6,0 Kg	60%	130 min.	-3%	3%
		70%	150 min.	-3%	3%
Cotton Iron Dry	3,0 Kg	60%	60 min.	4%	20%
		70%	80 min.	4%	20%
	6,0 Kg	60%	100 min.	8%	16%
		70%	130 min.	8%	16%
Synthetic Cupboard Dry	3,0 Kg	40%	80 min.	-3%	3%
		50%	100 min.	-3%	3%

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

5.3 TERRA 866C01 TYPE (BASE) TIMED CONDENSER PROGRAMME TABLE

Program		Phase	Motor Profile	Heater Profile	Time(sec)	Total Time (min)
140 min	Heating 1	P1	MH5	User Selection	0	145
	Heating 2	P2	MH3	User Selection	8400	
	Airing	P3	MH4	IS0	300	
	Anti-Crease	P4	MH2	IS0	7200	
130 min	Heating 1	P1	MH5	User Selection	0	135
	Heating 2	P2	MH3	User Selection	7800	
	Airing	P3	MH4	IS0	300	
	Anti-Crease	P4	MH2	IS0	0	
100 min	Heating 1	P1	MH5	User Selection	0	100
	Heating 2	P2	MH3	User Selection	5700	
	Airing	P3	MH4	IS0	300	
	Anti-Crease	P4	MH2	IS0	7200	
80 min	Heating 1	P1	MH5	User Selection	0	80
	Heating 2	P2	MH3	User Selection	4500	
	Airing	P3	MH4	IS0	300	
	Anti-Crease	P4	MH2	IS0	7200	
60 min	Heating 1	P1	MH5	User Selection	0	60
	Heating 2	P2	MH3	User Selection	3300	
	Airing	P3	MH4	IS0	300	
	Anti-Crease	P4	MH2	IS0	7200	
30 min	Heating 1	P1	MH5	User Selection	0	30
	Heating 2	P2	MH3	User Selection	1500	
	Airing	P3	MH4	IS0	300	
	Anti-Crease	P4	MH2	IS0	7200	
10 min	Heating 1	P1	MH5	User Selection	0	10

	Heating 2	P2	MH3	User Selection	300	
	Airing	P3	MH4	ISO	300	
	Anti-Crease	P4	MH2	ISO	7200	
Airing	Heating 1	P1	MH5	ISO	0	10
	Heating 2	P2	MH3	ISO	300	
	Airing	P3	MH4	ISO	300	
	Anti-Crease	P4	MH2	ISO	7200	
ISO : Heater Off "User Selection" is set by Heater High/Low Auxiliary Button						

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION


5.4...Terra Condenser Sensor Dryer 876C11&12 Programme Table							
Programme	Phase	Phase time code	Phase duration	Humidity Conditions	Motor Profile	Motor Profile	Total Time (min)
Cottons Extra Dry							
0. Step	Heating1 fazı	S12	85	Nem_6	MH3	High	150
1. Step	Heating2 fazı	S10	60	Nem_m3	MH3	High	
2. Step	Airing phase	S3	5	N/A	MH3	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Cottons Ready to Wear							
0. Step	Heating1 fazı	S11	75	Nem_6	MH3	High	145
1. Step	Heating2 fazı	S13	65	Nem_0	MH3	High	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Cottons Ready to Iron							
0. Step	Heating1 fazı	S11	75	Nem_12	MH3	High	110
1. Step	Heating2 fazı	S8	30	Nem_12	MH3	High	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Delicate / prog4							
0. Step	Heating1 fazı	S4	10	Nem_6	MH2	Low	40
1. Step	Heating2 fazı	S7	25	Nem_0	MH2	Low	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Airing / prog 5							
0. Step	Heating1 fazı	S1	0	Nem_m3	MH3	Low	10
1. Step	Heating2 fazı	S3	5	Nem_m3	MH3	Low	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Time programmes 60' / prog 6							
0. Step	Heating1 fazı	S8	30	Nem_m3	MH3	Low	60
1. Step	Heating2 fazı	S7	25	Nem_m3	MH3	Low	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Time programmes 40' / prog 7							
0. Step	Heating1 fazı	S6	20	Nem_m3	MH3	Low	40
1. Step	Heating2 fazı	S5	15	Nem_m3	MH3	Low	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Time programmes 20' / prog 8							
0. Step	Heating1 fazı	S4	10	Nem_m3	MH3	Low	20
1. Step	Heating2 fazı	S3	5	Nem_m3	MH3	Low	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Time programmes 10' / prog 19							
0. Step	Heating1 fazı	S1	0	Nem_m3	MH3	Low	10
1. Step	Heating2 fazı	S3	5	Nem_m3	MH3	Low	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Synthetics Ready to Iron / prog 10							
0. Step	Heating1 fazı	S11	75	Nem_12	MH3	High	120
1. Step	Heating2 fazı	S9	40	Nem_12	MH3	Low	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	
Synthetics Ready to Wear / prog 11							
0. Step	Heating1 fazı	S11	75	Nem_12	MH3	High	120
1. Step	Heating2 fazı	S9	40	Nem_6	MH3	Low	
2. Step	Airing phase	S3	5	N/A	MH2	Off	
3. Step	Anti-Creasing phase	S2	120		MH4	Off	

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION


Principe de fonctionnement : Modèles à Evacuation

L'air ambiant est chauffé en passant par la résistance et transmis vers le tambour où il se «charge» d'humidité. Humidité et air chaud sont évacués (ventilés) par le ventilateur situé à la sortie. Au cours de la phase de séchage, le tambour tourne à une vitesse qui donne une occupation complète du linge dans le tambour. Le moteur est en marche également le ventilateur (non seulement le tambour), pour évacuer l'air chaud et humide dans le tambour. Sécheur d'air ventilé utilise l'air ambiant. Il prend l'air et la pompe à travers la zone de chauffage. De l'air chaud, venant de l'arrière du tambour se réunit avec les vêtements. Comme le montre l'image de l'air va vers le ventilateur processus à travers la zone de filtre à charpie. Cet air avec la température de 45-55 C et l'humidité. Le linge Sèche-linge est configuré pour fonctionner à 230 V AC. La tension et les exigences actuelles sont indiquées sur la plaque signalétique située à la face supérieure de l'ouverture de la porte.

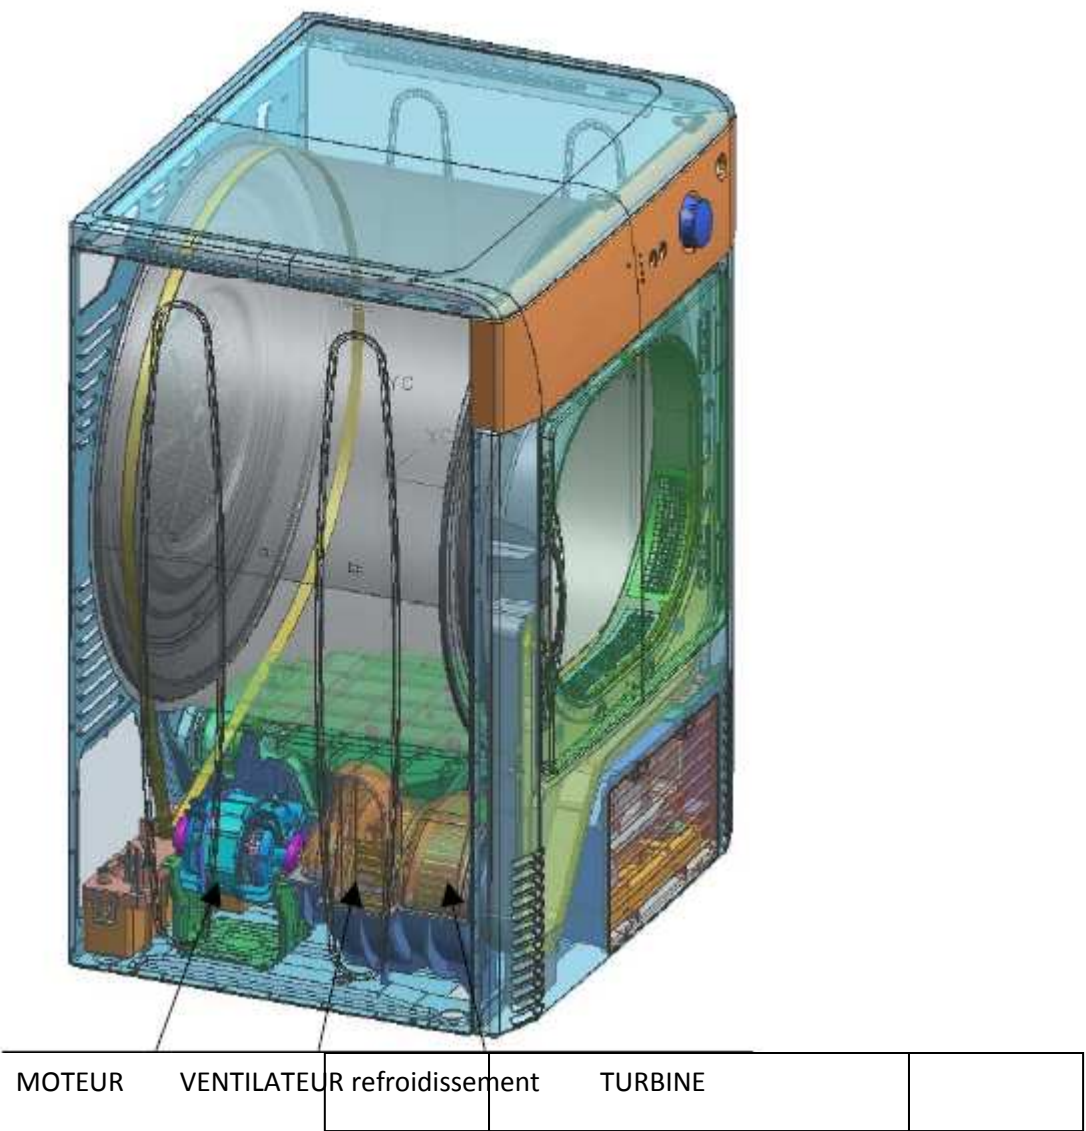

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

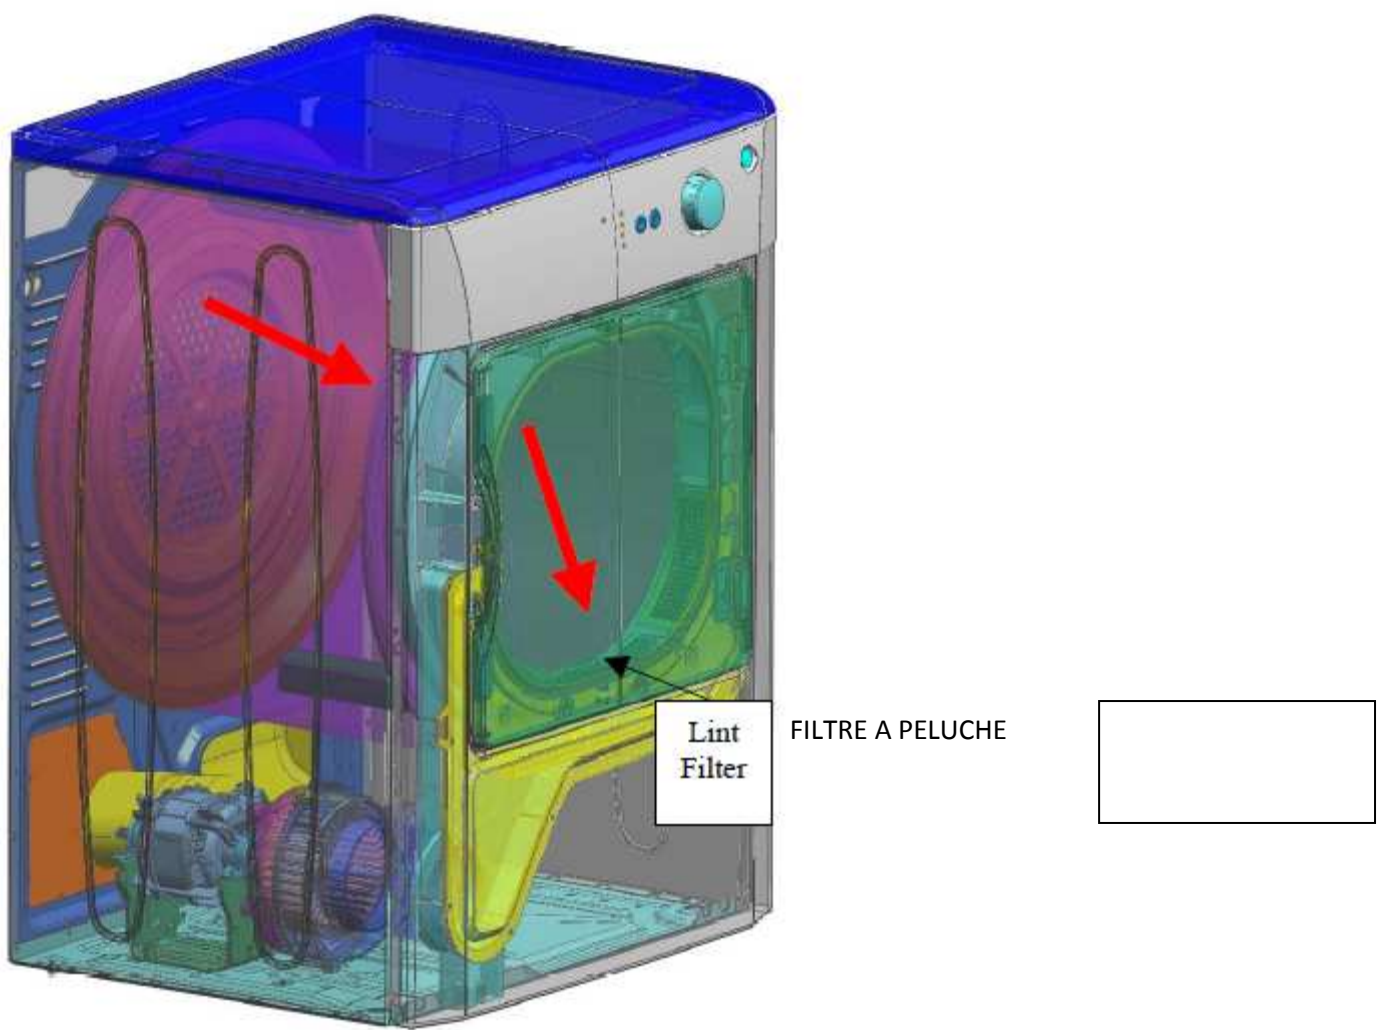

Technical Specifications / Energy Consumption Air Vented Models			
Weight, unpacked	approx. 29 kg		
Consumption 1)	for spinning speed	Energy For AV	Energy For Condenser
- - Cottons linen cupboard dry 2) 3)	1000 min-1	: 3.39 kWh	: 3.84 kWh
- - Cottons ironing dry 2)	1000 min-1	: 2.90 kWh	: 3.40 kWh
- - Synthetics linen cupboard dry 2)	600 min-1	: 1.80 kWh	: 2.00 kWh
1) Standard values, determined under standard conditions. Depending on spin speed, textile type and ambient conditions a deviation of up to 10% is possible.			
2) Test programme according to DIN EN 61121.			
3) Standard programme for energy identification label.			

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

The Programme times for the Air Vented type			Spun at	
White/colored cottons	Programme	Load	800-900 rpm	1000-1200 rpm
Long wearing cotton and linen textiles	Linen cupboard dry	6 kg	130'	110'
		3 kg	80'-110'	60'- 80'
	Ready to Iron	6 kg	110'	80'-110'
		3 kg	60'- 80'	40'- 60'
Easy-care	Select "Low Heat" button		600 rpm	800 rpm
Synthetics (polyester, polyamide); mixed fabrics (with cotton)	Linen cupboard dry	3 kg	60'- 80'	40'-60'
		1.5 kg	40'-60'	20'-40'

Terra Base / Timed Air Vented				Remained moisture %	
Dryness Level	Dry Load	Initial moisture amount %	Duration	min.	max.
Cotton Cupboard Dry	3,0 Kg	60%	60 min.	-5%	5%
		70%	80 min.	-5%	5%
	6,0 Kg	60%	100 min.	-3%	3%
		70%	130 min.	-3%	3%
Cotton Iron Dry	3,0 Kg	60%	40 min.	4%	20%
		70%	60 min.	4%	20%
	6,0 Kg	60%	80 min.	8%	16%
		70%	100 min.	8%	16%
Synthetic Cupboard Dry	3,0 Kg	40%	60 min.	-3%	3%
		50%	80 min.	-3%	3%

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

5.1 Terra Vented 866A0 / Timed Base Dryers Programme Steps:						
Programme	Steps	Steps No:	Motor Profiles	Heater	Duration (sn)	Total Duration (sn)
120 min	Heating 1	P1	MH5	User selection	3600	10500
	Heating 2	P2	MH3	User selection	6600	
	Airing	P3	MH2	ISO	300	
	Anti-Creasing	P4	MH4	ISO	0	
100 min	Heating 1	P1	MH5	User selection	90	5400
	Heating 2	P2	MH3	User selection	5010	
	Airing	P3	MH2	ISO	300	
	Anti-Creasing	P4	MH4	ISO	0	
80 min	Heating 1	P1	MH5	User selection	90	4200
	Heating 2	P2	MH3	User selection	3810	
	Airing	P3	MH2	ISO	300	
	Anti-Creasing	P4	MH4	ISO	0	
60 min	Heating 1	P1	MH5	User selection	90	3600
	Heating 2	P2	MH3	User selection	3210	
	Airing	P3	MH2	ISO	300	
	Anti-Creasing	P4	MH4	ISO	0	
40 min	Heating 1	P1	MH5	User selection	0	2700
	Heating 2	P2	MH3	User selection	2400	
	Airing	P3	MH2	ISO	300	
	Anti-Creasing	P4	MH4	ISO	0	
20 min	Heating 1	P1	MH5	User selection	0	1800
	Heating 2	P2	MH3	User selection	1500	
	Airing	P3	MH2	ISO	300	
	Anti-Creasing	P4	MH4	ISO	0	
10 min	Heating 1	P1	MH5	User selection	0	600
	Heating 2	P2	MH3	User selection	300	
	Airing	P3	MH2	ISO	300	
	Anti-Creasing	P4	MH4	ISO	0	
Airing	Heating 1	P1	MH5	ISO	0	600
	Heating 2	P2	MH3	ISO	300	
	Airing	P3	MH2	ISO	300	
	Anti-Creasing	P4	MH4	ISO	0	

HEATING PROFILE :	
ISO	NO HEATING
ISL	1400 W HEATING
ISH	2000 W HEATING

Motor running durations (sn)				
Clockwise / Anti-clockwise	_CW	_MOff	_ACW	_MOff
//MH2	100	2	5	2
//MH3	180	2	5	2
//MH4	4	60	4	60
//MH5	600	0	0	0

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

5.2 Terra VENTED (876A1) dryer with Sensor Program Steps :							
Programmes	Steps	Time Limits		Humidity Control	Motor Profile	Heater Levels	Drum Temperature limits
		Duration Code	Step Duration (min)				
Cotton Extra Dry							
0. Step	Heating1 phase	S11	75	Hum_6	MH3	ISH	65°C
1. Step	Heating2 phase	S10	60	Hum_m3	MH3	ISH	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Cotton Cupboard Dry							
0. Step	Heating1 phase	S11	75	Hum_6	MH3	ISH	65°C
1. Step	Heating2 phase	S9	40	Hum_0	MH3	ISH	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Cotton Ready to Iron							
0. Step	Heating phase	S11	75	Hum_12	MH3	ISH	65°C
1. Step	Heating2 phase	S6	20	Hum_12	MH3	ISH	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Delicates / prog4							
0. Step	Heating1 phase	S4	10	Hum_6	MH2	ISL	40°C
1. Step	Heating2 phase	S5	15	Hum_0	MH2	ISL	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Airing / prog 5							
0. Step	Heating1 phase	S1	0	Hum_m3	MH3	ISL	60°C
1. Step	Heating2 phase	S3	5	Hum_m3	MH3	ISL	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Time program 60' / prog 6							
0. Step	Heating1 phase	S8	30	Hum_m3	MH3	ISL	65°C
1. Step	Heating2 phase	S7	25	Hum_m3	MH3	ISL	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Time program 40' / prog 7							
0. Step	Heating1 phase	S6	20	Hum_m3	MH3	ISL	65°C
1. Step	Heating2 phase	S5	15	Hum_m3	MH3	ISL	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Time program 20' / prog 8							
0. Step	Heating1 phase	S4	10	Hum_m3	MH3	ISL	65°C
1. Step	Heating2 phase	S3	5	Hum_m3	MH3	ISL	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Time program 10' / prog 9							
0. Step	Heating1 phase	S1	0	Hum_m3	MH3	ISL	65°C
1. Step	Heating2 phase	S3	5	Hum_m3	MH3	ISL	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Synthetic Ready to Iron / prog 10							
0. Step	Heating1 phase	S10	60	Hum_12	MH3	ISH	60°C
1. Step	Heating2 phase	S8	30	Hum_12	MH3	ISL	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	
Synthetic Cupboard Dry / prog 11							
0. Step	Heating1 phase	S10	60	Hum_12	MH3	ISH	65°C
1. Step	Heating2 phase	S9	40	Hum_6	MH3	ISL	
2. Step	Airing phase	S3	5	Hum-No	MH2	ISO	
3. Step	Anti-Creasing phase	S2	120		MH4	ISO	

HEATING PROFILE :

SECHE-LINGE BEKO

SECHE-LINGE : VENTILE & à CONDENSATION

ISO	NO HEATING							
ISL	1400 W HEATING							
ISH	2000 W HEATING							
*Empty Drum logic , after max 2 minutes Dryer skip the steps and goes to the Airing phase.								
*Low heat-high heat button and buzzer cancel are optional. (depend on the models) .								
*Anti-Creasing mode duration is 2 hour's.								
	Drying	Ready to Iron	Cupboard Dry	Airing / End	Start	Auxiliary function	Filter	Tank
Drying	+	-	-	-	+	+/-	-	-
Ready to Iron	-	+	-	-	+	+/-	-	-
Cupboard Dry	-	-	+	-	+	+/-	-	-
Airing	-	-	-	+	+	+/-	-	-
End	-	-	-	X	-	+/-	-	-
Filter Blocked	According to the Program Step			related leds are on.	+	+/-	+	-
Tank Full	According to the Program Step			related leds are on.	X	+/-	-	+

Drum movement Step Durations (sn)				
Movement directions	_CW	_MOff	_ACW	_MOff
//MH2	100	2	5	2
//MH3	180	2	5	2
//MH4	4	60	4	60

SECHE-LINGE BEKO