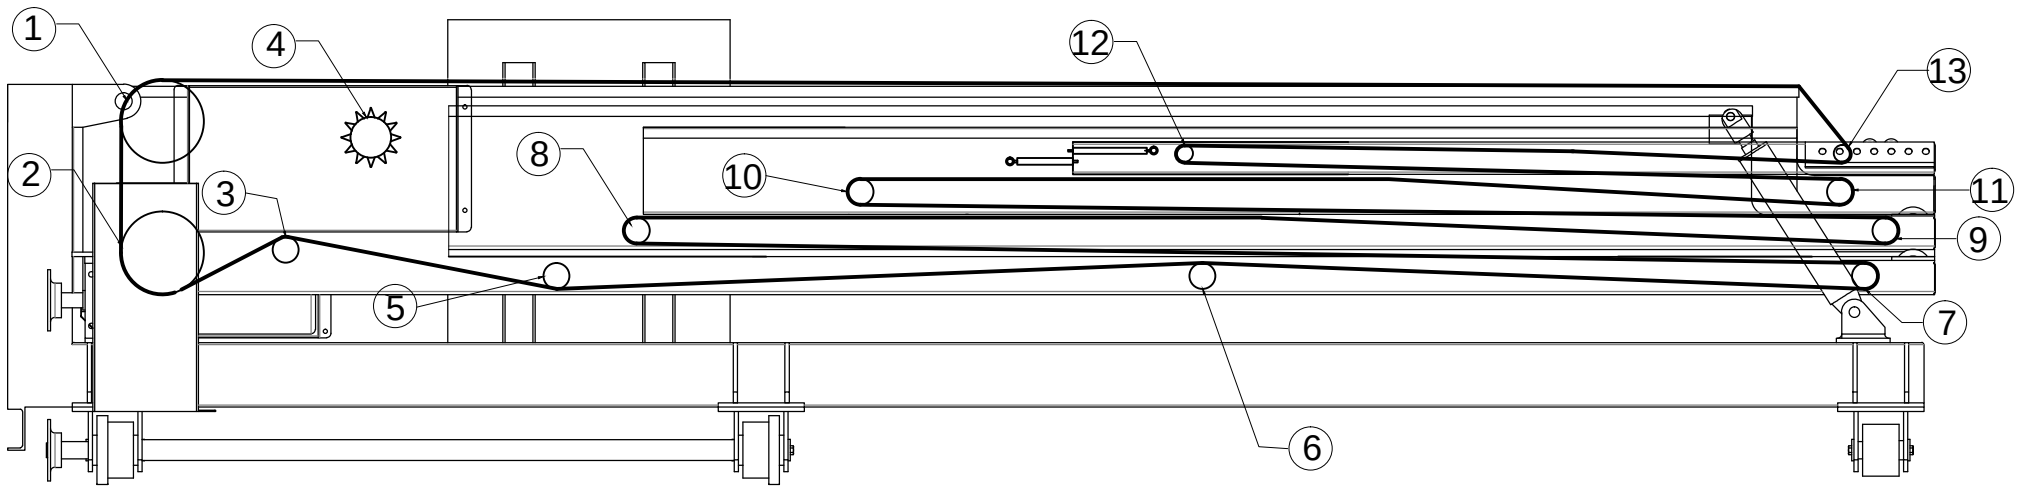


BELT ASSEMBLY

SR.NO.	DESCRIPTION	PART NO	QUANTITY
1	BELT DRUM 1		
2	BELT DRUM 2		
3	BELT TRACKER		
4	DRIVING SHAFT		
5	IRB31		
6	IRB32		
7	IRB33		
8	IRB21		
9	IRB22		
10	IRB11		
11	IRB12		
12	IRB01		
13	IRB02		