FULL HEIGHT TURNSTILE

ENT-FT02

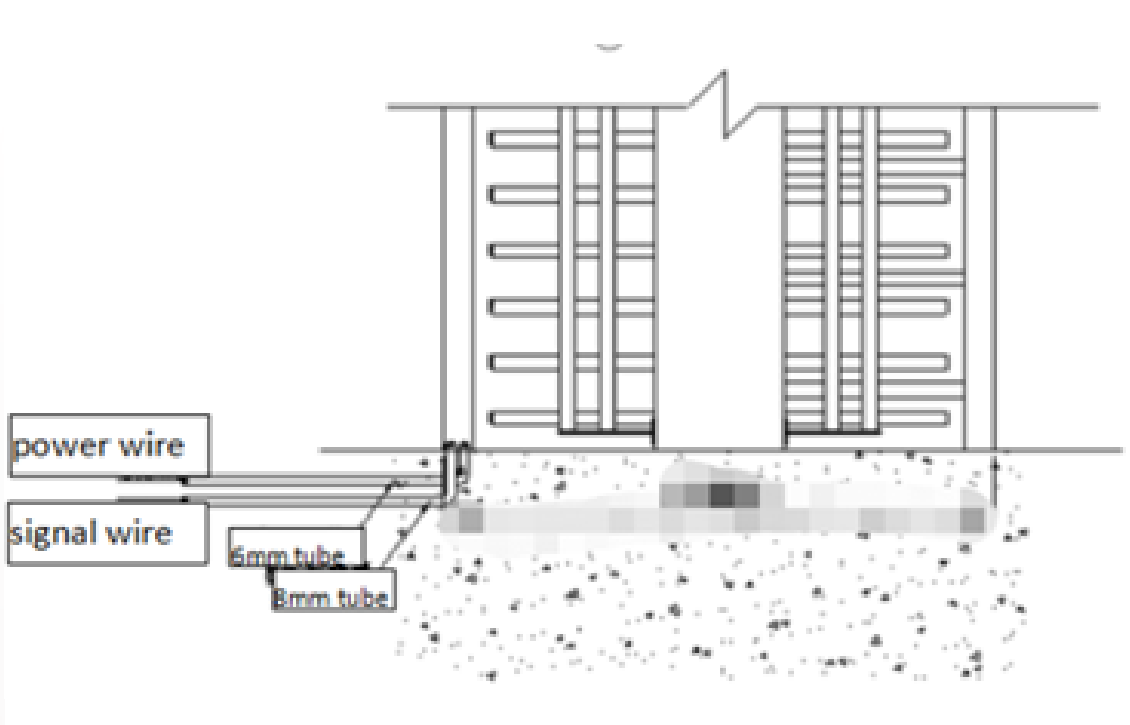

1. Assemble And Installation

2.1 Before Assemble

Note: Find the key in the package (locked on the column)

1) Headroom

A minium floor to ceiling height of 2600mm must be provided to allow sufficient headroom for erection and subsequent maintance operations.For security applications,when it is undesirable to leave a gap about the revolving door an overhead grille or barrier must be provided which is removable to allow installation or maintenance.Such in fills should be retained from the secure side,to maximise security.

2) Installation Notes

Conduit Routing：

1) Conduit carrying cables for power and control,enter the full height turnstile from under floor.Two conduits are required normally,one for power supply,the other for control or data signals.Notice:All the vertical square hollow section are available for conduit cables to go through to connect with PCB(on the top).

Conduit Routing From Under Floor

Conduit routed under floor must be sited as shown on site preparation diagram,please note that the standard locations indicated should be left protruding a minimum of 50mm above finished floor level to prevent the ingress of surface water.

A second conduit should be provided,separate from that for the power supply,for any remote control or data cabling requirements.Units controlled from simple remote switches,such as push buttons etc.Should be provided with either a four-core cable if b-directional control is specified,or twin-core if un-directional.Such cables should be of minium conductor size 0.5mm sq and laid in the conduit with a 4 meters tail left.

2.2 Assemble as below:

Tool kits contains:

Hammer,Monkey wrench,M5 Pin hex insert Slotted Screwdriver(big,small)

1).Stand and bolt item A
2).Fit and bolt item D and item B
3).Fit and bolt item A and item B
4).Lock item C and item B tightly to finish the entire door installation
5).Prior to tightening the fixing bolts make sure that the complete assembley is level use the shims supplied as necessary.

Single walkway

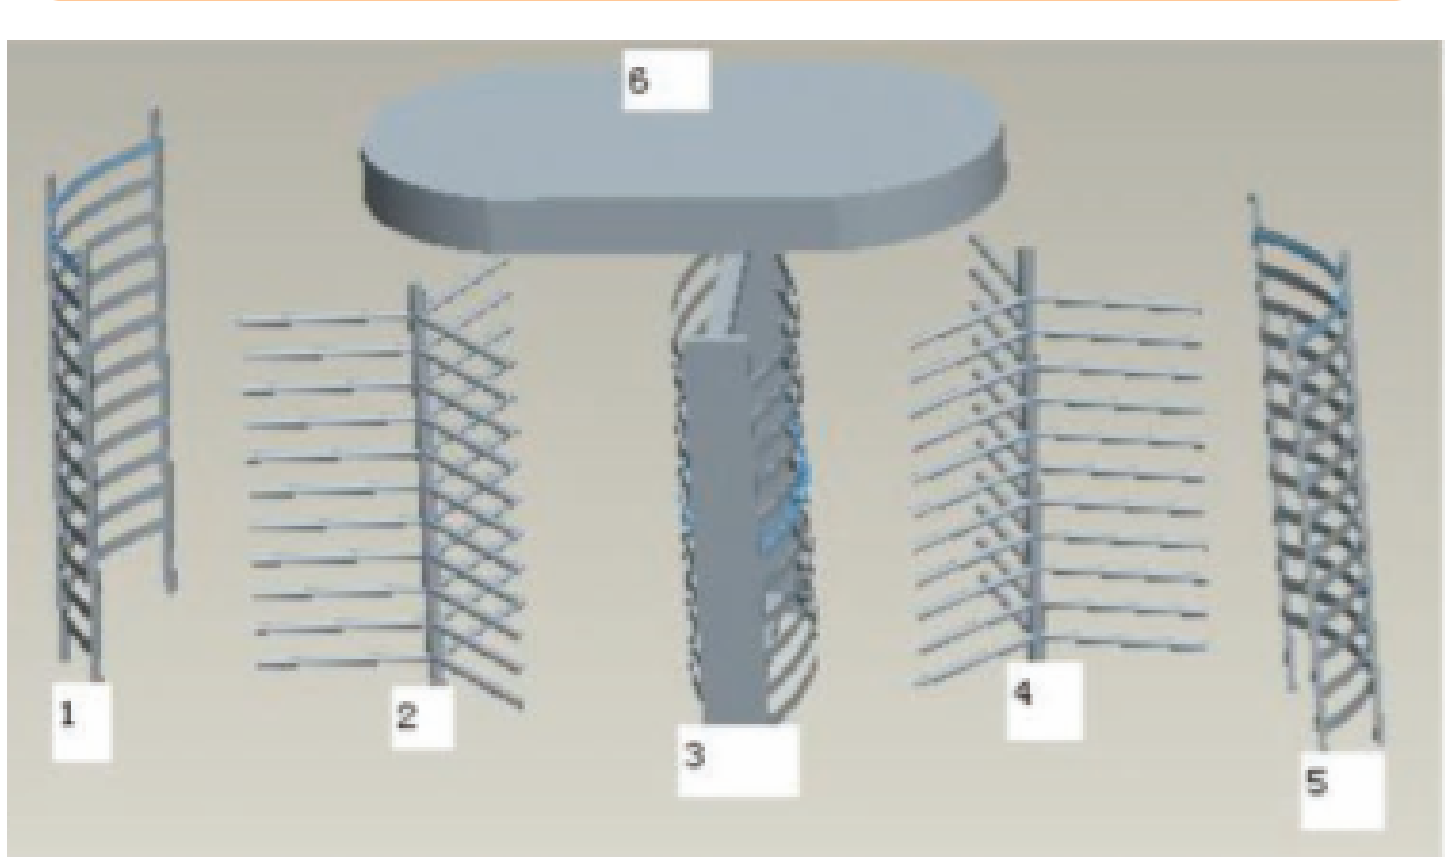

1).Stand and bolt item 1
2).Set up item 2 and item 4 in suitable position assemble item 6 together with items2,3,4.
3).Fit and bolt item 1,5 and item 6 form a complete double walkway structure
4). Prior to tightening the fixing bolts make sure that the complete assembley is level use the shims supplied as necessary.

Double walkway

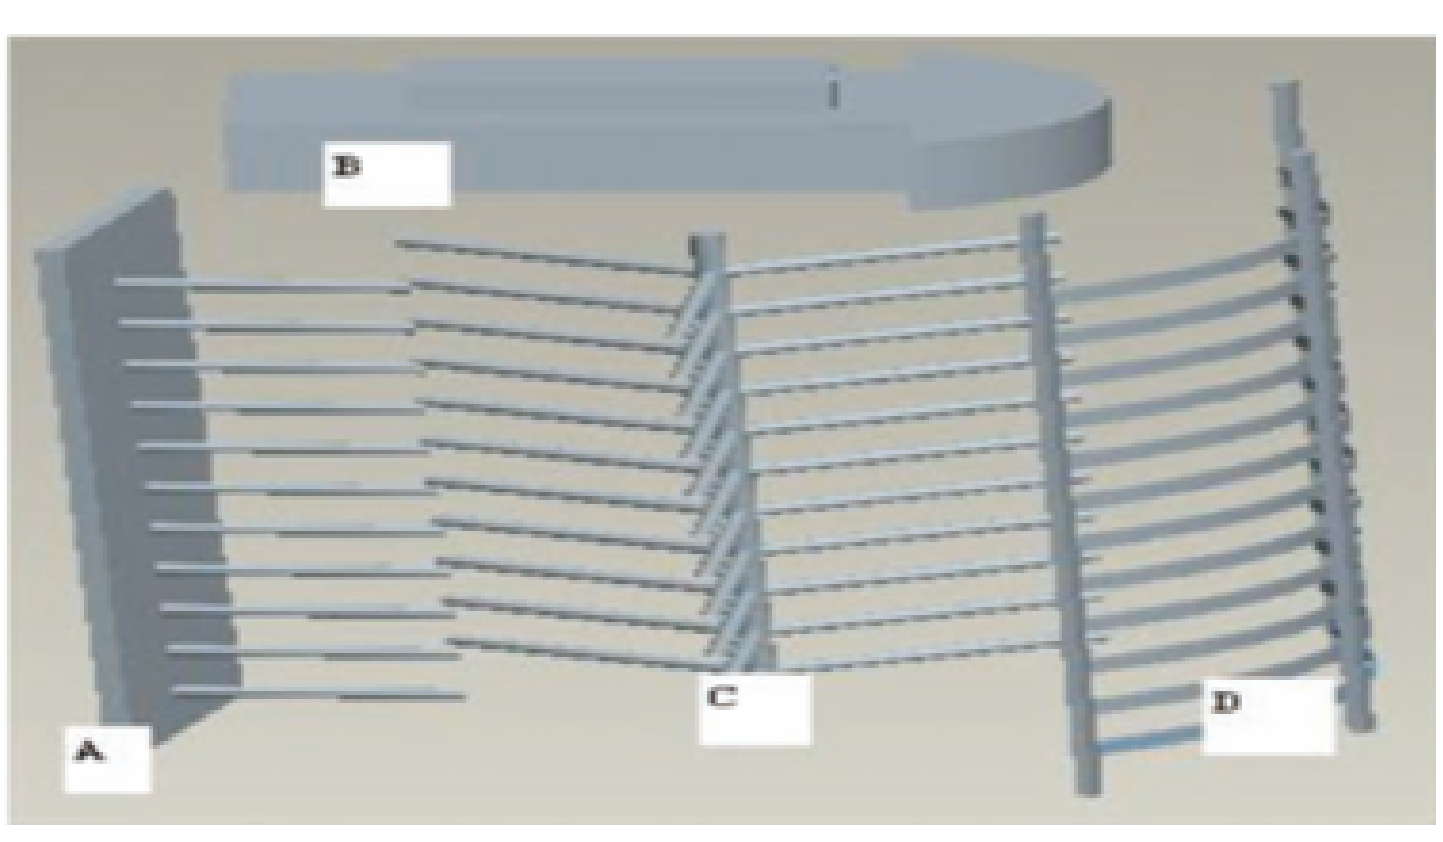

2.Preparation

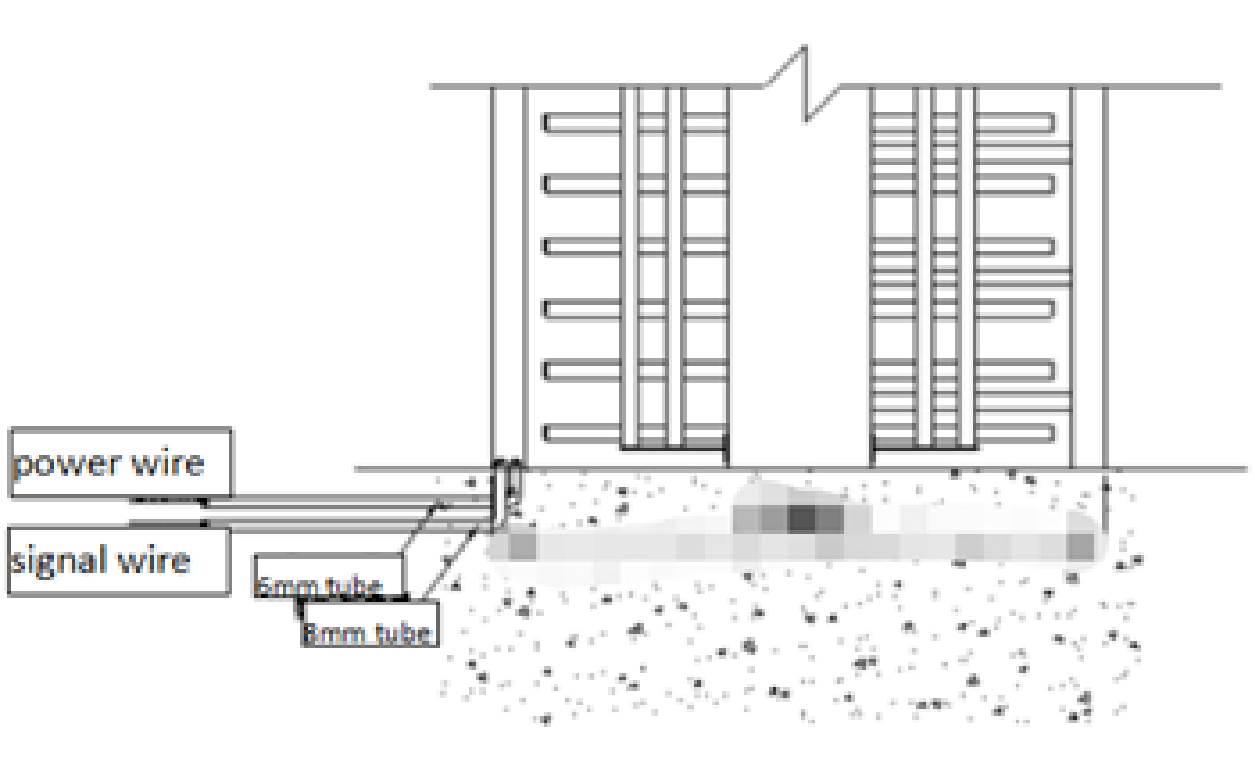

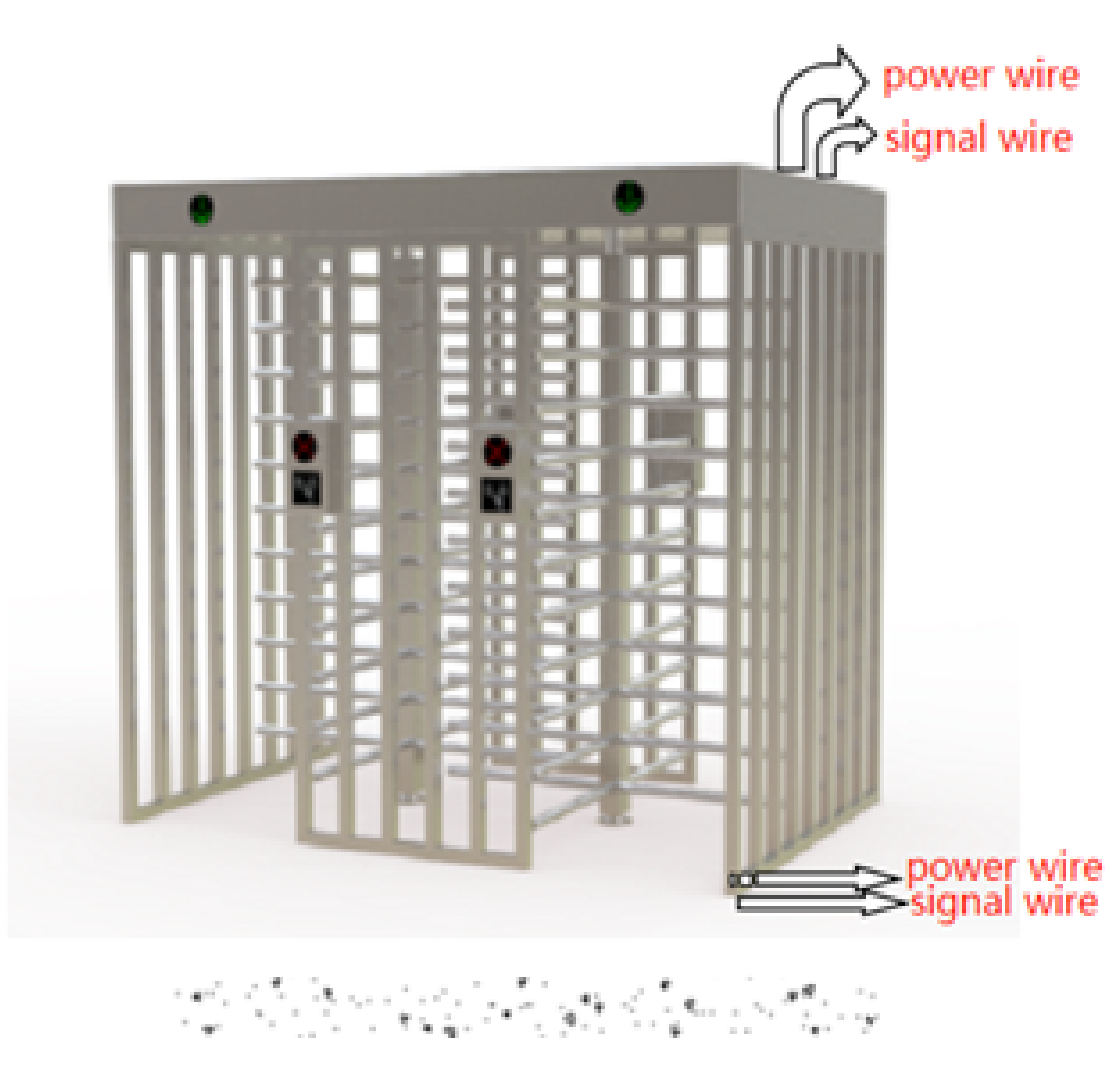

2.3 Installation

Note: Check the level of the base,headroom,corridor width,base and all critical dimensions.Refer to the installation figures.Ambed PVC pope pipe（6mm and 8mm tube） be rooted in 60 mm, and above 50mm of the ground, outlet winding to prevent the water

1) Put the turnstile into the bolt of the ground,screwing them.

2) According the Wiring Drawing, connecting the power wire, control wire to turnstile control board. (On the top of machine also could connect power wire and signal wire)

Note：

1) All the above operation must be operated at the condtion of no power and the all system protection wire working well.

2) When the equipment used outside, we demand to make a cement installation platform(50mm～100mm) for the turnstile to moistureproof, and add the shed for the turnstile to prevent rainwater and sunshine.

2.2 Equipment condition check up

1) According the System Wiring Drawing，check up the connecting conditoin, please make sure all connetion are ok before connecting the power

2) With the power,check up whether the indicator lights and the counter ok.

Note： Indicator lights are including the direction indicator and passing right indicator; the direction indicator is dispalying arrowhead when passing, the other side is DragWaypoint.

Menu setting description

Control board key:
three operation keys: “MENU” menu key, “INC” up / up key and “DEC” down / down key.

Function description of each function key:

“MENU” key: 1:
long press this key in the standby interface to enter the system menu: 2: in the system menu interface, select the corresponding menu and press this key to enter the menu parameter

setting interface: 3:
press this key to save the parameters after the menu setting and exit to the system menu interface.

“INC” key:
turn up the function of + 1 when selecting system menu and setting parameters

“DEC” key:
turn down the function of - 1 when selecting system menu and setting parameters

Note: in the system menu and menu setting interface, if there is no key operation within 5 seconds, the system will automatically exit the menu to the standby interface.

For example, to change the gate passage time operation:

Step 1:
enter the system menu with the “MENU” key, and use the “INC ”、“ DEC” key to turn up and down to select the “F 0 1”menu (see the menu description below).

Step 2:
press "MENU" to enter the channel duration setting interface.

Step 3:
use the "INC" and " DEC" keys to add and subtract parameter values up and down respectively.

Step 4:
after setting, press "MENU" to save.

Step 5:
exit the menu: turn the menu to "F 10" menu, press "MENU" key to exit the menu manually or exit the menu automatically without operating the key for 5 seconds.
Description of parameter setting of three bar board:
When the control board is powered on, the LED screen displays < run >.

A. System menu Description:

1. “F 0 1”：
Set the passage time. In this setting, the time will be cleared automatically after people pass through the gate. If there is no one passing, the time will be automatically closed at the gate.(5 seconds by default)

2.“ F 0 2”
Normally open function setting.1: Normally open only the left electromagnet.2: Normally open only the right electromagnet.3: When it is normally open, turn on the electromagnets on the left and right sides.(default value 3, open electromagnets on both sides when normally open)

3.“ F 0 3”
Gate operation mode.0: free passage (commonly used on turnstiles) 1: power failure and pole dropping (default 1: power failure and pole dropping)

4. “F 0 4”
Memory function. Whether there is memory function when opening or closing the entrance and exit passage is generally used to remember the card swiping situation of other people when the card swiping has not passed."Forbidden" means that the second person can swipe the card effectively after the first one passes; "allowed" means how many people swipe the card continuously.(default 0, no memory)

5. “F 0 5”
Repeated opening and closing test is mainly used to test the stability and aging of the brake control board.
Note: in the test mode, press the MENU key to exit the test

6. “F 0 6”
Zero signal setting.0: turn off the gate immediately after detecting the zero position signal (three roller gate standard mode, default setting of the main board is 0); 1: turn off the gate after detecting the zero position signal and waiting for the zero position signal to disappear (commonly used in full height) (default value 0)

7.“F 0 7”
The gate is normally open, in seconds. This parameter is used to detect the continuous opening signal. When the duration of the continuous opening signal exceeds the set parameter, the system will enter the normally open state (which side of the normally open electromagnet is determined by the F02 parameter, which side of the normally open electromagnet is by default).If the opening signal to the gate is a continuous signal, the gate is always in the open state. After the continuous signal is disconnected, the gate returns to the standard mode.(default parameter 0 seconds, normally open and closed)

8.“F 0 8”
Opening delay. This parameter is effective only when the memory function is turned on. After the memory function is turned on, the opening delay when there are too many people continuously. This function can prevent the former person from opening the gate again before passing the channel.(default 0, no delay)

9．“F 0 9”
Restore factory settings. All parameters of the main board are restored to the factory settings.

10.“F 1 0”
Exit the menu. Or automatic exit without key operation within 5S