5 Fitting and dismantling *RR 300*

5.1 Checking the delivery content and condition

The RR 300 is delivered mostly pre-assembled. The side columns are fixed together with the top roll cover, the motor cover (if included in delivery), the fixing material and the control unit, to a transport pallet (made of wood). The door must be checked for possible transport damages and completeness – compare with order papers.

5.2 Preparations for installation work

Check the place of installation with regard to fixing points and set-up conditions. Possibly a supporting construction or other required fixing possibilities must be prepared. The head plates should be screwed onto a steel support or a concrete element.

⚠ **Isolated panel walls, rider bricks and lightweight construction walls must be checked for suitability of installation.**

Measure the light dimensions (width and height) of door opening and check with order papers.

The site of installation must be secured against pedestrian and vehicle traffic.

Before start of installation the plastic sheets of the packing must be removed. Afterwards the covers of the side columns and the control unit must be removed from the pallet and laid down in sufficient distance of the door opening.

5.3 Fitting






1. The door shipment should be checked for transport damages and completeness – compare delivery papers/order papers.


2. The drive and fixing material is delivered in a cardboard box.



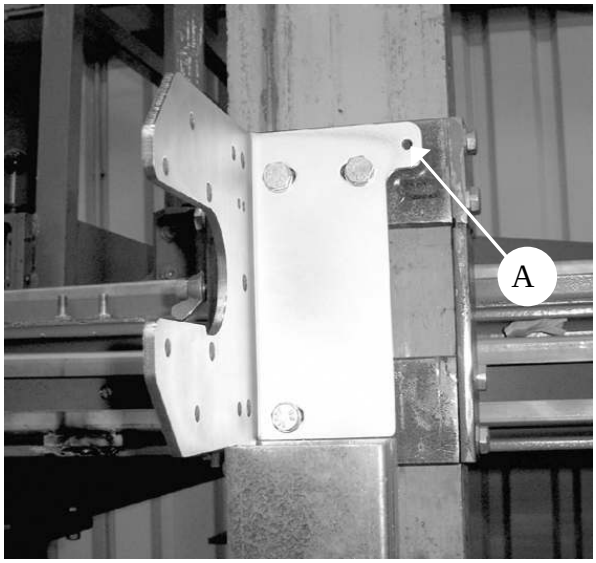


3. At a slanting surface of the floor the side column must be firstly installed on the higher side. First side column must be exactly vertically aligned (e.g. by a water level).


4. Fix the head plate onto the wall with 3 screws.
Position **A** shows the bore hole for fixation of cable conduit.

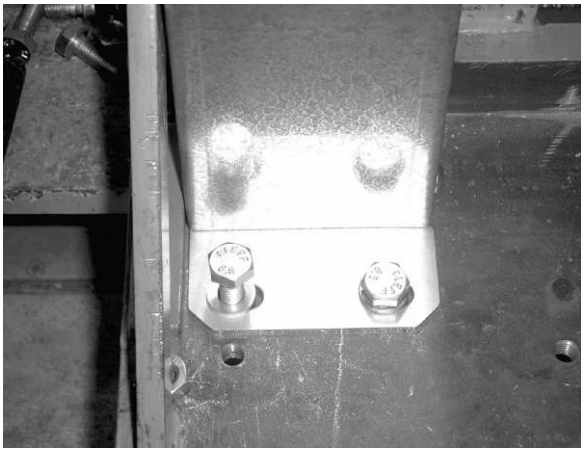

5. The bottom plate is fixed with 2 screws. Doors with Aluminum side frames can be specified without bottom plates, than the side frames must be fixed at the wall.

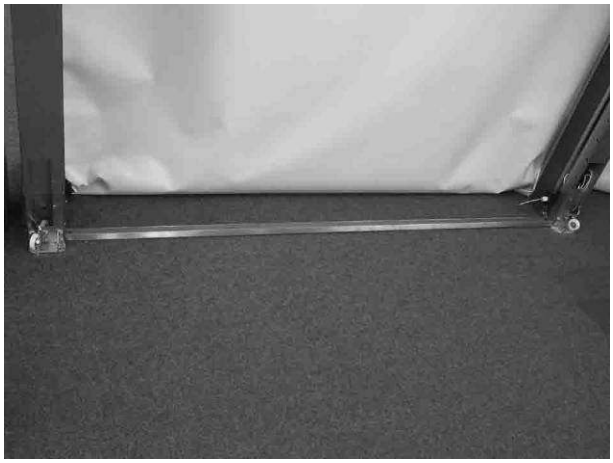


6. Set up the second side column with the help of the cable conduit (=exact light width). Difference in height between side columns max. 3 mm. If necessary the lower side must be lined.

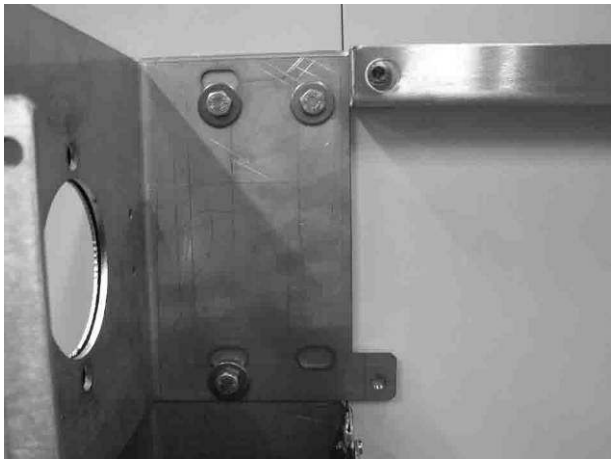


7. Screw the cable conduit onto the prepared position at the head plate.



8. Lift the top roll with the help of a crane or forklift and fix onto the head plates.
If the door is mall, this can be done manually by hand (2 persons).

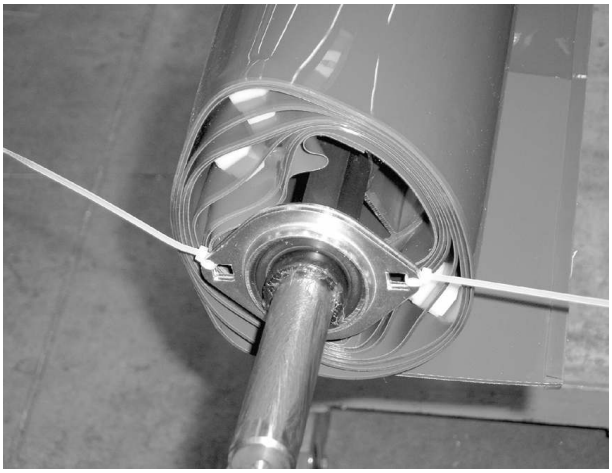

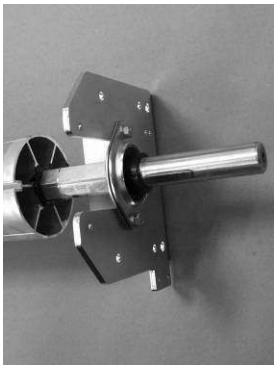




Drive Standard **Drive Mini**

9. The bearing housing is held together with cable straps. These cable straps must be removed before screwing on.

10. The bearing must be installed at the **motor side** (Drive Standard) from the **outer** side.
⚠ **For Drive Mini from the inside.**

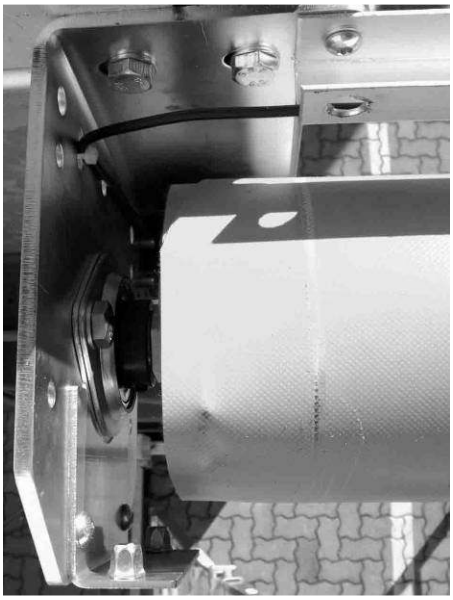





11. The bearing must be installed at the **opposit side** (short shaft end) from the **inner** side.

12. Put the motor onto the drive shaft. Pay attention to the feather key connection.

Antrieb Standard **Antrieb Mini**

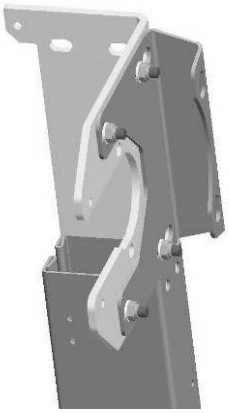


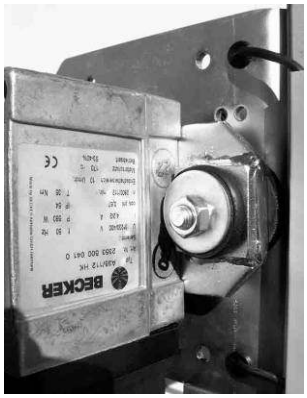



13. The torque support is fixed onto the head plate with 4 screws. For drive Mini with 1 screw.

14. Release the safety of door leaf/panel.

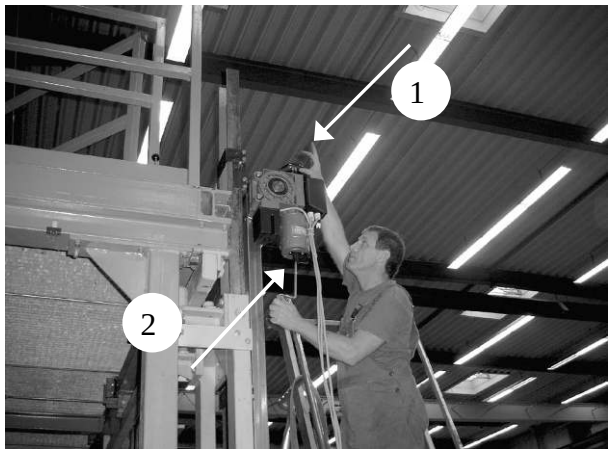




15. Release the motor brake (1) and let the door leaf/panel down by means of the hand lever (2). This hand lever can also be used in case of emergency for manual opening upon malfunction.


16. Lower the door blade to working height and push the bottom profile onto it. If the bottom profile is stainless steel, you must unscrew the screws (not complete) before you push the bottom profile onto the door blade.



17. Align the bottom profile to the middle position. So that the ends of the door panel are equally long at the bottom profile end.

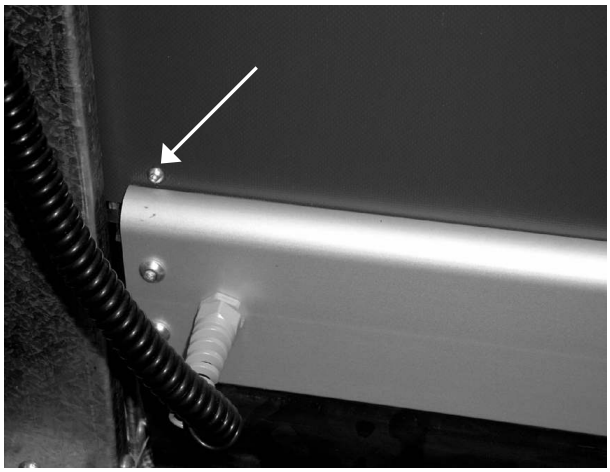

18. Drill holes into the door panel from the back side and fix the bottom profile with 2 screws M5x6.

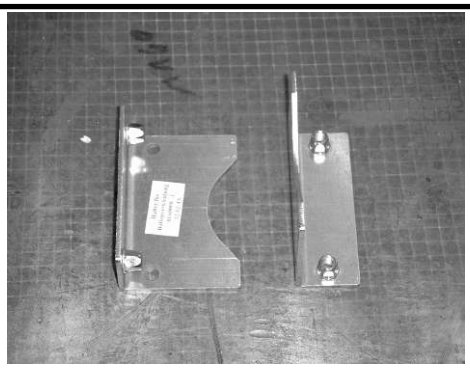



19. Angle for fitting the top roll cover.


The angles must be screwed onto the head plates from the inner side.



20. Fix the top roll cover with 4 screws and one big washer under each screw.



Drive Standard

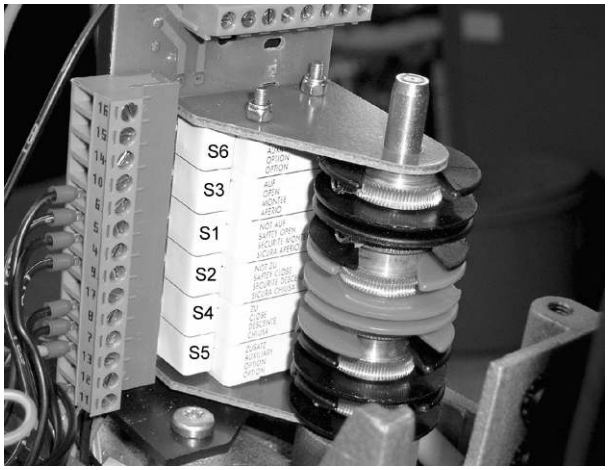


S1	Emerg. UP	**S4**	DOWN
S2	Emerg. DOWN	**S5**	CUTOFF STAT. PHOTOCELL
S3	UP	**S6**	ADDITIONAL


21. Fix the top roll cover with 4 screws and big washers each.


22. Connect electric power to drive.
Set the cam limit switch in accordance with the end positions.

⚠ Wrong setting may lead to door damage!

Drive Mini

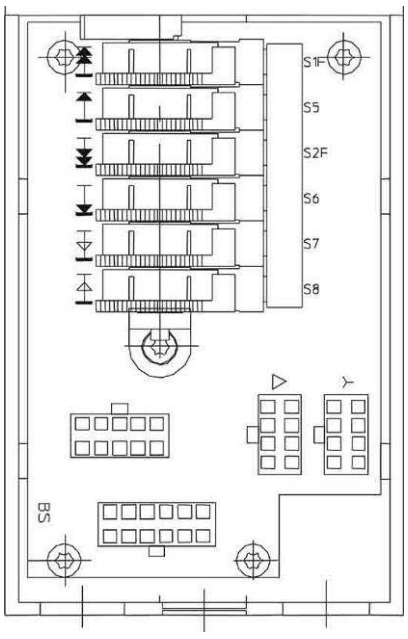

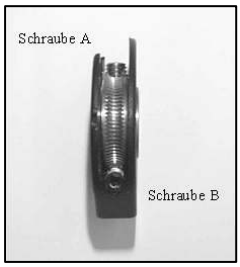


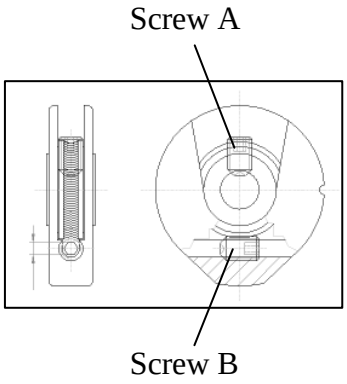


23. To connect the drive Mini, look at user manual (Drive).

24. Standard drive:
After the primary adjustments tighten **screw A** so that it cannot loosen (secure with paint). Adjust the end limits by turning **screw B**.

Program lower limit (S4)!

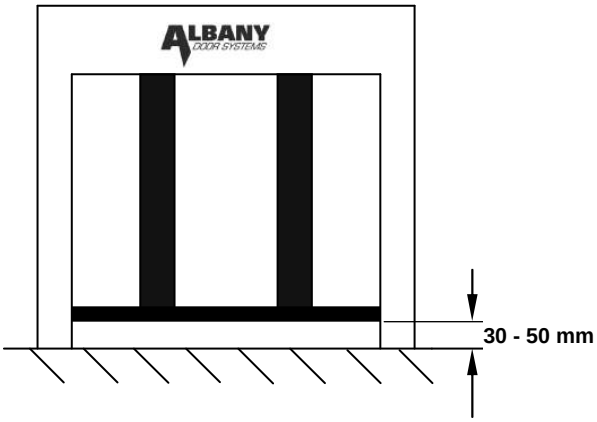

Cutoff photocell (S5) !

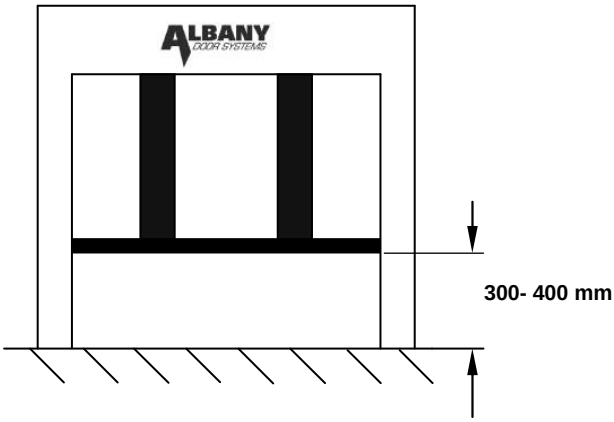

25. Set the cam limit switch **S4** so that it is activated by an opening height of 30 - 50 mm.


26. Stat. photocell must be shut off with cam limit switch **S5** to avoid, that the door opens short time before door is closed. In case of car park function, adjust the cam limit switch **S5** so that the parking time is not automatically activated.

⚠ The shutoff point of the photocell can be programmed up to a height of 400 mm as there is no risk of injury or damage up to this point (the safety edge is still active).The auxiliary limit switches are automatically preprogrammed by the limit switches. The switchpoint of the limit switches may need to be corrected by adjusting the **screw B** to enable the door to stop in case of inverted rotation direction or failure of main limit switches.



30. The motor cover must be screwed onto the wall at it's border.

The assembly is finished after test of safety devices and test run.

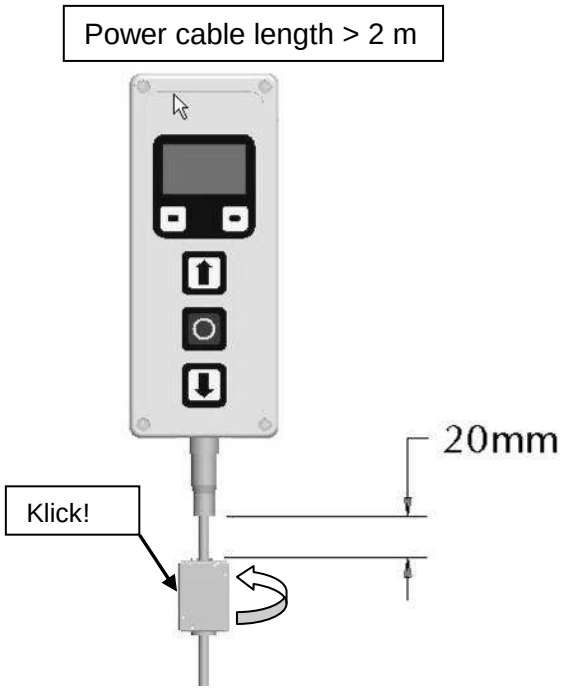

Dismantling is made in opposite direction to installation.

The packing material of the door may be returned to the manufacturer. Defective components should be disposed according environmental regulations.

Defective electronic components should be disposed as special waste.

31.