Instructions

Weather sealing

ASSA ABLOY DS6070B / DS6070R / DS6070E

ASSA ABLOY Entrance Systems

The global leader in door opening solutions



Copyright and Disclaimer

The contents of this publication have been compiled with the greatest possible care, ASSA ABLOY Entrance Systems will nonetheless have no liability for any damage that may occur because of errors or omissions in this publication. We reserve the right to make appropriate technical modifications without notice.

No rights can be derived from the contents of this document.

Color guides: Color differences may occur due to different printing and publication methods.

No part of this publication may be copied or published by scanning, printing, photocopying, microfilm or any other process without written prior permission from ASSA ABLOY Entrance Systems.

Copyright © ASSA ABLOY Entrance Systems AB 2006-2018.

All rights reserved.

ASSA ABLOY, Besam, Crawford, Albany and Megadoor as words and logos are trademarks of the ASSA ABLOY Group

Complete entrance solutions from ASSA ABLOY Entrance Systems

Solutions That Support your business



ASSA ABLOY Entrance Systems is the world's most complete supplier of automated entrance solutions. With a comprehensive view on the flow of people, goods and vehicles, we create solutions with the best balance between cost, quality and lifetime performance. With the long-term success of the brands Besam, Crawford, Albany and Megadoor basis, we offer our solutions under the brand ASSA ABLOY. Our holistic approach means that we understand the full range of challenges that you face, and it allows us to deliver the best possible solution. Products and services are geared to meet your needs for security, safety, convenience and sustainable operation. Read more about ASSA ABLOY Entrance Systems at www.assaabloyentrance.com.

Our relationship continues

ASSA ABLOY ENTRANCE SYSTEMS
Maintenance & Modernization

Your entrance is part of your business flow, so there is every reason to make sure they are functioning properly. ASSA ABLOY Entrance Systems offer a maintenance program and modernization expertise you can trust.

Our maintenance program and our modernization services automatic entrance solutions backed by extensive expertise for all kinds of industrial doors and doors for pedestrian traffic and docking systems, regardless of brand. At your disposal is a team of dedicated expert engineers who for decades have worked on maintenance and service and create customer satisfaction.

Your local customer service

We recommend that you contact your local ASSA ABLOY service center for more information about the maintenance available for your ASSA ABLOY shelter. The manufacturer of this shelter ASSA ABLOY Entrance Systems Box 131

261 22 Landskrona, Sweden

Content

Copyright and Disclaimer 2

Complete entrance solutions from ASSA ABLOY Entrance Systems 3

Content 4

1st Introduction 6

1.1 General guidelines 6
1.1.1 correct operating instructions 6
1.1.2 Target 6
1.1.3 The purpose of this manual 6
1.1.4 User responsibility 7
1.2 Picture Comments 7

2nd Safety 8

2.1 General safety 8
2.2 Safety instructions 8
2.3 Safety symbols used in this manual 10
2.4 Proper use 10
2.5 Misuse 11
2.6 Uncertain actuation 11

3rd Description 12

3.1 Generally 12
3.2 Safety related parts 12
3.3 Operations 13
3.4 Control Functions for DS6070B / DS6070E 14

4th Operating 15

4.1 Generally 15
4.2 Daily starting procedure 15
4.3 Test run 15
4.4 Operation of the weather seal 16
4.4.1 The docking of the vehicle 16
4.4.2 Inflation of the weather seal 16
4.4.3 Dock leveler from 18

5th Maintenance 20

5.1 General comments on the maintenance 20
5.2 Preventive Maintenance Schedule 21
5.2.1 Maintenance performed by service 21
5.3 Preventive maintenance procedures 22
5.3.1 Inspect the wall and wall brackets and connectors for damage. 22
5.3.2 Inspect the front cover and steel covers for damage 22
5.3.3 Inspect blisters and fan for damage 23
5.3.4 Inspect the electrical system 23

6th Controls and adjustments 24

6.1 Generally 24
6.2 Function test 24
6.3 Function test DS6070R 25

7th Troubleshooting 26

7.1 Introduction 26
7.2 The fan does not blow 26
7.3 Blisters will not return to sleep mode 26

Eighth Excerpts from the declaration of conformity 27

1. Introduction

The English user manual is the original user manual. All other languages are direct translations of this document

1.1 General Guidelines

1.1.1 correct operating instructions

Before you continue reading, you must make sure you have the correct operating instructions. If you have an ASSA ABLOY sectional door in the docking pocket, see also the accompanying manual to the port.

If you have a 950 or 950 LSA DLSA, see the related user guide for your ASSA ABLOY leveler.

1.1.2 Target

These operating instructions are intended for users of the shelters and all the people working on the installation, operation, preventive maintenance and repair of the shelter. Only authorized and fully trained personnel with extensive information about the possible risks are allowed to operate the shelter.

1.1.3 The purpose of this manual The purpose of this

manual is to:

- Give users and technicians to operate and maintain the equipment.
- Minimize the risk of injury to the operator or to third parties.

1.1.4 User Responsibility

The user of the shelter must ensure:

- that all persons performing installation, maintenance or repair of the shelter have read and understand the entire scope of these operating instructions.
- that every person who is authorized to operate the shelter have received thorough training and complete information on possible risks.



Note

Always follow health and safety regulations within the company. If you have any questions, please contact ASSA ABLOY.

1.2 Image Comments

The images in this manual are made as illustrations. Some of them are simplified to be clearer. Current specifications are different for different supplies of shelter.

2. Safety

2.1 General Safety

ASSA ABLOY shelter has been designed to meet all safety requirements in the European Directives and relevant standards issued by the European Standardization Committee, CEN.

2.2 Safety information

shelter has been designed and manufactured to operate with maximum security. But manufacturers can not be held liable for accidents or damage to the shelter of the following safety instructions are not followed.

- *shelter may only be operated by trained, authorized personnel.*
- *shelter must be locked before installation, recovery, startup, maintenance and repair.*
- *Safety equipment must not be removed, bypassed or rendered inoperable.*
- *Avoid any action which could negatively affect the functions of the shelter.*

- *No changes may be made in the shelter without the prior agreement of the manufacturer.*
- *Use the shelter only if it is in perfect working order. Any errors must be reported immediately to management.*
- *All regulations applicable to shelters, even those not specifically mentioned in this manual, must be followed. Always observe the accident prevention regulations now established.*
- *Make sure to stand firmly when operating the shelter.*
- *Read and understand the safety instructions before using or maintaining the shelter.*

- *Always follow local health and safety regulations when operating or maintaining the shelter.*
- *Make sure that no people and no equipment available in the working area of the shelter over, under, above and on both sides before using the shelter.*

- *Do not use the shelter after the date of the next scheduled maintenance. Date of the next scheduled maintenance shown in the logbook.*

- *Always move the shelter to standby mode and check that the main switch is turned off before doing maintenance on the shelter.*

- *When the shelter is not in use shall immediately be returned to its parking position.*

- *All necessary measures shall be taken to ensure that the vehicle does not run out until the shelter has returned to its rest position.*

2.3 Safety Symbols used in this guide

More tips and recommendations for the reader

observe

Caution: A warning means a situation in which the equipment can be damaged. Danger:

Danger means a situation that requires special precautions to prevent life-threatening injuries.

Indications and warnings in the text is marked by symbols. The symbols have the following meanings:



Use caution: Identifies a condition where the equipment may be damaged.

Danger: Indicates a situation that requires special precautions to prevent life-threatening injuries. Warning: Identifies a condition where a person can be damaged. Danger!

opening and truck (lorry). Note:



Electrical danger!



Note

Additional information

2.4 In use

Vädertätnings function is to seal the gap (height and width) between Lastkajen



It is only allowed to fill the shelter with air if it is in perfect condition.

2.5 Misuse

Any use of the weather seal than that used in the description in the "Proper use" is considered wrong use.
Improper use refers in particular to:

- *The use of shelter if it has any fault or if it is damaged,*
- *The use of shelter for the vehicle to be loaded / unloaded are not properly parked.*

2.6 Uncertain actuation


- *Do not operate the shelter after the maintenance period has expired.*
- *Do not use the shelter if it has any fault or if it is damaged.*
- *Do not use the shelter of the vehicle to be loaded / unloaded are not properly parked.*
- *Do not allow the vehicle to be loaded / unloaded cargo to leave the premises until the weather seal has returned to its rest position.*


3. Description


3.1 General

The inflatable dock seals DS6070B, DS6070R DS6070E and is designed for use under varying weather conditions.

Safety 3.2 parts

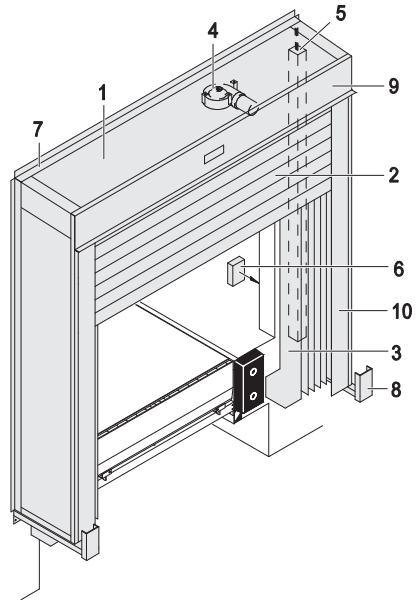

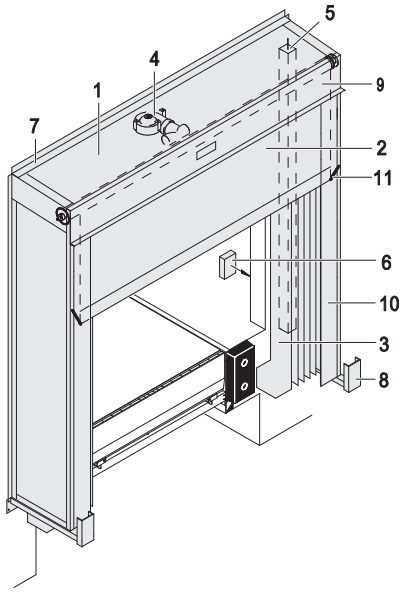

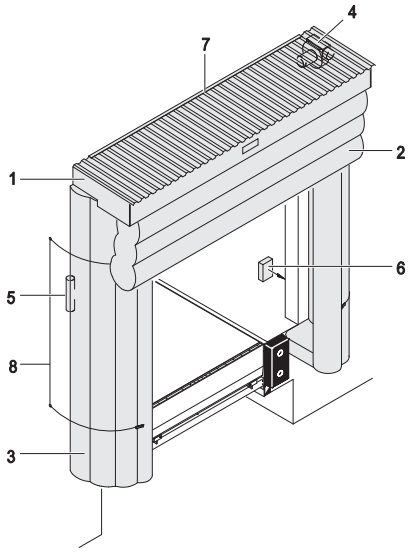

DS6070B

1) Top Unit
2) Top Bladder
3) Side Blowing
4) Fan
5) Handling
6) Control unit
7) Wall mount
8) Köravvisare
9) Front protection
10) Marking line

DS6070R

1) Top Unit
2) Top Bladder
3) Side Blowing
4) Fan
5) Handling
6) Control unit
7) Wall mount
8) Köravvisare
9) Front protection
10) scorelines
11) break-away system

DS6070E

1) Top Unit
2) Top Bladder
3) Side Blowing
4) Fan
5) Handling
6) Control unit
7) Wall mount
8) Tensile Lina

3.3 Operations



The weather seal seals the gap (height and width) between Lastkajen opening and truck (lorry). It also adapts to the platform change of height during loading and unloading.

The inflatable dock shelter is for terminals with many different vehicle sizes. It is designed for use under different weather conditions. In contrast to other types of weather forced the vehicle is not at the shelter. Instead, fill the weather seal around the docked vehicle, providing complete sealing. During loading / unloading the vehicle moves up and down and blisters automatically follows these movements, with a constant pressure on the vehicle structure.

3.4 Control Functions for DS6070B / DS6070E

Note

If your shelter is controlled via a 950 LSA or 950 DLSA, see the related user guide for your loading bay! If your shelter is operated by a 950-docking system, see the related user guide for your industrial door!

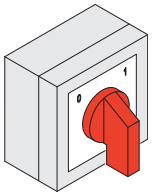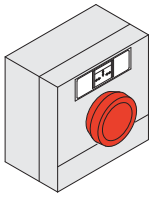Control functions for DS6070B / DS6070E	**Operation Functions DS6070R**
 DS6070B and DS6070E operated by a rotary switch.	 DS6070R operated with a push button box with button functionality.
	 Docking: Press and release the button. After 3 seconds, the weather seal to roll down toward the vehicle. When the weather seal when the vehicle is stopped and goes into "floating position" to follow the movements of the vehicle. After loading / unloading: Press the button briefly wherein the weather seal returns to standby.

4. Operational

4.1 General

This section describes the operation of all shelter. To ensure the safe operation of the equipment the following safety precautions.



Warning!
Make sure that the installation was done by technicians from ASSA ABLOY or by authorized and specially trained persons under the separate supplied installation manual! Warning!



Make sure that no people and no equipment available in the working area of the shelter over, under, above and on both sides before using the shelter. Warning!



shelter may only be operated by trained persons (18 years old). The user must ensure that all persons involved have understood the instructions. During operation must motions of shelter is closely monitored.

4.2 Daily starting procedure


- Before the shelter, used to be shelter for safety inspections.
- If no errors are detected, the shelter used.


4.3 Test run

To ensure safe use of the shelter must commissioning performed only by authorized and trained specialists. A test run is required to ensure that all operating functions in the shelter works. If all control functions operate flawlessly shelter ready for use.

4.4 Operation of the weatherseal

4.4.1 The docking of the vehicle

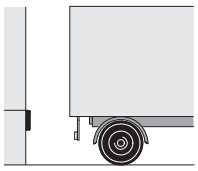

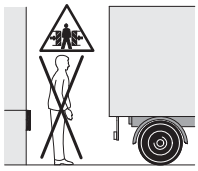

NOTE!

Make sure no one is between the vehicle and the loading dock when the vehicle runs against it!

1) back the vehicle with the tailgate open and / or reduced tail lift.

2) Make sure that the vehicle's parking brakes are so that the vehicle can not roll or run away.

3) Lastkajen port should under no circumstances be opened before the vehicle is parked safely.

4.4.2 Inflating weatherseal


4.4.2.1Allmänt



Warning!

The vehicle may not drive in or out of the shelter when the bladders are inflated.

- Check that the daily startup procedure has been performed.
- Check that the vehicle's tailgate and / or tail lift is in the open position.
- Make sure the vehicle is parked in the correct position. The vehicle must be right and the middle.

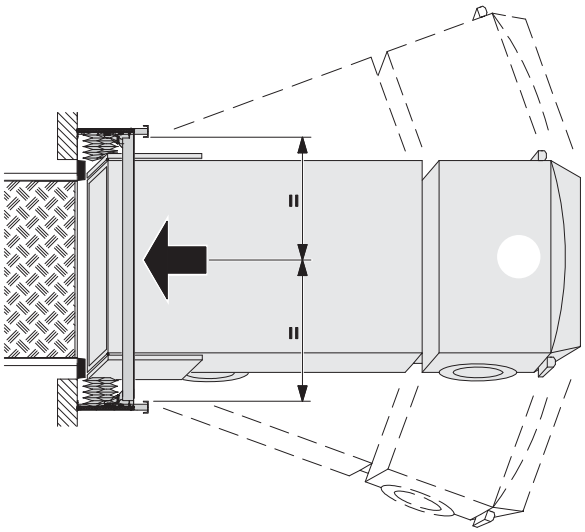

- Check that the vehicle's parking brake is on and, if necessary, also brake pads are in place to prevent the vehicle from moving.

4.4.2.2Uppblåsningsprocedur



Warning!

The operator must be in a safe and secure position during operation.

1) Before loading / unloading the power is on. Turn the power switch to the "1-ON". Do not turn off the main power while loading is in progress!

2) Wait until the bubbles are inflated and strapped around the vehicle.

3) The lip of your loading dock can now be positioned on the vehicle loading platform.

4.4.2.3Uppblåsningsprocedur DS6070R



Warning!

The operator must be in a safe and secure position during operation.

1) Before loading / unloading the power is on. Do not turn off the main power while loading is in progress!
2) Press the button briefly.
3) After 3 seconds, the weather seal to roll down toward the vehicle.
4) The fan automatically starts to fill the lateral air sections.
5) When the weather seal when the vehicle is stopped and goes into the "liquid mode" to follow the movements of the vehicle.
6) The lip of your loading dock can now be positioned on the vehicle loading platform.

4.4.3 Docking from the loading bridge

4.4.3.1Allmänt



Warning!

After loading must shelter immediately returned to idle. Note



Do not leave the loading area until the weather seal has returned to idle.

Warning!



The operator must be in a safe and secure position during operation.

4.4.3.2Uppblåsningsprocedur DS6070B / DS6070E

1) When loading is complete, turn the power switch to the "0-Off" to release the air from the weather seal.

2) Wait until the shelter has been completely emptied and returned to idle.



Warning!

If the loading dock has a port must be closed and locked.

3) The vehicle may leave the loading dock.

4.4.3.3 Release Procedure DS6070R

1) When loading is complete, press and release the button.

2) Wait until the shelter has been completely emptied and returned to idle.



Warning!

If the loading dock has a port must be closed and locked.

3) The vehicle may leave the loading dock.

5. Maintenance

5.1 General remarks on maintenance

Weather Seal has been designed to minimize maintenance. Safe operation can only be accessed by the maintenance work carried out at regular intervals.



Note

Perform a visual inspection every day.

Loading ramps must be safety by trained service technicians before loading docks into operation for the first time. Then they will be safety at least once a year. Loading ramps must also be inspected for major repairs, for example, after welding on bearing components. The scope of the inspection to be performed depends on the repairs. The user must make a written report presenting the results of the inspection, including the date, name, address and signature of the person who performed the inspection.



Note

Only the manufacturer's original parts must be used for repairs. Use of other spare parts is considered to be an unauthorized modification of the equipment. Warning!



Ensure that the workplace is well lit. before any maintenance work. Warning!



Put on the helmet before any maintenance work!

5.2 Preventive Maintenance Schedule

Frequency	Part	Tasks
1 month	Protection	Perform function test of protection.
6 months	Wall Mount and other connections	Inspect the wall bracket and connections for damage.
	steel Parts	Inspect front cover and steel covers for damage.
	Blisters and fan	Inspect blisters and fan for damage.

5.2.1 Maintenance performed by the service technician

Frequency	Part	Tasks
Every year	Security	Search RSI Check features Check that the safety devices function
Every five years	Counterweight System	Replace the ropes Replace pulleys
	Blisters	Replace wear protection
	Security	Replace the gate wires



Note

Depending on the number of cycles per day, shorter intervals apply!

5.3 Preventive maintenance procedures

5.3.1 Inspect the wall and wall brackets and connectors for damage.



Danger!

Disconnect the electrical connections before carrying out maintenance work at the shelter.

1) Check walls for damage and cracking at the area of the wall bracket.

2) Verify that the mounting brackets are tightened. Tighten any loose screws.

3) Check that all screws are installed and tightened as described in the installation instructions.
   Tighten all loose screws

4) Remove all tools and equipment from the area.

5.3.2 Inspect the front cover and steel covers for damage



Danger!

Disconnect the electrical connections before carrying out maintenance work at the shelter.

1) Check the front cover for injuries.

2) Check the front cover for injuries.

3) Remove all tools and equipment from the area.

5.3.3 Inspect blisters and fan for damage



Danger!

Disconnect the electrical connections before carrying out maintenance work at the shelter.

1) Inspect the bladders of injury.
2) Fill the blisters and check that
   - they are working properly.
   - that there is no abnormal sound.
   - sound level from the fan is abnormally high
3) Make sure that the grill that protects the fan's air intake is securely in place.
4) Remove all tools and equipment from the area.

5.3.4 Inspect the electrical system



Danger!

Disconnect the electrical connections before carrying out maintenance work at the shelter.

1) Check for damage or corrosion of the electrical cables.
2) Check that:
   - The electrical connections are tight
   - That the electrical cables are connected to the shelter.
   - The ground connections are secure and properly connected to the shelter and the building's grounding system.
3) If any defects are found, please contact the local service.
4) Remove all tools and equipment from the area.

6. Check and adjustments

6.1 General



Warning!

Make sure that no people and no equipment available in the working area of the shelter before using the shelter.

6.2 Functional Test

1) Make sure the power switch is activated.

2) Turn the switch to the "1-ON".

3) ensure that the bubbles are filled.

4) Turn the switch to the "O-OFF".

5) Check

- that the fan stops blowing
- blisters emptied.

6) Turn the switch to the "1-ON".

7) Wait until the bubbles are completely empty.

8) Make sure that the fan blows constantly.

9) Turn the switch to the "O-OFF".

10) Keep

- bladders emptied completely
- weather seal returns to standby.

6.3 Function Test DS6070R

1) Make sure the power switch is activated.

2) Press the button briefly.

3) Check

- To shelter rolled down for 3 seconds.
- fan automatically starts to fill the lateral air sections.

4) Press the button.

5) Check

- shelter stops rolling out
- that the fan stops blowing
- blisters emptied.

6) Press the button briefly.

7) Check

- shelter continues to roll out
- the fan starts again
- that the side bladders filled.

8) Wait until the shelter reaches its lowest end position

9) Check

- cloth reaches its lowest end position
- that the cloth reverses 3 seconds and returns to sleep mode.
- the fan automatically stops blowing
- that the side bladders emptied.

10) Press the button briefly.

11) Wait until the shelter reaches its lower end position.

12) Hold the shelter and make sure it does not return.

13) Check

- the engine stops trying to reverse the screen for 12 seconds.

14) Release the fabric

15) Switch on and off the main power.

16) Press the button briefly.

17) to ensure that the fabric reverses and returns to sleep mode,

7. Troubleshooting

This chapter contains troubleshooting information for users of the shelter. If an error is not described in this chapter, contact your local service for help.

7.1 Introduction

This chapter contains troubleshooting information for users of the ASSA ABLOY shelter. If an error is not described in this chapter, contact your local service for help.

7.2 The fan does not blow

possible cause	Solution
Supply Voltage Interruption	Turn on the main switch
MS docking control: The main power switch to the "O-OFF"	Turn the power switch to the "1-ON"
docking control systems ES stop button is pressed	Turn the emergency stop button 90 ° clockwise
Fan out of order	Contact local service
The fuse in the control unit has tripped	Contact local service

7.3 Blisters will not return to sleep mode

possible cause	Solution
Pull the rope down	Replace the pull cord
Lina to counterbalance is broken	Replace the rope to the counterweight

8. Excerpt from the declaration of conformity

Make, ASSA ABLOY Entrance Systems AB Lynx Street 10 SE-261 44 Landskrona, Sweden,

declare under sole responsibility that this type of equipment:
Electrically operated inflatable type of shelter ASSA ABLOY DS6070B / DS6070E and DS6070R is equipped with the electric drive unit in the log book that came with the delivery, in conformity with provisions of the following directives: 2006/42 / EC

2014/30 / EU Machinery Directive (MD) Electromagnetic Compatibility Directive (EMCD)

EU harmonized standards have been applied: EN 349: 1993 +
A1: 2008

Other standards or technical specifications which have been used: EN 60335-2-103

The manufacturing process ensures compliance of the equipment with the technical file. The manufacturing process is reviewed regularly.

Summary of Technical File: hanna zetterström E-mail: hanna.zetterstrom@assaabloy.com
Product Safety and Liability Manager ASSA ABLOY Entrance Systems AB Lynx Street 10

SE-261 44 Landskrona,
Sweden

ASSA ABLOY Entrance Systems is a leading provider of automated entrance solutions for efficient flow of goods and people. With our globally recognized brands Besam, Crawford, Albany and Megadoor we offer our solutions under the brand ASSA ABLOY. Our products and services are designed to meet end-user needs for a safe, secure, comfortable and durable operation.

ASSA ABLOY Entrance Systems is a division of ASSA ABLOY.

assaabloyentrance.com

Q3.0 - 2018

ASSA ABLOY Entrance Systems

assaabloyentrance.com