OPERATION & MAINTENANCE MANUAL FOR MOTORISED ROLLING SHUTTER

DESIGNED, DEVELOPED & MARKETED

BY

G-BLOCK, 1ST FLOOR, THERMAX CHOWK
MIDC, ABOVE RENAULT SHOWROOM
CHINCHWAD, PUNE-411019

TEL.NO: - +912066304033
EMAIL: -sales@nihva.com
www.nihva.com

INTRODUCTION

The Motorized Rolling shutter is the result of many years' experience in Door Automation Technologies. "NIHVA" offers the best possible factor of safety with simple, easy to use controls. The high quality of manufacture gives a robust construction and many years of useful life. Each operation opens and closed movement controlled by handle.

We take pride that our product & service range is offered with a high level of working safety, comfort, functionality and supported by services and added value solutions.

INDEX

1. DISPATCH & UNLOADING
2. ORDERING OF SPARES
3. EMERGENCY CONTACT DETAILS
4. DETAILS OF MOTORIZED ROLLING SHUTTER
5. PRE-OPERATING INSTRUCTIONS
6. ROUTINE MAINTENANCE
7. TROUBLESHOOTING
8. PARTS LIST
9. GA DRAWING OF MOTORIZED ROLLING SHUTTERS

- **DESPATCH & UNLOADING**

1. Loading, for dispatch, will be our responsibility. On receipt of the Rolling Shutter at site, please check and ensure that there is no physical damage to the equipment.

2. While unloading the equipment from the transporting vehicle, please ensure to use slings with rated capacity higher than the gross weight of the Stationary lift in packed condition.

- **ORDERING OF SPARES**

1. When ordering for spare, please specify the following in your Purchase Order.

   - Shutter Size
   - Part name / Description
   - Quantity required
   - Delivery period / time
   - Mode of dispatch

   This would avoid ambiguity and help us serve you better.

- **EMERGENCY CONTACT DETAILS: -**

1) Service - 9168938333
2) Projects- 8551008333

- **DETAILS OF GEAR OPERATED ROLLING SHUTTER:**

1. **SHUTTER OPERATION MODE-** MOTOR OPERATED
2. **OPERATION CONTROL –** BY PUSH BUTTONS
3. **MATERIAL –** M.S. / G.I. AS PER GA DRAWING
4. **MOTOR –** DIRECT/ INDIRECT DRIVE
5. **MOTOR SUPPLY –** SINGLE /THREE PHASE
6. **CLEAR OPENING HEIGHT –** AS PER GA DRAWING
7. **CLEAR OPENING WIDTH –** AS PER GA DRAWING
8. **MOUNTING SURFACE-** ON CONCRETE/M.S. STRUCTURE REFER GA DRAWING
9. **MOUNTING LOCATION –** INSIDE/OUTSIDE REFER GA DRAWING
10. **RAL SHADE-** AS PER CUSTOMER REQUIREMENT, REFER GA DRAWING.
11. **MOTOR CAPACITY –** AS PER SPECIFICATIONS

- **PRE – OPERATING INSTRUCTIONS: -**

1. There should be no obstacles within the operating path of the rolling shutter.
2. No objects should pass through the rolling shutter while in operation.
3. The operator / owner shall read and be familiar with the Owner's manual, especially the Operating and Maintenance Instruction.
4. In the event of a malfunction, the operator shall consult the Owner's Manual and contact NIHVA.
5. Any repair or modifications by an unqualified technician will void the warranty.

- **ROUTINE MAINTENANCE**

These recommendations are applicable to the Gear operated rolling shutter considering average daily usage of 15 to 20 times. If it is used more frequently, the same time intervals for the maintenance should be adjusted accordingly.

DAILY:

1. Check shutter lock is open before operation.
2. Visual inspection for damages.
3. Check electrical connections for their proper working.

MONTHLY:

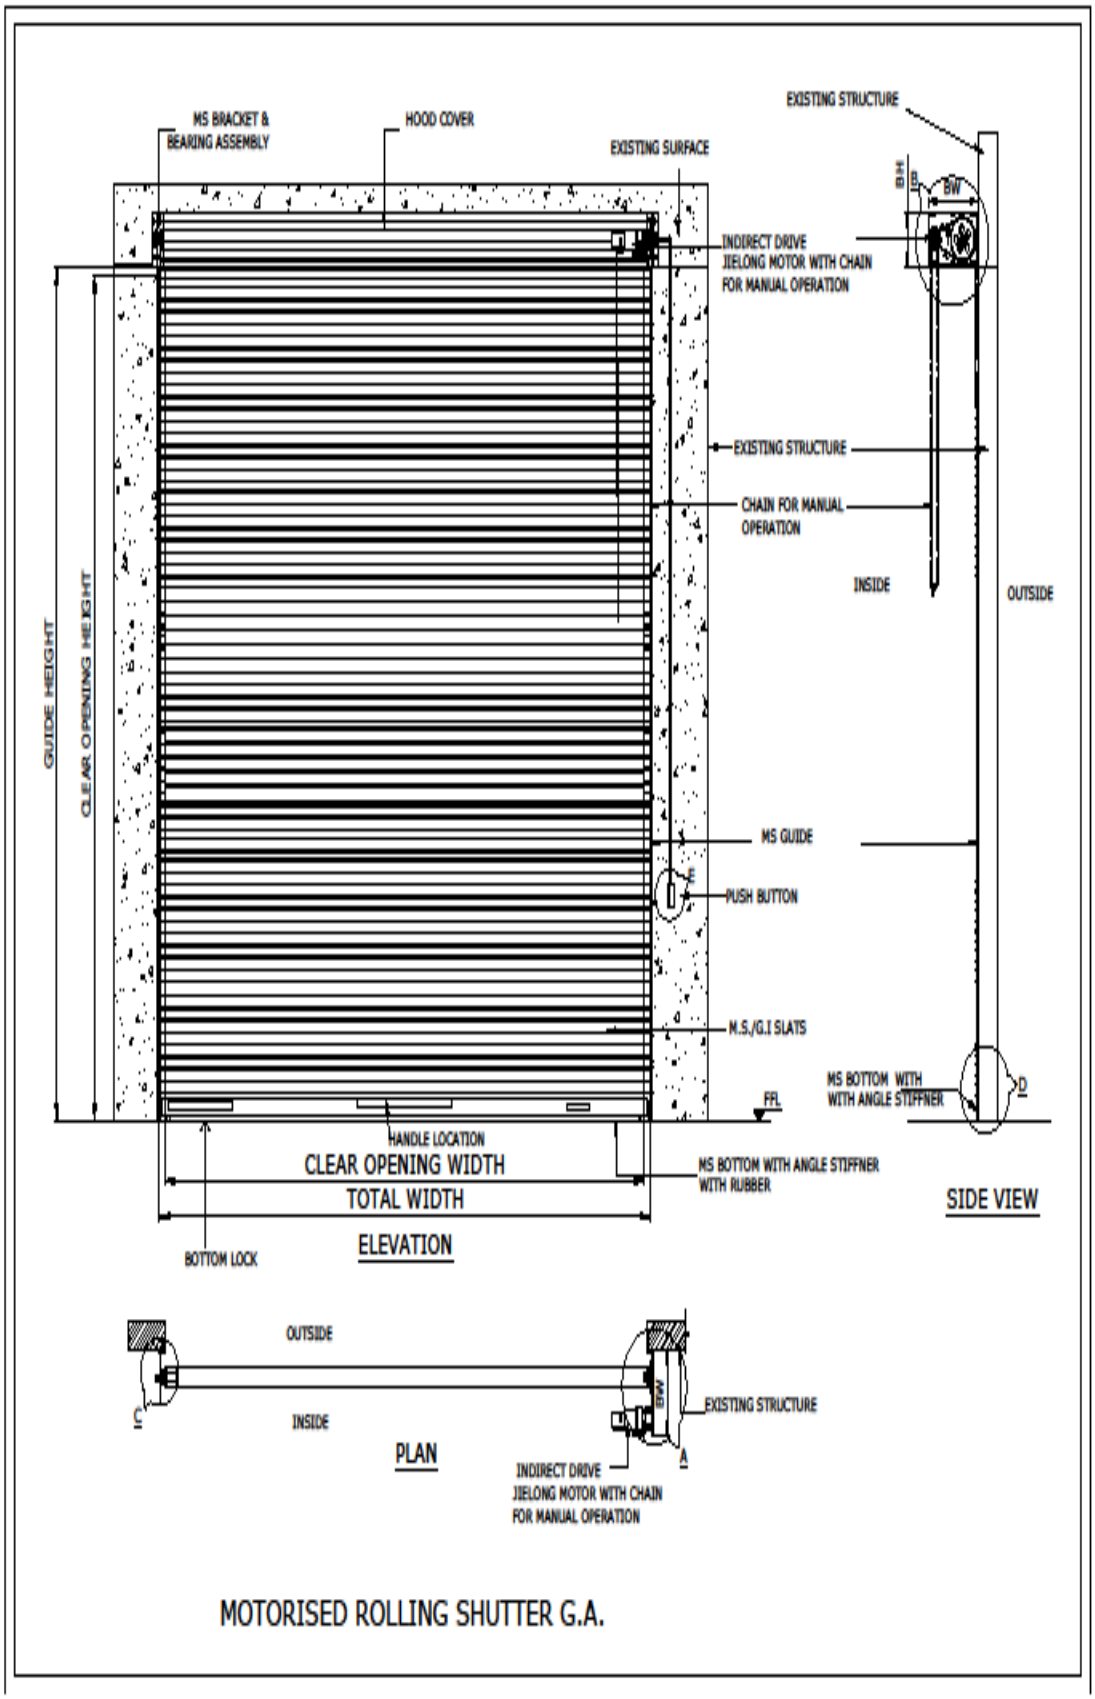
1. Greasing between Guide and slats.
2. Check all Parts for wear out or damage. Check all fixing are secure.
3. Check correct operations of handle.
4. Greasing to gear & bearing.
5. Check correct operations of control button.

- **TROUBLESHOOTING**

PROBLEM	ANALYSIS	SOLUTION
NO STOP AT UPPER & BOTTOM POSITIONS	INCORRECT CONNECTION OF PHASES & POSITION FAILS	CUT-OFF POWER, CHECK, ADJUST & CHANGE
UP ONLY OR DOWN ONLY	CIRCUIT CONTACTS FAILS, OVER LOW VOLTAGE, ELECTROMAGNETIC IRON WEAK IN ATTRACTION FORCE	POLISH CONTACT OR CHANGE RELAY, ADJUST VOLTAG EBUTTON CONTAT, CHANGE MAGNET COIL
NO REACTION	BUTTON CONTACT FAILS, POSITION LIMITING SWITCH CONTACT FAILS, CIRCUIT CUTOFF, WITHOUT NEUTRAL WIRE CONNECTION	ADJUST & CHANGE JOGGLING SWITCH & RELAY, CONNECT NEUTRAL WIRE
NON-STOP OPERATION	RELAY CONTACT FUSED, JOGGLING SWITCH OUT OF CONTROL	REPAIR & CHANGE JOGGLING SWITCH & RELAY
NON-OPERATION , ONLY NOISE	MACHINE BLOCKED; VOLTAGE TOO LOW	REMOVE BLOCK, ADJUST VOLTAGE
SHUTTER SLIDE DOWN AFTER BRAKE	BRAKE PIECE EXCESS OF ABRASION	CHECK THE SPRING OF BRAKE

PARTS LIST:

SR NO	ITEM DESCRIPTION
1	MS BRACKET LH
2	MS BRACKET RH
3	MOTOR WITH INDIRECT DRIVE
4	CHAIN
5	GUIDE
6	SLAT
7	SHAFT
8	M.S. BOTTOM
9	HOOD COVER
10	PUSH BUTTON


MS BRACKET & BEARING ASSEMBLY
HOOD COVER
EXISTING SURFACE
EXISTING STRUCTURE
INDIRECT DRIVE JIELONG MOTOR WITH CHAIN FOR MANUAL OPERATION
EXISTING STRUCTURE
CHAIN FOR MANUAL OPERATION
INSIDE
OUTSIDE
GUIDE HEIGHT
CLEAR OPENING HEIGHT
MS GUIDE
PUSH BUTTON
M.S./G.I SLATS
MS BOTTOM WITH WITH ANGLE STIFFNER
FFL
HANDLE LOCATION
CLEAR OPENING WIDTH
TOTAL WIDTH
MS BOTTOM WITH ANGLE STIFFNER WITH RUBBER
BOTTOM LOCK
ELEVATION
SIDE VIEW
OUTSIDE
INSIDE
EXISTING STRUCTURE
PLAN
INDIRECT DRIVE JIELONG MOTOR WITH CHAIN FOR MANUAL OPERATION
MOTORISED ROLLING SHUTTER G.A.