NIHVA

INSTALLATION & MAINTENANCE MANUAL

FOR

DOCK LEVELER

CLIENT: - IKEA INDIA PVT. LTD
MFG. YEAR :- 2018-19

DESIGNED, DEVELOPED & MARKETED

BY

NIHVA TECHNOLOGIES PVT. LTD.

G-BLOCK, 1ST FLOOR, THERMAX CHOWK
MIDC, ABOVE RENAULT SHOWROOM
CHINCHWAD, PUNE-411019

TEL.NO. - +912066304033
EMAIL:-info@nihva.com
www.nihva.com

A DESPATCH & UNLOADING

1. Loading, for dispatch, will be our responsibility. On receipt of the Dock-leveler at site, please check and ensure that there is no physical damage to the equipment.

2. While unloading the equipment from the transporting vehicle, please ensure to use slings with rated capacity higher than the gross weight of the Stationary lift in packed condition.

3. Slings MUST be hooked ONLY at specified positions. These positions are indicated and marked with a figure of 'HOOK'. Improper sling position or improper slinging could cause damage to the equipment.

B. ORDERING OF SPARES

1. When ordering for spare, please specify the following in your Purchase Order.

   - Equipment Name
   - Model Number
   - Equipment Serial No.
   - Part name / Description
   - Quantity required
   - Delivery period / time
   - Mode of dispatch

   This would avoid ambiguity and help us serve you better.

DATASHEET FOR DOCK LEVELER

1.0 CONSTRUCTION DETAILS

1.1	Required Capacity	: 09 Ton
1.2	Model No.	: NDL 72 to NDL 89
1.3	Leveler operation mode operated	: AC power pack hydraulically
1.4	Lip operation mode	:hydraulic
1.5	Operation control	: by push buttons and control panel
1.6	Loading platform height from road Level	: 1250 mm (Will be confirmed during Detailing)
1.7	Travel above & below dock level	: (+) 350
1.8	Platform Size (W x L)	: 2200 x 2450 mm
1.9	Lip size (W x L)	: 2200 x 400 mm
1.11	Maximum slope can be achieved	: 8 to 10%

DOCK LEVELLER

INTRODUCTION:-

The hydraulic Dock Leveler is the result of many years' experience in materials handling engineering. "MEL" offers the best possible factor of safety with simple, easy to use controls. The high quality of manufacture gives a robust construction and many years of useful life. Each lip and platform movement can be individually controlled (or corrected) by push button.

The dock leveler can be set at any position. During loading, the Dock Leveler is in floating mode i.e. it follows the up/down movements of the vehicle deck. Even with lopsided vehicles, the Dock leveler lip will remain in contact, and toe-traps are avoided by the tilt built into the Dock Leveler.

The whole platform is designed to flex laterally adequately to adapt to sideways tilted vehicles. The leveler always seals perfectly to the lorry bed.

PRINCIPLE:-

Dock Leveler is an adjustable platform used between the transport vehicle and dispatch area of the warehouse of factory for efficient and safe material transfer applications. It bridges the gap between the dispatch area and the transport vehicle and compensates for variations in the truck bed height.

CONSTRUCTION:-

It basically consists of heavy duty fabricated Top Chequered platform and bottom angle channel construction frame. Both are joined by stainless steel machined pins. Lip is hinged to the top platform by means of stainless steel pins.

Top Platform is reinforced with I Beam welded below the platform to strengthen the platform. The cylinder is mounted at the best advantage point against the top platform and bottom frame. Compact power pack includes a single HP motor with overload protection. Hydraulic Pump is Dowty make. Hydraulic operations are by using solenoid control valve.

FEATURES:-

1. Convenient location of all controls.
2. Independent deck and lip.
3. Controls for quicker cycling time.
4. Smooth dependable hydraulics.
5. Quite operation at the touch of the button.
6. Years of trouble-free service.
7. Lower lift time cost and fewer maintenance requirements.
8. Recommended for all applications.
9. Maintenance Strut.
10. Hazard Stripes.
11. Toe guards.

PRE – OPERATING INSTRUCTIONS:-


1. Ensure Hydraulic Oil in the power pack.
2. Ensure Motor connection and proper earthing.
3. Ensure joint leakage.
4. Ensure proper location of platform and lip.

DOCK LEVELER

MANUAL

1

REVERSE THE TRUCK UPTO DISTANCE
OF 150 - 200 MM FROM THE D/L LIP

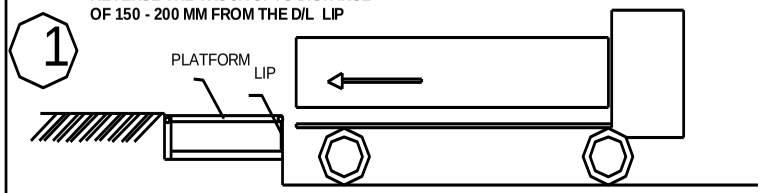


NOTE : ENSURE THAT EDGES OF TRUCK LOAD BODY ARE OUTSIDE LIP WIDTH
I.E. CHECK ALIGNMENT OF LIP WITH TRUCK BODY.

2

HOLD PLATFORM UP BUTTON IN PRESSED
POSITION.


PLATFORM WILL BE LIFTED TILL TOP MOST POSITION.

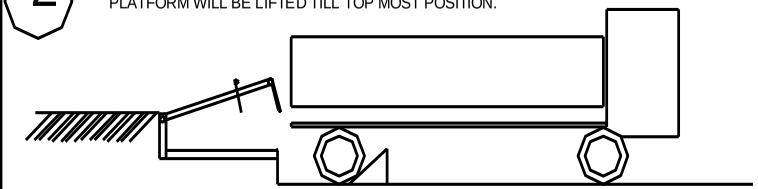

3

HOLD LIP UP BUTTON IN PRESSED POSITION.


LIP WILL BE LIFTED TILL IT STOP.

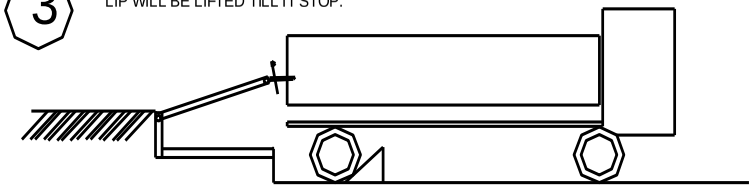

4

HOLD PLATFORM DOWN BUTTON IN PRESSED
POSITION.


LIP WILL BE RESTED ON TRCK BED.

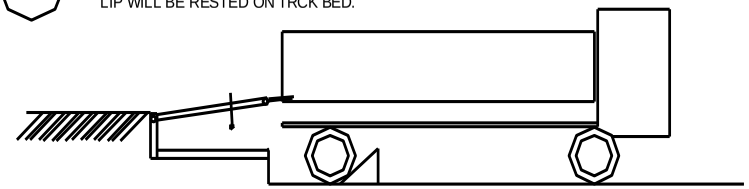

UNLOAD OR LOAD THE MATERIAL FROM THE TRUCK.


5

PRESS PLATFORM UP TO CLEAR THE LIP
FROM TRUCK BED THAT TIME THE LIP WILL
COME DOWN .

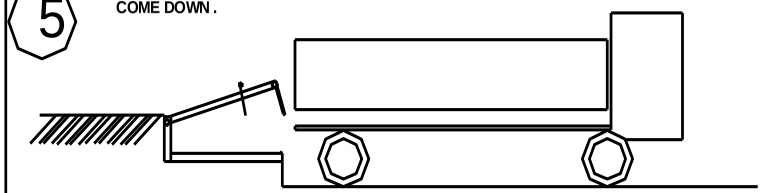

6

DRIVE THE TRUCK AWAY FROM D/L.

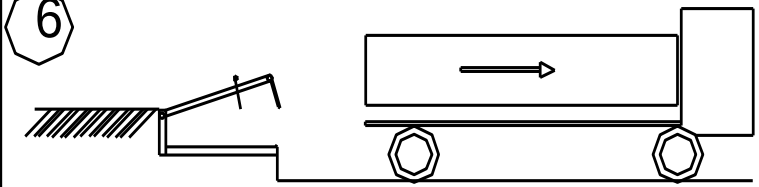

7

HOLD PLATFORM DOWN BUTTON .

LIP WILL BE PARKED TO ITS ORIGINAL POSITION.



OPERATING INSTRUCTION FOR DOCK- LEVELER.

ROUTINE MAINTENANCE AND LUBRICATION

These recommendations are applicable to the Dock Leveler considering average daily usage of 15 to 20 times. If it is used more frequently, the same time intervals for the maintenance should be adjusted accordingly.

DAILY:-


1. Check Hydraulic pipe lines for leak proof working.
2. Check electrical connections for their proper working.


MONTHLY:-

1. Grease the hinge pins at bottom frame and top plate joint and extension lip plate hinge joint.
2. Grease the main Jack Cylinder and Lip Jack Cylinder, Front and Rear Trunion bearings.
3. Change Hydraulic Oil.

ASSEMBLIES
&
SPARE PARTS LIST

DOCK LEVELER	MANUAL

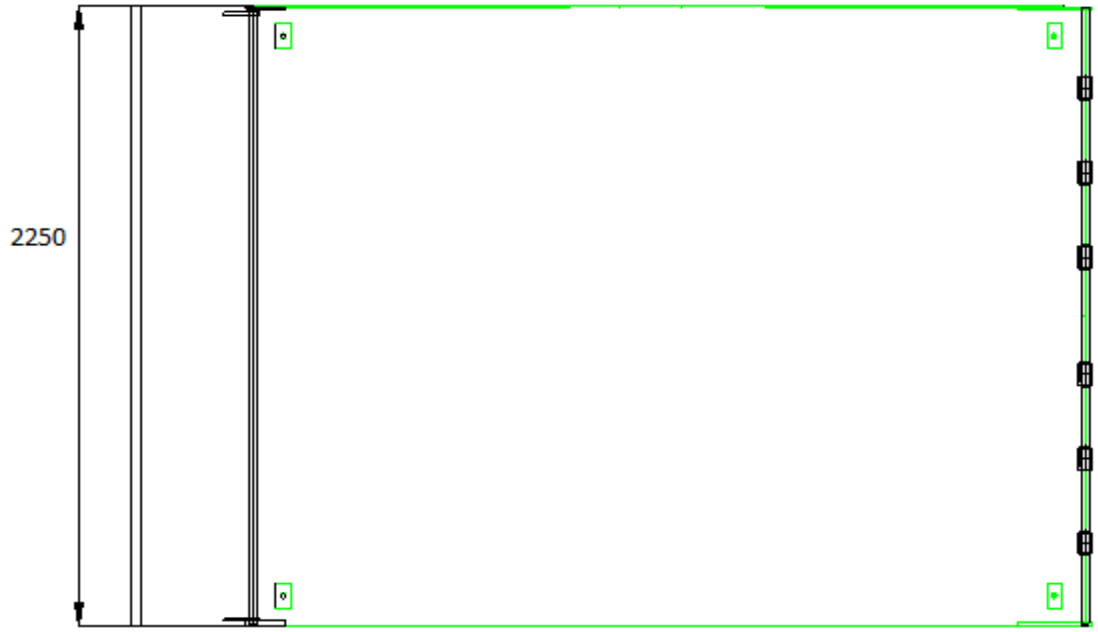

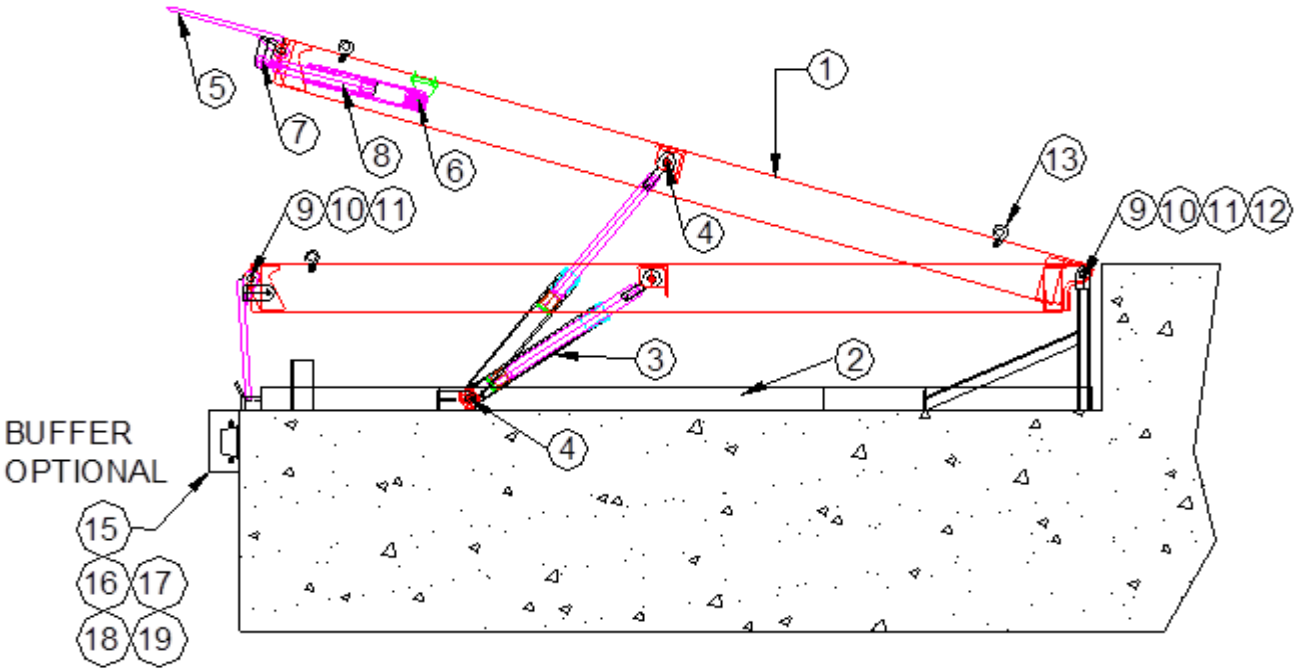

DOCK LEVELER

MANUAL

SR. NO	PART No.	DESCRIPTION	QTY.
22	70000634	SIDE GUARD INNER (LH & RH)	1PAIR
21	70000633	SIDE GUARD MIDDLE(LH & RH)	1PAIR
20	70000632	SIDE GUARD OUTER(LH & RH)	1PAIR
19	10000309	ANCHOR FASTNER	8
18	70000631	RUBBER BUFFER MTG. ANGLE	4
17	PSL00001	SPLIT PIN	8
16	70000630	RUBBER BUFFER PIVOT PIN	4
15	70000629	RUBBER BUFFER	2
14	10000309	ANCHOR FASTNER	8
13	10000137	I BOLT M16	4
12	NGR00001	GREASE NIPPLE	6
11		M6x20L CSK BOLT	8
10	70000164	PIN LOCKING WASHER	2
09	70000161	PLATFORM & LIP PIVOT PIN	2
08	70000383	LIP JACK ASSLY.	1
07	70000167	LIP JACK TOP PIVOT PIN	1
06	70000168	LIP JACK BOTTOM PIVOT PIN	1
05	70000628	LIP PLATE	1
04	70000165	MAIN JACK PIVOT PIN	4
03	70000156	MAIN JACK ASSLY.	2
02	70000627	BOTTOM FRAME WELDED ASSLY	1
01	70000626	TOP PLATFORM WELDED ASSLY	1

DOCK LEVELER

MANUAL