
Techno lift

TECHNOSYS EQUIPMENTS

Your Business Partner for Material Movement & Storage

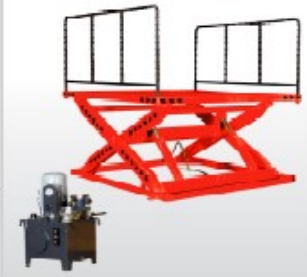










www.technosysequipment.com
www.technolift.in

Technosys Equipments Pvt. Ltd.

SCISSOR LIFT TABLE

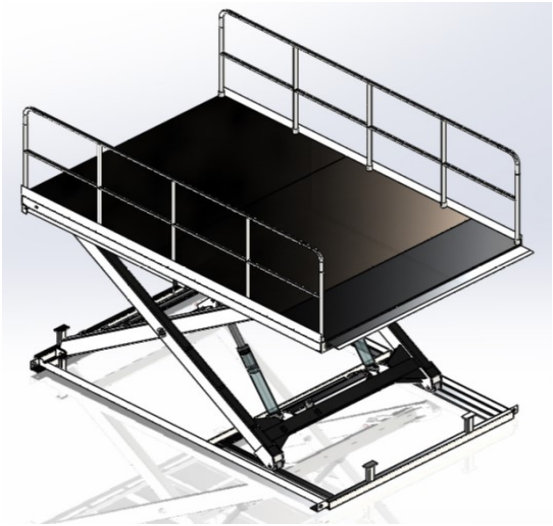

SERVICE MANUAL
&
SPARE PARTS LIST

MODEL : TSL20
SERIAL NO.:2627
YEAR OF MFG : 2021

CAPACITY : 2000 Kgs.
LIFT HEIGHT : 1300 MM

TABLE OF CONTENT

Sr. No.	DESCRIPTION	Page No.
A.	Dispatch and unloading	3
B.	Ordering of spares	3
1.	General Instructions	4to5
2.	Construction	6
3.	Operating	7
4.	Maintenance Instruction	8
5.	Recommended Lubricants	9
6.	Assembles & Spare Parts List	10
7.	Scissor Table General Assembly	11
8.	Scissor Assembly	12
9.	Lip Plate Assembly	13
10	Lift Jack Assembly	14
11	Lip Jack Assembly	15
12	Hydraulic Circuit	16
13	Hydraulic Circuit Description	17
14	Electrical Circuit	18

A DESPATCH & UNLOADING

1. Loading, for dispatch, will be our responsibility. On receipt of the Stationary lift at site, please check and ensure that there is no physical damage to the equipment.

2. While unloading the equipment from the transporting vehicle, please ensure to use slings with rated capacity higher than the gross weight of the Stationary lift in packed condition.

3. Slings MUST be hooked ONLY at specified positions. These positions are indicated and marked with a figure of 'HOOK'. Improper sling position or improper slinging could cause damage to the equipment.

B. ORDERING OF SPARES

1. When ordering for spare, please specify the following in your Purchase Order.

   - Equipment Name
   - Model Number
   - Equipment Serial No.
   - Part name / Description
   - Part Number
   - Quantity required
   - Delivery period / time
   - Mode of dispatch

   This would avoid ambiguity and help us serve you better.

1.0.0 GENERAL INSTRUCTIONS

1.1.0 Important

1.1.1 All designated operators of this equipment must read, understand and familiarize themselves with the content of this manual before operating the equipment.

1.1.2 No modification or alteration to the equipment or its part may be done, either temporarily or as a permanent measure, without the written consent of the manufacture, M/s. Technosys Equipment. Any violation of this requirement would void the warranty on the equipment.

1.2.0 Responsibility

1.2.1 The equipment should be handled with care and always operated in a responsible manner.

1.2.2 Follow all safety norms, in vogue, when operating the equipment.

1.2.3 Not adhering to correct operating procedures or maintenance and carrying out repairs to the equipment through person not qualified or trained by the company may result in damage to the equipment. When necessary, call for our technical assistance.

1.2.4 Check the equipment and its functioning, everyday, prior to starting your work. Do not operate the equipment if any defect is noted. Report the defect to your superior.

1.2.5 Always ensure that the specification label is on the equipment and is legible. Note the rated capacity of the equipment and NEVER overload the equipment.

1.3.0 **Working Area**

1.3.1 The equipment is designed for working on evenly distributed load so the platform must be loaded centrally and uneven loading should be avoided which will cause uneven stressing of load members and tilting of platform.

1.3.2 Presence of other living being should not be permitted within the path or in the area where material is being moved, loaded and unloaded.

1.4.0 **Operating the equipment**

1.4.1 Do not operate the equipment unless you are familiar with the controls and operating procedure and are confident of handling the equipment.

1.4.2 Only authorized and trained personnel should operate / drive the equipment.

1.4.3 Never exceed the rated capacity of the equipment. The capacity is mentioned on the nameplate.

1.4.4 Operating pendent box is provided on railing with push buttons to 'LIFT', 'LOWER' and 'EMERGENCY CUT-OFF', also same controls are provided on control panel.

1.4.5 For lifting press and hold pressed the lift button till you reach the desired height and for lowering press and hold the lower button. Use emergency cut-off switch to stop the lift in case of emergency and after the operations are over

1.4.6 Load and unload the material centrally on the platform.

1.4.7 Ensure proper locking of doors if provided before lifting and lowering.

1.4.8 Ensure that the platform levels with the floor from the material is to be loaded or unloaded

1.4.9 Lift the platform to match the floor where the material is to be loaded or un loaded, ensure the platform matching manually.

1.4.10 Lower the platform till it reaches the rest position for loading or unloading at floor Level

1.4.11 Any accident caused during operation, either to the equipment or any person, should be promptly reported to the superior.

1. a CONSTRUCTION

Stationary lift table consists of a pair of lifting guide channels, in which the platform rollers are guided four nos. of rollers, are provided for guide. The platform is provided with railing and door on one side with lifting interlock. The platform will not work till you close the door properly. Hydraulic cylinder for lifting the platform is mounted at the base of guide channels. The cylinder piston is mounted with chain pulleys, chain anchors are provided on platform and guide channel to connect the lifting chain. Also the cable pulley is mounted with chain pulley to take the pendent on platform. The oil supply to lifting jack is given through lift lower block, between lift jack and block steel pipe is connected for safety. Hydraulic connection to the block is given form the power pack

The control panel is to be mounted separately provided with the three-phase indicator and on off switch and operating buttons. Pendent control box is provided on railing with LIFT, LOWER & EMERGENCY BUTTONS.

Fixing the lift

The lift guide channels are provided with holes for anchor fasteners to fix the guide channels on the wall support rigidly please ensure the fixing should be done take the complete load in lifted condition. Also note that the lifting guide channels are holding the load so positive fixing from the support has to be done before operating the lift the top anchors are main load taking anchors putting through members and supporting form back will be good for taking load. The anchoring should be enough to take minimum pulling load of three times than capacity.

2.0.0 **OPERATING**

2.1.0 **Starting**

2.1.1 Before starting ensures that there is no any leakage from the hydraulic connections and the electrical connections are in proper condition.

2.1.2 Switch on the power supply from the control panel.

2.1.3 Operating pendent box and control panel is provided with push buttons to '**LIFT**', '**LOWER**' and 'EMERGENCY **CUT-OFF'**. Unlock the both emergency cut-off switch. Press and hold pressed the lift button till you reach the desired height and for lowering press and hold the lower button. Use emergency cut-off switch to stop the lift in case of emergency and after the operations are over.

2.1.4 For loading operation load the platform centrally.

2.1.5 Lock the door provided on the railing as it is interlocked with the lifting of table. The table will not lift till the door is closed properly.

2.1.6 After the loading is lock the door. Press the lower button and hold it pressed till the platform comes to it end rest position.

2.1.7 Repeat the above procedure till you finish the loading. Also for unloading repeat the above procedure.

3.0.0 **MAINTENANCE INSTRUCTION**

3.1.0 **Daily Check**

3.1.1 Check hydraulic piping for leakages if any tighten the joint to eliminate the leakage.

3.1.2 Check electrical connections for its proper working and functioning of the interlocks for safety.

3.1.3 Check level of hydraulic oil.

3.3.0 **MONTHLY CHECK**

3.3.1 Lubricate at the all hinged joints and the rollers and guide ways by using recommended grease using grease gun.

3.3.2 Tighten all bolts, fasteners, electrical connections. Check for performance of all safety device.

3.3.3 Check for performance of all limit switches.

.

3.4.0 **ANNUAL CHECK**

3.4.1 Do a complete overhaul of the equipment.

3.4.3 Clean and flush hydraulic tank and distribution system and refill with fresh oil. Check for leakage and replace seals as necessary.

RECOMMENDED LUBRICANTS

GRASE:-

ESSO	BEACON-2
CASTROL PETROLEUM	CASTRDE ASELM
BHARAT PETROLEUM	BHARAT UNIVEX “A”

HYDRAULIC OIL:-


TELLUS-68

ENCLO-68


ASSEMBLIES
&
SPARE PARTS LIST

General Arrangement of Scissor Lift Table

SPECIFICATION OF PIT MOUNTED HYDRAULIC SCISSOR LIFT- R00	
SR NO	PARAMETER	DESCRIPTION
1	CAPACITY	2 TON
2	PLATFORM SIZE(CHEQUERED)	2000mm(L) X 2000mm(W)
3	SHUT HEIGHT	450 mm
4	LIFT HEIGHT	1300 mm
5	TOTAL HEIGHT	1750 mm
6	RAILING HEIGHT (2 SIDE)	900 mm
7	MANUAL LIP(1 SIDE)(PLAIN & SPLIT)	1950(L) X 350(W)
8	PIT SIZE	2250(L)X2050(W)
9	CONTROL PANEL	STANDARD
10	POWERPACK	3 HP, 3 PHASE AC
11	PENDANT	PUSH BUTTON MOUNTED ON RAILING"
12	FEATURE	LIFT CUT-OFF SWITCH

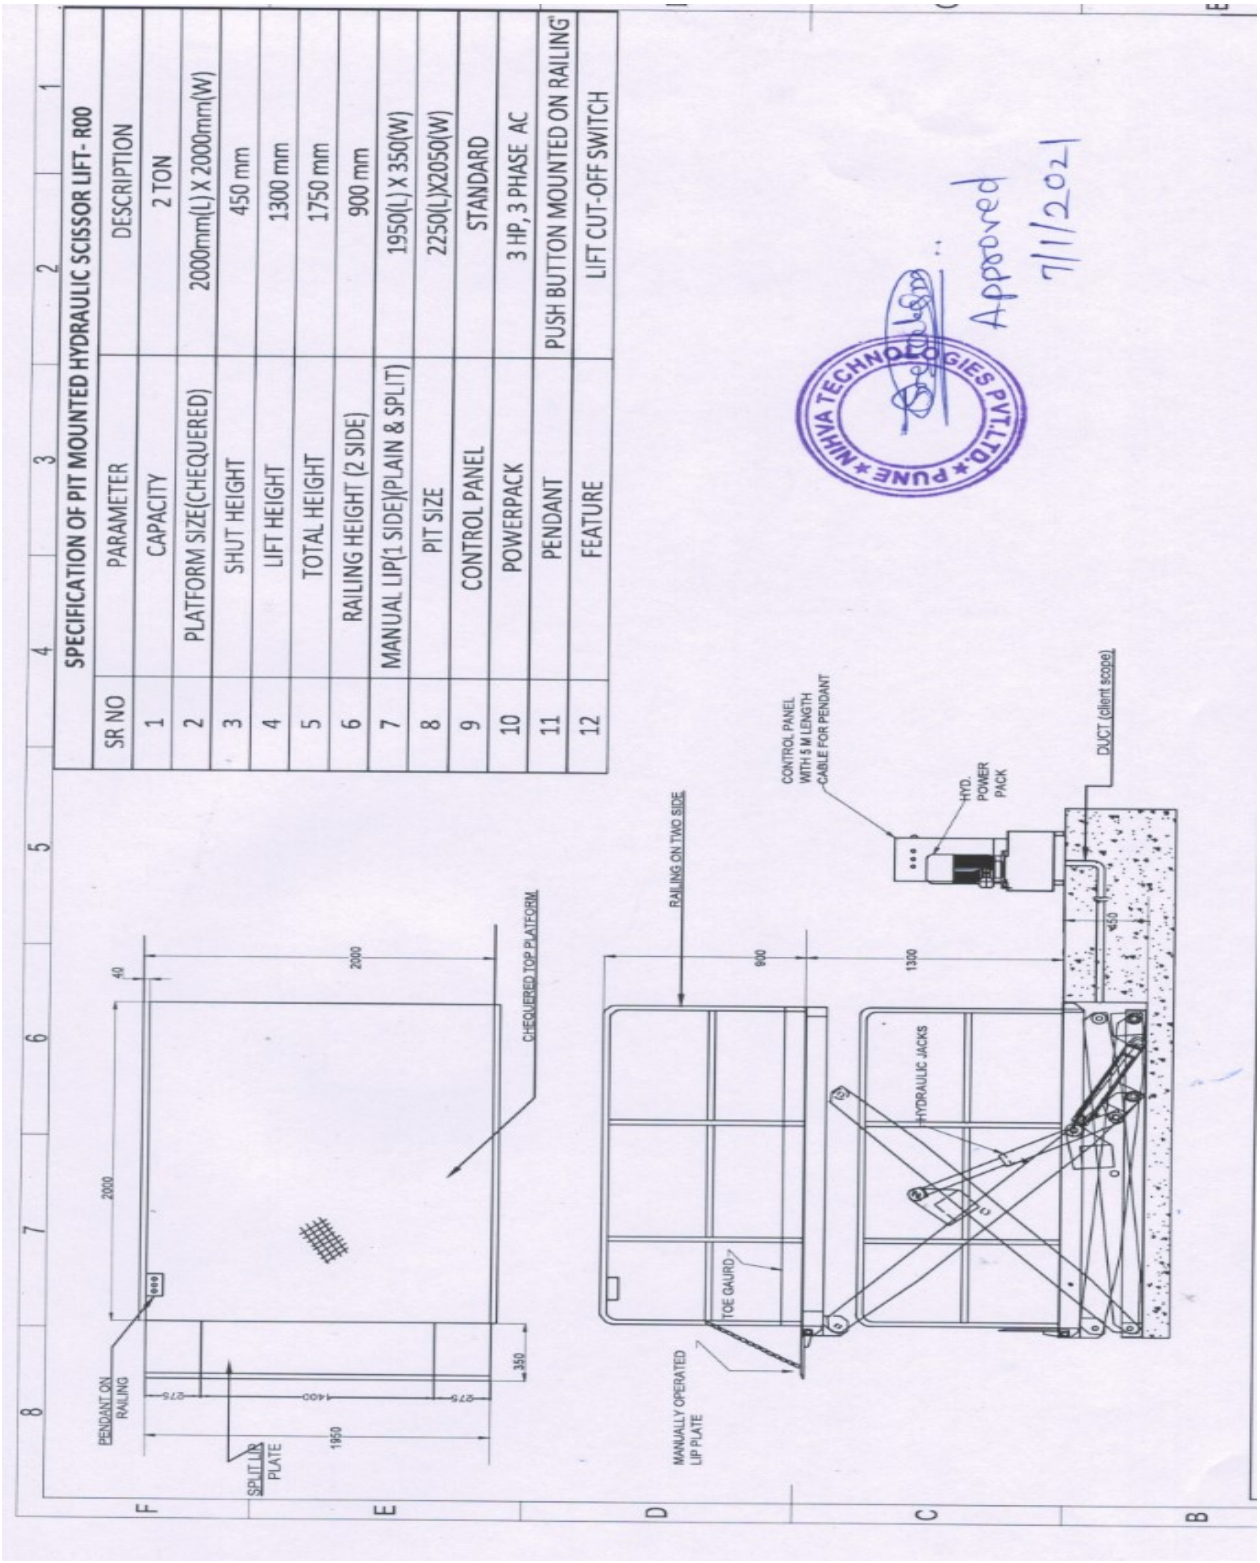


Exploded View For Top Platform Welded Assly

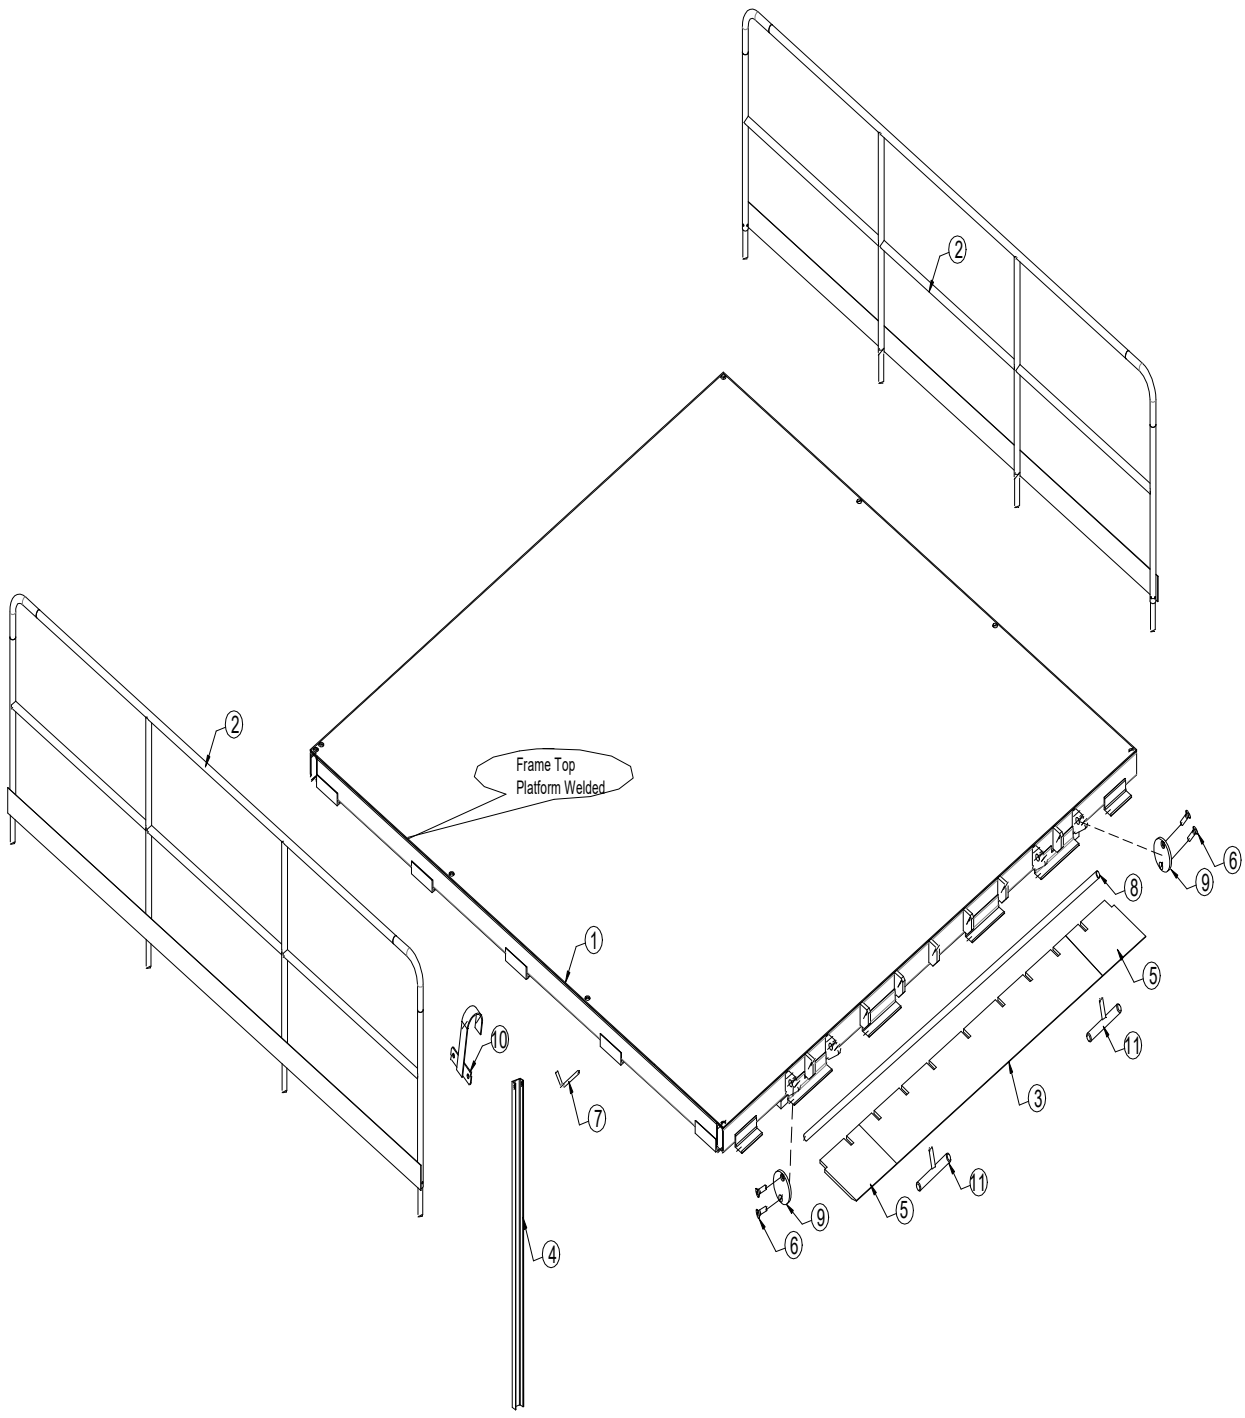

BOM For Exploded View Top Platform Welded Assly


ITEM NO.	PARTS NO.	DESCRIPTION	QTY
01	70007137	Top Platform Welded Assly	1
02	70007143	Side Railing Welded Assly	2
03	70007142-1398	Lip Plate Assembly	1
04	90000198-1500	ISMC	2
05	70007142-274	Lip Plate Assly	2
06	E60060108	CSK Bolt	4
07	70002196	Pin Pivot Steady Rest	2
08	70000161-1945	Pin Platform & Lip Pivot	1
09	70000164	Washer Lip Plate Pin Locking	2
10	70002976	Pendant Hook Assembly	1
11	70003447	Lip Plate Lock Hinge Assly	2

Exploded View For Bottom Platform& Scissor Welded Assly

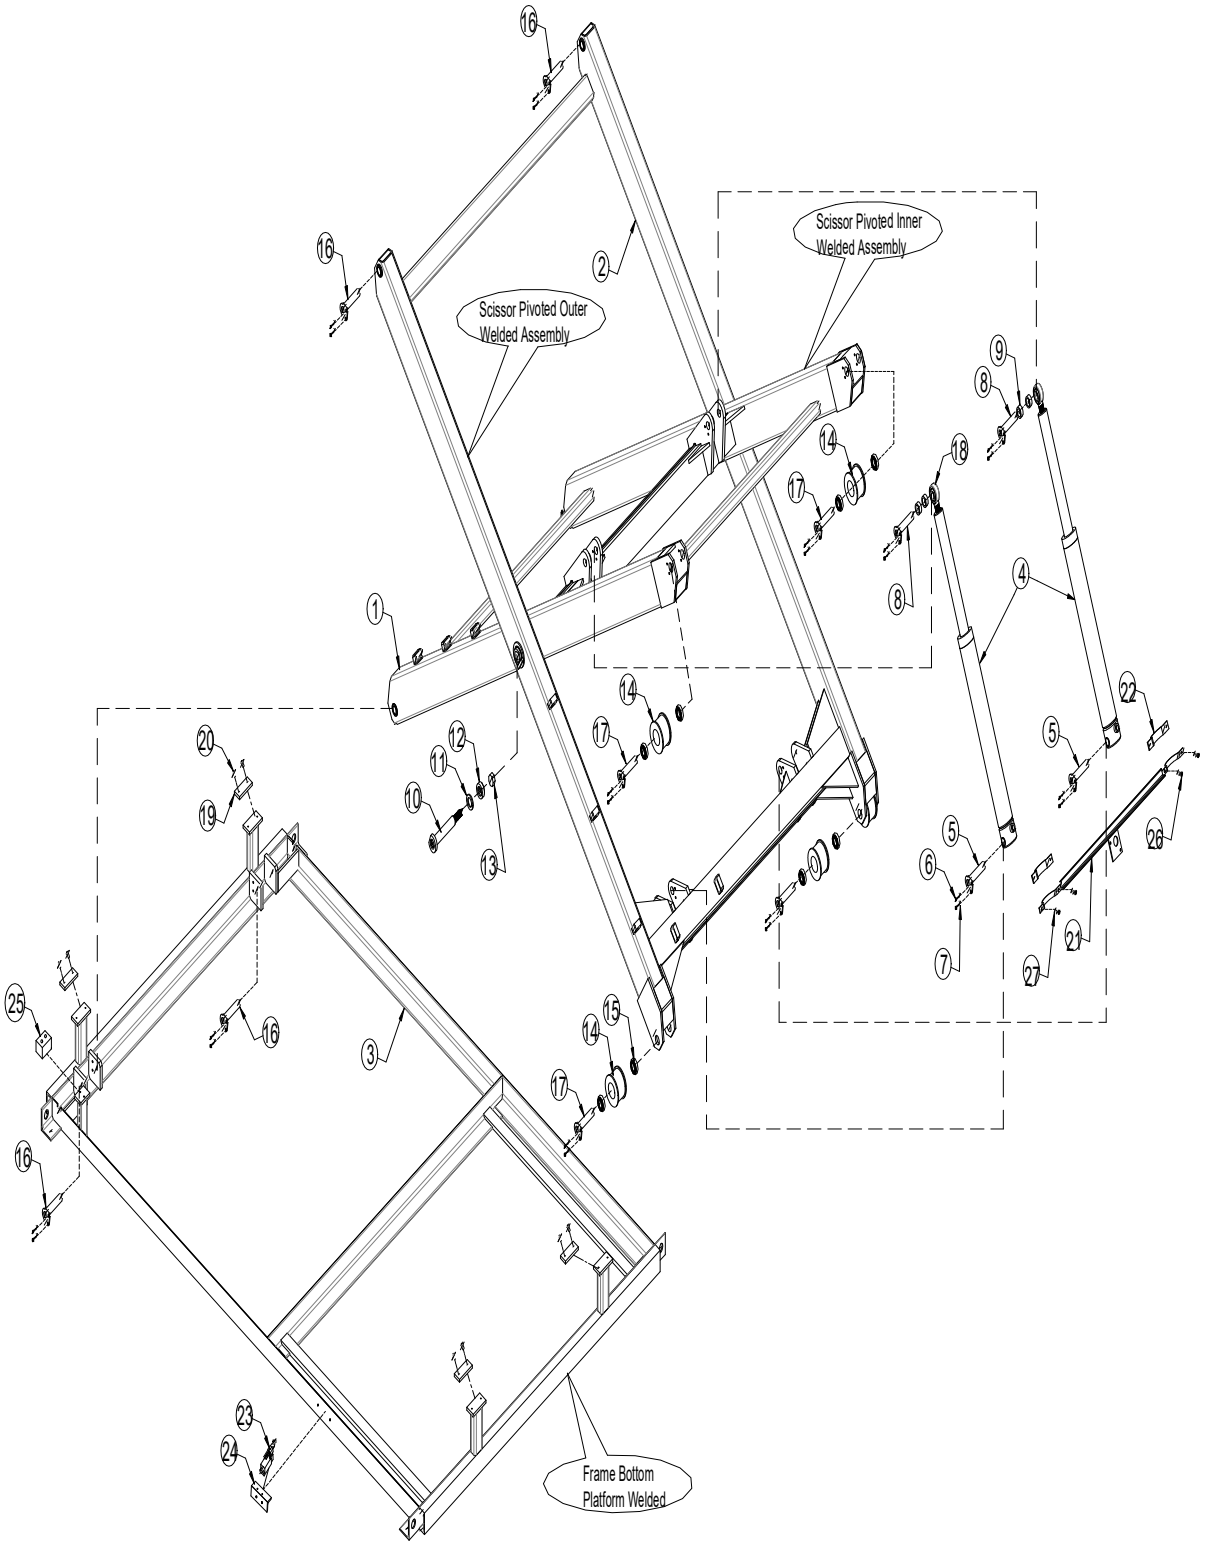

BOM For Exploded View Bottom Platform& Scissor Welded Assly

ITEM NO.	PARTS NO.	DESCRIPTION	QTY
01	70007138	Inner Scissor Welded Assly	1
02	70007140	Outer Scissor Welded Assly	1
03	70007136	Bottom Platform	1
04	70000921-380	Jack Assemly	1
05	70000363	Pin Jack Bottom	2
06	E51081210	Hex Bolt M8X20	16
07	E90130008	Spring Washer M8	16
08	70000559	Pin Jack Top	2
09	90000704	Jack Bush	4
10	70007141	Pin Scissor Center	2
11	90002212-10	Washer Side Center	2
12	70000422	Cup Washer	2
13	E67022425	Hex Nut 24X2P	2
14	70007060	Roller Scissor	4
15	BLB00039	Bearing 6006	8
16	70003787	Pin Scissor Pivot	4
17	70002333	Pin Scissor Roller Pivot	4
18	REB 00008	Pos 25	2
19	RUB00006	Rubber Pad	4
20	E60060108	Allen Csk M6	4
21	70004544-1000	Flow Control Valve Mtg Assly	1
22	90002228	Clamp Jack	2
23	10000959	Long Lever S/W Small - 8108	1
24	70001789	Angle Mtg Limit Switch	1
25	70000283	Block Junction 2 Way 3/8"bsp	1
26	E51081206	Hex Bolt M8X12	4
27	C90100008	Plain Washer M8	4

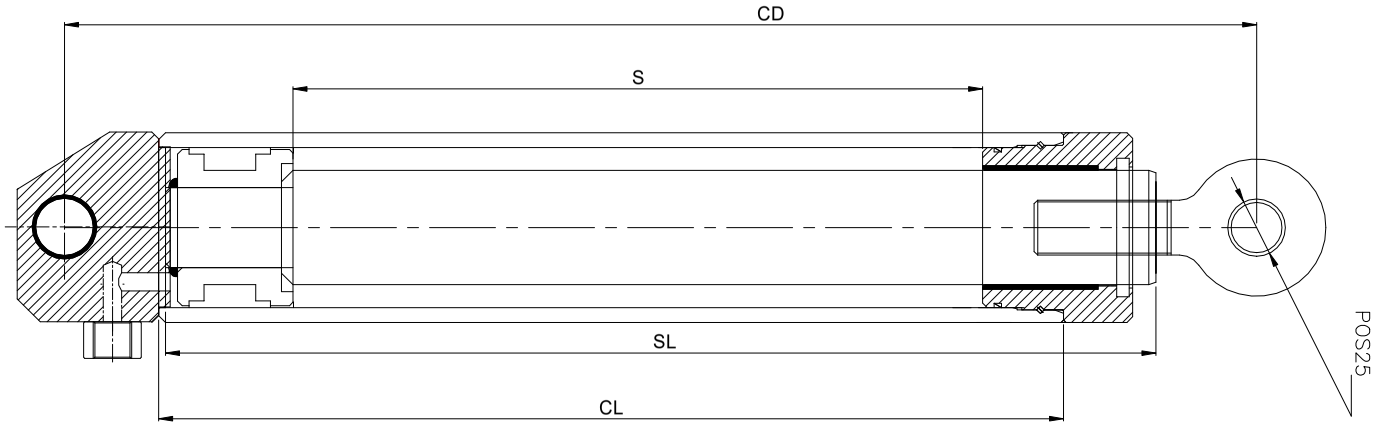

NOTE:-

SL :- SHAFT LENGTH.- -540mm

CL :- CYLINDER LENGTH.- -475mm


SP :- SPACER LENGTH.- --

CD :- JACK TOTAL LENGTH.- -635mm

S :- STROCK .- -380mm

Main Jack Assemly
PART NO-70000921-380
QTY-02
Seal kit- TH5070028

TECHNOSYS EQUIPMENT PVT. LTD.
PLOT NO - 144, SECTOR 10,
PCNTDA BHOSARI , PUNE 411 026
E- mail :- technosales@technosysequipment.com
Web :- www.technosysequipment.com

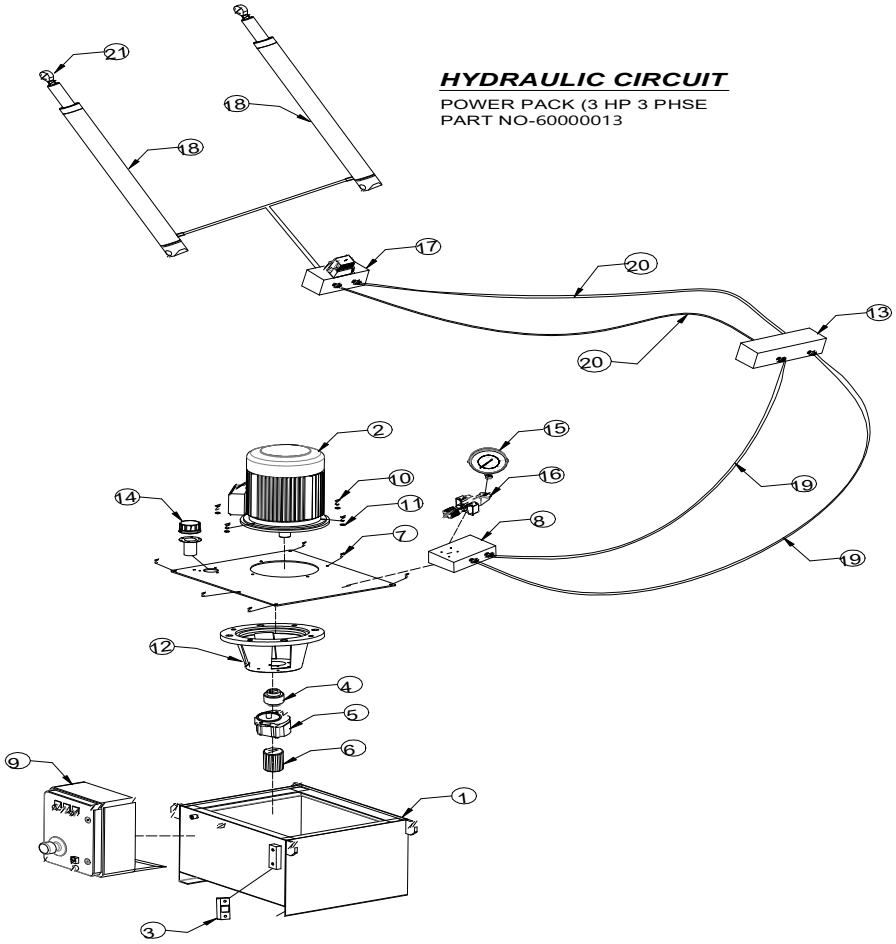

HYDRAULIC CIRCUIT

POWER PACK (3 HP 3 PHSE
PART NO-60000013

HYDRAULIC CIRCUIT


POWER PACK (3 HP 3 PHSE
PART NO-60000013

21	REB00008	Pos 25	2
20	38R2B90ST400	Pressure Line-3/8"-4000L	2
19	38R2B90ST350	Supplye Line-3/8"-3500L	2
18	70000921-380	Main Jack Assly	2
17	10000958	Lift Lower Block SFV 3/8" Port	1
16	10000145	Valve Pressure Relief DPRH 06S- 200-4	1
15	10000144	Pressure Gauge - 0 To 280 KG 1/4" BSP(M)	1
14	10000141	Filler Breather - FSB 25 - Make Hydroline	1
13	70000283	Junction Block 3/8"X3/8"	1
12	10001001	Bell Housing - BH-B1-3/5-1P-10	1
11	E90130012	Spring Washer	4
10	E51121712	Hex Bolt M12X25	4
9	10000531	Control Panel 3 Hp 3 Phase	1
8	70003295	Block Relief Valve	1
7	E51081207	Hex Bolt M8X15	12
6	10000062	Suction Stainer	1
5	10000324	Gear Pump-1P3020 CPSTB Dowty Gear Pump	1
4	10001004	Gear Coupling-5 HP M 28/17.5 P With Key way	1
3	10000142	Level Gauge LG6-03 - Make Hydroline	1
2	10000060	3 HP 3 PHSE	1
1	70000649	Oil Tank Horizontal Mtg.	1
ITEM NO.	PARTS NO.	DESCRIPTION	

Pendant-3 Way (2 Push Button Up/Down, Emergency Cutoff)
PART NO-10000961



Control Panel 3 Hp 3 Phase Scissor Table Part no-10001365

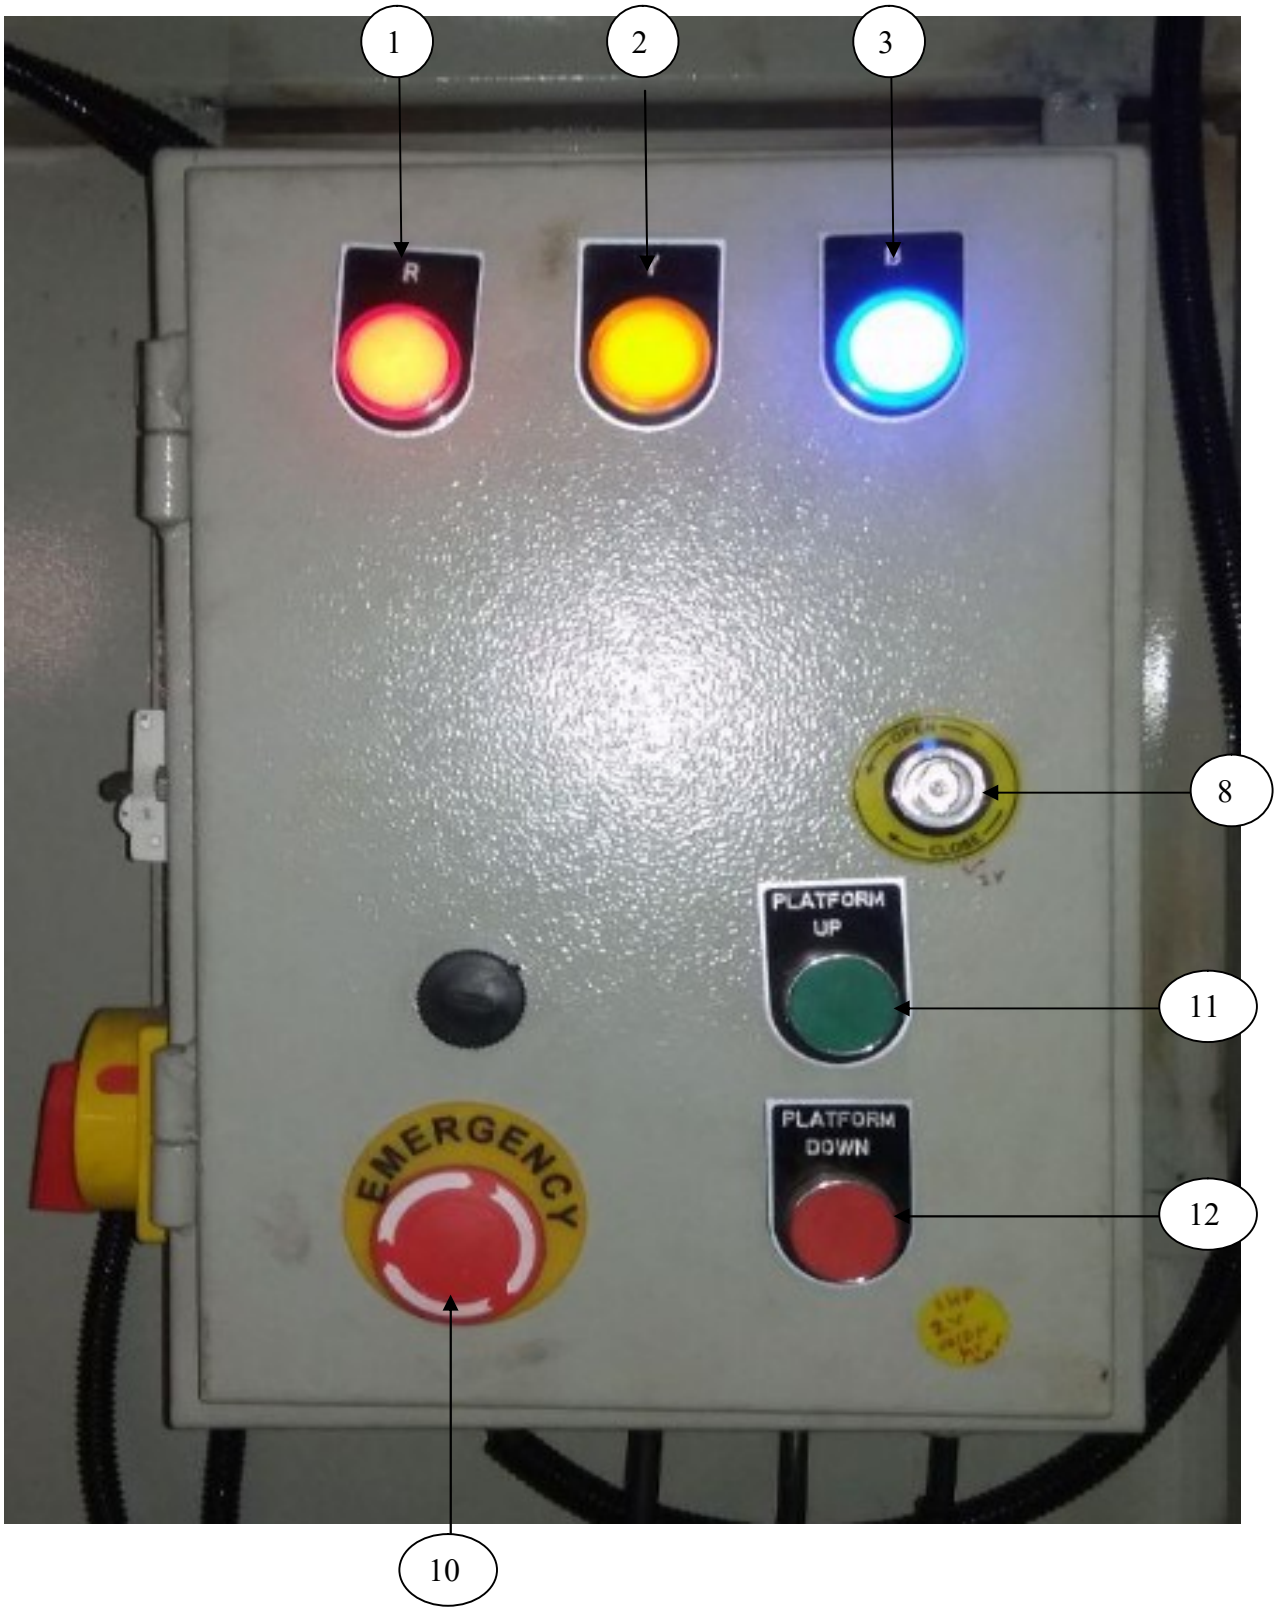




SAFETY ACCESSORISE

SR.NO.	PART NO.	DESCRIPTION	QTY.
01	10000731	R-Phase Indicator Lights-220V-Color-Red	01
02	10000337	Y-Phase Indicator Lights-220V-Color-Yellow	01
03	10000239	Y-Phase Indicator Lights-220V-Color-Blue	01
04	10000241	MCB-10AMP-3Pole	01
05	10000940	Loto S/W-16AMP	01
06	10000939	SMPS	01
07	10000762	Gland-PG-13	01
08	10002035	Lock	01
09	10001297	PVC Terminal Strip-2-Way	01
10	10000510	Main ON/OFF	01
11	10000659	Push Button-Green	01
12	10000753	Push Button-Red	01

SCISSOR LIFT TABLE SMPS CIRCUIT DIAGRAM

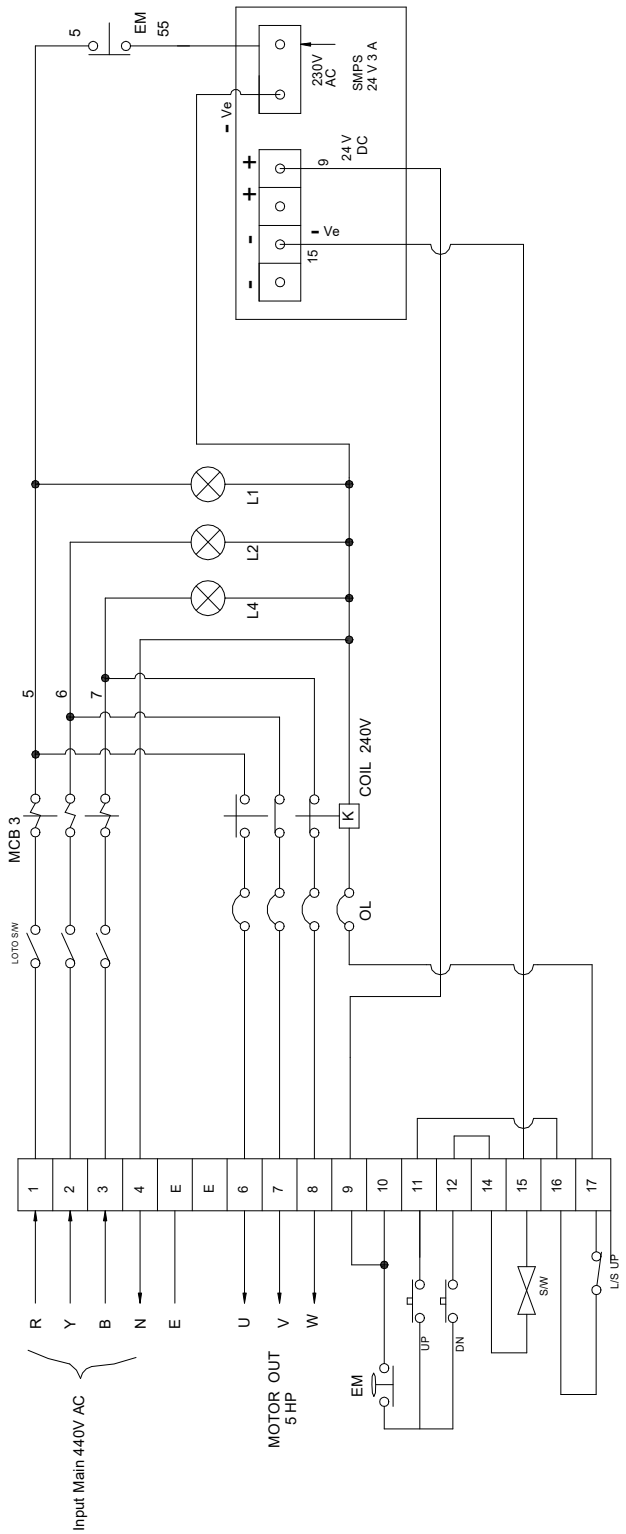

MANUAL

SCISSOR LIFT TABLE