
Operating Instructions

ALBANY

ASSA ABLOY

RapidProtect RP100

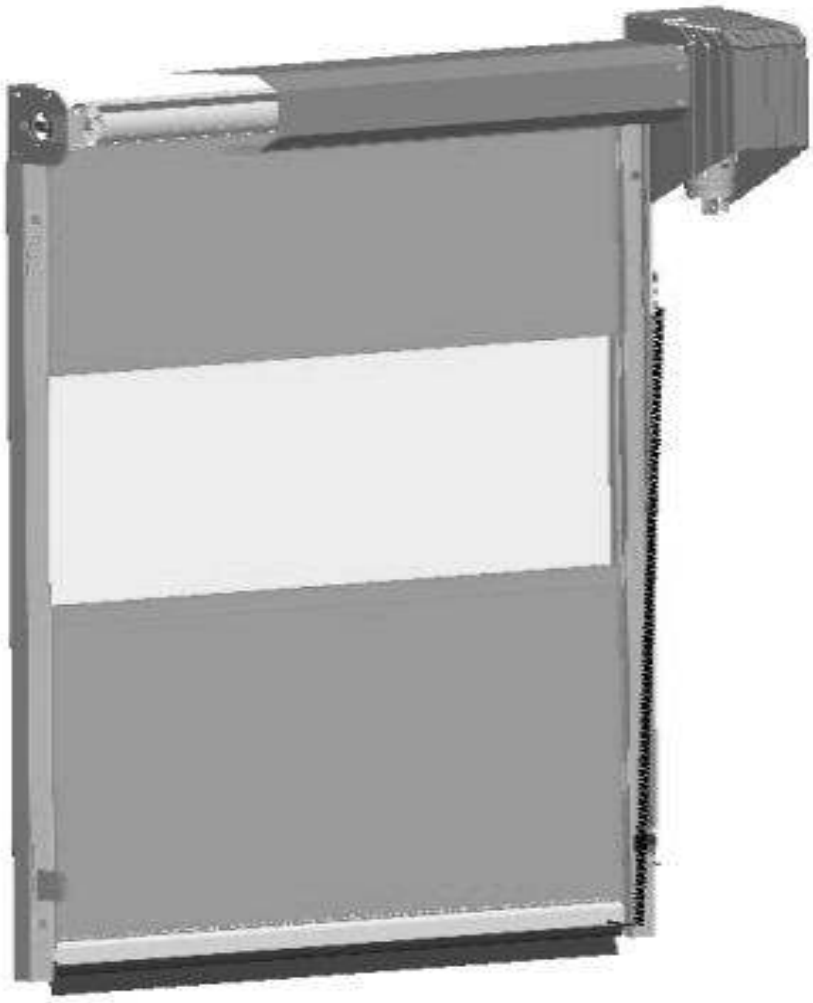

6410R0259

© 2012 ALBANY Door Systems GmbH.

All rights to the door and the related operating instructions are protected. Legal action will be taken in case of imitation or copying of the door system.

These operating instructions may not be reprinted or otherwise reproduced without the written consent of ALBANY Door Systems.

The general terms and conditions of ALBANY Door Systems GmbH are applicable.

ALBANY Door Systems reserves the right to make technical changes.

These operating instructions are an integral part of the door. The original version of the operating instructions is in German.

Manufacturer

ASSA ABLOY Entrance Systems AB

Lodjursgatan 10

SE-261 44 Landskrona

Sweden

Internet: www.albanydoors.com

Email: verkauf.de.albany@assaabloy.com

Contents

1 Introduction 5
1.1 Applicable documents 5
1.2 Declaration of incorporation 5
1.3 Amendments and validity 5
1.4 Document storage 5
1.5 Target group 5
1.6 Conventions 5
1.6.1 Warnings 5
1.6.2 Operation concept 6

2 Safety 7
2.1 General safety advice 7
2.2 Personal protection 7
2.3 Duty of care by the operator 8
2.4 Intended use 8
2.5 Optional safety devices 9
2.5.1 Optional electric safety devices 9
2.5.2 Additional safety systems 9
2.6 Residual risks 9

3 Door Product Description 10
3.1 Function and installation of the door 10
3.2 Door components 11
3.3 Control unit 11
3.4 Drive 12
3.5 Identification plate (example) 12
3.6 Technical Data 12

4 Operation 13
4.1 Safety 13
4.2 Operation 13
4.3 Malfunction 13
4.3.1 Mechanical malfunctions 14
4.3.2 Electrical faults 14

5 Installation 15
5.1 Inspecting the delivery 15
5.2 Fitting preparations 15
5.3 Installation 16
5.4 Dismantling 26

6 Life Cycle 27
6.1 Installation 27
6.2 Maintenance and Cleaning 27
6.2.1 Safety instructions 27
6.2.2 Inspection plan 27
6.2.3 Cleaning and care 28
6.3 Decommissioning 28
6.4 Storage and transport 29
6.4.1 Transport 29
6.4.2 Storage 29
6.5 Disposal 29

7 Appendix 30
7.1 Technical Data RapidProtect 100 30
7.2 Maximum opening and closing speeds and times 31
7.3 Principle drawing 32
7.4 Fixing plan 35
7.5 Inspection plan 36
7.6 Manufacturer’s certifications 37
7.6.1 Declaration of Incorporation 37

1 Introduction

These operating instructions apply to the use of the doors with associated control units: RapidProtect 100. They are part of the product and describe the intended and safe use throughout the whole product life cycle.

1.1 Applicable documents

The operating instructions are only valid in combination with the operating instructions for the control unit and the inspection book. Both of these documents are supplied with the product.

1.2 Declaration of incorporation

The declaration of incorporation document is enclosed in the log book which is delivered with the door.

Modifications that affect the technical data specified in the operating instructions or intended use, i.e. modifications that materially alter the machine, invalidate the manufacturer’s declaration of incorporation.

1.3 Amendments and validity

The information contained in these instructions constitutes the technical specifications applicable at time of publication. Significant changes will be incorporated in a new edition of the operating instructions. The document and version number of these instructions can be found in the footer.

1.4 Document storage

Keep these operating instructions in the storage bag inside the control cabinet.

1.5 Target group

These operating instructions are addressed to trained, qualified and authorised personnel. All setup configurations, and in particular repairs and maintenance, may only be performed by employees of the manufacturer or other trained specialists.

1.6 Conventions

This section explains the conventions used in these instructions for safety information and operations.

1.6.1 Warnings

Warning notices give advice of existing danger for life and health of persons as well as for machine, material or environment.

The advice assembled directly at the control box and the door must be noticed and kept in readable condition at all times.

Warning notices in this document are formatted as follows:

If the danger is an electrical hazard, the appropriate pictogram is used:

SIGNAL WORD



Danger!

Consequences

⇨ Precautions

SIGNAL WORD



Danger!

Consequences

⇨ Precautions

The following warning levels are used:

SIGNAL WORD	***Hazard level***	***Consequences of non-observance***
DANGER	Immediate grave danger	Death or serious physical injury
WARNING	Potential immediate grave danger	Death or serious physical injury
CAUTION	Potential hazardous situation	Minor physical injuries, material damage

This symbol leads to information explaining the various door operations.



Important information

1.6.2 Operation concept

Aim of the operation

Step

→ Result of the step (optional)

Step ...

Result of the step (optional)

2 Safety

2.1 General safety advice

These operating instructions contain important information for commissioning, operating, transporting, storing and maintaining the door safely and properly.

- Please read the operating manual carefully and keep it at a safe place for further use.
- Take particular note of the information in this section. Also note the specific safety information included in the other sections.
- Use the door only for the intended purpose. Upon transfer of this door to third parties this user manual must also be transferred to this party.

2.2 Personal protection

- The gate may not be used in operation by staff. No special personal protection equipment is required for using the door. Furthermore, the regulations of the plant or facility where the door is used also apply.
- Upon failure of the electrical drive the door leaf may be moved upwards by use of the hand crank (optional). In this case the drive is switched powerless.

WARNING



Risk of injury

It can lead to injuries by simultaneous starting of the motor during inserting the emergency hand crank.

⇨ Always switch off the main switch before using the emergency hand crank.

- Do not put your hands on the side columns of the door or in the area of the top roll during operation.
- Untidiness may cause accidents. Keep the immediate area of the door tidy.
- Do not climb up the door.
- When performing any type of work on the door, set the main switch (power switch) to “Off” or “0” or disconnect the CEE plug, and secure the switch or plug against accidental re-activation or reconnection.
- Stop using the door immediately in the event of mechanical or electrical damage, especially if the power cable or control cables are damaged.
- The door must only be operated on defined voltage or net frequency.
- Use only equipment or additional features which are authorized by the manufacturer of the door.

2.3 Duty of care by the operator

The door has been designed and manufactured under consideration of a risk analysis according careful selection of valid norms and further technical specifications. The system meets status of technique.

But this safety standard can only be reached in practice if all necessary measures and precautions are observed. It is the duty of the door operator to plan the respective measures and check it's performance.

DANGER



Risk of personal injury

Unintentional door use can lead to severe personal injury.

⇨ The area of the door needs safety guards, so that no staff can reach the door during operation.

⇨ That installation, initial operation, inspection, maintenance, repair work and dismantling is made only by manufacturer personnel or manufacturer trained/qualified personnel.

Observe the following instructions on safe operation of the door:

- The door must be regarded as a machine and be integrated into a plant according to the safety of a machine.
- No staff is allowed to reach the door during operation.
- Use the machine only for its intended purpose.
- That the machine is operated only in perfectly functioning state and that the safety features are regularly checked for orderly operation,
- The operation manual (in a readable condition at all times) is kept at the site of the door system for further use if necessary,
- That the operating personnel is continuously trained with regard to working safety and operating instructions and especially the herein containing safety instructions,
- The advice assembled directly at the control box and the door must be noticed and kept in readable condition at all times.

2.4 Intended use

If not explicitly otherwise described, our doors are developed and tested for regular conditions. The door is for applications in transport systems such as band-conveyor, automatic elevator, storage systems to separate two transport sections. The door operation is only allowed in totally enclosed working areas with safety guards. No staff is allowed to reach the door during operation except for inspection, maintenance and repair work.

Depending on the model, the doors are designed for installation as interior doors and for use under normal environmental conditions. We are happy to advise you on the choice of suitable options for use under special conditions (e.g. permanent load on one side from temperature, overpressure/vacuum, high humidity levels or particular environmental influences etc.).

2.5 Optional safety devices

2.5.1 Optional electric safety devices

Before each downward cycle of the door an internal “self testing” of the photocells and the control unit is made automatically. If a fault is detected, disruption of power supply for the control unit occurs immediately.

2.5.2 Additional safety systems

2.5.2.1 Sensors

Depending on the kind of door application it may be advisable to utilize additional sensors for safety reasons.

Albany Door Systems offers a big variety of further safety systems for high-speed doors including light curtain, motion sensing detectors, floor loops, etc. For individual cases we suggest consultation with an Albany Door Systems representative at the application site.

2.6 Residual risks

The door has been designed and manufactured under consideration of a risk analysis according careful selection of valid norms and further technical specifications. The system meets status of technique.

3 Door Product Description

The operation and construction of the door RapidProtect 100 are described below. The technical data are listed in the appendix.

3.1 Function and installation of the door

RapidProtect 100 doors are vertically opening high-speed roll-up doors for the use in transport systems. They consist of two side frames, a top roll with an electric drive unit, a door curtain and a bottom profile.

The side frames guide the bottom profile and the door curtain, which is rolled onto the top roll when the door opens.

During closing of the door the curtain rolls down from the top roll and is being pulled down by the self weight of the bottom profile and the door curtain.


3.1.1.1 Optional safety systems

RapidProtect 100 doors can be fitted with protection on the main closing edge.

Optionally the doors can be fitted with a photocell on the side frames. Disruption of this photocell will lead to a complete stop of the door curtain, then the door will reverse to the open position.

The electric safety edge is monitored permanently whenever the door closes. If a fault is detected, the power supply to the drive unit is cut.

3.2 Door components

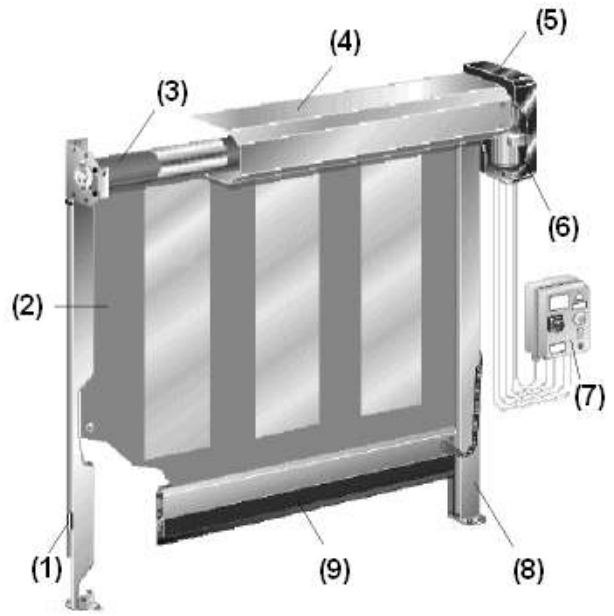

1 Photocell (optional)
2 Door curtain
3 top roll
4 Option: Top roll cover (galvanized steel)
5 Option: Motor cover (Plastic, steel powder coated)
6 Drive system
7 Electrical control system
8 side frame
9 rubber profile

The door line photocell **(1)** safeguards the closing area of the door. Disruption of the beam prevents or stops the closing movement.

Depending on the type, flexible door curtains **(2)** are made from coated, dyed and woven polyester monofilament.

The top roll **(3)** has a tubular aluminium shaft with glued-in shaft stubs.

The drive unit **(6)** contains an electric motor, gearbox, limit switches and encoder.

The electrical switchbox **(7)** contains an ACS 25 / ACS 40.

The side frames **(8)** are made from galvanised steel.

The bottom profile is equipped with a rubber profile **(9)**. An electrical safety edge can be chosen as an option. Upon touching the safety edge the door reverses into the open position immediately

3.3 Control unit

The RapidProtect 100 can be operated with a contactor control unit. Alternatively the doors may be operated with a powerful frequency converter control unit, which enables soft acceleration and deceleration of the door.

See the table in the appendix (7.2) for the maximum closing speeds of the individual door types.

DANGER

Risk of electrical shock

Operating doors with drive units or control units other than the recommended types may create a risk of electrical shock.

⇨ The door must only be operated with an original drive and control unit from the manufacturer.

3.4 Drive

The RapidProtect 100 is being operated with an electrical drive unit. The drive unit is installed at the upper part of the door, vibration muffled and not accessible from the floor. The position of the drive unit may be selected by the customer for the right or left hand side. The temperature of the drive unit is safeguarded by a thermo element, which disrupts the power supply of the drive upon overheating.

3.5 Identification plate (example)





(the actual data will vary depending on the specific door)

3.6 Technical Data

The appendix contains the following technical data:

Technical Data	***Location***
Door dimensions	Principle drawing
Dimensions of the installed door	
Fitting clearances	
Fixing points	Fixing plan

See the appendix for all other technical data for the door.

Albany Door Systems reserves the right to make changes to technical information listed in this document.

4 Operation

This section describes the operation of the door, irrespective of the control unit used. See the control unit user manual for a description of the control unit concerned.

4.1 Safety

- Do not use this door for purposes it is not intended for.
- Upon damage of the door (mechanical or electrical) it must immediately be set off operation. This is especially valid on damages of the power net or control cables.
- Use only equipment or additional features which are authorized by the manufacturer of the door.
- Observe the safety instructions in Section 2 also.

4.2 Operation

The door has an electrical drive unit and can be operated using the buttons on the door control unit or by additional external actuators and safety devices.

The Open, Stop and Close buttons on the door control unit should normally be used during door setup, maintenance and repair activities.

In regular operation, the door can be controlled by external signal sources such as pull-cord switches, induction loops, radar or radio detectors or mushroom-head buttons connected to the door control unit via dry contacts.

Generally, the door is operated by a system control.

The choice of impulse generator is part of the design and setup of the door and control system and may only be performed by trained specialists.

4.3 Malfunction

DANGER

Risk of personal injury and material damage

Improper troubleshooting can lead to damage to the product and serious personal injuries.

⇨ Troubleshooting must always be performed by suitably qualified staff.

⇨ Switch off power to the door and secure it against accidental re-activation.

⇨ Secure the main switch or CEE connector against being switched on again by locking it or by having a second person present.

⇨ Secure the action area of the door.

If the error cannot be repaired please contact the aftermarket department of the supplier or manufacturer of the door.

4.3.1 Mechanical malfunctions

Malfunction	***Possible causes***	***Necessary measures***
Door opens or closes independently	Brake at the drive defect	Exchange the brake
	Brake wrongly adjusted	Adjust the brake
Drive without any function	Power supply is off	Connect the door to the power
	Electrical connections defective	Check electrical connections
	Safety device is defective	Exchange the safety devices
curtain unwraps inclined	Door not correctly installed	Call after market
	An object was rolled up	Close the door and check for enclosed object

4.3.2 Electrical faults

Malfunction	***Possible causes***	***Necessary measures***
Door without any function	Power supply is off	Check power supply, net fuse
	Safety device damaged	Check control unit and exchange the fuse
	Main switch off	Check (main switch) switch on
	Stop-circuit interrupted	Check stop circuit. Not used stop inputs must be bridged in accordance to the electrical drawing
Door does not close	Up impulse permanently activated	Test impulse actuator
	Safety photocell interrupted / disconnected	Test safety devices
Door close only with next impulse	Toggle circuit adjusted	Check adjusted control function

5 Installation

DANGER



Risk of injury

Improper handling of the packaged door can lead to injury.

⇨ The palette must be placed on even ground.

⇨ Do not remove the pallet before the start of installation.

5.1 Inspecting the delivery

The door is mainly preassembled when delivered. The side columns are fixed together with the barrel cover, the motor cover (if ordered), fixing material and control unit onto the transport device (wooden palette).

- Check the door for damage during transport.
- Check the delivered items against the order documents to ensure that the delivery is complete.

5.2 Fitting preparations

DANGER



Risk of injury

Incorrect installation of the door can lead to injury.

Isopanel walls, chequer bricks and light partition walls must be checked for their suitability for assembly.

⇨ The door must only be installed by trained/authorized personnel.





⇨ The fitting should only be done by manufacturer personnel/subcontractor or manufacturer trained personnel.


⇨ Do not remove the straps securing the door curtain until after the drive unit has been fitted.

Complete the following preparations before installing the door:


- Check the fitting site with regard to necessary fixing points and lift up conditions. If necessary a supporting frame or other fixing possibilities must be made. The upper fixing points should be screwed onto a steel supporting frame or concrete element. Consult the installation drawing in 7.5.
- Check measures of the actual dimensions (width and height) of the door opening and compare with order papers.
- The fitting site must be secured against pedestrian and vehicle traffic.
- The plastic packing of the door must be removed before fitting.

5.3 Installation

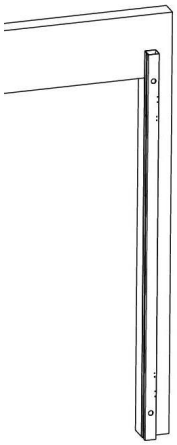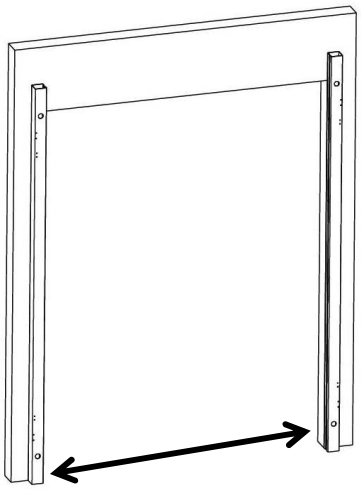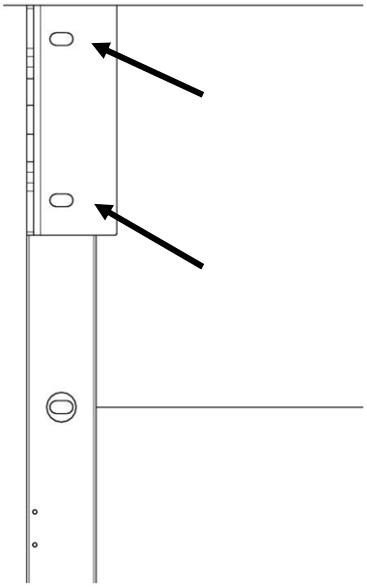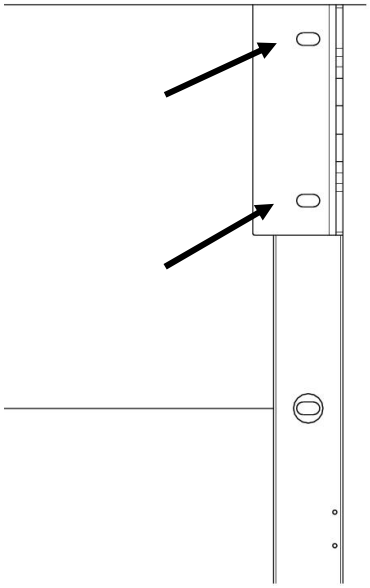
<table>
<tr><td>  </td><td>  </td></tr>
<tr><td>1. If the floor slopes, the first side frame must be installed on the higher side. Use a spirit level to ensure that the first side frame is exactly vertical. Secure at the fixing points (mounting hardware not supplied). The mounting points can be found on the fixing plan.</td><td>2. Align the second side frame to exact daylight width. Max. height difference between the two side frames is 3 mm. If necessary, the lower side must be padded. Secure at the fixing points (mounting hardware not supplied).</td></tr>
<tr><td>  </td><td>  </td></tr>
<tr><td>3. Non-drive side: Align head plate and side frame on the outer side. Mark fixing points and drill holes. Do not fix head plate.</td><td>4. Drive side: Align head plate and side frame on the outer side. Secure at the fixing points (mounting hardware not supplied).</td></tr>
</table>

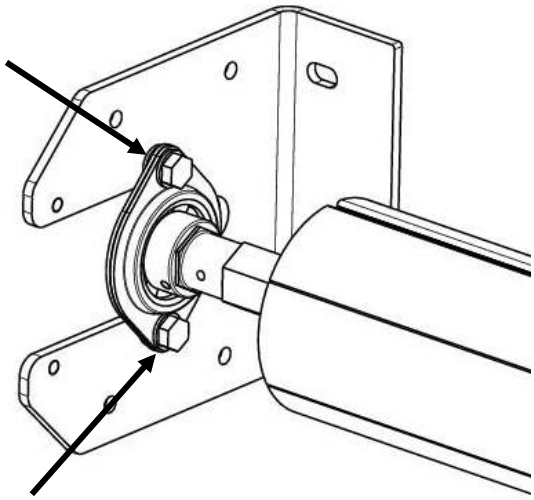


5. Non-drive side: Loosen the screws of the bearing.

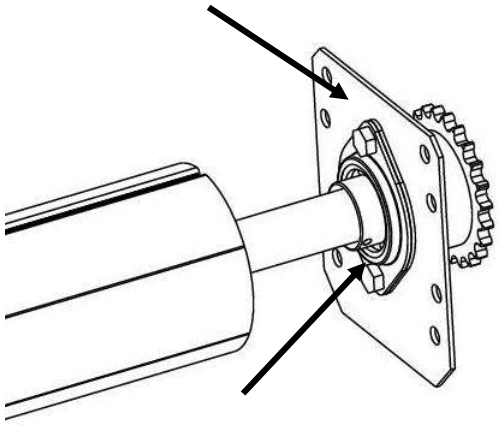





6. Chain drive: Drive side Loosen the screws of the bearing.




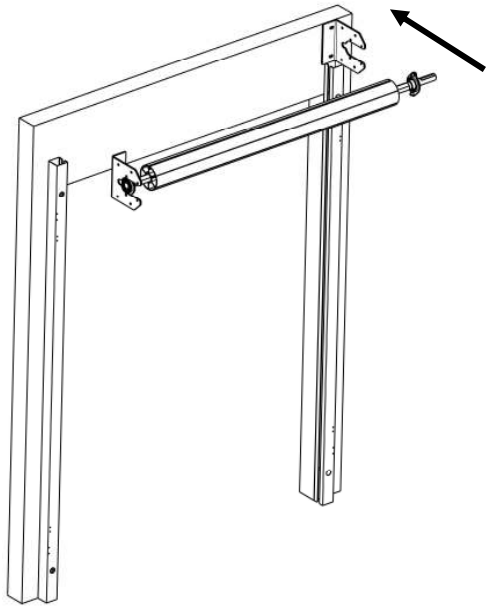



7. Standard drive unit: Use a crane or fork-lift truck etc. to lift the top roll. Move top roll into the head plate. The bearing must be fitted from **outside** on the drive unit side.

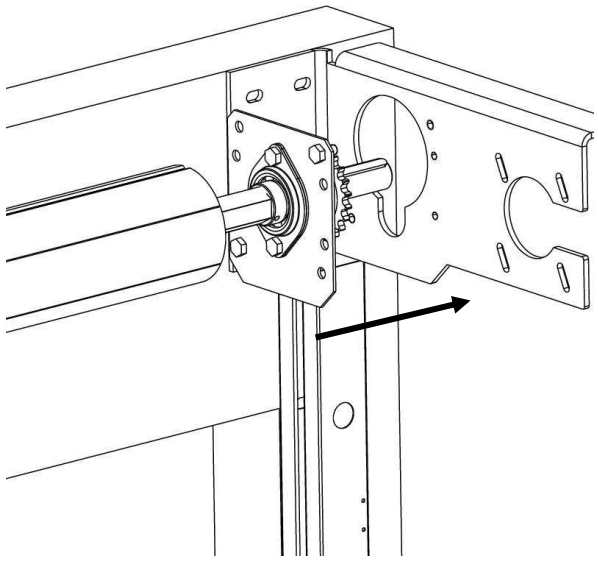


8. Chain drive: Use a crane or fork-lift truck etc. to lift the top roll. Move top roll into the head plate. The bearing must be fitted from **inside** on the other side

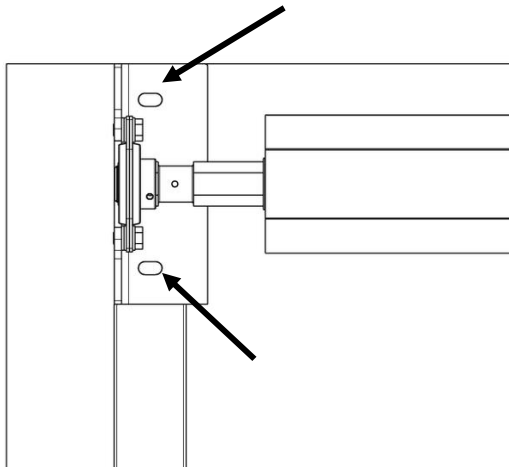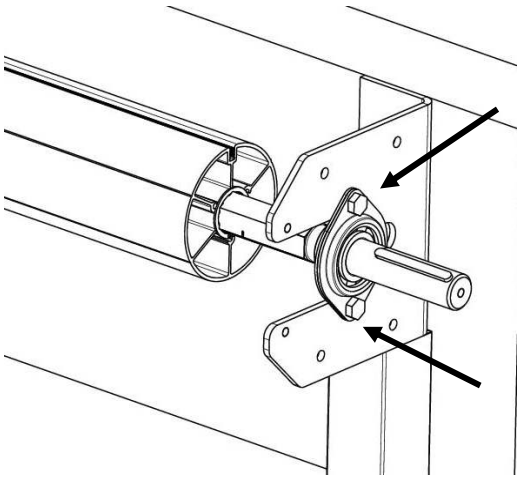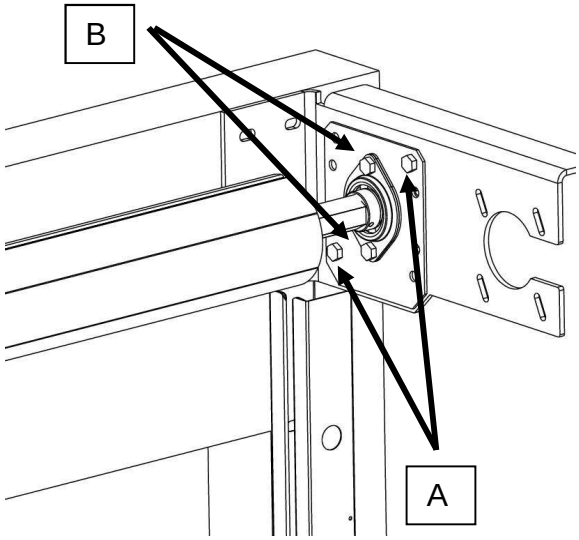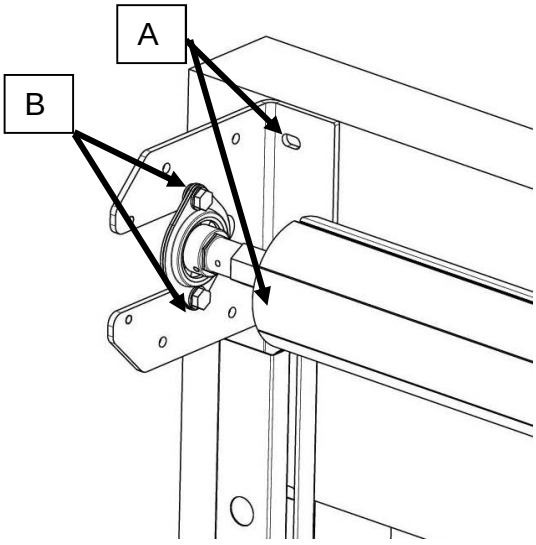	
9. Non-drive side: Align head plate and side frame on the outer side. Secure at the fixing points (mounting hardware not supplied). Chain drive: Let screws loose!	**10.** Drive side Standard drive unit: The bearing case is held together with cable ties. The cable ties must be removed before screwing. Fix bearing to head plate (hex head screws M10x18).
	
11. Drive side Chain drive: Fix flange plate to head plate (A) (hex head screws M10x18). Secure scews of bearing (B).	**12.** Non-drive side: Secure scews of bearing (B). Secure screws (A) to wall (chain drive). Secure set screws of bearings.

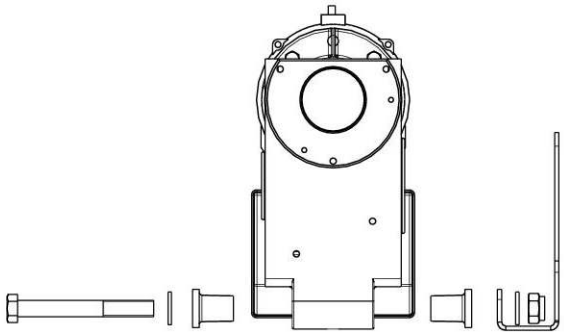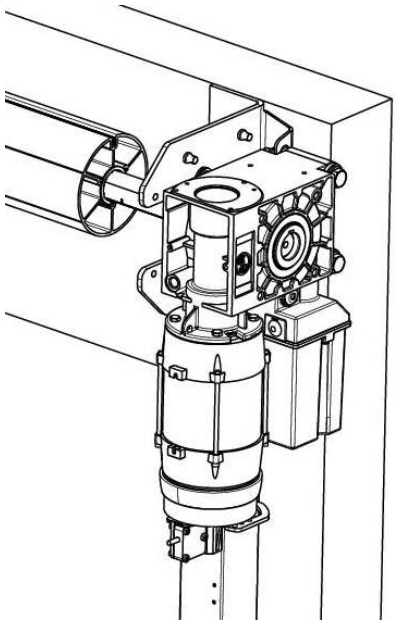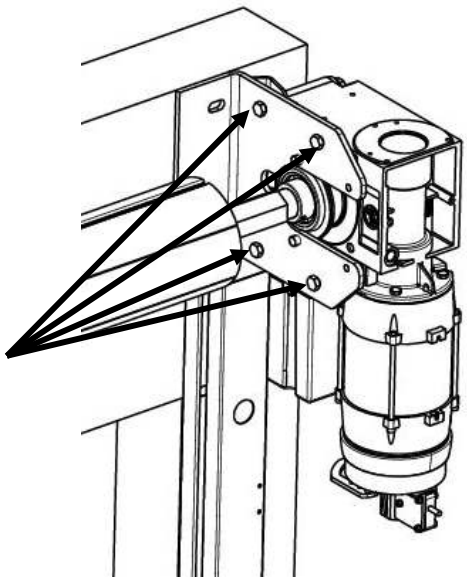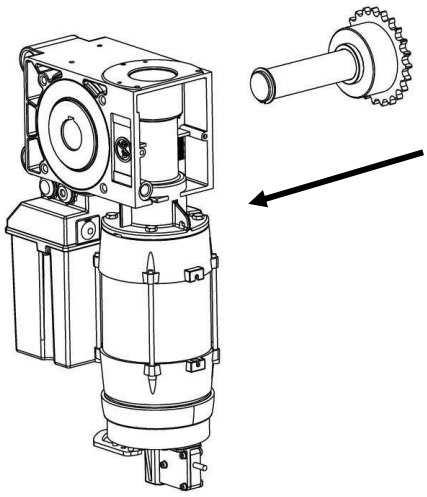
	
13. Assemble torque support to drive unit. Drive side right side shown, left mirror inverted ((hex head screws M12x100 and locknut).	**14.** Standard drive unit: Now place the motor on the drive shaft. Check the plain key connection. Check that the position is secure, use lifting tools if necessary.
	
15. Secure the torque support to the top plate using 4 hex head screws M8x25 /nuts.	**16.** Chain drive: Assemble shaft with chain sprocket. Check the plain key connection.

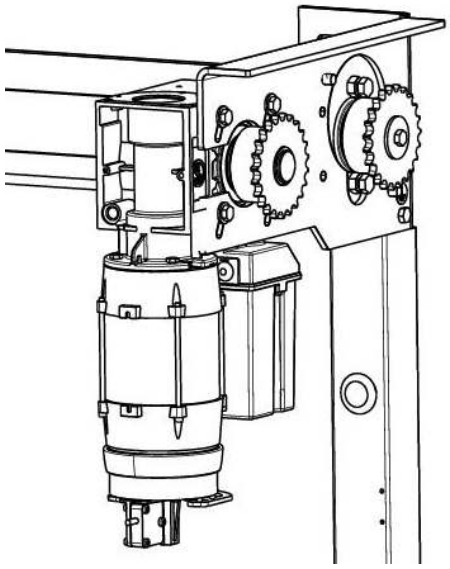


17. Chain drive: Mount drive unit in upper position of slots (hex head screw M8x10). Check that the position is secure, use lifting tools if necessary.

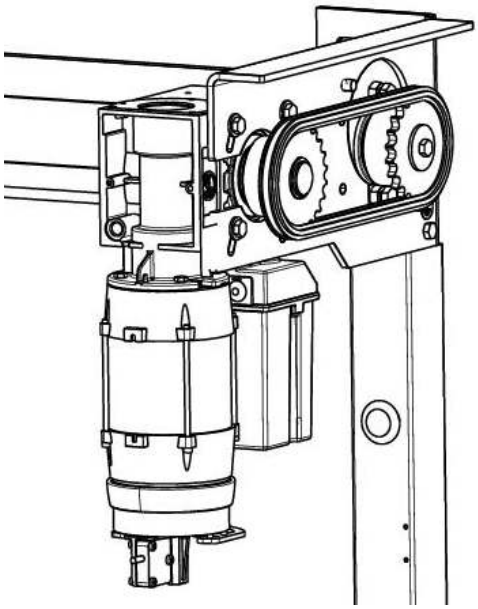


18. Chain drive: Put on chain. Tension chain slightly by moving the drive unit in the slots down.

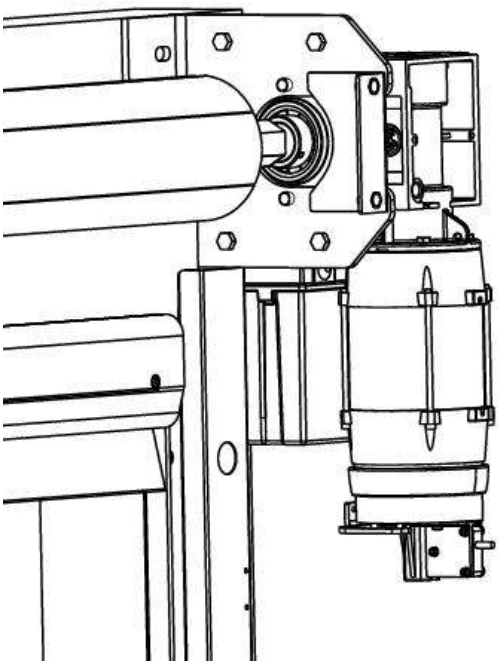


19. Remove the fixing from the door curtain.

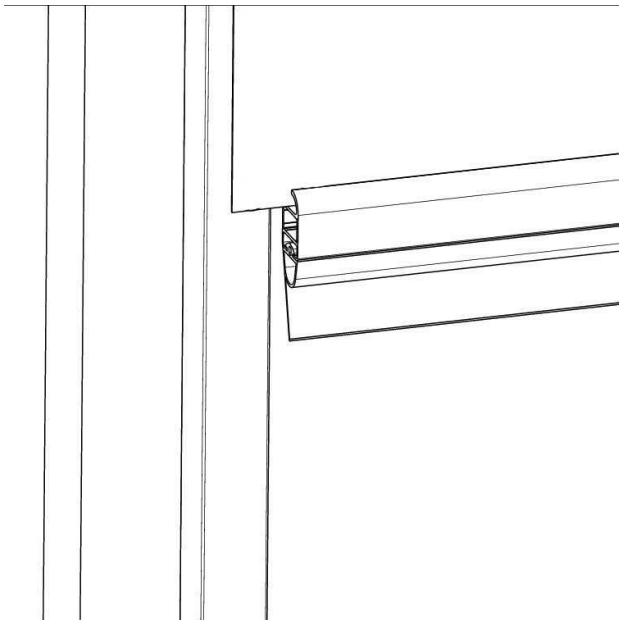


20. Slide on the bottom profile.

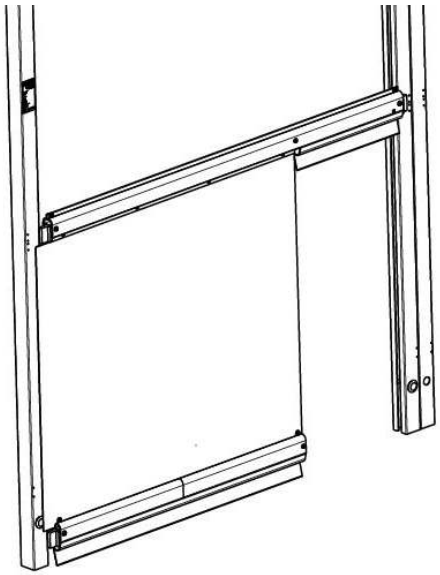


21. Option curtain cutout: Slide curtain segment in bottom profile and lower bottom profile on curtain.

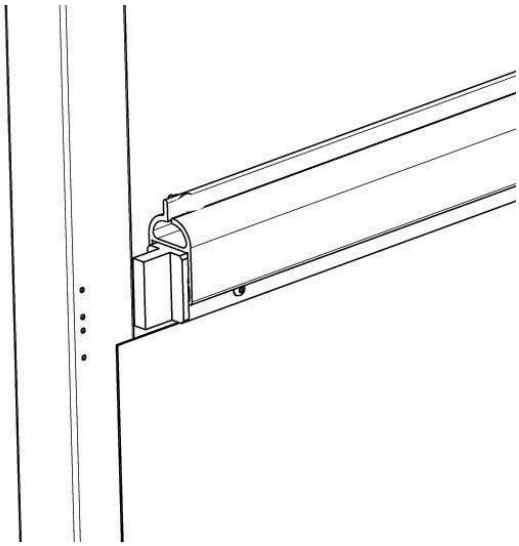



22. Insert slider.

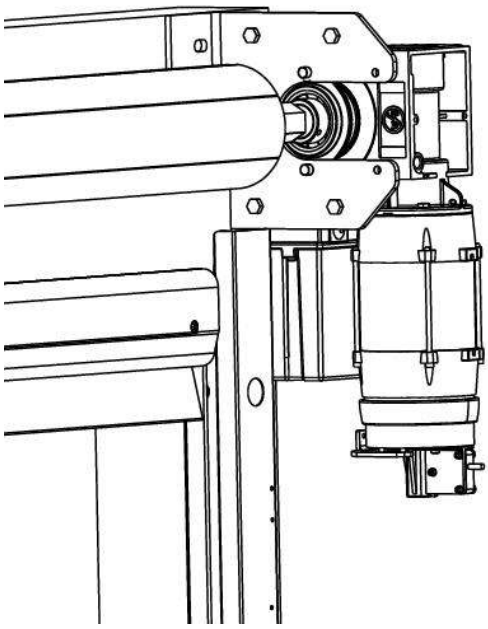


23. Lift the curtain and optionally the bottom profile into the side frame.

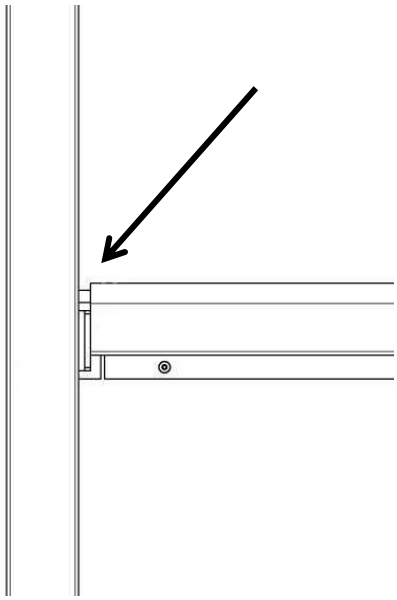

24. Centre-align the bottom profile so that the ends of the door curtain protrude by the same amount on both sides of the bottom profile.

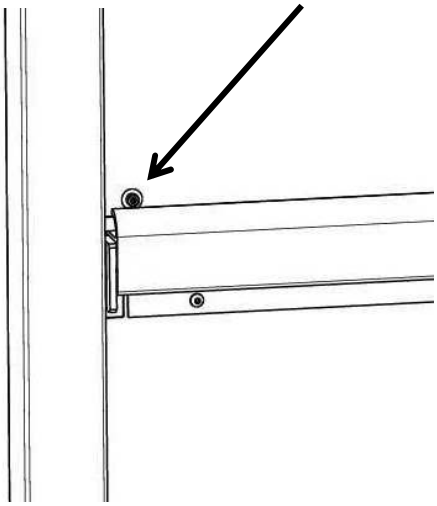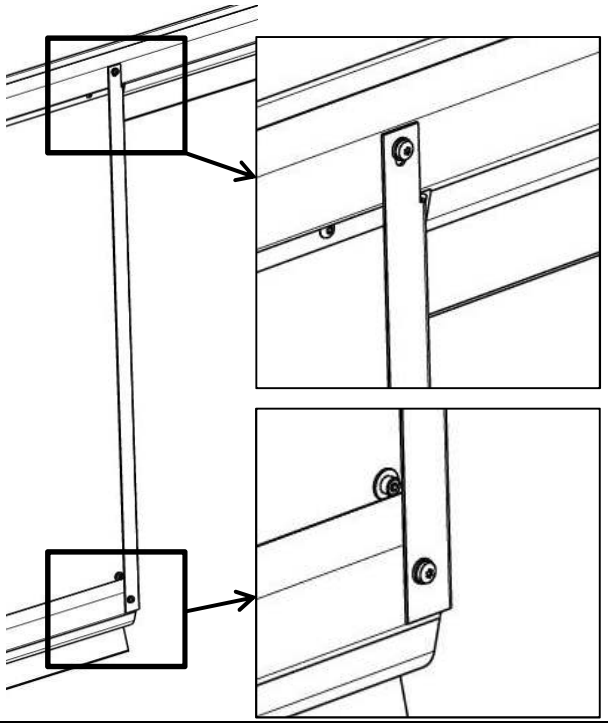	
25. Drill in the door curtain on the right and the left side d=5,5mm holes through the pre- boring of the bottom profile. Fix each side using an M5x12 socket head screw / nut / washer.	**26.** Option curtain cutout: Mount connecting profile and secure with 4 tapping screws M6x16.
Fix control box and make electrical installation. The control system manual must be complied with during the installation The input needs to be bridged with a 1,2 kΩ or 8,2 kΩ (in installation bag) if there is no electrical safety edge. Program end limits for installation.	
27. Electrical installation	**28.**

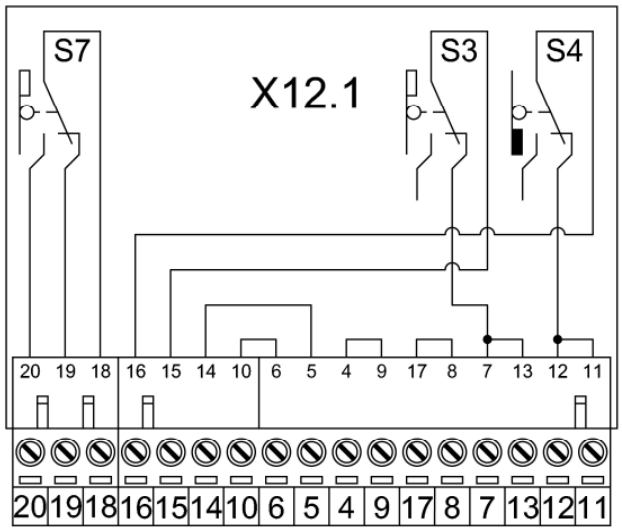


Dry contacts for door position


- Run door to desired position (e. g. lower end position)
- Set cam of chosen limit switch and secure with screw of rough setting.
- Open or close door until limit switch turns off.
- Close/open door again.
- Correct position by turning the fine adjustment screw.

Repeat this for the other positions.
Connect electrically according to control manual.

29. Dry contacts for door position
X12.1 limit switch circuit board
S3 open limit switch
S4 close limit switch
S7 Add on limit switch


30. Dry contacts for door position

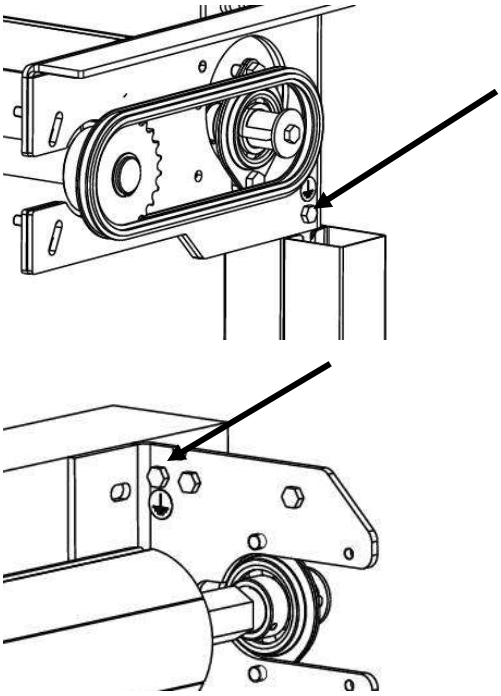

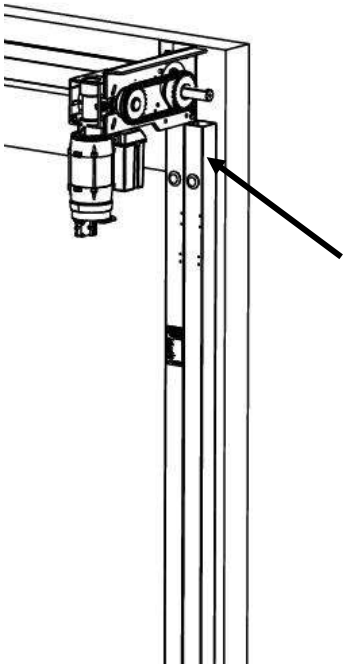


31. Ground door to building (min. 6 mm², hex head screw M8x10 copper-plated)


32. Chain drive: Fix 2nd profile below the drive unit next the side frame (optional).

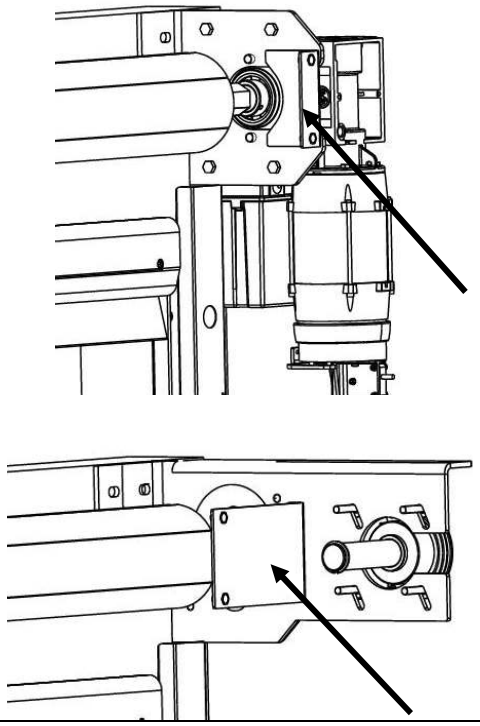


33. Top roll cover (option): Brackets for assembling the top roll cover. The brackets must be screwed to the head plates from inside using 2 screws (non-drive side M8x10, drive side M8x25). The same screws/nuts are also used for the motor cover bracket.

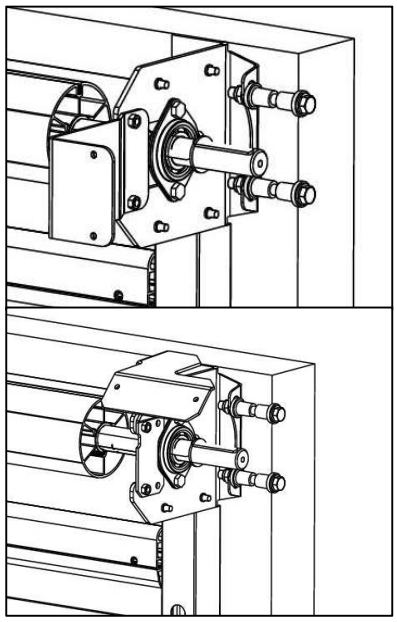


34. Option motor cover standard drive unit: Secure the bracket to the head plate with 2 hex head screws M8x25 / nuts. The same screws/nuts are also used for the top roll cover bracket.

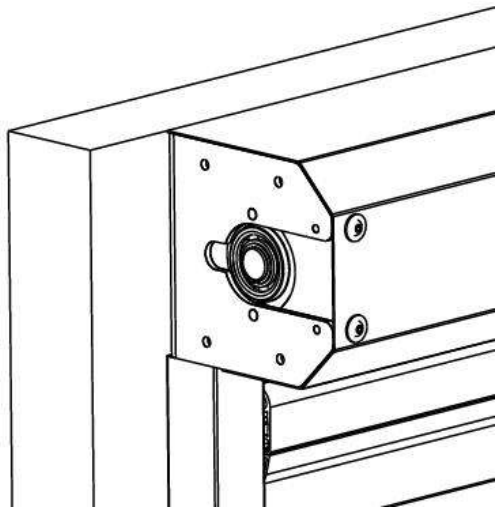


35. Top roll cover (option): Secure the top roll cover using 4 oval head screws M8x16, each with a large washer.

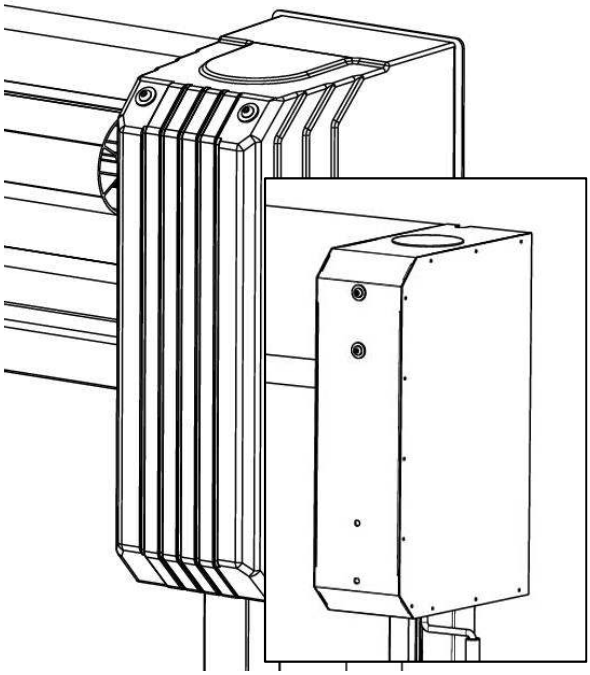


36. Option motor cover standard drive unit: Secure the motor cover to the bracket using two oval head screws M8x16/washers.

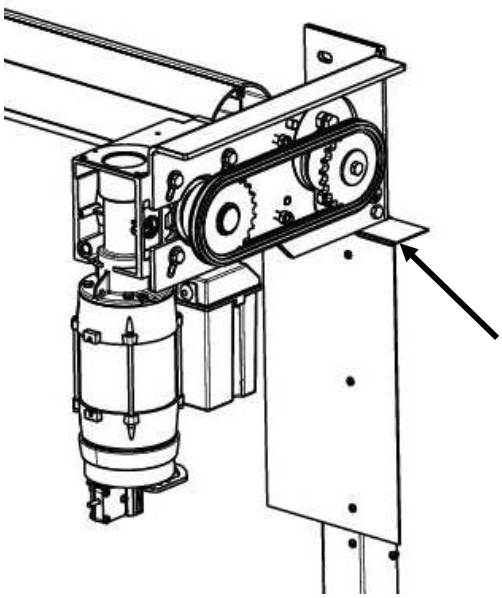


37. Option motor cover chain drive unit: Bend ear (arrow). Mount back side cover (3 tapping screws 4,2x9,5). Align top and side to head plate.

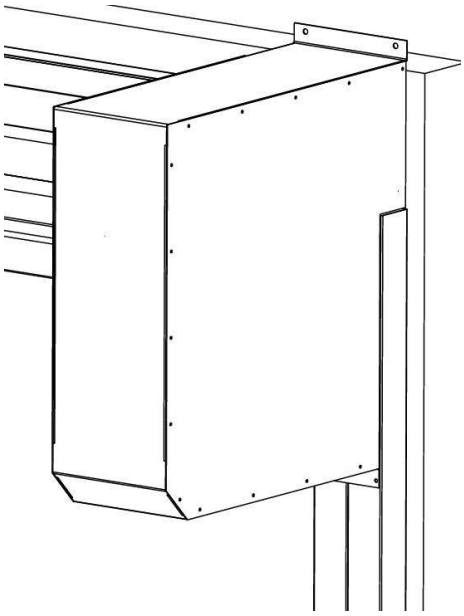

38. Option motor cover chain drive unit: Push motor cover on and fix to wall and side frame (2 tapping screws 4,2x9,5).

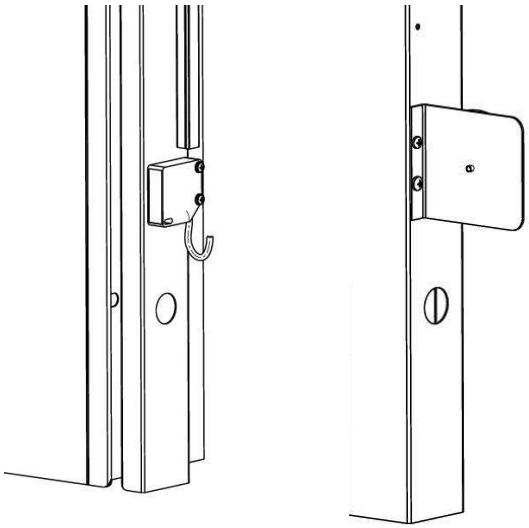

39. Option door line photocell: Holes for H=280 exist. Other positions could to be drilled as needed. (photocell 2 tapping screws 4,2x25; reflector 2 tapping screws 4,2x9,5)

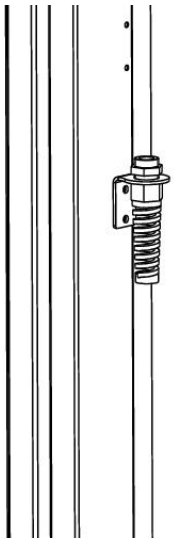

40. Option safety edge: Fix bracket coily cable to side frame (2 tapping screws 4,2x9,5).



too long





correct length



too short

41. Fixing of coily cable

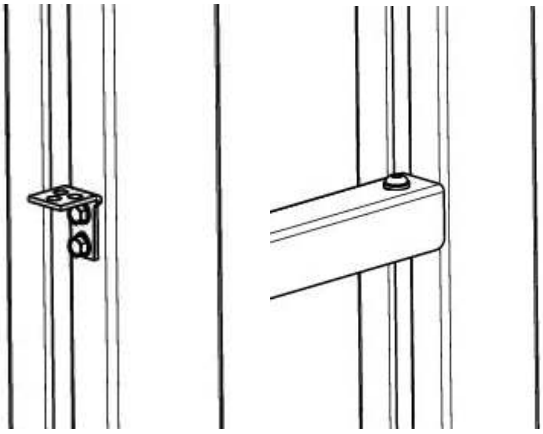

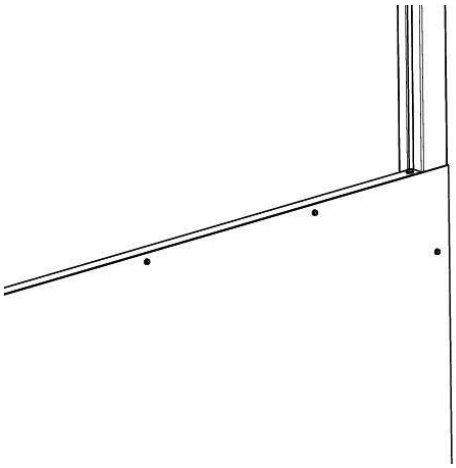

42. Option X-level cover: Fix bracket stiffener 2 mm below X-level height (2 drilling screws 4,2x16). Fix stiffener (2 oval head screws M6x10).

43. Option X-level cover: Fix Rolltex material with drilling screws 4,2x16 to stiffener and side frames.

44. After testing the safety devices and the initial operation/test run of the door the installation work is finished**.**

5.4 Dismantling

To dismantle the door, follow the installation instructions in reverse order.

6 Life Cycle

6.1 Installation

See the user guide for the associated control unit.

6.2 Maintenance and Cleaning

In case of necessary work of maintenance, malfunction, repair, please ask your supplier or manufacturer of the door.

ALBANY Door Systems, Service Department

Am Mondschein 25

59557 Lippstadt, Germany

Tel.: +49 (0)2941 766 0

Fax: +49 (0)2941 766 294

Internet: www.albanydoors.com

Email: service.de.albany@assaabloy.com

6.2.1 Safety instructions



The maintenance and inspection work must only be performed by manufacturer trained/ authorized personnel.

- When performing any type of work on the door, set the main switch (power switch) to “Off” or “0” or disconnect the CEE plug, and secure the switch or plug against accidental re-activation or reconnection.
- Use a meter or other test device, verify that the switch box is de-energised.
- Please observe that all used ladders, scaffoldings, or such, correspond with the valid safety regulations.
- The working area must be blocked for traffic. Lubricating oil on the floor, tools and other material should be removed from the floor when work has been finished.

6.2.2 Inspection plan

Record all maintenance, repairs and modifications in the inspection list included in the inspection book for every door, to ensure that all changes can be traced.

The necessary service events, inspections and implementation notes are documented in the inspection plan included in chapter 7.5.

6.2.3 Cleaning and care

6.2.3.1 Door curtain

CAUTION



Risk of material damage

Improper cleaning of the curtain may cause damage to the surface.

- ⇨ Do not use any glass cleansing liquids (aggressive contents)
- ⇨ Never use score cleansers, scrapers, razor blades and spatula, etc.
- ⇨ Clean with warm water, small dose of mild plastic cleanser and a soft non-bobble cloth.

6.2.3.2 Side Frames

CAUTION



Risk of material damage

Improper cleaning of the door frame may cause damage to the surface.

- ⇨ Do not use high pressure cleaning machine.
- ⇨ Dust may be removed with a soft cloth.
- ⇨ Harder dirt may be removed with water and general liquid cleanser.
- ⇨ Dirt of grease or oil on metal surface may be removed with solvent containing cleanser.

6.2.3.3 Surroundings

Especially after maintenance work the floor around the side columns may be dirty with lubricants, etc. Carefully clean these areas.

6.3 Decommissioning

- Follow the installation instructions for dismantling.
- Disconnect power from the door before dismantling. In particular, ensure that all springs are de-tensioned.
- Check parts that are subject to wear and replace them if necessary before reassembly.
- Check all connectors and avoid kinking cables.
- Store all components in a clean, dry place.

6.4 Storage and transport

6.4.1 Transport


The single door components must only be removed from the packaging at the site of installation.

DANGER

Risk of injury

Improper transport may cause the load to slip and fall.

- ⇨ Observe the legal safety regulations when transporting the door to the fitting site.
- ⇨ The door must be secured against tilting or slipping.
- ⇨ Lift the door at its centre of gravity to prevent it from tipping sideways.

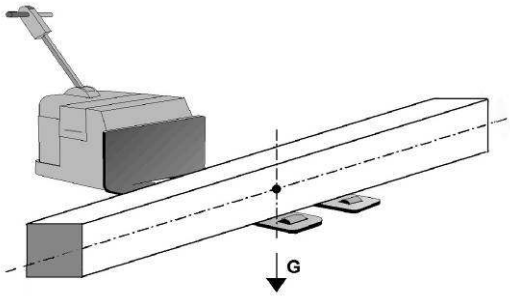

6.4.1.1 Dimensions and weight

Dimensions of the door with packaging

	Transport pallet [mm]		*Drive and control unit pallet [mm x mm]*
Door	***Length***	***Width***	***Length x width***
RP 100	W + 500	500	800 x 600

W = width of door opening; H = height of door opening

Weight of the door with pallet [Kg] (Intermediate values can be interpolated, weights may vary depending on specific configuration options.)

W X H [m]	***1 x 1***	***2 x 2***	***2 x 3***
RP 100	90	110	125

6.4.2 Storage

The partly preassembled door is being delivered on a transport resp. mounting palette completely wrapped with plastic material. Undamaged packing allows storage of the door outside of buildings for several days.

6.5 Disposal

The packing material of the door may be returned to the manufacturer. Defect door components should be disposed of at the site according environmental regulations.

Defect electronic components should be disposed to special waste disposal.

7 Appendix

7.1 Technical Data RapidProtect 100

The table below contains the technical data for the RapidProtect 100 series doors. A capsule summary of the maximum opening and closing speeds is also provided in Section 7.2.

	RapidProtect 100
Door principle:	Roll door
Running direction:	vertical
Application:	Interior door
Wind class	-
Available sizes:	
W min:	500 mm
W max:	3000 mm
H min:	500 mm
H max:	3000 mm
Area max.:	6 sqm
application:	inner side of wall construction
Side frame:	galvanized steel
Bottom profile	aluminium
top roll	aluminium
Door curtain:	woven Polyestermonofil
Top roll cover	galvanized steel
Motor cover	Plastic, galvanized steel
Drive:	electrical
Control unit:	ACS 25, ACS 40
Maximum opening speed ACS25 FC:	1,8 m/s
Maximum closing speed ACS25 FC:	1,1 m/s
Maximum opening speed ACS25:	0,9 m/s
Maximum closing speed ACS25:	0,9 m/s
Main power ACS 25 FC:	1/N/PE 230V, 50Hz/60Hz (±5%), 10 A fuse extern 3/N/PE 400v, 50Hz/60Hz (±5%), 10 A fuse extern
Main power ACS 25:	3/(N)/PE 400v, 50Hz/60Hz (±5%), 10 A fuse extern
Motor performance:	0,37 kW; FC: 0,85 kW
Control voltage:	24 V DC
Operating temperature range:	+10℃ - +45℃
Motor protection:	IP54
Typical no. of cycles / min.:	Max. 0,5
Sound pressure level:	70 dB A


7.2 Maximum opening and closing speeds and times


	Door height	***Contactor control***		***Contactor control***	
		Open (*) m/s (max)	Close(*) m/s (max)	Opening time (*) s	Closing time (*) s
RP 100	1,0 m	0.79	0.84	1.7	1.6
RP 100	1.5 m	0.79	0.89	2.3	2.2
RP 100	2,0 m	0.84	0.89	2.9	2.8
RP 100	2.5 m	0.88	0.92	3.6	3.3
RP 100	3,0 m	0.89	0.92	4.1	3.9

	Door height	***Frequency converter control***		***Frequency converter control***	
		Open (*) m/s (max)	Close(*) m/s (max)	Opening time (*) s	Closing time (*) s
RP 100	1,0 m	1.58	0.99	1.30	2.00
RP 100	1.5 m	1.67	1.02	1.55	2.45
RP 100	2,0 m	1.68	1.04	1.95	2.90
RP 100	2.5 m	1.74	1.05	2.30	3.40
RP 100	3,0 m	1.79	1.07	2.60	3.80

(*) The values listed are guide values which may vary from the minimum/maximum shown on individual doors. In particular longer cycle times during the process may lead to substantial changes.

7.3 Principle drawing

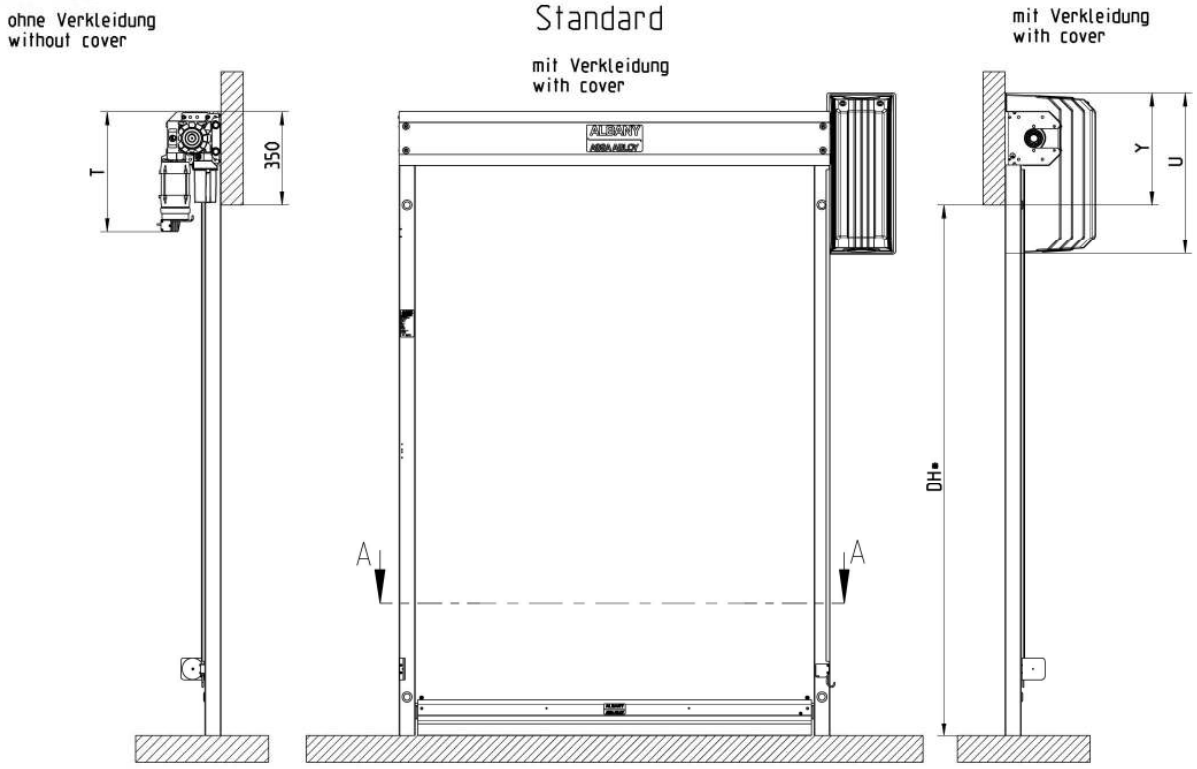

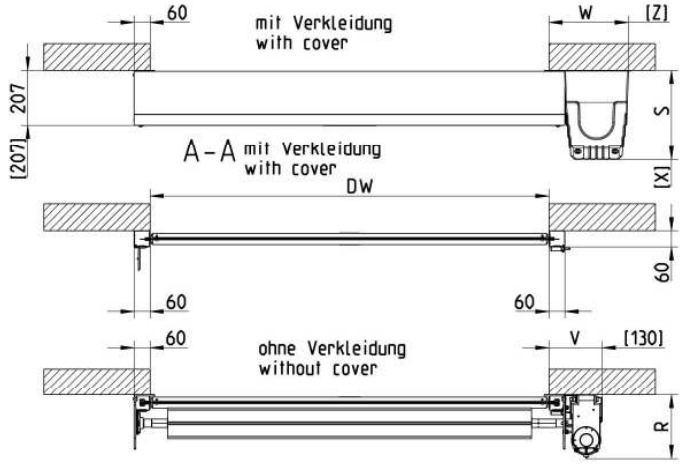

mit Motorhaube / with motor cover		
	Plastic	Steel
Y	420	350
W	310	220
S	340	365
U	610	620
Z	50	140
X	340	365

Lieferbare Größen / Available sizes			
		DW (B)	DH (H)
max 6m²	min:	500	500
	max:	3000	3000

ohne Motorhaube / without motor cover		
	Contactor control/ without control	Frequency converter
V	200	210
R	240	340
T	450	600


Steuerung / Control Unit			
		Contactor control/ without control	Frequency converter
Öffnungsgeschwindigkeit/ Opening speed	max [m/s]	0.9	1.8
Schließgeschwindigtkeit/ Closing speed	max [m/s]	0.9	1.1
Abmessungen BxHxT Dimensions WxHxD	mm	190x300x115	190x300x115

- Tore mit Kontaktleiste: nutzbare Höhe = DH - 70 mm
  Doors with safety edge: usable height = DH - 70 mm

[ ] = Montagefreiraum
Space needed for installation

9300R0006/c Sheet: 1
Stand: 2012-12-12

Kette / chain drive

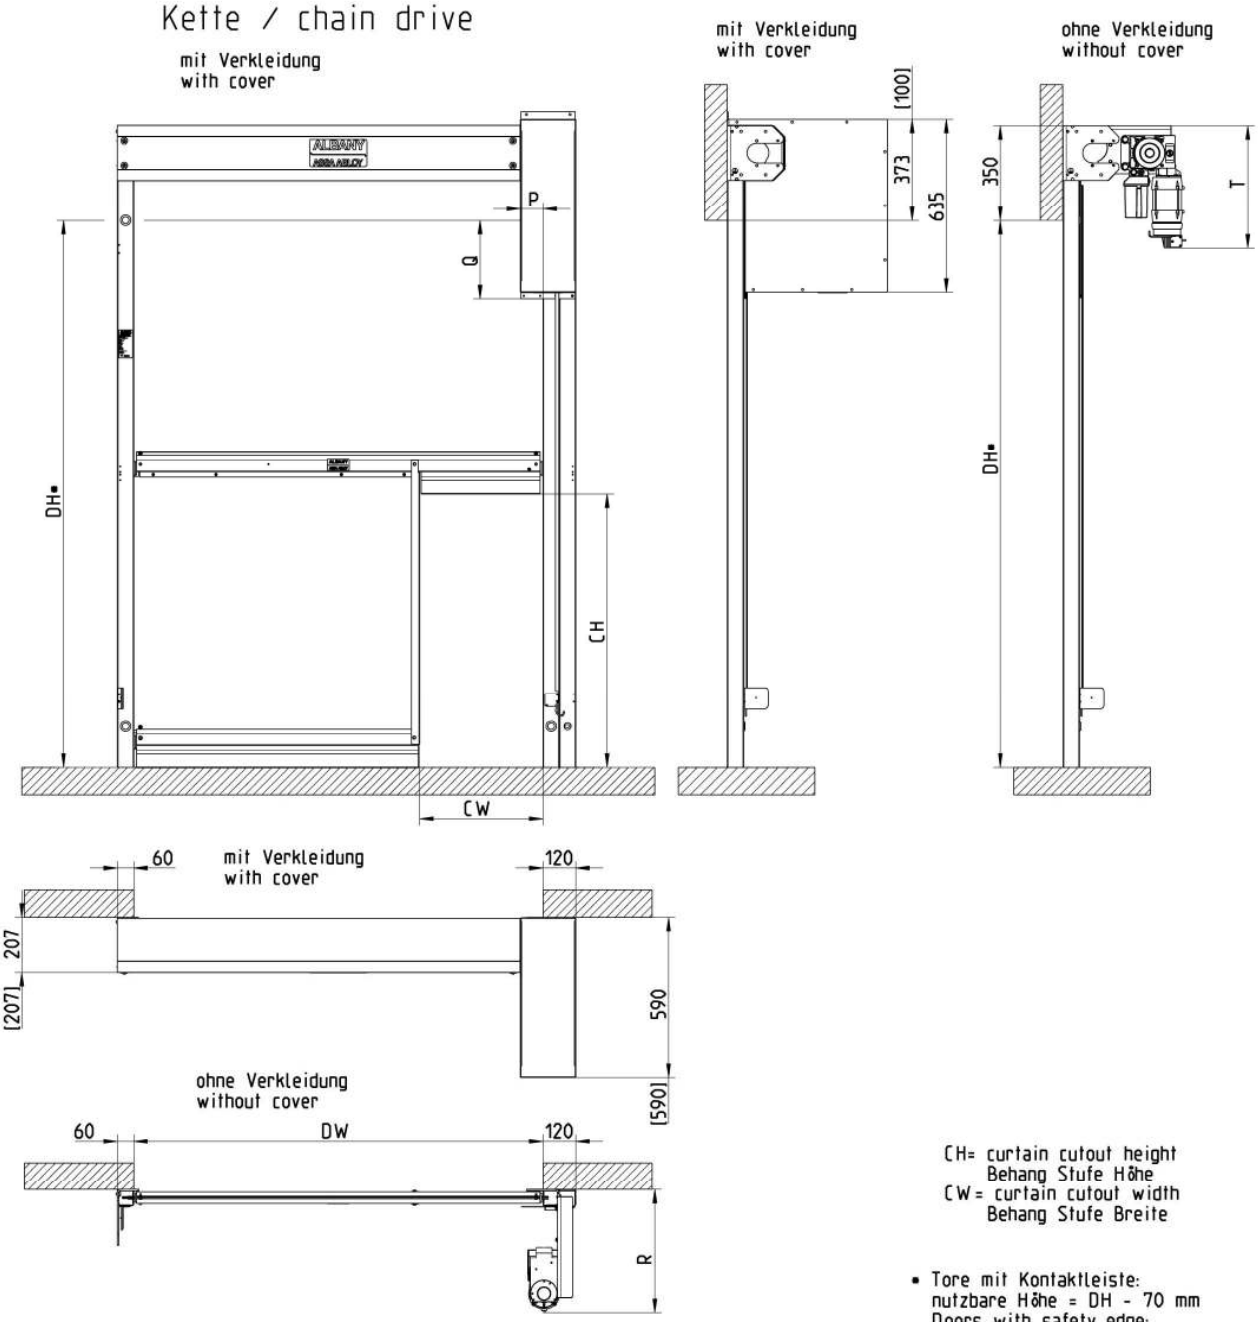

CH= curtain cutout height
Behang Stufe Höhe
CW= curtain cutout width
Behang Stufe Breite

- Tore mit Kontaktleiste:
  nutzbare Höhe = DH - 70 mm
  Doors with safety edge:
  usable height = DH - 70 mm


ohne Motorhaube / without motor cover		
	Contactor control/ without control	Frequency converter
R	450	550
T	452	600
P	57	64
Q	102	250

mit Motorhaube / with motor cover	
P	85
Q	286

Lieferbare Größen / Available sizes		
	CW	CH
min:	300	200
max:	DW-CW-300	1000

[ ] = Montagefreiraum
Space needed for installation


9300R0006/c Sheet: 2
Stand: 2012-12-12

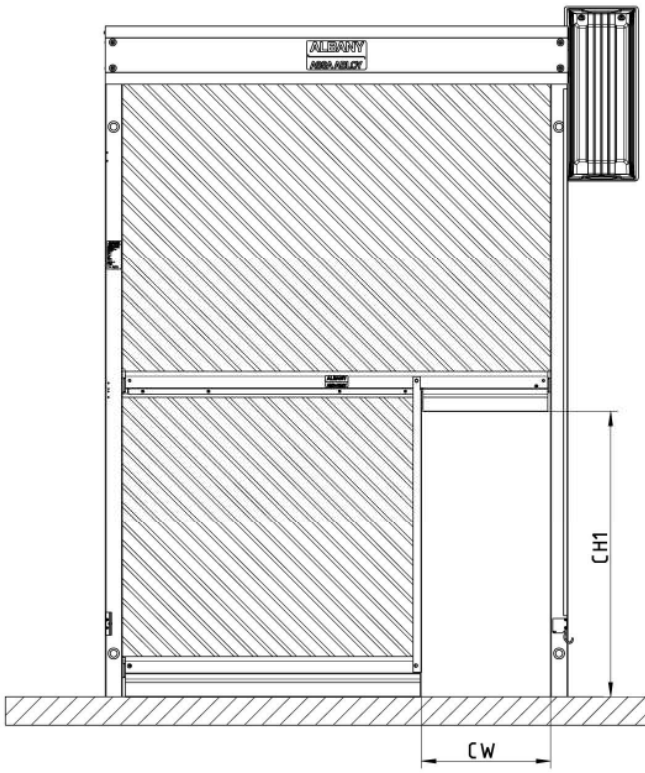

Behang Stufe re/li
Curtain cutout rh/lh

rechts gezeichnet, links spiegelbildlich
drawn right, left mirror-inverted


CH1= curtain cutout height
Behang Stufe Höhe
CW = curtain cutout width
Behang Stufe Breite

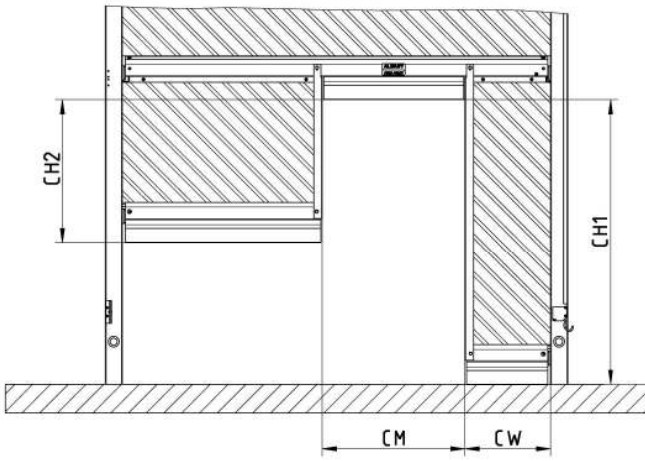

Behang Stufe innen
Curtain cutout inside

CH1= curtain cutout height
Behang Stufe Höhe
CH2= curtain cutout height
Behang Stufe Höhe
CW = curtain cutout width
Behang Stufe Breite
CM= curtain cutout middle
Behang Stufe mitte

möglich CH1<=CH2
possible CH1<=CH2

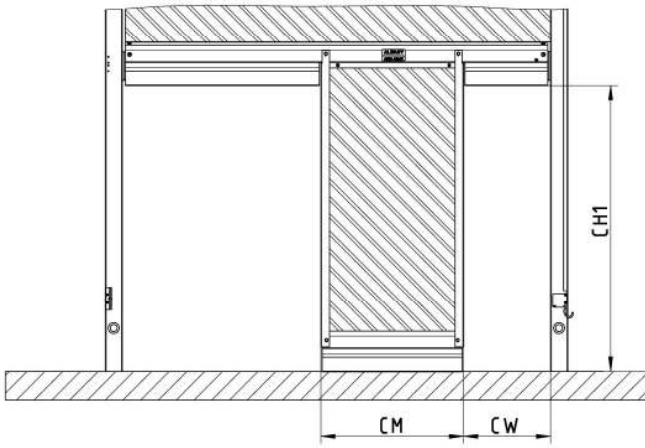


Behang Stufe aussen
Curtain cutout outside

CH1= curtain cutout height
Behang Stufe Höhe
CW = curtain cutout width
Behang Stufe Breite
CM= curtain cutout middle
Behang Stufe mitte

Lieferbare Größen / Available sizes			
	CW	CM	CH1/CH2
min:	300	300	200
max:	DW-CM-300	DW-CW-300	1000

9300R0006/c Sheet: 3
Stand: 2012-12-12

7.4 Fixing plan

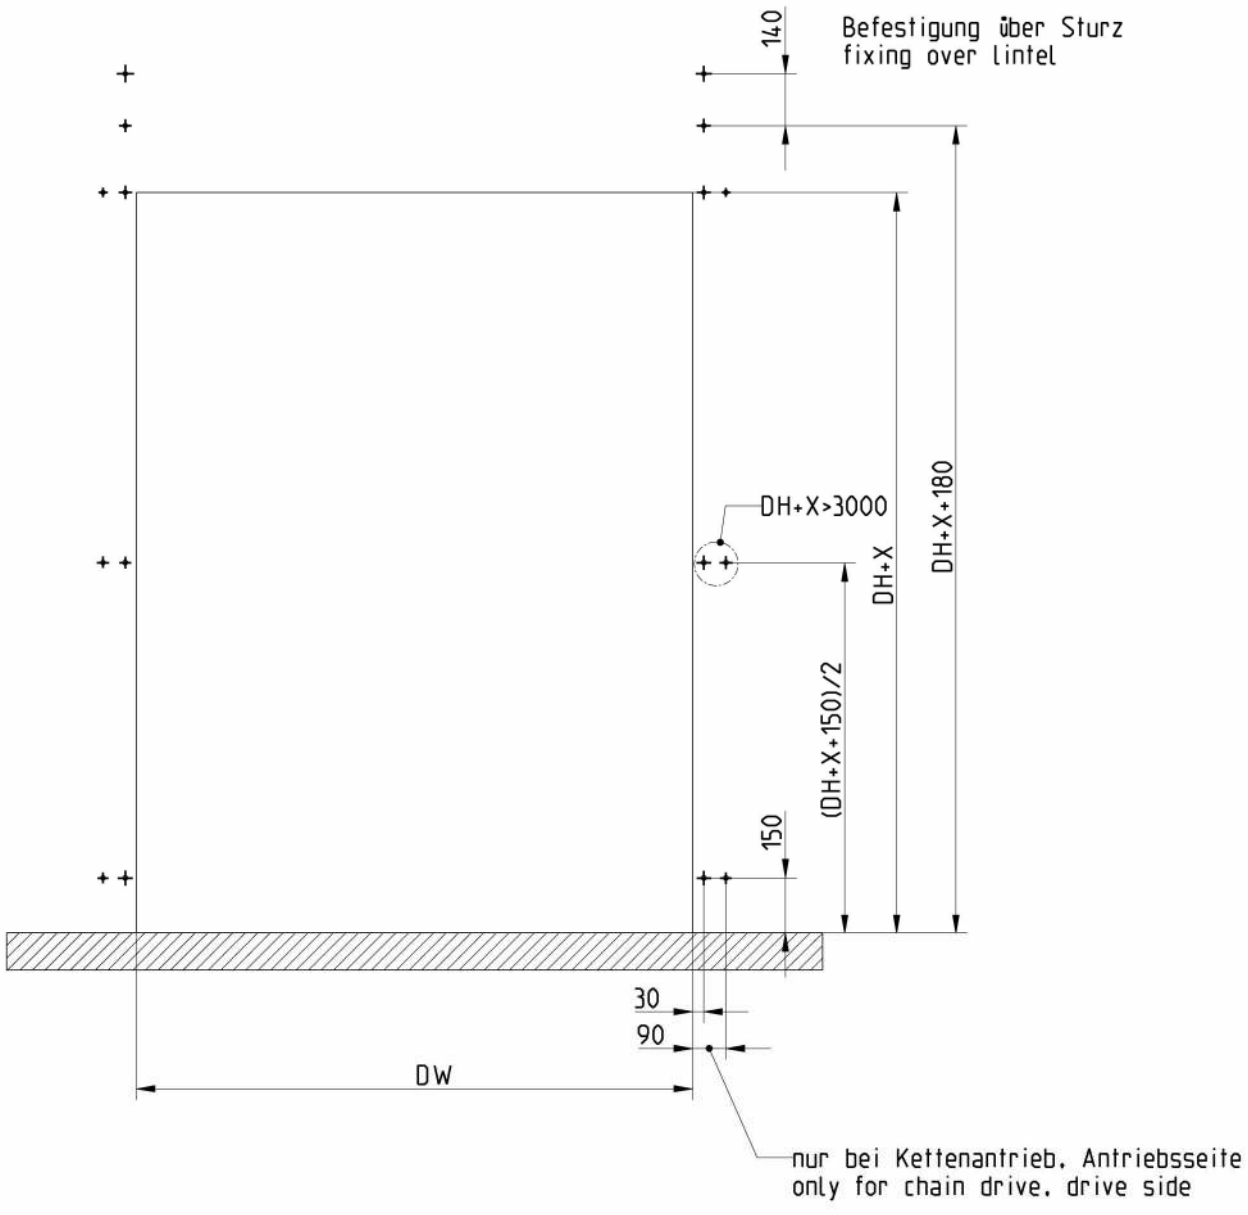

X= X-Level

9200R0005/0
Stand: 2012-01-12

7.5 Inspection plan

Installation fixings	
Tighten screws	1
Drive	
Check the fixing of the torque arm and buffer	1
Check brake condition and function of break release lever	1
Check the chain, adjust and possibly retension and lubricate	1
Drive shaft	
Check screws to drive shafts and flange bearings	1
Check the drive shaft in the aluminium shaft for secure fit	1
Door curtain	
Check curtain for cracks and traces of scrapes or shavings in the guides	1
Check fixation of door leaf at the top roll and at the bottom profile	1
Check tight position and wear & tear of the wind tabs	1
Bottom profile	
Check condition of the safety edge and the cable	1
Check condition of the coily cable	1
side frame	
Check fixing and condition of the profiles with attachments	1
Check cable laying	1
Remove dirt from the photocell optics	3
Control box and additional attachments (e.g. impulse activator)	
Check main switch/CEE-plug and control box lock	2
Check the fixing	2
Electrical components	
Visual inspection for mechanical damage	1
Check potential balance	2
Function	
Check function of safety edge, photocell, additional safeties and actuators	1
Check function and condition of the torque torque arm during operation	1
Check opening and closing position of the bottom profile	1
Check winding performance of door curtain	1

1	half-yearly or 50.000 LW
2	annually
3	clean if necessary

7.6 Manufacturer’s certifications

7.6.1 Declaration of Incorporation

Albany Door Systems declares that the RapidProtect 100 is an incomplete machine under the Machinery Directive 2006/42/EC. The product is a machine protection door with the property of separating rooms in the enclose.

Commissioning of our door is prohibited until it has been determined that the installation incorporating our door complies with the provisions of the EC Machinery Directive.