NIHVA
NIHVA TECHNOLOGIES PVT. LTD.

Operation
&
Service Manual

Hand Pallet Truck

Capacity	: 2500 Kgs
Fork Length	: 1220 mm
Width over Fork	: 560 mm

www.nihva.com

Reg. Off.: 8/1 Coromant Hsg. Soc. Sec. No. 27, Nigdi, Pradhikaran, Pune - 411044.
Tel.: + 91 20 6630 4033 **Email:** sales@nihva.com

OPERATING INSTRUCTION :

Handle has a control liver with three positions for lifting, lowering and neutral.

Lifting the Pallet:

- Push the control liver down.
- Operate the handle a few times to lift the palletised load off the ground.
- Pull the control liver to neutral position to facilitate easy movement of the handle for travel.

Lowering the Pallet:

- Pull the control leaver all the way up.
- Palletised load comes down slowly due to inherent “Slow Down” design.

Note: Pallet Truck is designed to lift Non Reversible Pallets only.

Reg. Off.: 8/1 Coromant Hsg. Soc. Sec. No. 27, Nigdi, Pradhikaran, Pune - 411044.
Tel.: + 91 20 6630 4033 **Email:** sales@nihva.com

SERVICING :

1. Removing and replacing of JACK SEAL

   Disconnect the jack shaft from the chassis. Remove Shaft, wiper seal housing. Remove circlip and seal retainer. The seal will now be exposed and can be replaced. While replacing the jack seal and wiper seal, make sure they are correctly oriented. (i.e. seal lips facing down)

2. Removing and replacing of PUMP SEAL

   Remove the handle, spring, pump operating plunger and pump housing. The seal will now be exposed and can be replaced. While replacing the pump seal make sure it is correctly oriented. (i.e. seal lips facing down)

3. Control Valve Adjustment

   The travel of the control plunger can be regulated by adjusting nut on the square bar stud. (Item 19 & 21 of Jack Assembly)

Reg. Off.: 8/1 Coromant Hsg. Soc. Sec. No. 27, Nigdi, Pradhikaran, Pune - 411044.
Tel.: + 91 20 6630 4033 **Email:** sales@nihva.com

LUBRICATION :

Lubrication is a simple as majority of the linkage parts have self lubricating bushes.

Points to be lubricated : Once Monthly

With Grease

- Wheels – Two points one on each side.
- Wheel Bracket – One point on Tandem wheel bracket


With oil

- Pump operating Pin
- Elevating Pins
- Tie Rod Pins
- Fork Pins


Recommended Hydraulic Oil / Grease Lubricants

For Hydraulic Tank	**Castrol Hyspin – 68** **Enclo – 32**
For Wheels	Castroleave Heavy IOC Auto Grease MP
For Sintered Bush	Castrolite Shell X – 100 , 20/20 W

Reg. Off.: 8/1 Coromant Hsg. Soc. Sec. No. 27, Nigdi, Pradhikaran, Pune - 411044.
Tel.: + 91 20 6630 4033 **Email:** sales@nihva.com

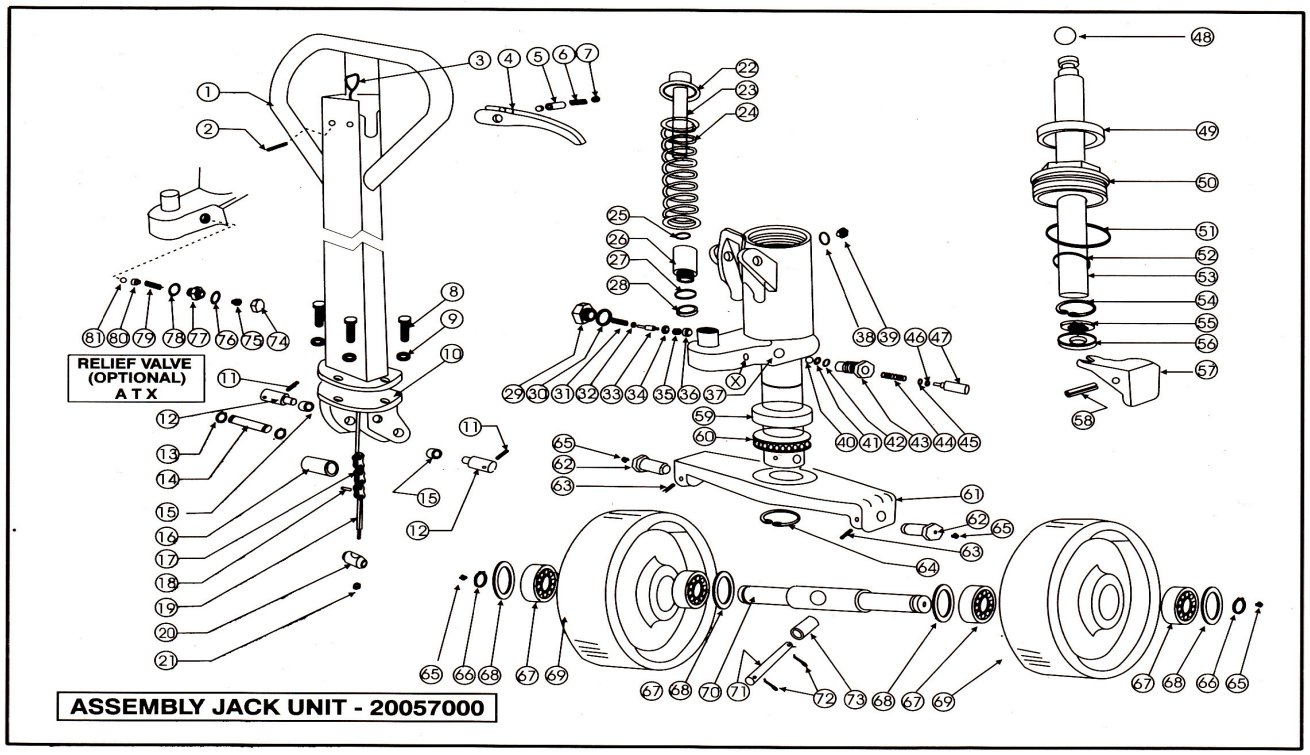

ASSEMBLY JACK UNIT - 20057000

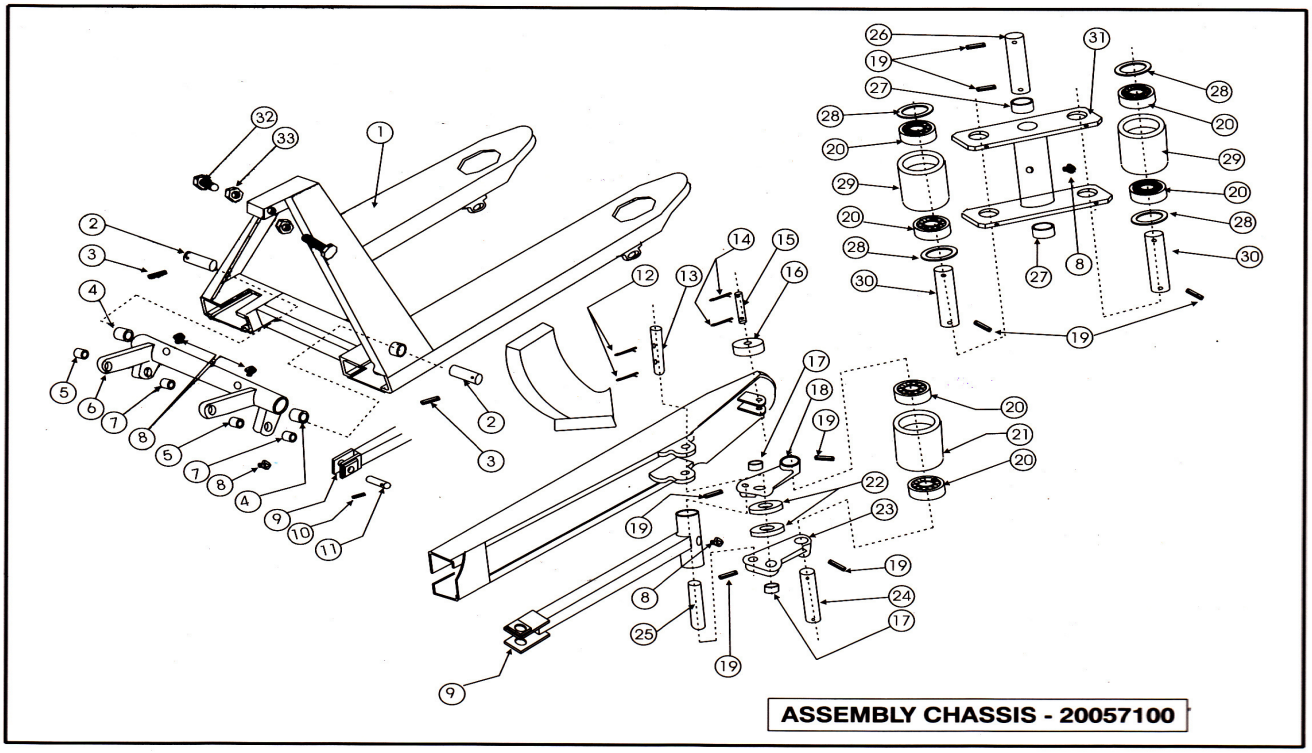

ASSEMBLY CHASSIS - 20057100

Reg. Off.: 8/1 Coromant Hsg. Soc. Sec. No. 27, Nigdi, Pradhikaran, Pune - 411044.
Tel.: + 91 20 6630 4033 **Email:** sales@nihva.com

NIHVA
NIHVA TECHNOLOGIES PVT. LTD.

Spare Part List

ASSEMBLY JACK UNIT – 20057000

Sr. No.	Description	Part No.	Qty.	Sr. No.	Description	Part No.	Qty.
1	Handle Welded	20012900	1	41	Copper Washer - Valve	20010600	1
2	Pin Spring	PSD00003	1	42	O-Ring	ORG00003	1
3	Hook - Round Wire	20013400	1	43	Valve Body	20017000	1
4	Lever Control	20013500	1	44	Spring - Control	20010700	1
5	Tube	20013600	1	45	O-Ring Plunger	ORG00004	1
6	Spring - Handle	20013700	1	46	Seal Wiper - Valve	SWP00003	1
7	Ball Sleeve	20013800	2	47	Plunger - Release	20009900	1
8	Screw Hex Head	A5035815	3	48	Ball Steel - Top	BST00002	1
9	Washer- Spring	A8880408	3	49	Seal Wiper - Valve	OSR00001	1
10	Bracket Handle	20054600	1	50	Housing - Seal Wiper	20012200	1
11	Pin Spring	PSD00008	2	51	O- Ring for Wiper	ORG00005	1
12	Pin Handle Bracket	20014200	2	52	O-Ring Inner for Wiper	ORG00006	1
13	Circlip- External	CPE00004	2	53	Shaft (Chrome Plated)	20053201	1
14	Pin- Handle Roller	20014300	1	53	Shaft (Chrome Plated)	20053202	1
15	Bush	BUS00002	2	54	Circlip Inner	CPI00005	1
16	Roller- Handle	20014100	1	55	Retainer - Seal	20043900	1
17	Chain	CHR02013	1	56	Seal Rod	SRD00003	1
18	Pin Chain Locking	20014000	1	57	Bracket Lowring	20019100	1
19	Stud- Square Bar	20014400	1	58	Pin Spring	PSD00004	1
20	Roller Chain Guide	20013900	1	59	Bush- Bearing Guide	20052700	1
21	Nut Nylock	J5200506	1	60	Bearing Thrust	BTH00001	1
22	Cup Washer	20018300	1	61	Yoke	20052800	1
23	Piston Pump(2 T)	20018400	1	62	Bolt Special for Yoke	20052900	2
23	Piston Pump(2.5 T)	20052500	1	63	Pin Spring	PSD00001	2
24	Spring - Pump	20018200	1	64	Circlip External	CPE00003	1
25	O- Ring Pump (2 T)	ORG00009	1	65	Nipple Grease	NGR00001	4
25	O- Ring Pump (2.5 T)	ORG00020	1	66	Circlip External	CPE00005	2
26	Pump Housing (2 T)	20053301	1	67	Bearing Ball	BBL00001	4
26	Pump Housing (2.5 T)	20053302	1	68	Washer	20053700	4
27	O-Ring	ORG00008	1	69	Wheel Steering (Steel)	20053400	2
28	Seal Pump (2 T)	SRD00005	1	69	Wheel Steering (Nylon)	20053500	2
28	Seal Pump (2.5 T)	SRD00008	1	69	Wheel Steering (PU)	20053600	2
29	Cap Nut	20010300	1	70	Axle - Wheel Steering	20053000	1
30	Copper Washer- Cap Nut	20010500	1	71	Pin	20052400	1
31	Spring- Retainer	20010900	1	72	Pin Split	PSL00002	2
32	Positioner- Spring	20010400	1	73	Bush Sintered Iron	20053800	1
33	Plunger NRV	20010000	1	74	Cap Nut	20054400	1
34	Cap Washer	20010200	1	75	Adjuster - Spring	20054300	1
35	Spring- Slow Down	20010800	1	76	Washer	20054500	1
36	Retainer - Spring	20010100	1	77	Valve Body	20054200	1
37	Jack Welded	20052600	1	78	Washer	20054100	1
38	O-Ring	ORG00004	1	79	Spring	20054000	1
39	Screw (Plug)	20053100	1	80	Locator Ball	20053900	1
40	Ball Steel	BST00001	1	81	Ball - Steel	BST00003	1

Reg. Off.: 8/1 Coromant Hsg. Soc. Sec. No. 27, Nigdi, Pradhikaran, Pune - 411044.
Tel.: + 91 20 6630 4033 **Email:** sales@nihva.com

ASSEMBLY CHASSIS - 20057100

Sr. No.	Description	Part No.	Qty.
1	Chassis Welded	20050000	1
2	Pin - Elevating Link	20050300	2
3	Pin Spring	PSD00001	2
4	Bush - Sintered Iron - I	20052200	2
5	Bush - Sintered Iron - II	20052300	2
6	Elevating Link for 520 wide	20051301	1
6	Elevating Link for 560 wide	20051302	1
6	Elevating Link for 685 wide	20051303	1
7	Bush - Phosper Bronze	20051400	2
8	Nipple Grease	NGR00001	8
9	Tie Rod for 915 Pallet Leg	20054901	2
9	Tie Rod for 1066 Pallet Leg	20054902	2
9	Tie Rod for 1220 Pallet Leg	20054903	2
10	Pin Spring	PSD00008	2
11	Pin - Tie Rod	20051500	2
12	Pin Split	PLS00001	4
13	Pin - Fork	20050600	2
14	Pin Split	PSL00003	4
15	Pin - Entry Roller	20050200	2
16	Entry Roller	20050100	2
17	Bush - Phosper Bronze	20050700	4
18	Fork R.H.S.	20050500	2
19	Pin Spring	PSD00009	8
20	Bearing Ball	BBL00001	12
21	Wheel Load (Steel)	20017900	2
21	Wheel Load (Nylon)	20018700	2
21	Wheel Load (PU)	20018600	2
22	Roller - Exit	20051200	4
23	Fork L.H.S.	20050400	2
24	Pin - Load Wheel	20051100	2
25	Pin - Tie Rod at Fork	20051600	2
26	Pin - Pivot Tandem Wheel	20051700	2
27	Bush - Phosper Bronze	20051800	4
28	Washer	20051000	8
29	Wheel Tandem (Steel)	20051900	4
29	Wheel Tandem (Nylon)	20052000	4
29	Wheel Tandem (PU)	20052100	4
30	Pin - Tandem Wheel	20050900	4
31	Bracket - Tandem Wheel	20050800	2
32	Screw Hex Head	A5035613	2
33	Nut Hex	A5200156	2
33	Nut Hex	A5200156	2

Reg. Off.: 8/1 Coromant Hsg. Soc. Sec. No. 27, Nigdi, Pradhikaran, Pune - 411044.
Tel.: + 91 20 6630 4033 **Email:** sales@nihva.com