

LOAD ROLLER ASSEMBLY

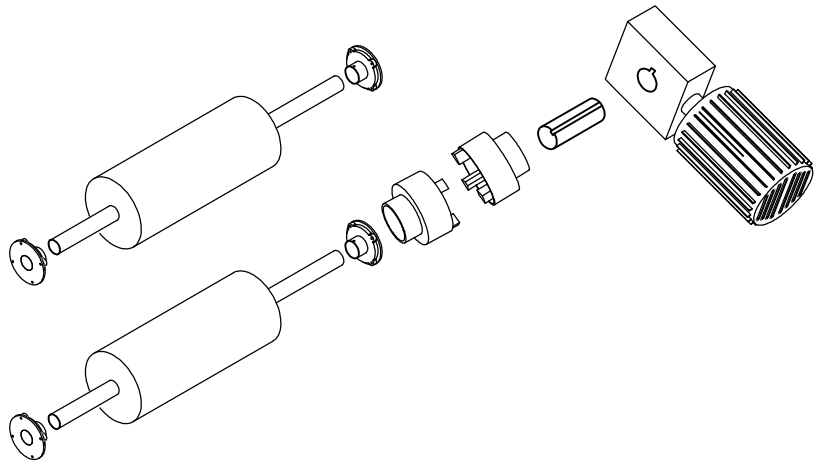

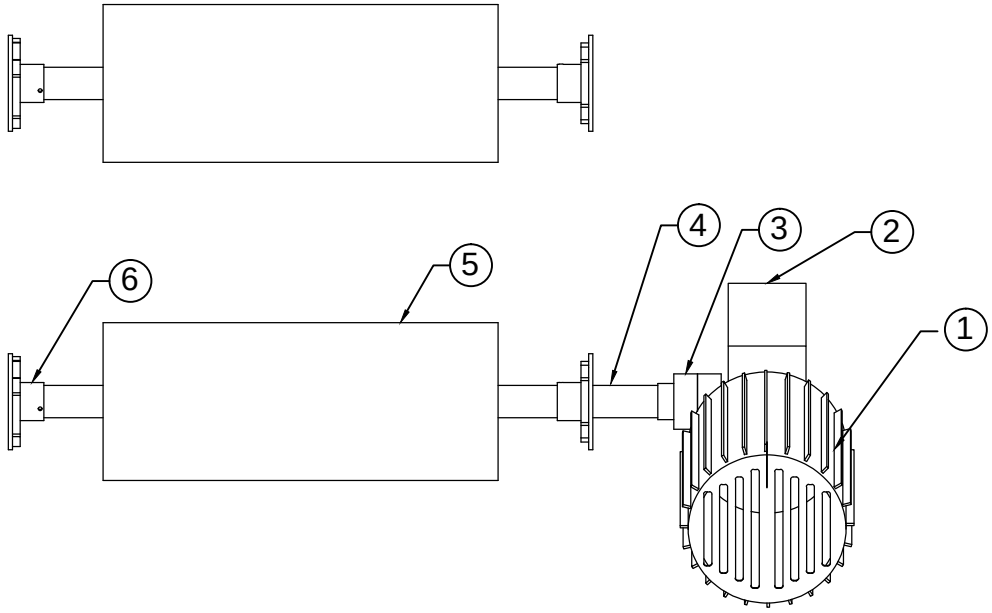

SR NO	PART NAME	QUANTITY
1	BELT DRIVE MOTOR	1
2	BELT DRIVE GEARBOX	1
3	COUPLINGS	1
4	SHAFT	1
5	BELT DRUM	2
6	BEARING	4