5 Installation and dismantling *RR 392*

5.1 Checking the content and condition of delivery

The RR 392 is mostly pre-assembled at delivery. The side columns are fixed together with the top roll cover, the motor cover (if included in delivery), the fixing material and the control unit, to a transport pallet (made of wood). The door must be checked for transport damages and completeness of delivery volume – compare with order papers.

5.2 Preparations for installation work

Check the place of installation with regard to fixing points and set-up conditions. Possibly a supporting construction or other required fixing possibilities must be prepared. The head plates should be screwed onto a steel support or a concrete element.




Isolated panel walls, rider bricks and lightweight construction walls must be checked for suitability of installation.

Measure the light dimensions (width and height) of door opening and check with order.

The site of installation must be secured against pedestrian and vehicle traffic.

Before installation the plastic sheets of the packing must be removed. Afterwards the covers of the side columns and the control unit must be removed from the pallet and laid down in sufficient distance of the door opening.

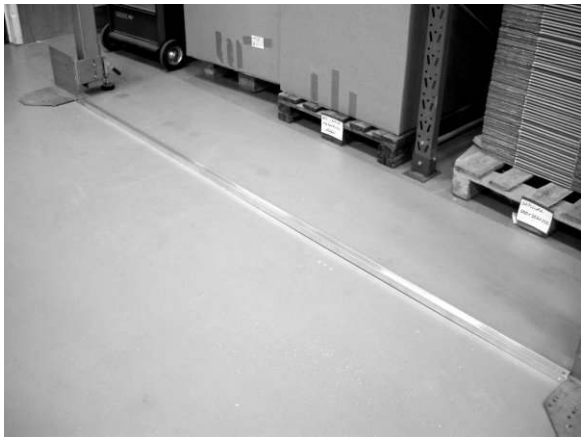

1. Check the door opening width using the U-profile.
Centre the U-profile in the opening and mark on the floor where the door frame will be placed.




2. The floor must be checked for even surface. Check by means of a tube level or an optical measuring device (see picture).




3. At a slanting surface the side frame must be firstly installed on the higher side.
(Difference in height max. 3mm)



4. First side frame to be exactly vertically aligned by means of a water level.

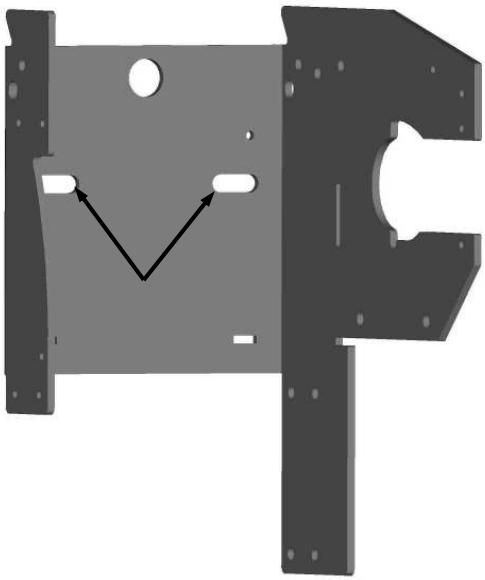

5. Fix the head plate onto the wall with 2 screws.

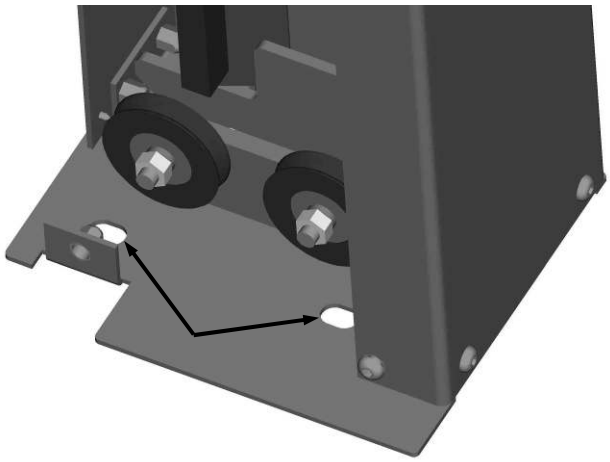


6. The bottom plate is fixed with 2 screws.




7. Set up the second side frame.
Difference in height between the side frames **max. 3mm**. If necessary the lower side frame must be raised by shimming.




8. The second side frame must be aligned to the exact width and attached as in step 5 and 6.
(Light width ± 2mm)
Help: lintel profile L = W

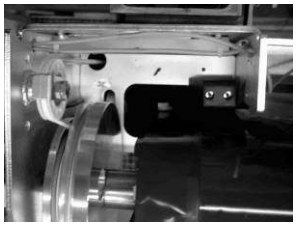



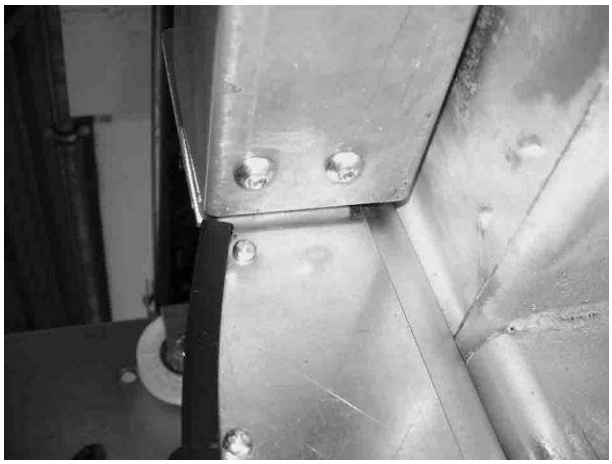

9. Install width guide on both head plates and guide the electrical cables through.

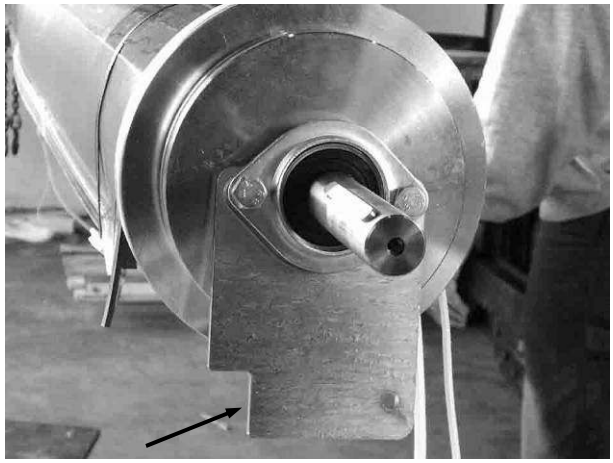

⚠ **The notch must point to the door at lifting of the top roll.**


10. Pull the ropes through the opening of the roller disc, knot and wind up **one** pre-wrap layer against the winding direction of the curtain. Roll up the white rope on the outer and yellow rope on the inner side.






11. Before lifting into place loosen the bearing flange bolts to allow the attachment bracket to slide and rotate into place.
Lift up the top roll by means of a crane or forklift, etc.


12. Fix the bearing with M10 screws and fixing bracket with M8x12 scews onto the prepared points of the head plates.

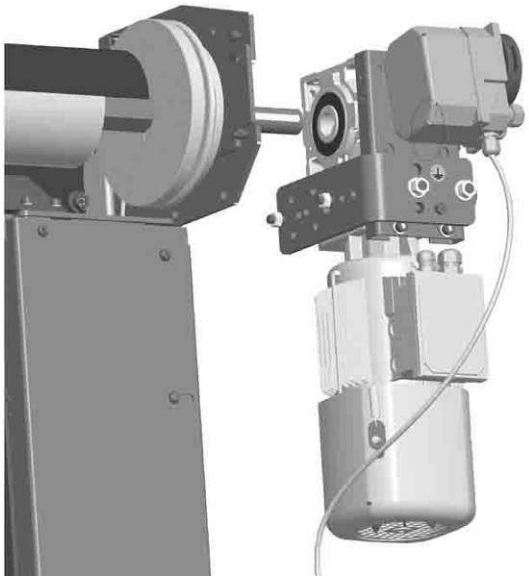


13. Put the motor onto the drive shaft. Pay attention to the feather key connection.
Screw together the torque support with the head plates. If necessary fix the torque support separately.

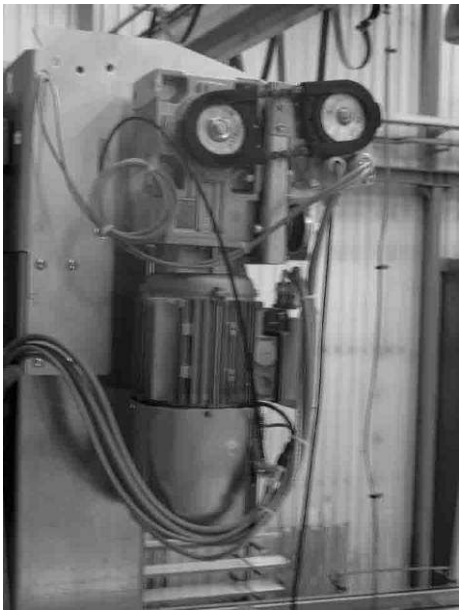


14. Longer cables are fixed with cable straps to the motor.

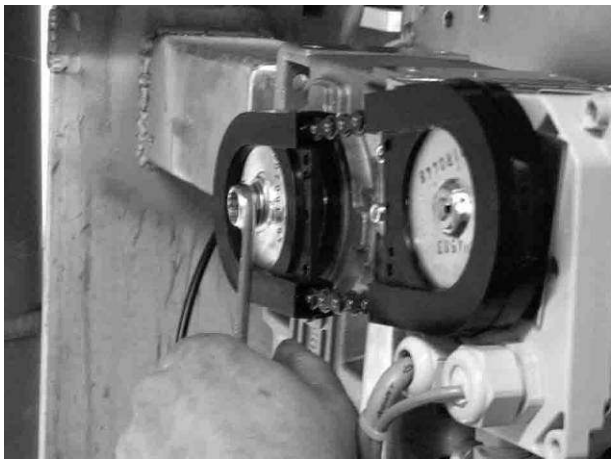



15. Install pinion at the drive shaft and secure the screw by bending the washer.

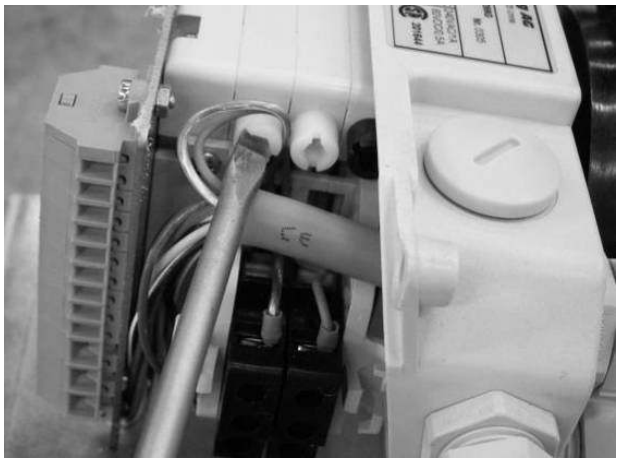

16. Roughly adjust **e**nd position „Door open“ at the limit switch (Micro switch S7=top end position) by turning the adjustment screw. (Micro switch S9=bottom end position, only with. **ACS 50**). Connection of cables according to wire diagram.

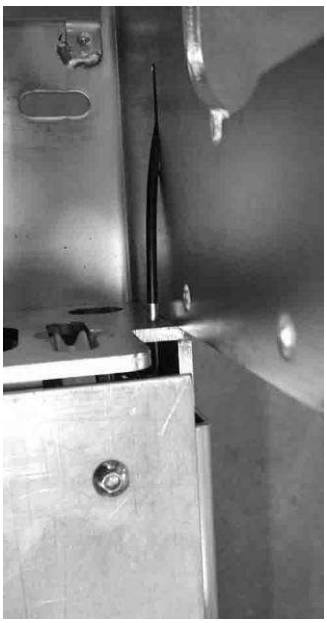

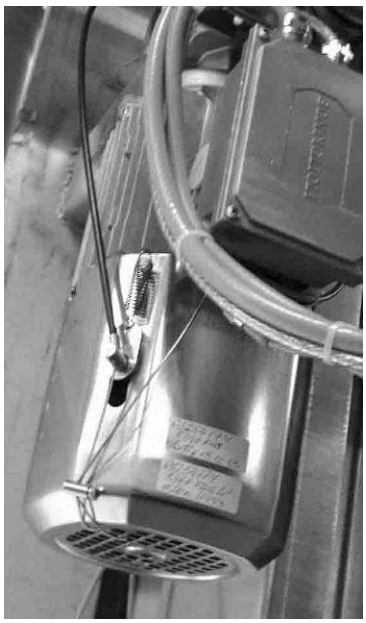

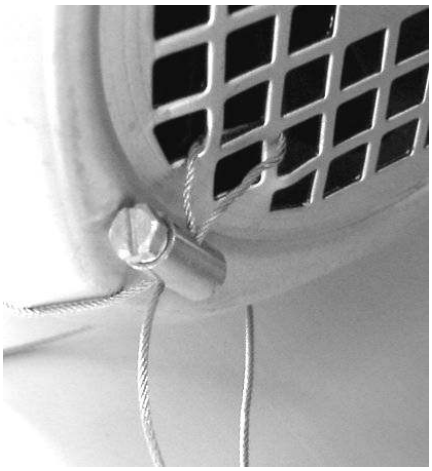

17. Pull steel rope through the bore holes of the head plate. The end is guided through the brake lever and fixed at the fan cover.


18. Remove the curtain securing device, operate the brake lever and turn the top roll until the curtain bottom line is in working position.






19. Push the bottom profile onto the bulge of the door curtain and center to the side columns.

19a. Option cable chain
Connect plug and fix cable

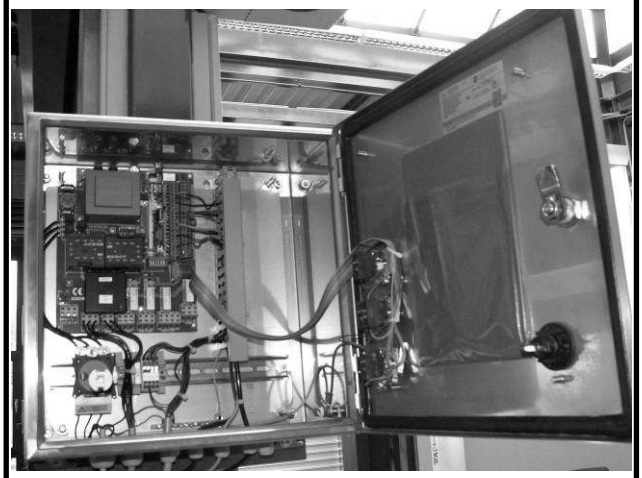


20. Connect the control unit.
(See chapter 8 and 9 of the Operating Manual)

Open the door afterwards.

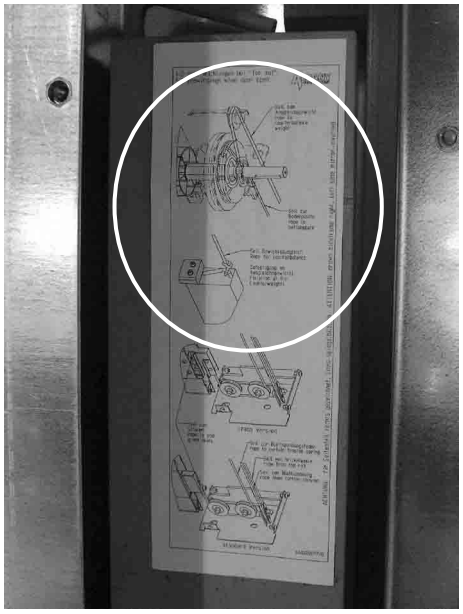

21. See rope wiring at the labels on the weight balance.
(1-2 pre-wraps)

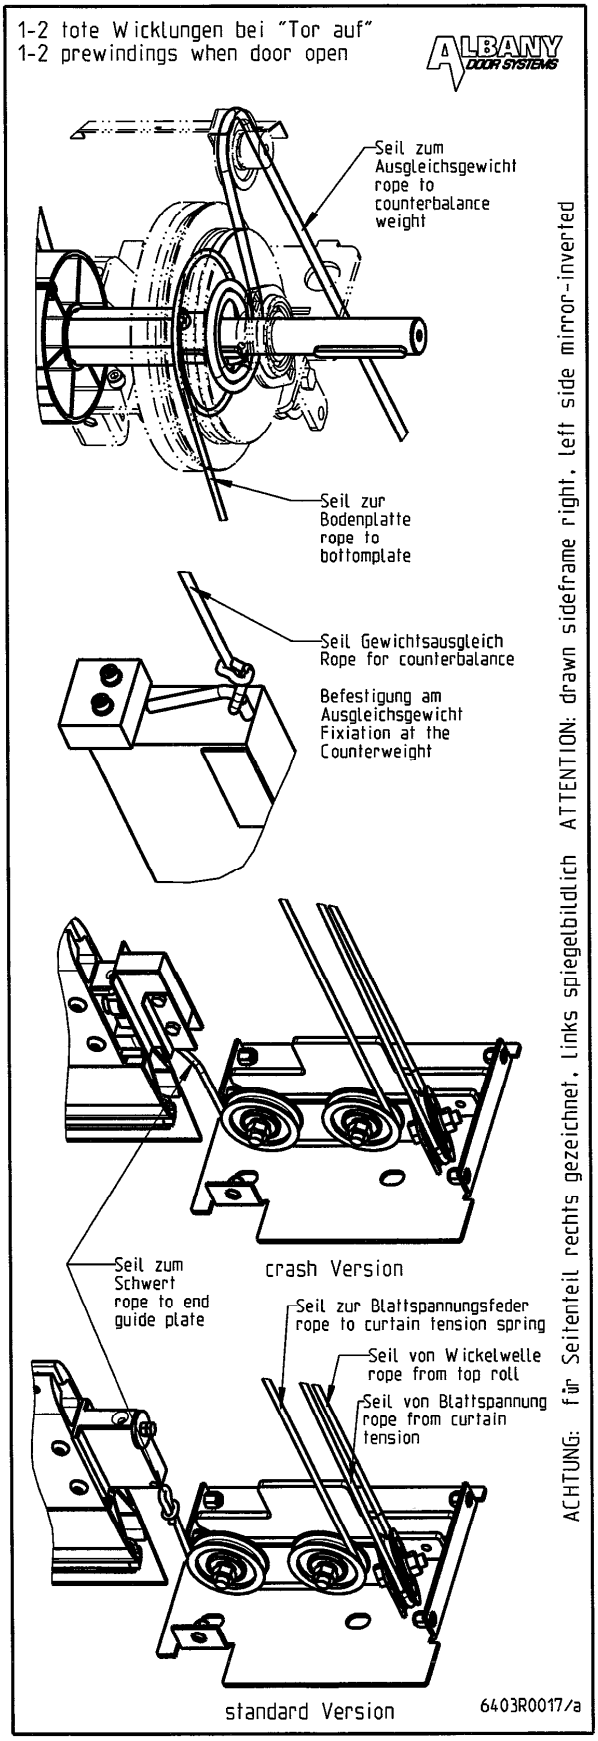






22. Install the weight balance system. Lead the ropes over the diffuser rollers at the head plates to the balance weights and knot together.


23. Carefully remove the protecting screws from the balance weight and the metal sheet.




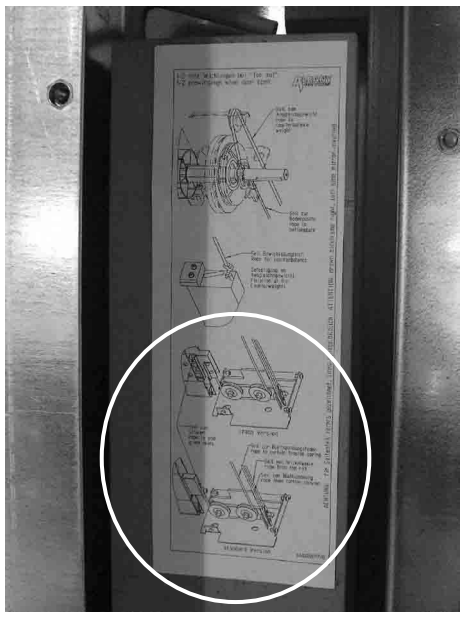

24. Close the door electrically until the bottom profile is about 1300 mm above the floor – Keep an eye on the ropes, they must wind up (operate the Stop button).

25. Install the tensioning system.
For the rope wiring see the labels on the weight balance.
(1-2 pre-wraps)

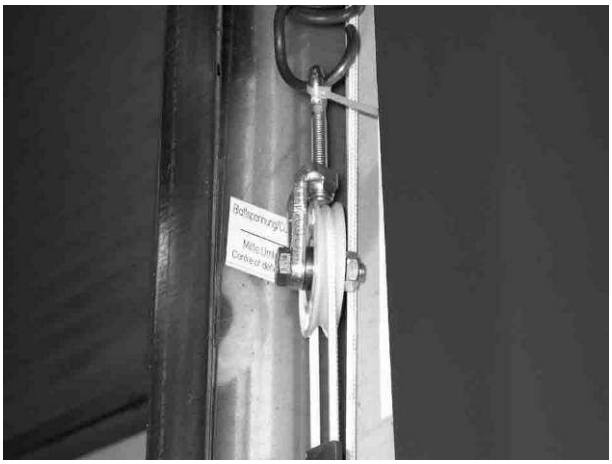

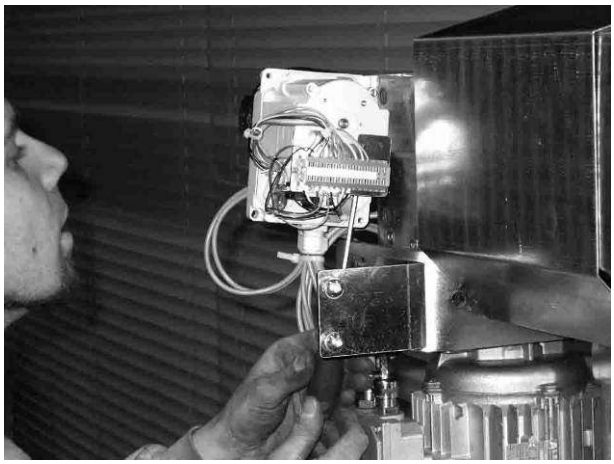

26. Check at the side frame if the stated value for the pre-tensioning of the spring has been reached.
The middle of the rope disc must be at the marking.


27. Set the correct end positions by turning the adjustment screw on the limit switch. (micro switch S7 = upper end position, micro switch S9 = bottom end position).

Test run of the door.

⚠ For test run the cover profiles have to be installed to prevent damage at the curtain.

After at least 30 cycles
the ropes must be checked and if necessary adjusted.

Option:

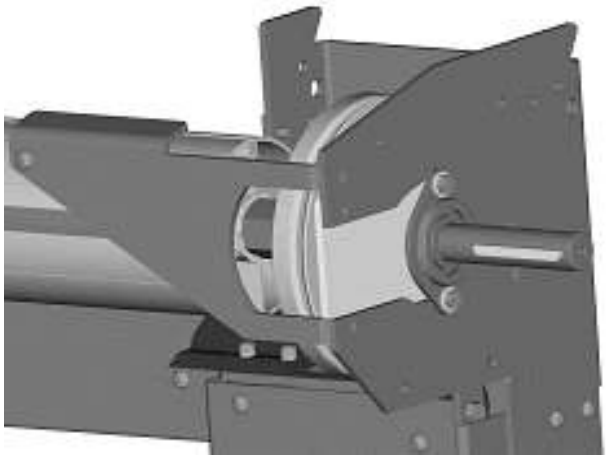


28.

29. Installation of the top roll cover.
Screw retainer onto the head plate. Then push the cover onto the head plates and screw together.




30. Turn the lower retainer of the top roll cover into the spaces of the cover profiles and screw together.

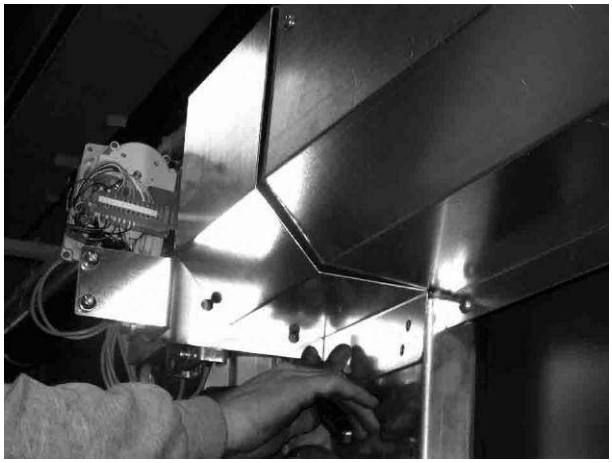

31. Hang the side frame covers over the head plates and fix onto the cover profiles.





32. Set up cover profiles and screw onto the side frames.

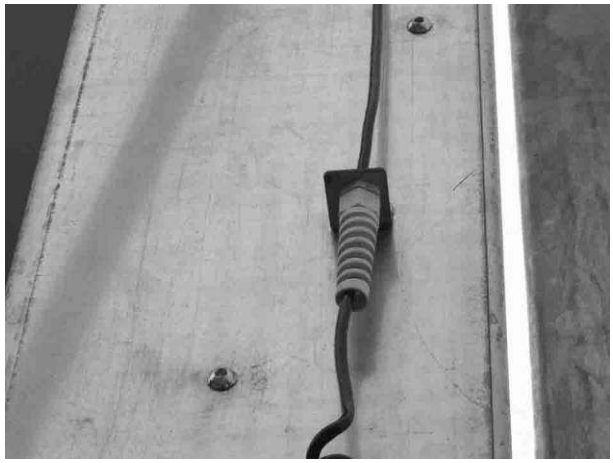

33. Option coily cable
The cable bracket is fixed with to rivets at the side frame.
Secure cable glands only hand tight.


Option:

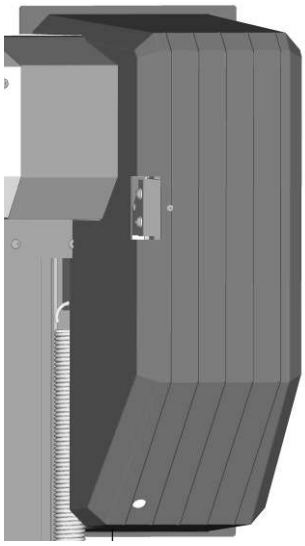

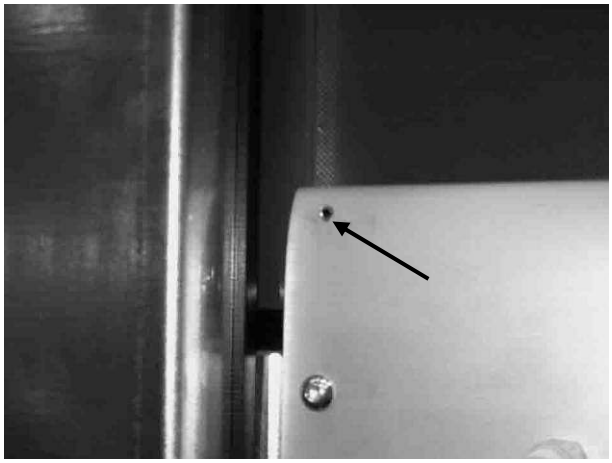

34. Screw the motor cover onto the torque support.

35. Fix the bottom profile with 2 dowel pins at the door leaf.

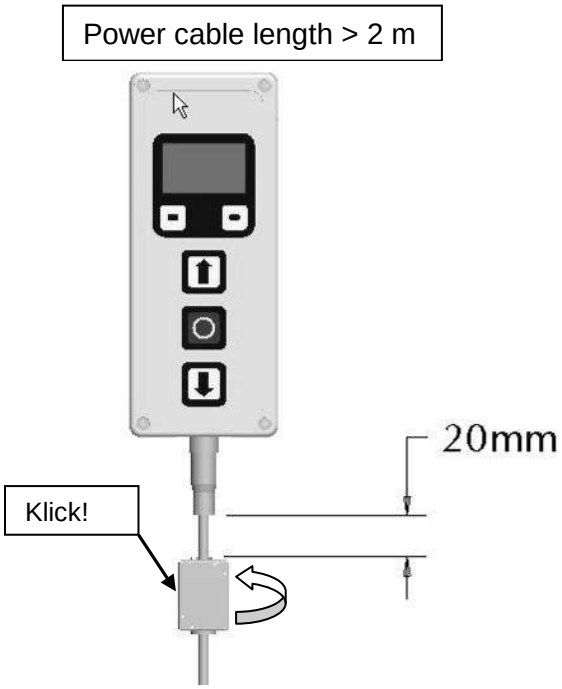

After testing the safety features and the test run of the door – installation is finished.

The dismantling of the door is made in opposite direction to the installation.

The packing material of the door may be returned to the manufacturer. Defective door components should be disposed according environmental regulations.

Defective electronic components should be disposed as special waste.

36.