JM 500 Fire Door Operators

INSTALLATION

The intended use of this equipment is to govern the open and closure of a fire shutter, either by electrical means e.g.. Key switch or Push button or manual means e.g.. Haul chain and Controlled descent. It is designed to be used in an Ambient dry enviroment temp range -15 to +40°C

It should be securely fixed to a plate designed to accommodate the JM 500 operator.

The hand chain can be altered to suit the handing of the operator.
When the operator has been mounted in the required position, the haul chain and controlled descent ratchet can be adjusted to suit.
The four brake housing screws must be loosened and the brake housing rotated until the haul chain is in the correct position, i.e. hanging down.

The haul chain is designed for emergency use for opening only and is not for day to day operation. To close the descent lever must be activated either by manual or by means of a solenoid unit, the reversible ratchet prevents the haul chain from being used to close the door. This is altered by removing the 2 ratchet screws and rotating through 180°

Any site wiring must be carried out by a competent person in accordance with IEE wiring regulations.
The electrical supply must be fed via appropriate fuses to a 2 pole (1ph) or 4 pole (3ph) lockable isolator.


This unit **MUST** be permanently bonded to a supply earth, along with any mains control equipment.

This unit contains **NO USER SERVICEABLE PARTS**, should a fault arise seek advice from specialized personel.

THE MECHANICAL LOADING FOR THIS OPERATOR MUST NOT BE EXCEEDED

Technical details of JM500 controlled descent operators


Operator Reference	Number of phases	Voltage (V)	Power (watts)	Output Torque (Nm)	Full load Current (amps)	Start up Current (amps)
JM500	1	230	370	34	3.5	11.9
JM500	3	415	250	34	0.7	2.38

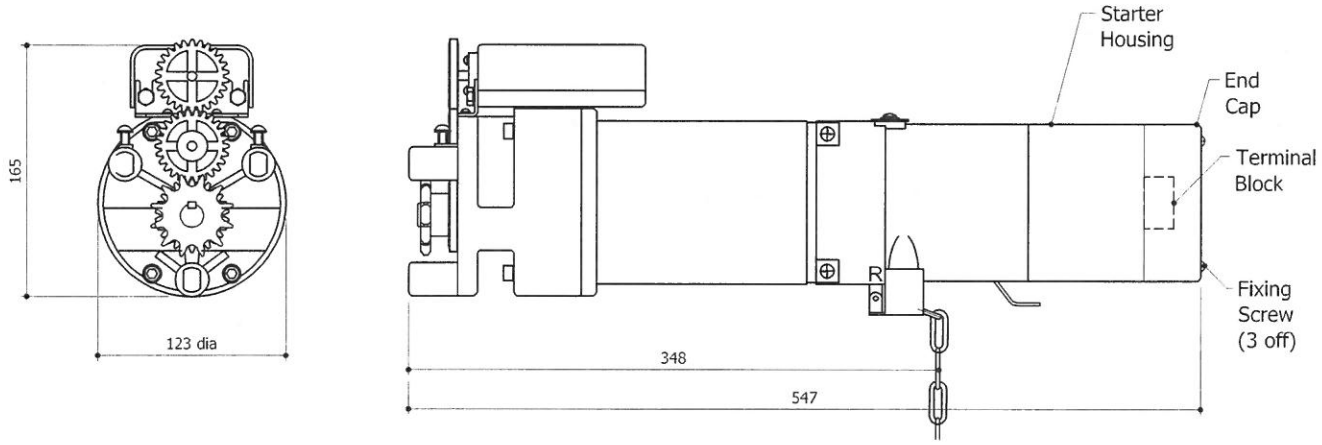

Limit Setting Instructions

1. Position the door in mid travel.
2. Isolate the power supply.
3. Loosen the knurled limit switch screw.
4. Wind both knurled limit screws towards the centre of the Limit travel rod.
5. Re-tighten the knurled limit screws to allow the maximum travel in both directions.
6. Return power to the unit.
7. Open the door until it is just below the required height.
8. Isolate the power supply.
9. Loosen and move the knurled limit screw until it operates the limit.
10. Return power.
11. Test by bringing the door down a short distance then up, the door should stop on the set position.
12. Repeat No's 8 - 11 for the down limit.
13. Set over travel limits to operate after travel limits.


N.B. if over travel limits are activated, the unit will not operate electrically until it has been moved manually away from the over travel limit switch

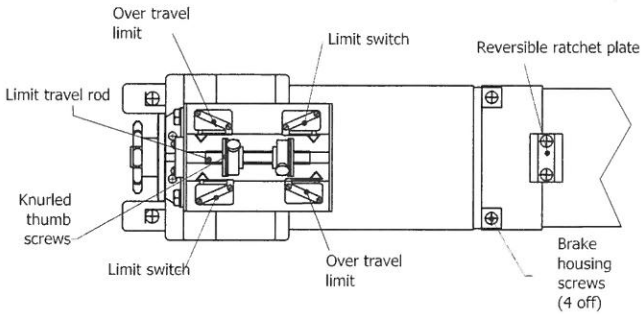


Electrical Connection and Configuration
(Right hand mount shown)


Access to the terminal wiring is given by removal of three retaining screws securing the end cap to the starter housing. This should only be necessary to connect the 240 volt RESET facility for the release solenoid. All electrical work must be carried out by a competant person in accordance with the IEE wiring regulations.

1PH WIRING DIAGRAM FOR
JM-500 BUILT-ON STARTER

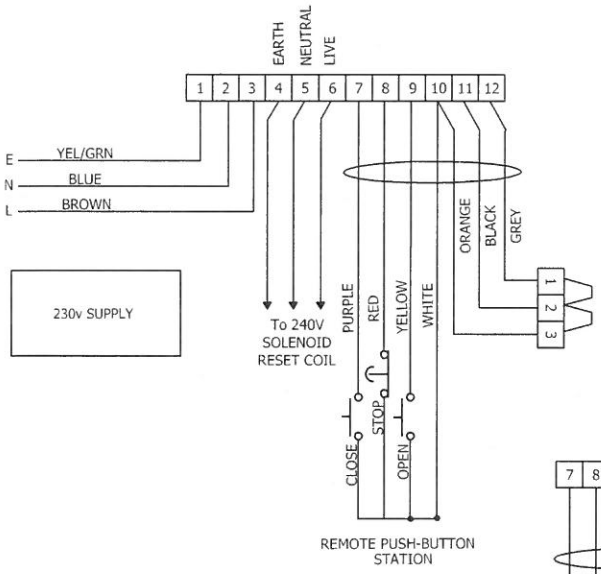

3PH WIRING DIAGRAM FOR
JM-500 BUILT-ON STARTER

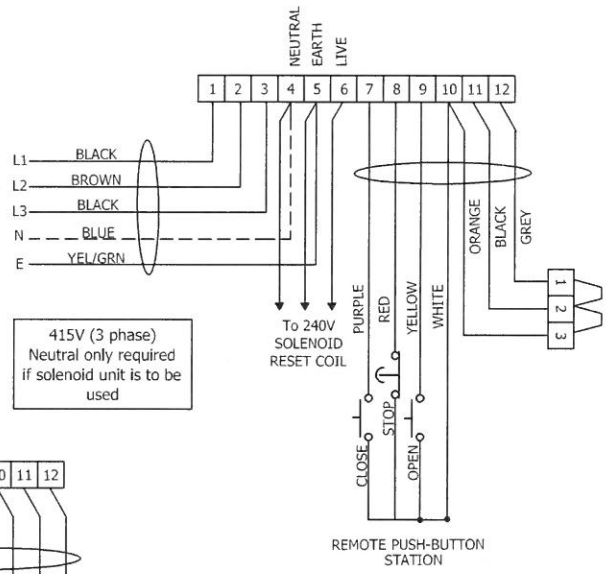

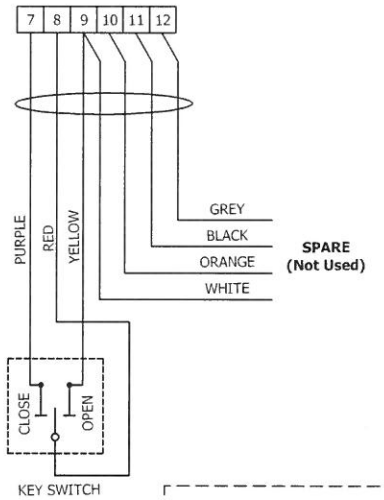

PUSH BUTTON WIRING


This unit is supplied for use in 'DEADMAN' mode to enable the user to set the travel limits safely

After travel limit setting, the operator can be configured for the users choice of control

1. For 'DEADMAN' in both directions
Leave as existing configuration (or remove the white wire if connected)

2. For continuous run in both directions
Connect the 'WHITE' wire in push button station as shown

3. For 'DEADMAN' on close
Connect the 'WHITE' wire in push button station as shown and remove the link from BLACK-ORANGE connection

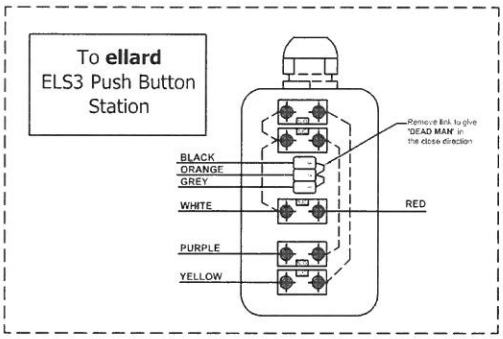

ellard Ltd
Roundthorn Industrial Estate, Dallimore Road,
Wythenshawe, Manchester M23 9NX