
HYDRAULIC SCISSOR LIFT

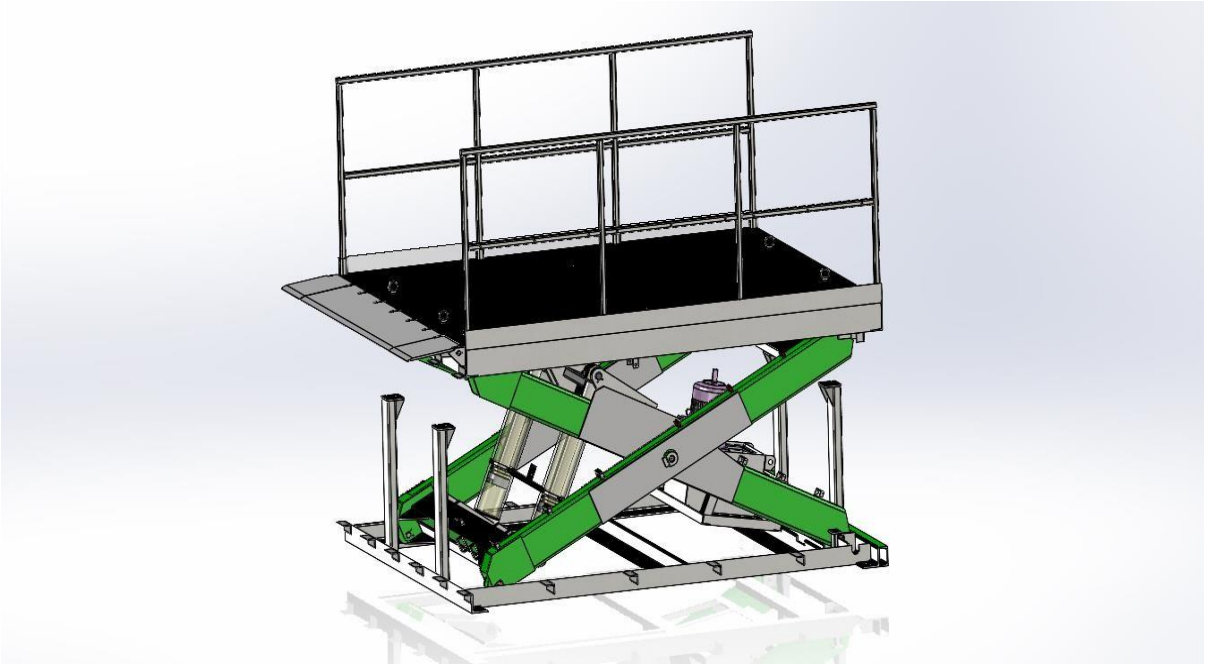

PRE – OPERATING INSTRUCTIONS: -

- The operator / owner shall read and be familiar with the Owner's manual, especially the Operating and Maintenance Instruction.
- Ensure Hydraulic Oil in the power pack.
- Ensure Motor connection and proper earthing.
- Ensure joint leakage.
- Do not enter the pit area below the scissor lift.

SOP:

1) Before starting ensures that there is no any leakage from the hydraulic connections and the electrical connections are in proper condition.

2) Switch on the power supply from the control panel.

3) Operating pendent box and control panel is provided with push buttons to '**LIFT**', '**LOWER**' and 'EMERGENCY **CUT-OFF'**. Unlock the both emergency cut-off switch. Press and hold pressed the lift button till you reach the desired height.

4) Lowering press and hold the lower button. Use emergency cut-off switch to stop the lift in case of emergency and after the operations are over.

5) For loading operation load the platform centrally.

6) After loading of material in vehicle, press up push button and disengage scissor lift with vehicle point of contact.

7) Remove vehicle.

8) Press Lower push button to lower the scissor lift.