5 Installation and dismantling *RR 355*

5.1 Checking the delivery content and condition

The RR 355 is mostly pre-assembled at delivery. The side columns are fixed together with the top roll cover, the motor cover (if included in delivery), the fixing material and the control unit, to a transport pallet (made of wood). The door must be checked for possible transport damages and completeness – compare with order/delivery papers.

5.2 Preparations for installation work

Check the place of installation with regard to fixing points and set-up conditions. Possibly a supporting construction or other required fixing possibilities must be prepared. The head plates should be screwed onto a steel support or a concrete element.




Isolated panel walls, rider bricks and lightweight construction walls must be checked for suitability of installation.

Measure the light dimensions (width and height) of door opening and check with order papers.

The site of installation must be secured against pedestrian and vehicle traffic.

Before start of installation the plastic sheets of the packing must be removed. Afterwards the covers of the side columns and the control unit must be removed from the pallet and laid down in sufficient distance of the door opening.

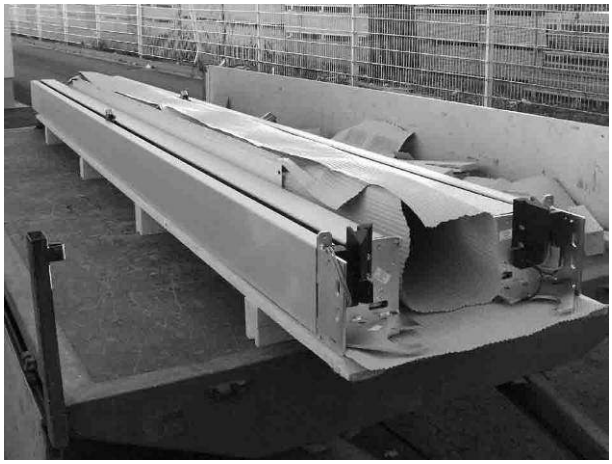

1. The door shipment should be checked for transport damages and completeness – compare delivery / order papers.



2. The floor must be checked for even level. This may be done with a laser pointer or a hose level.



3. At slanting surface of the floor the side column must be firstly installed on the higher side. **(difference in height max. 3mm)**



4. Align first side column exactly vertically by means of a water level.





5. Fix the head plates with 2 screws onto the wall.

6. Fix the bottom plate with 2 screws.





7. Set up the second side column.
Difference in height between the side columns **max. 3 mm**. If necessary the lower side must be lined.

8. Align the second side column to the exact light width and fix as described in point 5. and 6. **(light width ± 2mm)**



9. For easier installation of the U profiles the bellmouth may be removed.



10. Install the aluminum U profile for the cable wiring at both head plates and lay the cable.




11. Pull the rope through the opening of the winding disc, knot together and make **two** pre-winding layers opposite the curtain direction.



12. Lift the top roll with a crane or forklift. With small doors the top roll may be lifted by hand.



13. Fix the bearings onto the head plates at the prepared points.

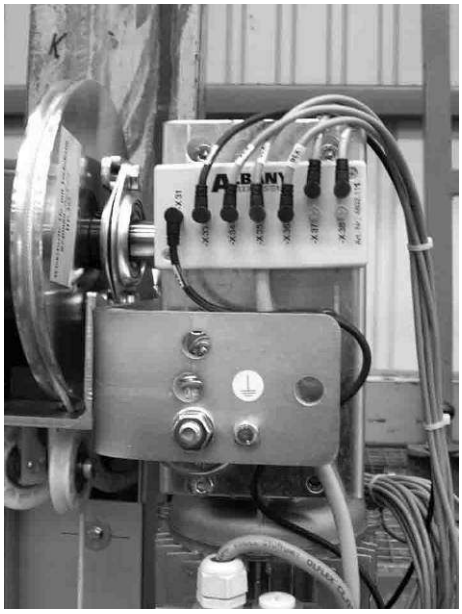


14. Put the motor onto the drive shaft. Pay attention to the feather key connection.
Connect plugs with box according to numbers.
⚠ Connect potential equalization!






15. Pull the metal wire through the bore holes of the head plate. The end is led through the brake release lever and fixed at the cover plate. Fix longer cables with a cable strap to the motor.

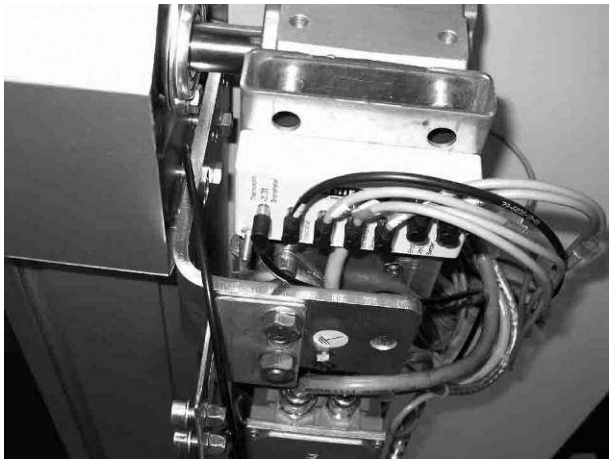

16. Fix the torque support with 2 screws at the head plate and screw together with the motor.




17. Slip the bottom profile onto the bulge of the door curtain and center.

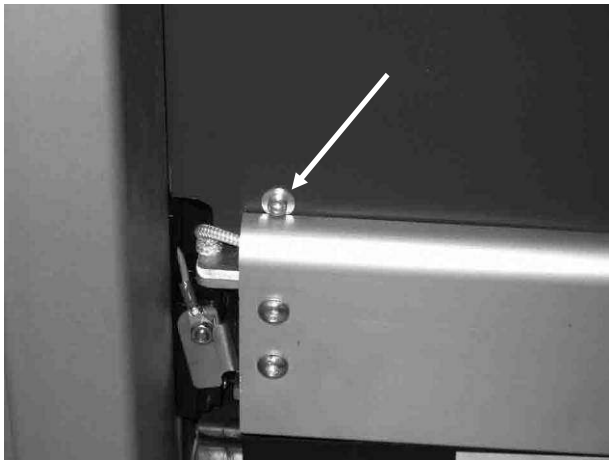


18. Drill holes into the door curtain from the backside and fix the bottom profile with 2 screws M5x6.




19. Open the door completely and install the spring of the balance system and the curtain tension.

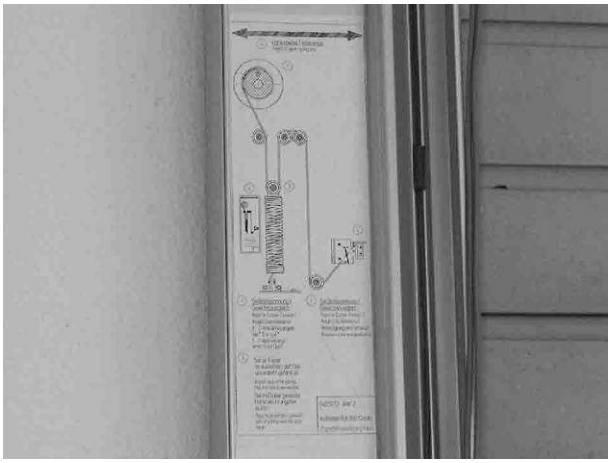


20. Put on the ropes for the curtain tension according the drawing at the side columns.

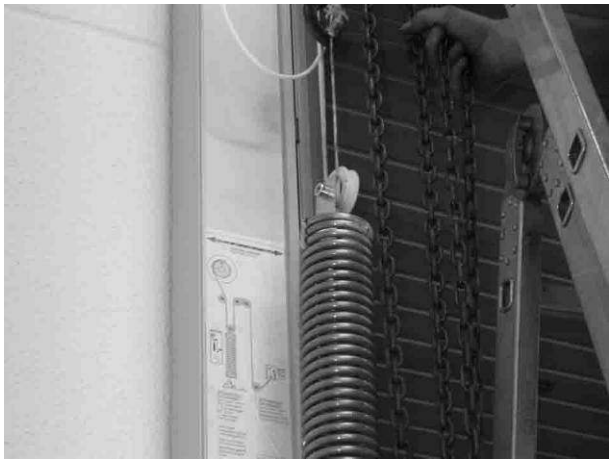

21. Set the pre-tension inside the side columns by means of a block and tackle.

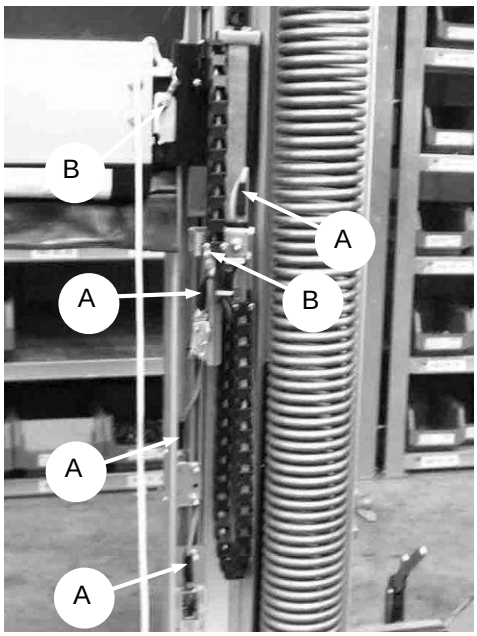


22. Install the flexible trailing chain for cable between side column and end guiding plates. Connect cable **A** und earth cable **B** according to picture.

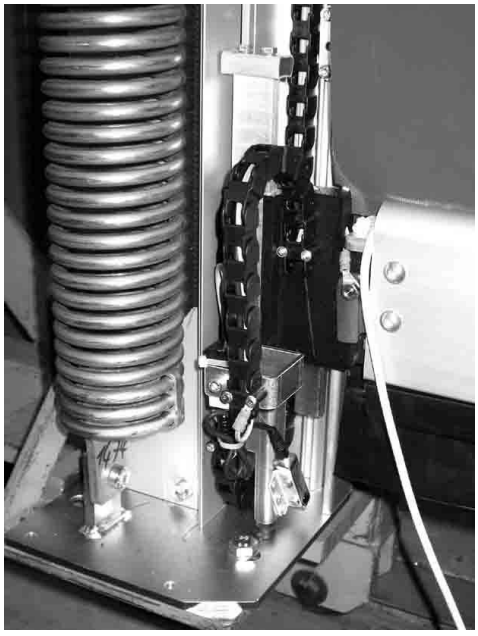

23. With the crash variant the rope must also be lead through the bore hole of the aluminum angle at the front side of the bottom profile.




24. Fix the bowden cable at the emergency lever, positioned at the cover profile.

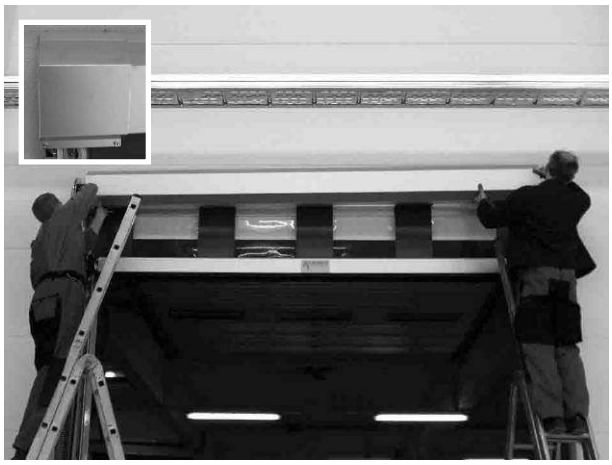

25. Screw together the top roll cover and covers with the head plates.




26. Screw cover profile together with bottom and head plates.

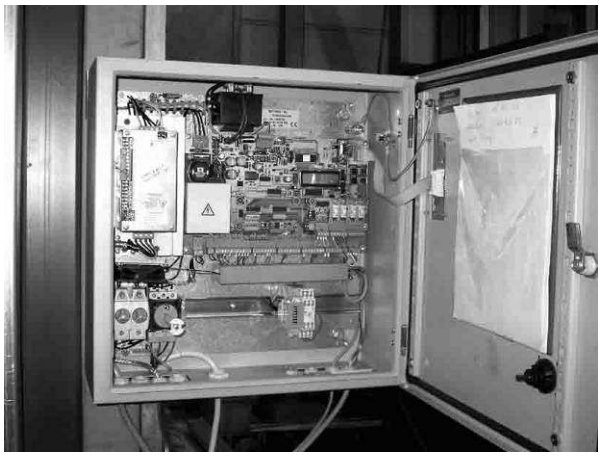

23. Connect the control unit.
(see chapter 8 and 9 of operation manual)

After testing the safety devices and the initial operation/test run of the door the installation work is finished.

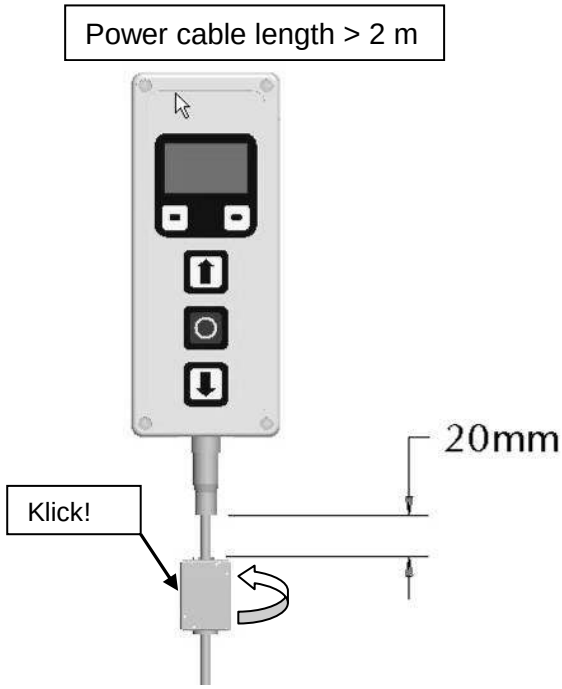

The dismantling of the door is made in opposite direction to the installation. The packing material of the door may be returned to the manufacturer. Defective door components should be disposed at site according environmental regulations. Defective electronic components should be disposed as special waste.	