ENGLISH

Original user instructions in German

these user instructions cover R01 series units (see nameplate).

CONTENTS.....**Page**

GENERAL SAFETY PRECAUTIONS 1
BASIC DESCRIPTION AND PREPARING THE INSTALLATION.....1
ASSEMBLING THE D-PRO AUTOMATIC CONTROL UNIT 2
HOOKING UP THE MAINS CABLE.....3
CONTROLS AND CONNECTIONS 5
ADJUSTING THE MECHANICAL LIMIT SWITCHES.....7
ADJUSTING THE DIGITAL LIMIT SWITCHES.....8
OPERATING FUNCTIONS 8
D-PRO AUTOMATIC 2.2 kW SCHEMATIC DIAGRAM.....10
D-PRO AUTOMATIC 2.2 kW MOTHERBOARD.....11
D-PRO AUTOMATIC 2.2 kW FRONT BOARD.....12
TECHNICAL DATA - SPECIFICATIONS.....13
DECLARATION OF CONFORMITY 13

GENERAL SAFETY PRECAUTIONS

D-PRO Automatic door control units are conforming with established safety legislation, as are the contents of this manual. Incorrect installation can result in serious injury to the installers and users. For this reason, during installation, always strictly observe all instructions in this manual.

Do not proceed with the installation if anything is unclear to you; contact Nice customer service for support.

WORK SAFELY!

CAUTION! – These instructions are critical to your safety.

CAUTION! – Keep the important safety instructions.

Observe the following instructions in full:

- **Only make the electrical hookup specified in this manual; improper hookup can serious damage the system.**
- **If used outdoors, the cables must be completely protected by plastic cable ducting.**

Given the risks attendant on the installation and use of the system, the propulsion system installation must satisfy the following requirements:

- only make the modifications given in these instructions to the control unit and drive. Any other modifications may result in damage. The manufacturer is not liable for damage caused by arbitrary modifications to the propulsion system or control unit;
- make sure the control units are out of the reach of sources of heat and open flames at all times. Failure to do so may result in damage, fire and other hazards;
- do not immerse the control unit or drive in water or other fluids during their installation. Do not allow fluids to enter the system during the installation;
- the propulsion system's packaging must be disposed of in accordance with local regulations.

CAUTION! – Keep these instructions carefully as a reference for scrapping and servicing the equipment.

EN

BASIC DESCRIPTION AND PREPARING THE INSTALLATION

Description and use

The D-PRO Automatic is a door control unit for three-phase and single-phase sectional, high-speed and roller door drives, 230 and 400 volts, with a mechanical or electronic limit switch. The high-speed doors are operated using NICE frequency converters. All of the usual safety and control elements can be connected.

Other possible applications (traffic lights, inductive loops for recognising vehicles or remote service functions) can be implemented by inserting other boards (modules).

To open or close a door, simply press the button on the housing or the corresponding external button.

In automatic mode, the door can be also be opened closed by radio.

Any other use is non-conforming! The manufacturer is not responsible for damage resulting from non-conforming use of the system's equipment not specified in these instructions.

The manufacturer is responsible for the entire system and must ensure observance of the applicable standards and directives (including EN 13241-1). The manufacturer must ensure that the EMC, Low Voltage, Machinery and Construction Products directives are observed.

He is responsible for providing the technical documentation for the system as a whole, which must be enclosed with the system itself.

National and local regulations governing the installation must be observed, as well as any national accident prevention legislation.

When working on the installation, the door system must be disconnected from its power supply.

Pre-installation controls

Before starting the installation of the control unit, carefully read these installation and user instructions in full.

The manufacturer is not liable for any responsibility or guarantee relating to the product if the system is modified without his written authorisation in advance, or non-conforming installations in violation of the installation instructions are done or permitted.

The manufacturer must ensure that the EMC, Low Voltage, Machinery and Construction Products directives are observed.

CAUTION! - The control unit and drive may not be used in potentially explosive environments.

EN

Assembling the D-PRO Automatic control unit

Proceed follows when installing the control unit:

01. open the cover of the control unit's housing: slacken off the mounting bolts;

02. configure the holes for the cable clamp for the hookup and signal cables on the control unit.

To achieve this and, in particular, to guarantee the IP protection class, the use of a specific tool is required (core drill or circle cutter). Cable inlets are only allowed in the lower housing wall. When there are two control unit housings and one is installed above the other, the motor cable for the upper control system is guided into the housing from above.

03. The mounting of the housing will depend on the conditions in the installation location. It may be installed in one of 3 ways:


a) directly on the wall by using screws in the housing (**A**);

b) by using the standard fasteners provided (**B**);

c) if the cables are connected externally, the housing must be installed 2 cm off the wall to allow the cables to run between the wall and the housing itself. The NDA530 accessories kit (optional) contains 4 spacers (20 mm) and a plastic cover to protect the cable entrance points.

04. You can now do the electrical hookup.

When installing electrical accessory equipment, refer to the appropriate installation and user instructions.

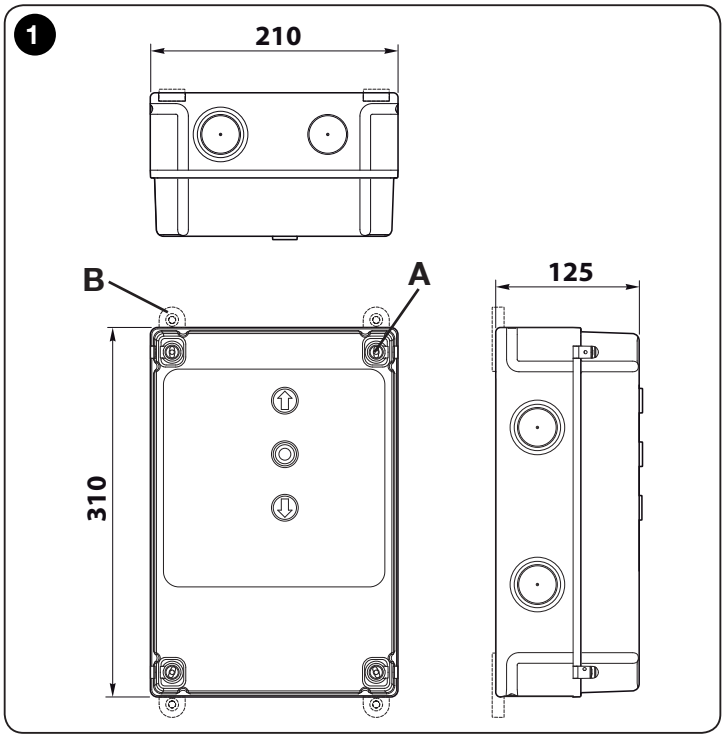


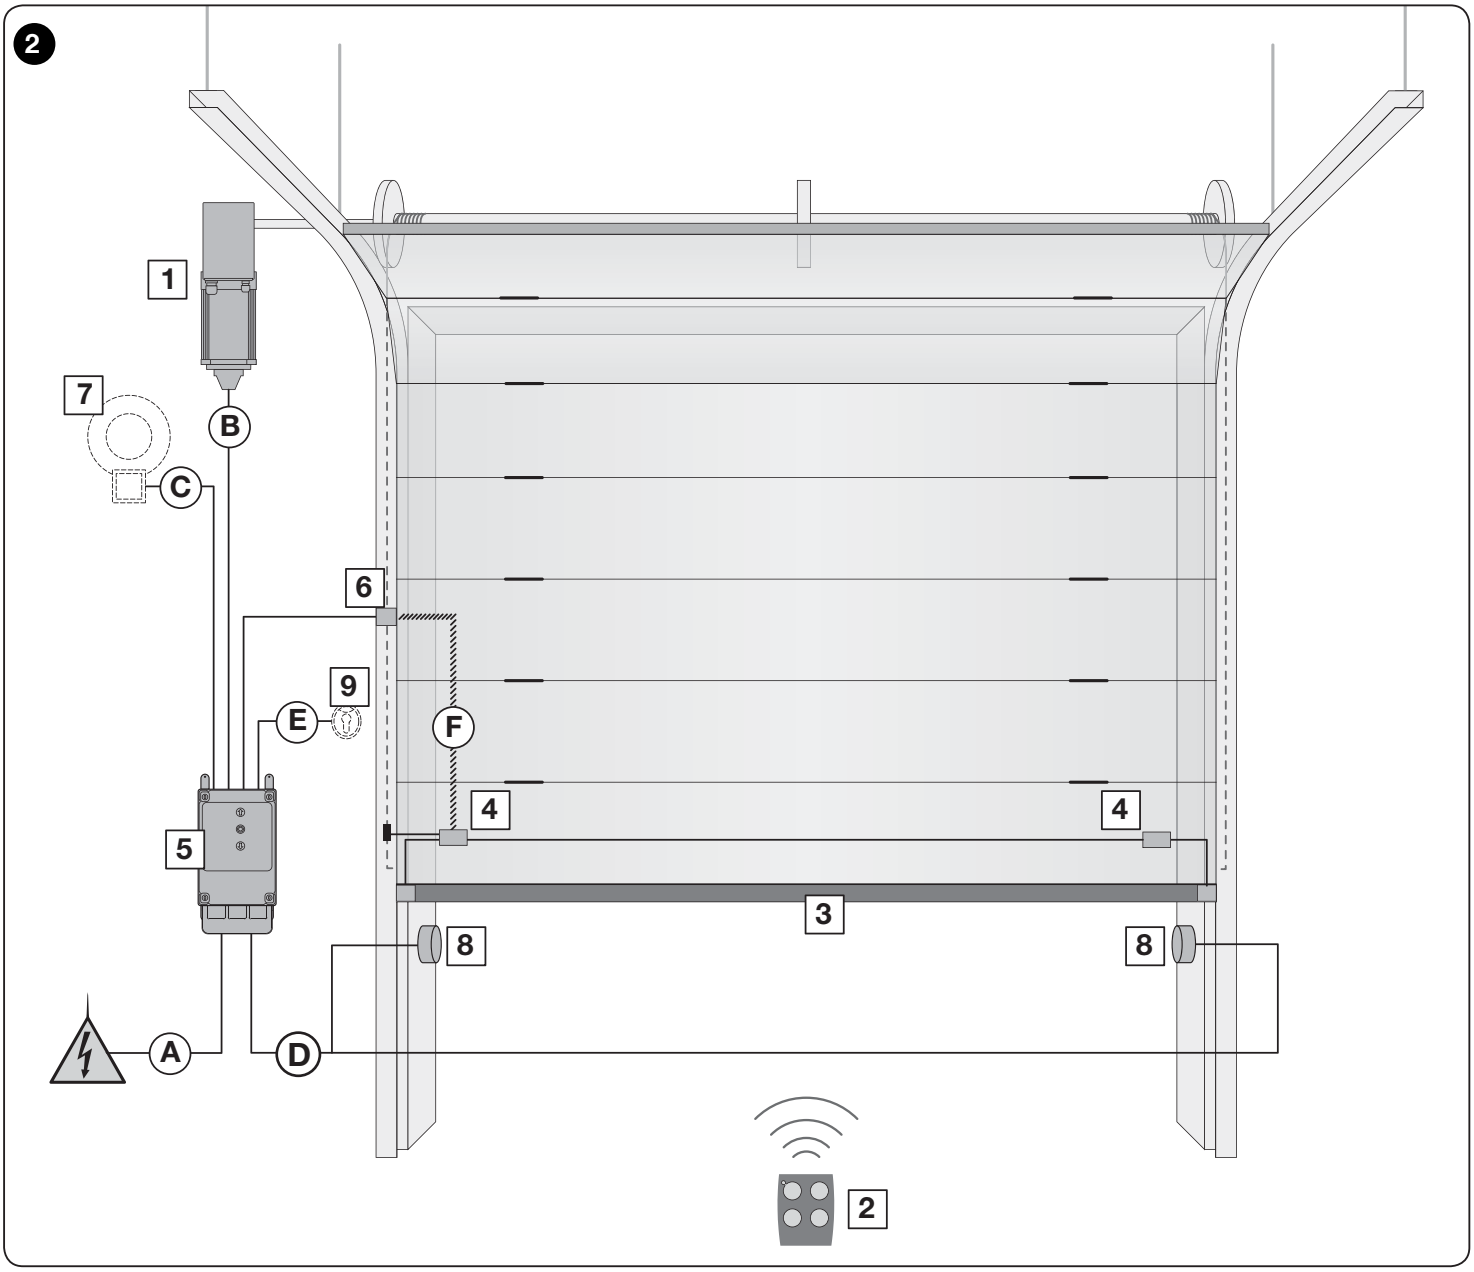


TABLE 1 - Technical specifications of electric cables (fig. 2)		
Connection	**Cable type**	**Maximum length**
A: MAIN CABLE with CEE connector	Motor < 1.5 kW 5 x 0.75 mm^2 Motor > 1.5 kW 5 x 1.5 mm^2	1 m (**Note 1**)
B: MOTOR cable	Nice provides special cables for their gearmotors as accessory equipment.	5 - 7 - 11 m
C: FLASHER cable	2 x 0.75 mm^2 (for flasher)	10 m
D: PHOTOCELL cable	4 x 0.5 mm^2	15 m
E: KEY SWITCH cable	3 x 2 x 0.25 mm^2	10 m
F: Spiral cable for safety edge	A Nice spiral cable is available as accessory equipment	4 m
Note 1 *– If the mains cable is longer than 5 m, you must use a larger diameter.*		

TABLE 2 - Legend for fig. 2		
1: Door drive	**2:** NICE hand-held transmitter for receiver OXI 433 MHz / 868 MHz or SMXI 433 MHz	**3:** Safety strip with NICE opto sensors
4: Door junction box	**5:** D-PRO automatic door control system	**6:** Spiral cable mounting bracket
7: ML or MLT warning light	**8:** MOFO light barrier	**9:** Key switch

HOOKING UP THE MAINS CABLE

Three-phase model hookup

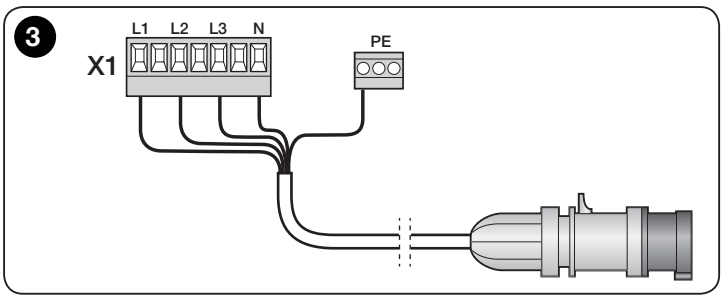


A CEE 16A connector is connected to terminals L1, L2, L3, N and PE.

The D-PRO Automatic can also be hooked up to the mains power supply with an optional three-phase master power switch. In this case, the CEE connector may be removed during the installation.

If not already present, the mains cable must be connected to terminals X1 (L1, L2, L3, N) and PE.

CAUTION: The mains connection must be protected by the manufacturer with 3 x 16A fuses.

Single-phase model hookup

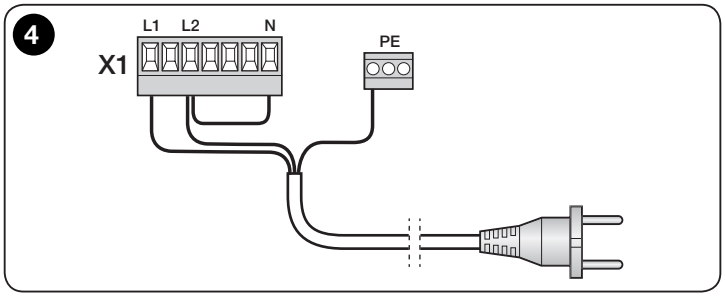

A SCHUKO connector is connected to terminals L1 (N), L2 (phase) and PE. The D-PRO Automatic can also be hooked up to the mains power supply with an optional master power switch. In this case, the SCHUKO connector may be removed during the installation. If using a 200V/DC brake, L2 (N) must be connected to N on terminal X1.

Functions and parameters

The D-Pro Automatic control unit allows you to select a variety of parameters during installation and for control. You can activate multiple functions with the correct value of the corresponding parameter.

The parameters can be changed using the DIP switches and the programming button on the rear of the cover circuit board, and the result appears on the display.

Further information and a list of parameters are enclosed with these instructions.


Controlling the direction of rotation

IMPORTANT: The door must open 50 cm with the emergency drive to prevent the lift cable (sectional doors) detaching or the housing winding up (roller and rapid doors) if the direction of rotation is wrong.


The device can now be activated (insert the CEE connector).

Use the OPEN and CLOSE buttons to check the direction of rotation under the operator's supervision. If the direction of rotation does not match the direction of the button's arrow, change the direction of rotation with parameter 75 (P 75 =2).

3-phase motor connection

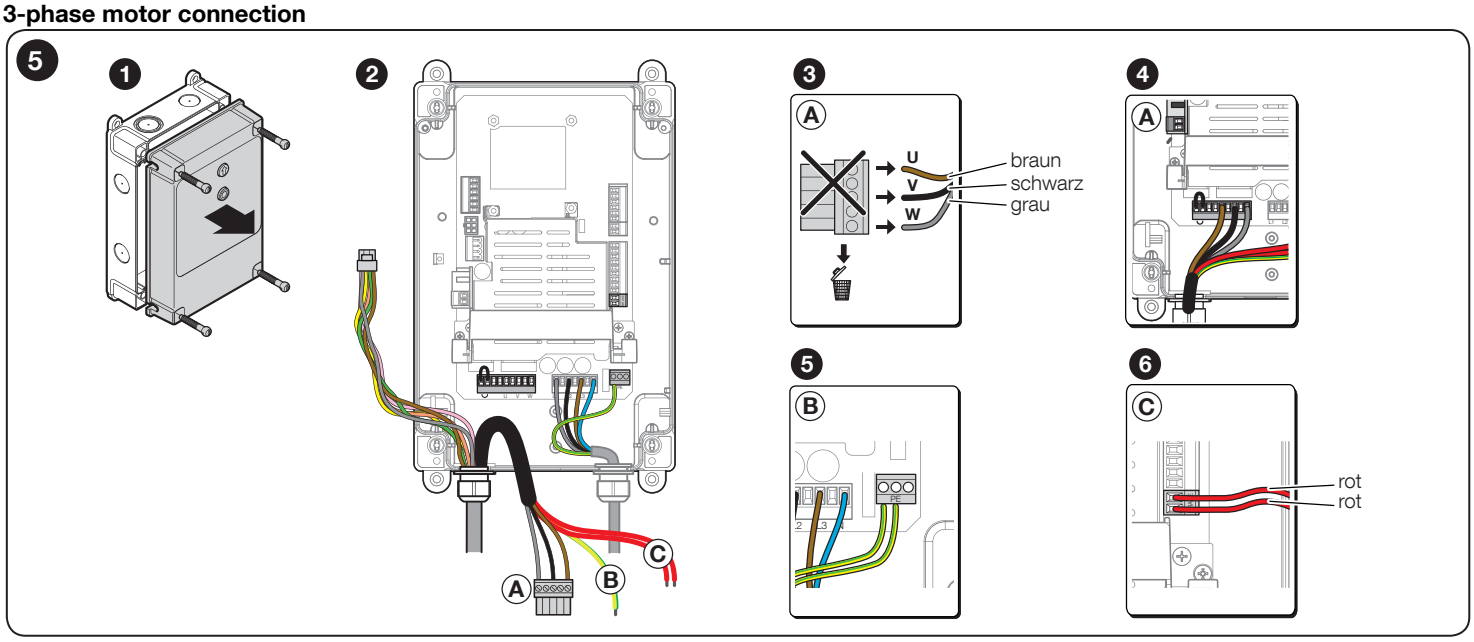


Single-phase motor connection

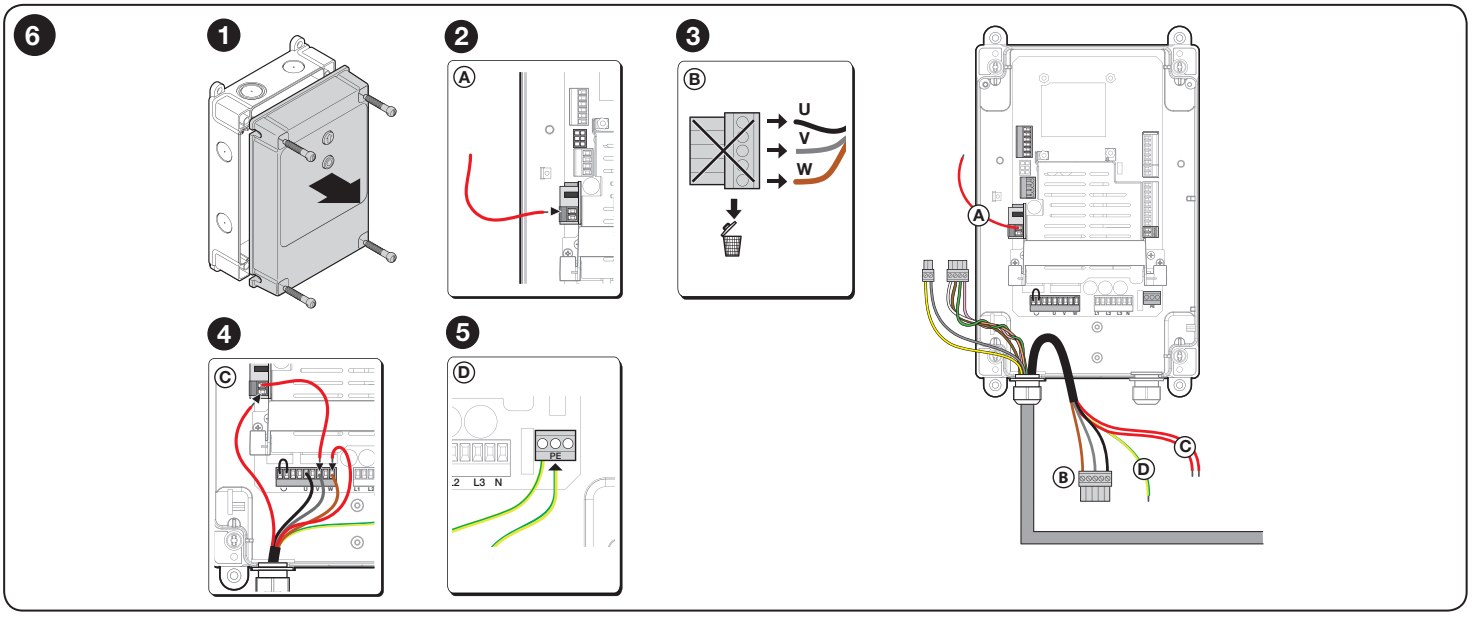


Slot on D-PRO X8

CAUTION: The 230/400V jumper at the bottom of the board must be soldered to 230V! D-Pro Automatic control units numbered NDCC1200 to NDCC1299 are factory set to 230V and supplied with a board pre-installed to X8 for the condenser connection.

Limit switch connection

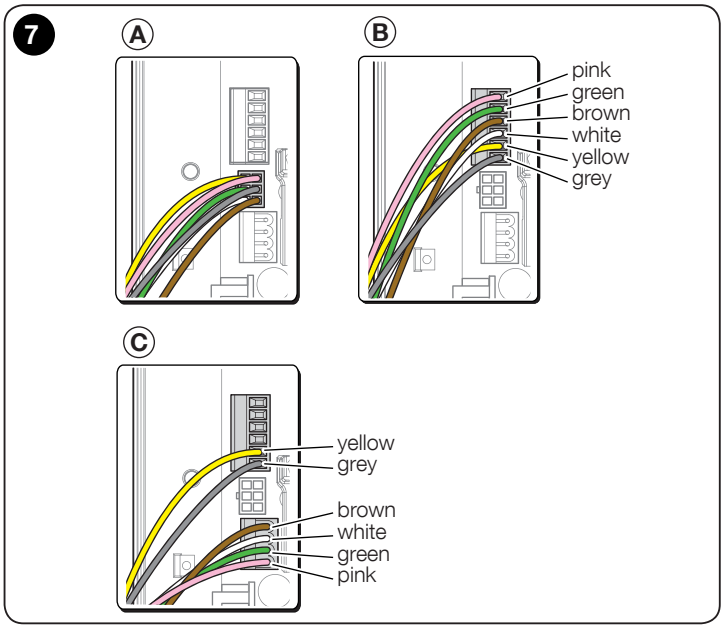

If a motor cable made by NICE is used, then the limit switches are connected as follows:
A When using electronic limit switches, the Tyco mini-fit connector is connected directly to the X7 (J5) socket on the control unit.
B When a shortened motor cable is used, or if the system is old, the wires are fitted with wire end ferrules and the electronic limit switch is connected to terminal X7 (J34, J35) and the safety circuit (thermo switch) to terminal X7 (J29).
C When a mechanical limit switch is used, the wires are fitted with wire end ferrules and the limit switch is connected to terminal X7 (J26, J27) and the safety circuit (thermo switch) to terminal X7 (J29).

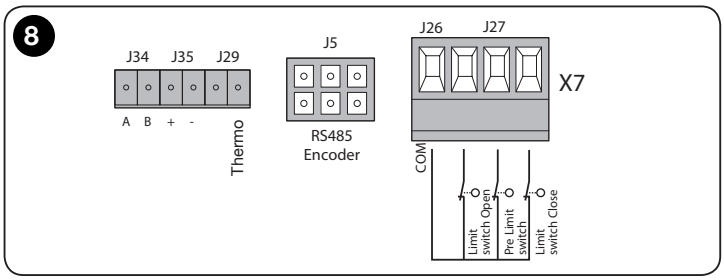

Setting the limit switch - General information

The D-PRO Automatic allows a second, additional limit switch for the UP direction to be connected to the drive (J33/X6) when mechanical limit switches are used. An (optional) position switch on the cover of the D-PRO Automatic housing is then used to choose between the two different UP positions (e.g. summer/winter changeover). When an electronic limit switch is used, the settings for the additional UP position are entered when programming the limit switch.

The settings for the limit switches must be entered in dead man mode!

When the NICE cable is used, the corresponding terminals are already installed.

The upper and lower switch-off position is defined when setting the operational limit switch.

The drive must be connected to the power to make the settings.

CONTROLS AND CONNECTIONS

The buttons on the cover of the housing are used to raise and lower the door, either locking or in hold-to-run mode.

If operated in locking mode, the door can be stopped at any time with the STOP button.

You can also hookup and external control, such as a three-button keypad.


A pull-switch mounted inside or outside (pull-cord operated switch under the ceiling) controls the door in OPEN-STOP-CLOSE mode.

Connecting the OPEN, STOP, CLOSE transmitters

For external control, a three-button keypad can be connected to the D-PRO Automatic's terminal block X4. The OPEN and CLOSE buttons must be configured as closing contacts.


Since the STOP button is connected to the safety circuit, it must be connected as an opening contact.

If you connect a STOP button to terminal block X4, you must remove the jumper on terminal J15 and connect the STOP (opening contact) to it!

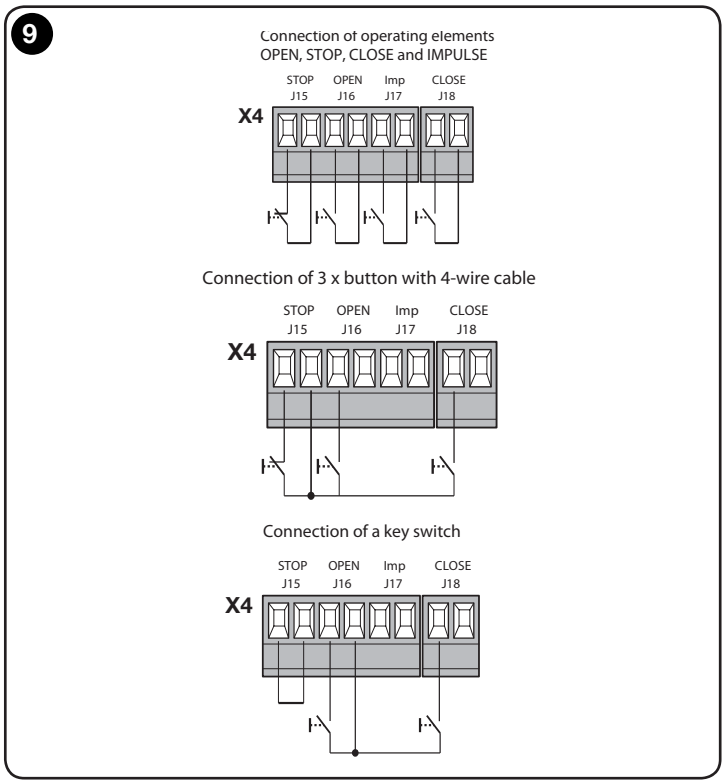

Hooking up an optoelectronic sensitive edge


Optoelectronic sensitive edges are constructed so that, when the sensitive edge is actuated, a ray of light is interrupted along its entire length. In order to control the safety edge along its entire length, a receiver is installed at one end.

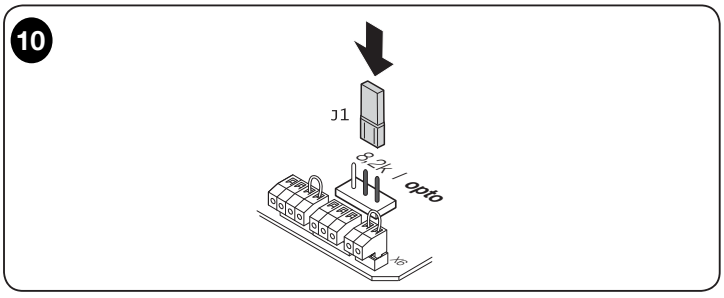

Jumper J1 set to Opto = ready for use with optical edge


If the sensitive edge is fixed to the ground, the inversion function is neutralised by connecting a pre-limit switch (additional limit, pre-limit) to terminal J27 on terminal block X7 (mechanical limit switch only).

The pre-limit switch must be set to around 5 cm off the ground.

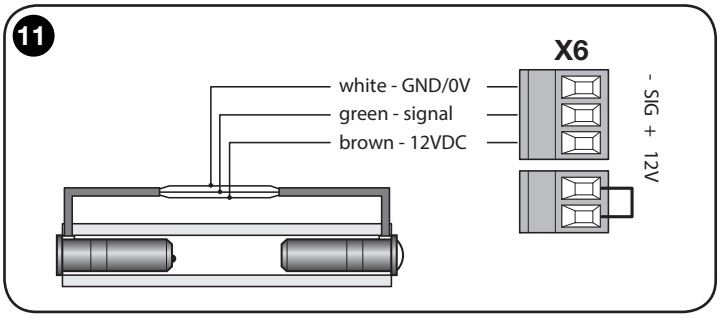


Hooking up an 8.2 kΩ safety edge

The D-PRO Automatic can be connected directly to an electric or pneumatic safety edge.

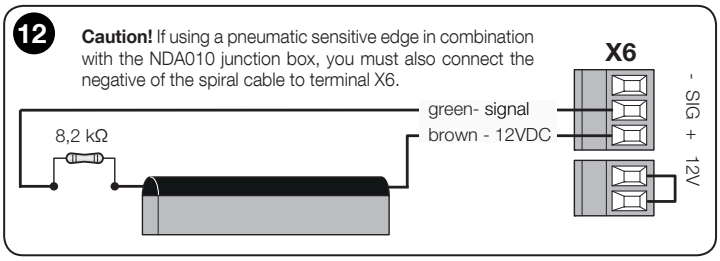

The control logic for such units is already integrated into the controller. In order to monitor the edge's entire electrical circuit, the edge must be connected to a resistance (8.2 kOhm).

The sensitive edge connects to terminal J32 (S and +) of terminal block X6

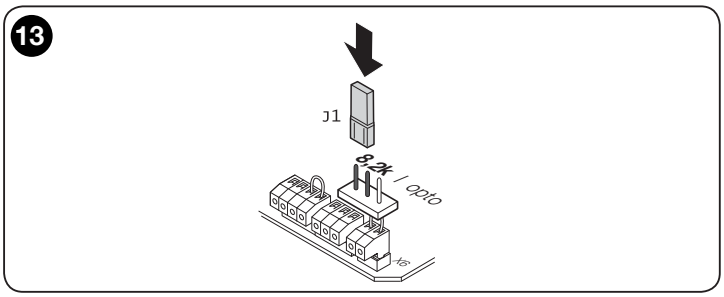

Jumper J1 set to 8.2 k = ready for use of pneumatic/electric pneumatic edge, 8.2 kOhm.


If using an impact actuated safety edge, parameter P105 must be set to 1!

Hooking up photocells

You can connect the D-PRO Automatic directly to a photocell (terminal block X5) to ensure safe transit. If the IR beam of the photocell is interrupted while the door is closing, the door stops and returns to its top position.

CAUTION: If a one-way photocell with only three connection points is used, the switching contact and positive side of the photocell's electronics must be connected to terminal J30/1 with the positive potential.


If you connect a photocell, you must remove the jumper on J31, terminal block X5!

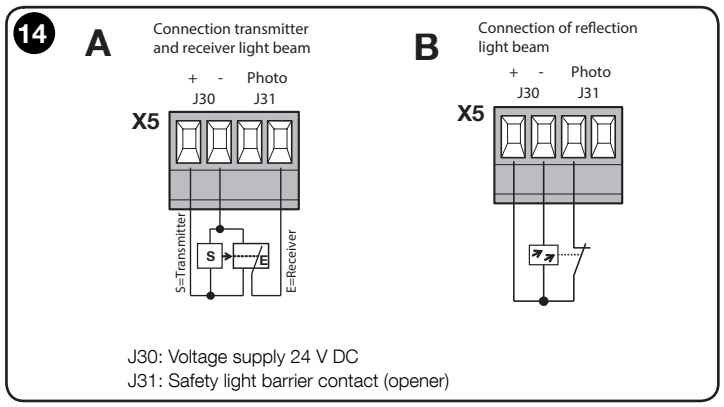

Hooking up the pedestrian door safety switch

For industrial gates with pedestrian door sections, the safety switch must be connected to terminal J10 on terminal block X2.

Caution! If pre-assembled, remove the jumpers on J10.

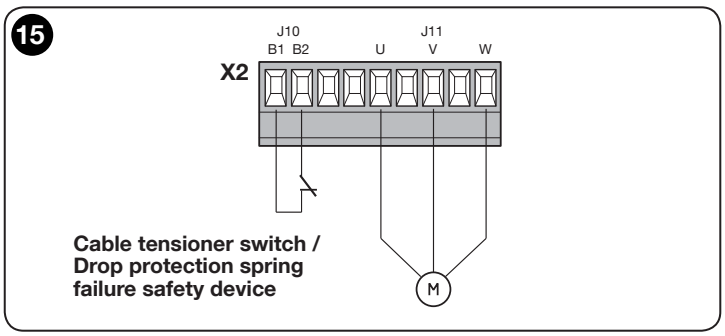

Hooking up control devices such as pull-cord switches

Control equipment can be connected to the D-PRO Automatic control unit on terminal block X4. The function of these inputs for control equipment is described in the list of parameters in par. 100 to 103.


Hooking up a radio control unit (radio module)

The 10 pin slot (OXI receiver) is used for inserting Nice OXI or OXIFM OPERA series receivers.

When doing so, the side with the led/programming button must be facing the interior of the housing.

If using an OXI radio control unit, make sure to make the appropriate settings! See the parameters list - P 106

Also refer to the receiver and radio control unit's user instructions.

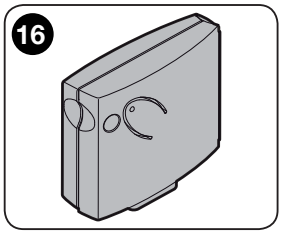

Bridges and jumpers required for the control unit to operate when components are not connected

Bridges:

Terminal X2 - position J10

Terminal X4 - position J15

Terminal X5 - position J31

Terminal X6 - position J33

Jumpers:

X8-Pin 5-6

X9-Pin 1-2

If a drive with electronic limit switches is hooked up, further bridges will be required in positions J26, J27 of terminal X7.

All these bridges and jumpers are installed in the factory.


Connection of the three zero-voltage relay contacts

Example: Connection of signal lamps 230 V – type ML and MLT

The **ML** and **MLT** indicator lamps can be connected to one of the freely programmable relay contacts.

When relay 1 is used, then a jumper must be connected from X1(L1) to X3(7).

The power terminals are then connected to X1 N and X3 - 9

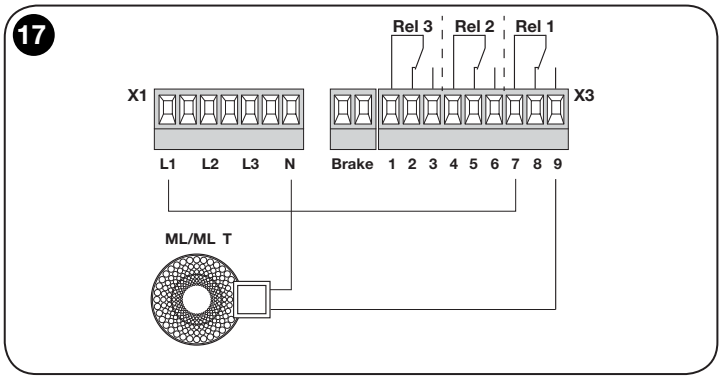


CAUTION: If using the ML and MLT indicator lamps, the N wire (230V) must also be connected to terminal X1 for power.

ADJUSTING THE MECHANICAL LIMIT SWITCHES

Caution! The limit switch adjustments must be done in hold-to-run mode!


To this end, you must set parameter 105 to 6 for the duration of the adjustment. You can access the limit switch board by unscrewing the housing of the limit switch itself.

Adjusting the mechanical limit switches for large size drives with 7 switching cams

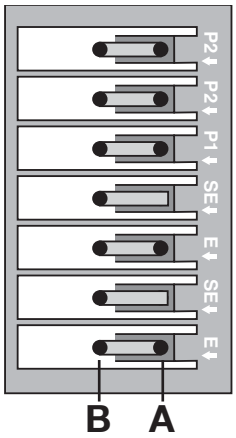

7	white	additional limit switch 2 CLOSE
6	green	additional limit switch 2 OPEN
5	white	additional limit switch 1 CLOSE
4	red	safety limit switch CLOSE
3	white	limit switch CLOSE
2	red	safety limit switch OPEN
1	green	limit switch OPEN

Adjusting the mechanical limit switches for small size drives with 8 switching cams

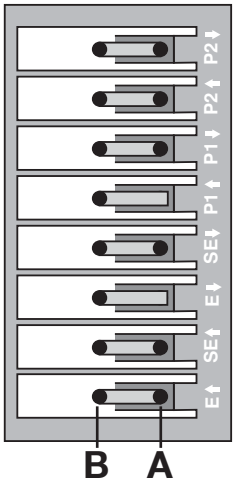

8	white	additional limit switch 2 CLOSE
7	green	additional limit switch 2 OPEN
6	white	additional limit switch 1 CLOSE
5	green	additional limit switch 1 OPEN
4	red	safety limit switch CLOSE
3	white	limit switch CLOSE
2	red	safety limit switch OPEN
1	green	limit switch OPEN

During the adjustment process, the drive is operated in hold-to-run mode with the OPEN and CLOSE buttons on the housing's cover

When you press OPEN the door should open; if this does not occur set parameter 75 to 2.

If the drive has been installed rotated by 180° (upside down), the door must nonetheless open when OPEN is pressed; if it does not, set parameter 75 to 2.

The two emergency limit switches must be corrected so that they trip after the operating limit switches.

Command	Wire	Motor
X2 - J11/U	1	U
X2 - J11/V	2	V
X2 - J11/W	3	W
X2 - J10	Bridge	-
X7 - MiniFit	Grey	AMP 3 connector
X7 - MiniFit	Green	AMP 4 connector
X7 - MiniFit	White	AMP 2 connector
X7 - MiniFit	Pink	AMP 5 connector
X7 - MiniFit	Yellow	AMP 6 connector
X7 - MiniFit	Brown	AMP 1 connector

Bottom deactivation position

To adjust the bottom deactivation position limit switch, proceed as follows:

Move the door to the desired CLOSED position.

Set the switching cam **3 E↓**(white) to trip the limit switch.

Tighten down mounting bolt **A**.

The adjustment is made with bolt **B**.

Move the door to the desired OPEN position.

Set the switching cam **1 E↓**(green) to trip the limit switch.

Tighten down mounting bolt **A**.

The adjustment is made with bolt **B**.

Safety limit switches **2 SE↓** and **4 SE↑** (red) must be set to trip immediately after the control limit switch.


Safety limit switches **2 SE↓** and **4 SE↑** (red) are factory set, close to the operating limit switch.

After the operating test, check the seat of the mounting bolt.

Additional limit switches **8 P2↓** and **7 P2↑** are voltage free closing contacts, while additional limit switches **6 P1↓** and **5 P1↑** are voltage free switching contacts.

- **In automatic operation, limit switch 6 is used as a pre-limit switch. It must be adjusted to trip at 5 cm off the ground.**
- **In hold-to-run mode, it need not be adjusted and be used as a voltage free contact.**

18 **Mechanical limit switches**

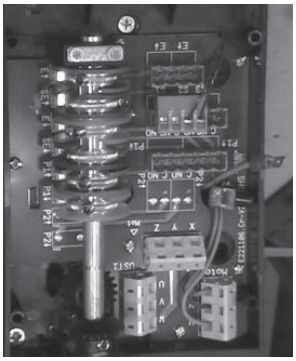

small type



large type

The subsequent paragraphs highlight the main programming functions of the D-PRO Automatic control unit accessible through the dip-switches.

For further details on the available functions, please consult the 'D-PRO Automatic parameters and error list' addendum accompanying this manual.

EN

ADJUSTING THE DIGITAL LIMIT SWITCHES

Adjusting the end positions

To this end, set dipswitch 4 to “ON”.



The upper sections of the display will flash.



Adjusting the top end position

Use the OPEN and CLOSE buttons on the cover of the control unit's housing in hold-to-run mode to move the door to the top end position. Then save this point by briefly pressuring the programming button UP or DOWN on the cover circuit board.

The lower sections will now flash.



Adjusting the bottom end position

Use the OPEN and CLOSE buttons on the cover of the control unit's housing in hold-to-run mode to move the door to the bottom end position. Save this point by briefly pressing the programming button UP or DOWN on the cover circuit board.




The central sections will now flash.

If you do not wish to set any intermediate position, set dipswitch 4 to OFF!

Setting partial opening

If you wish to set a partially open position, leave dipswitch 4 set to ON.
Using the UP and DOWN buttons on the control unit cover allows the door to be partially opened, and the position is confirmed and saved using the programming buttons UP or DOWN.
The display now vanishes.

Now set dipswitch 4 to “OFF”.



The display will now flash **Einr**!

Press the OPEN button on the cover to enable recognition mode; the door will move repeatedly to the top end position and, after a brief pause, to the bottom end position. The **Einr** display will now disappear!

Make the fine adjustments using the list of parameters.

Parameter 10 = top end position adjustment

Parameter 11 = bottom end position adjustment

Parameter 12 = partially open position adjustment




Modifying the direction of rotation of the encoder

DIP 3 and 4 to ON = display direction of rotation

DIP 3 and 4 to ON + OPEN button = modify direction of rotation in one direction



DIP 3 and 4 to ON + CLOSE button = modify direction of rotation in the other direction



Alternatively, the encoder's count direction can be modified with parameter 75.


All dipswitches to OFF = display STOP



OPERATING FUNCTIONS

In normal operation, the display shows the status of the door or the number of the current error.

To this end, set all dipswitches to OFF!




Displaying the position of the door

Move dipswitch 1 to ON.


Use the programming buttons UP and DOWN (on the cover circuit board) to select the parameter 0.

Now set dipswitches 1 and 4 to ON.

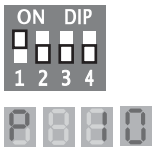


The current position of the door is displayed.

When the DIP switches 1 and 4 are pushed into the ON position and the programming buttons DOWN or UP on the cover circuit board are then pressed, the lower or upper end position appears in the display.

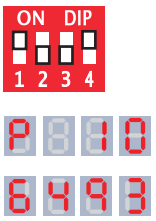

Displaying the parameters

Set DIP switch 1 to the ON position.

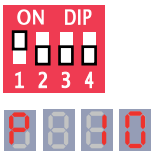


The parameter number is changed to a higher value using the programming button UP.

The parameter number is changed to a lower value using the programming button DOWN.

Pressing both programming buttons UP and DOWN (on the cover circuit board) at the same time resets the parameter number to 0.

Modifying the selected parameters (scroll)

Move dipswitch 1 to ON.



Use the programming buttons UP and DOWN on the cover circuit board to select the required parameter.


Then push DIP switches 1 and 4 into the ON position. Use the programming button UP on the cover circuit board to increase the parameter number.



Use the programming button DOWN on the cover circuit board to decrease the parameter number.

Save the selected parameters - set dipswitch 4 to OFF.

Deleting a parameter



When the DIP switches 1 and 4 are in the ON position and the programming buttons UP and DOWN on the cover circuit board are pressed at the same time, the selected parameter is deleted.

Parameter quick edit


Hold the button down for 1 sec. The value changes by 10 units/sec.

Hold the button down for 3 sec. The value changes by 100 units/sec.

Automatic Closing

If the automatic close function is enabled, the door closes after the time set in parameter 41 has expired with the door in the end position. **Refer to the parameters list.** Actuating the Stop function immediately stops the door when it is closing.


If the door is in the top end position and the transit photocell is obscured or the OPEN button is pressed, the automatic close time is reset.


Deleting the Eprom (Reset - factory settings)	
To delete the EPROM, set DIP switches 1, 2, 3 to the ON position.	
Deleting EE_0 To carry out a reset, start by pressing and holding the programming button DOWN on the cover circuit board, and then pressing the programming button UP on the cover circuit board as well until _ _ _ _ appears in the display 2 seconds later. This resets the EPROM for the section and roller door drives to the factory setting.	
Deleting EE_1 To carry out a reset, start by pressing and holding the programming button UP on the cover circuit board, and then pressing the programming button DOWN on the cover circuit board until _ _ _ _ appears in the display 2 seconds later. This resets the EPROM for the high-speed door drives to the factory setting. (for the default values of the parameters, see the list of parameters). After this, the control unit reboots.	
Setting **EE_1** enables the inverter parameters. For inverter operation, you must reset P70 as specified, all the other parameters must be set anew in relation to the design. Refer to the parameters list.	
OPERATIONAL DISPLAY TYPE	
End position adjustment - flashing	
TOP end position	
BOTTOM end position	
Partial open	
DISPLAY end positions - STANDARD - P5 = 0	
TOP end position	
BOTTOM end position	
Partial open	
DISPLAY end positions - Text - P5 = 1	
TOP end position	
BOTTOM end position	
Partial open	
DISPLAY door movement - Text - P5 = 2	
OPEN DOOR	
CLOSE DOOR	

OPERATIONAL DISPLAY TYPE	
The input states are displayed as follows: set parameter P29 to 1.	
CLOSE button	
OPEN button	
Jog button or pull-cord	
Transit photocell	
Radio signal	
Emergency stop input	
Lower sensitive edge	


EN

EN

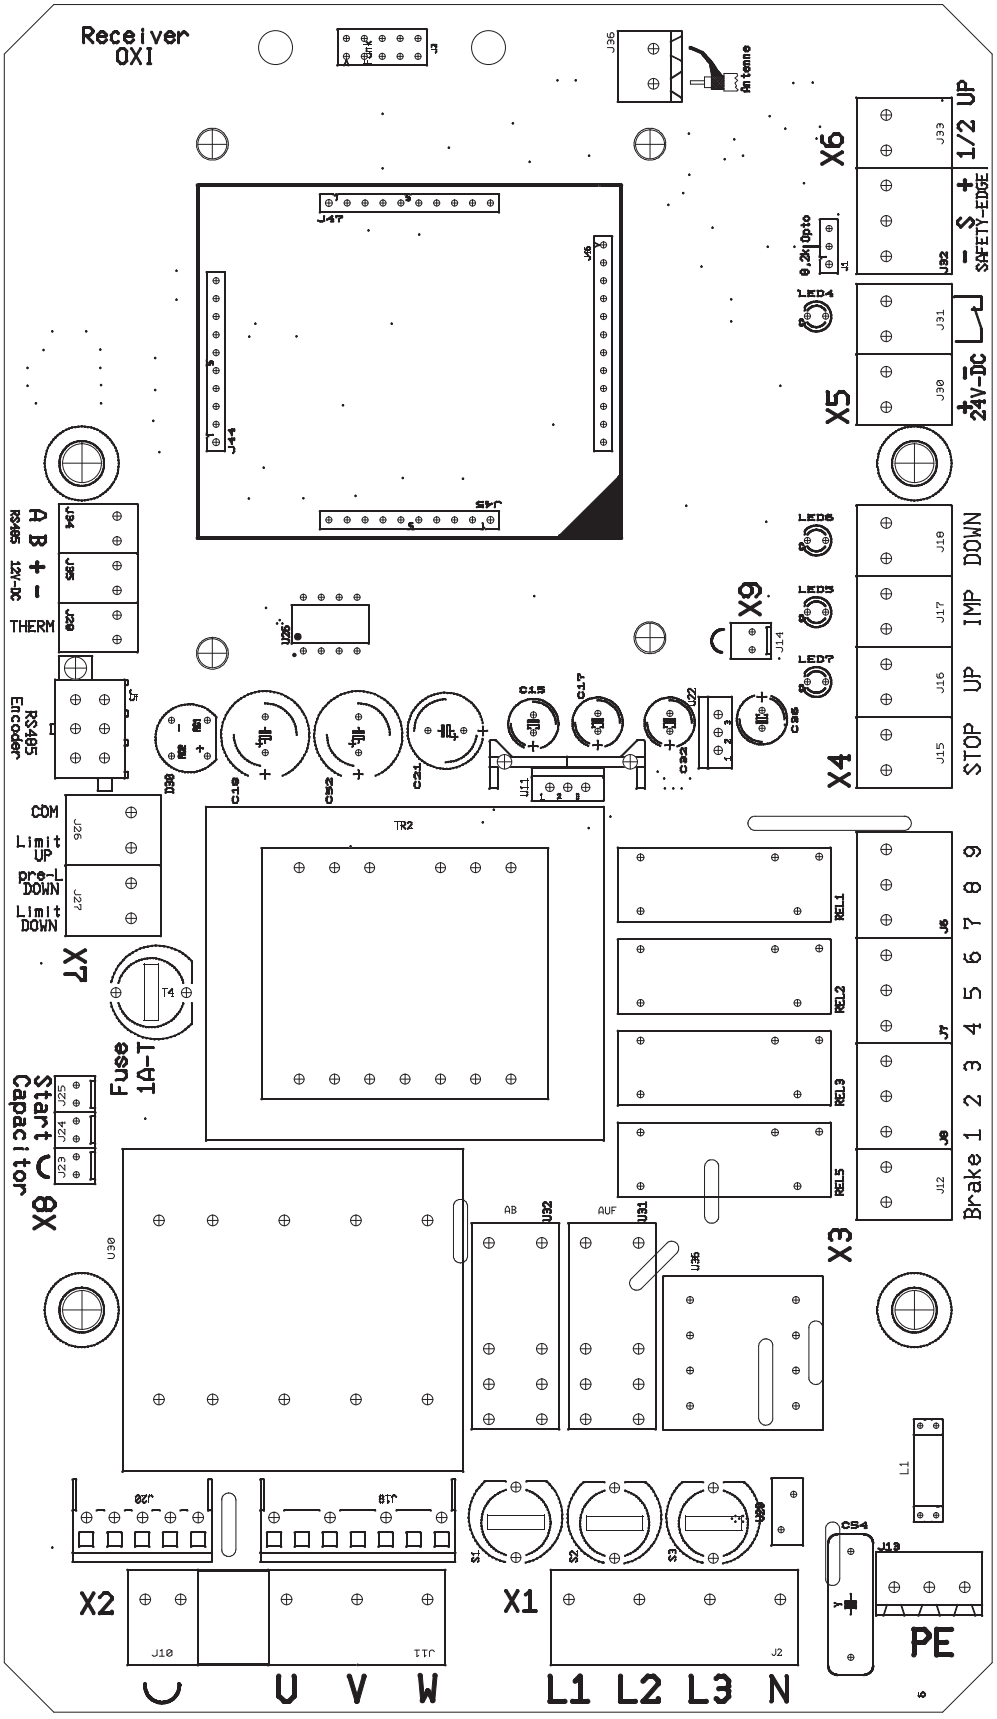
Receiver
OXI
Antenne
X6
1/2 UP
SAFETY-EDGE
X5
24V-DC
X4
STOP UP IMP DOWN
X9
X7
CDM
Limit UP
pre-L DOWN
Limit DOWN
Fuse 1A-T
Start Capacitor
X8
X3
Brake 1 2 3 4 5 6 7 8 9
X2
X1
PE
U V W
L1 L2 L3 N

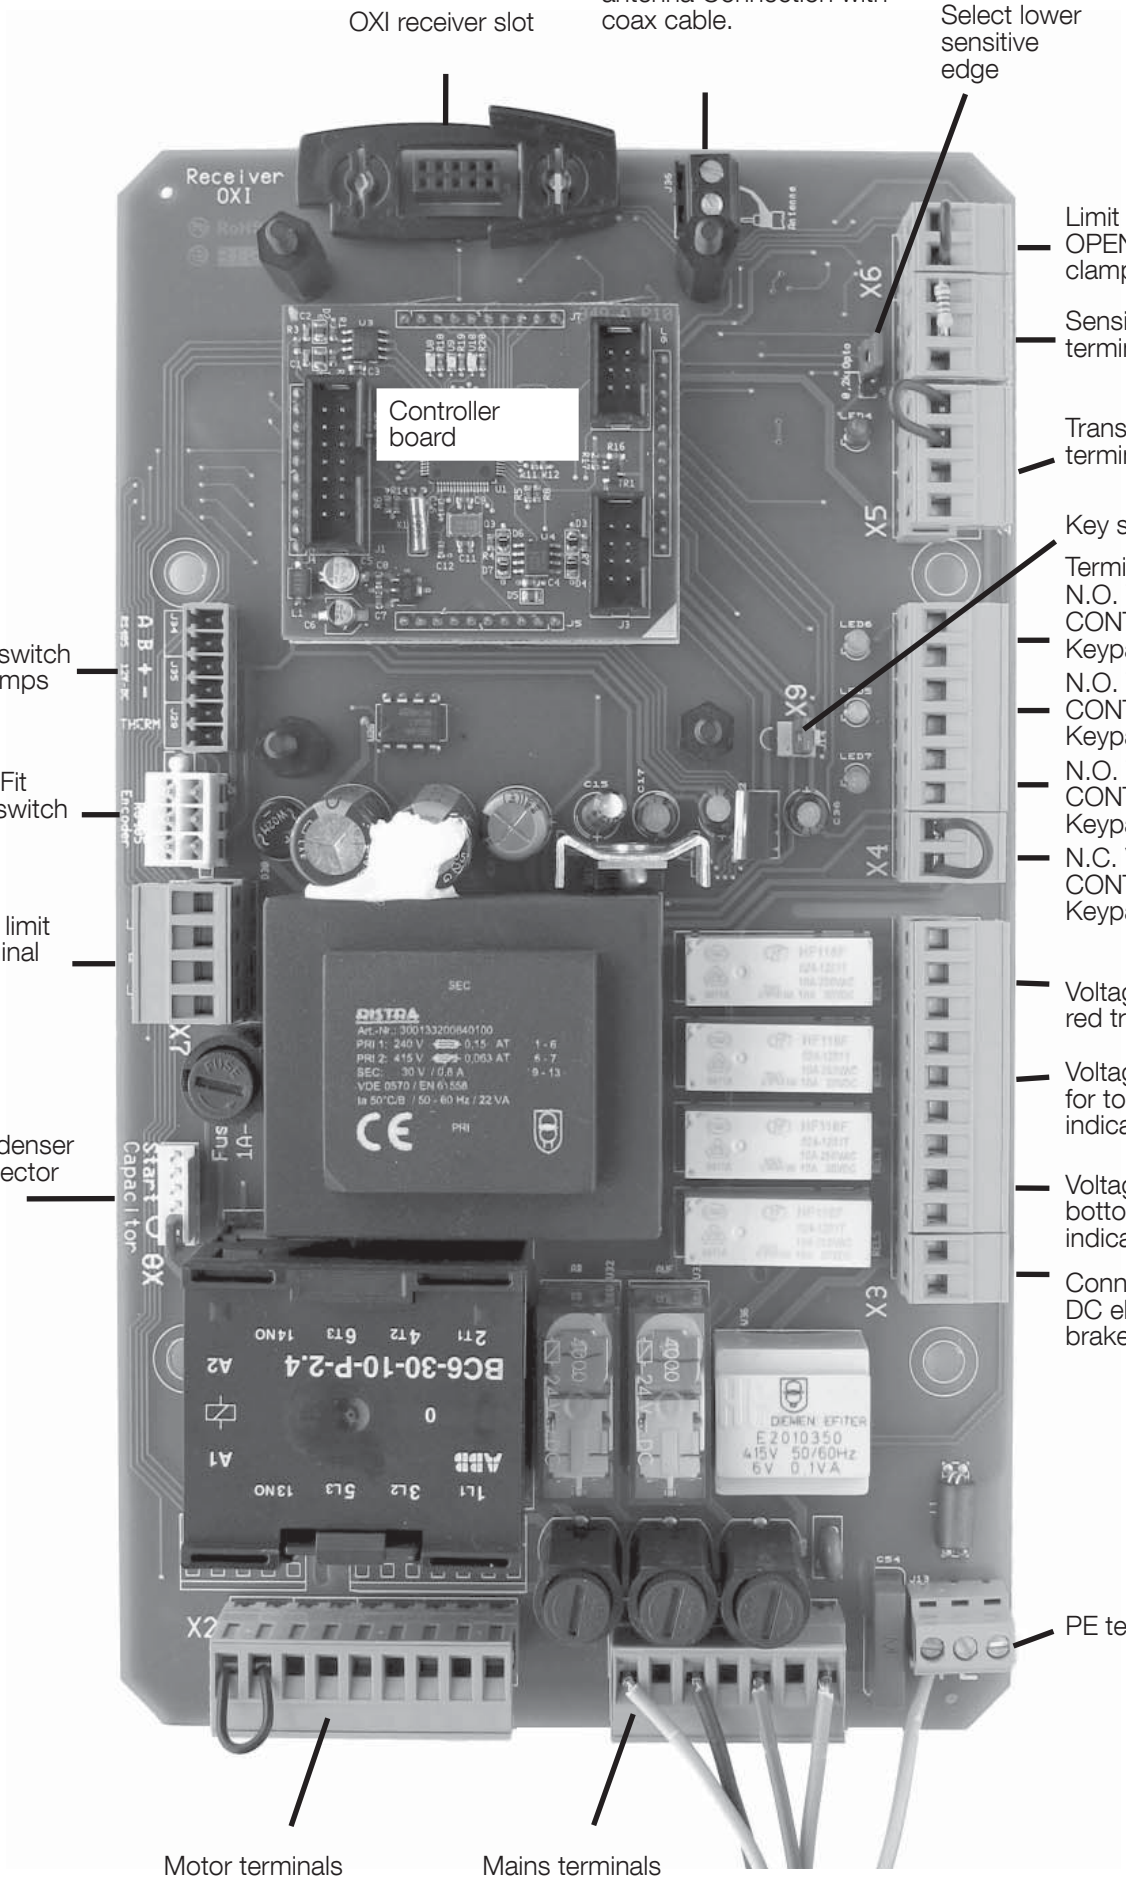
OXI receiver slot
Connection for wire antenna or external antenna Connection with coax cable.
Select lower sensitive edge
Limit switch 1/2 OPEN terminal clamps
Sensitive edge terminal clamps
Transit photocell terminal clamps
Key switch connector
Terminal clamps N.O. VOLTAGE FREE CONTACT CLOSE Keypad
N.O. VOLTAGE FREE CONTACT JOG Keypad
N.O. VOLTAGE FREE CONTACT OPEN Keypad
N.C. VOLTAGE FREE CONTACT OPEN Keypad
Voltage free contact for red traffic light
Voltage free contact for top end position indication
Voltage free contact for bottom end position indication
Connection for 200V DC electromechanical brake
PE terminals
Digital limit switch terminal clamps
TYKO Mini-Fit digital limit switch connector
Mechanical limit switch terminal clamps
Starter condenser board connector
Motor terminals
Mains terminals
Receiver OXI
Controller board
X6
X5
X9
X4
X7
X3
X2

EN

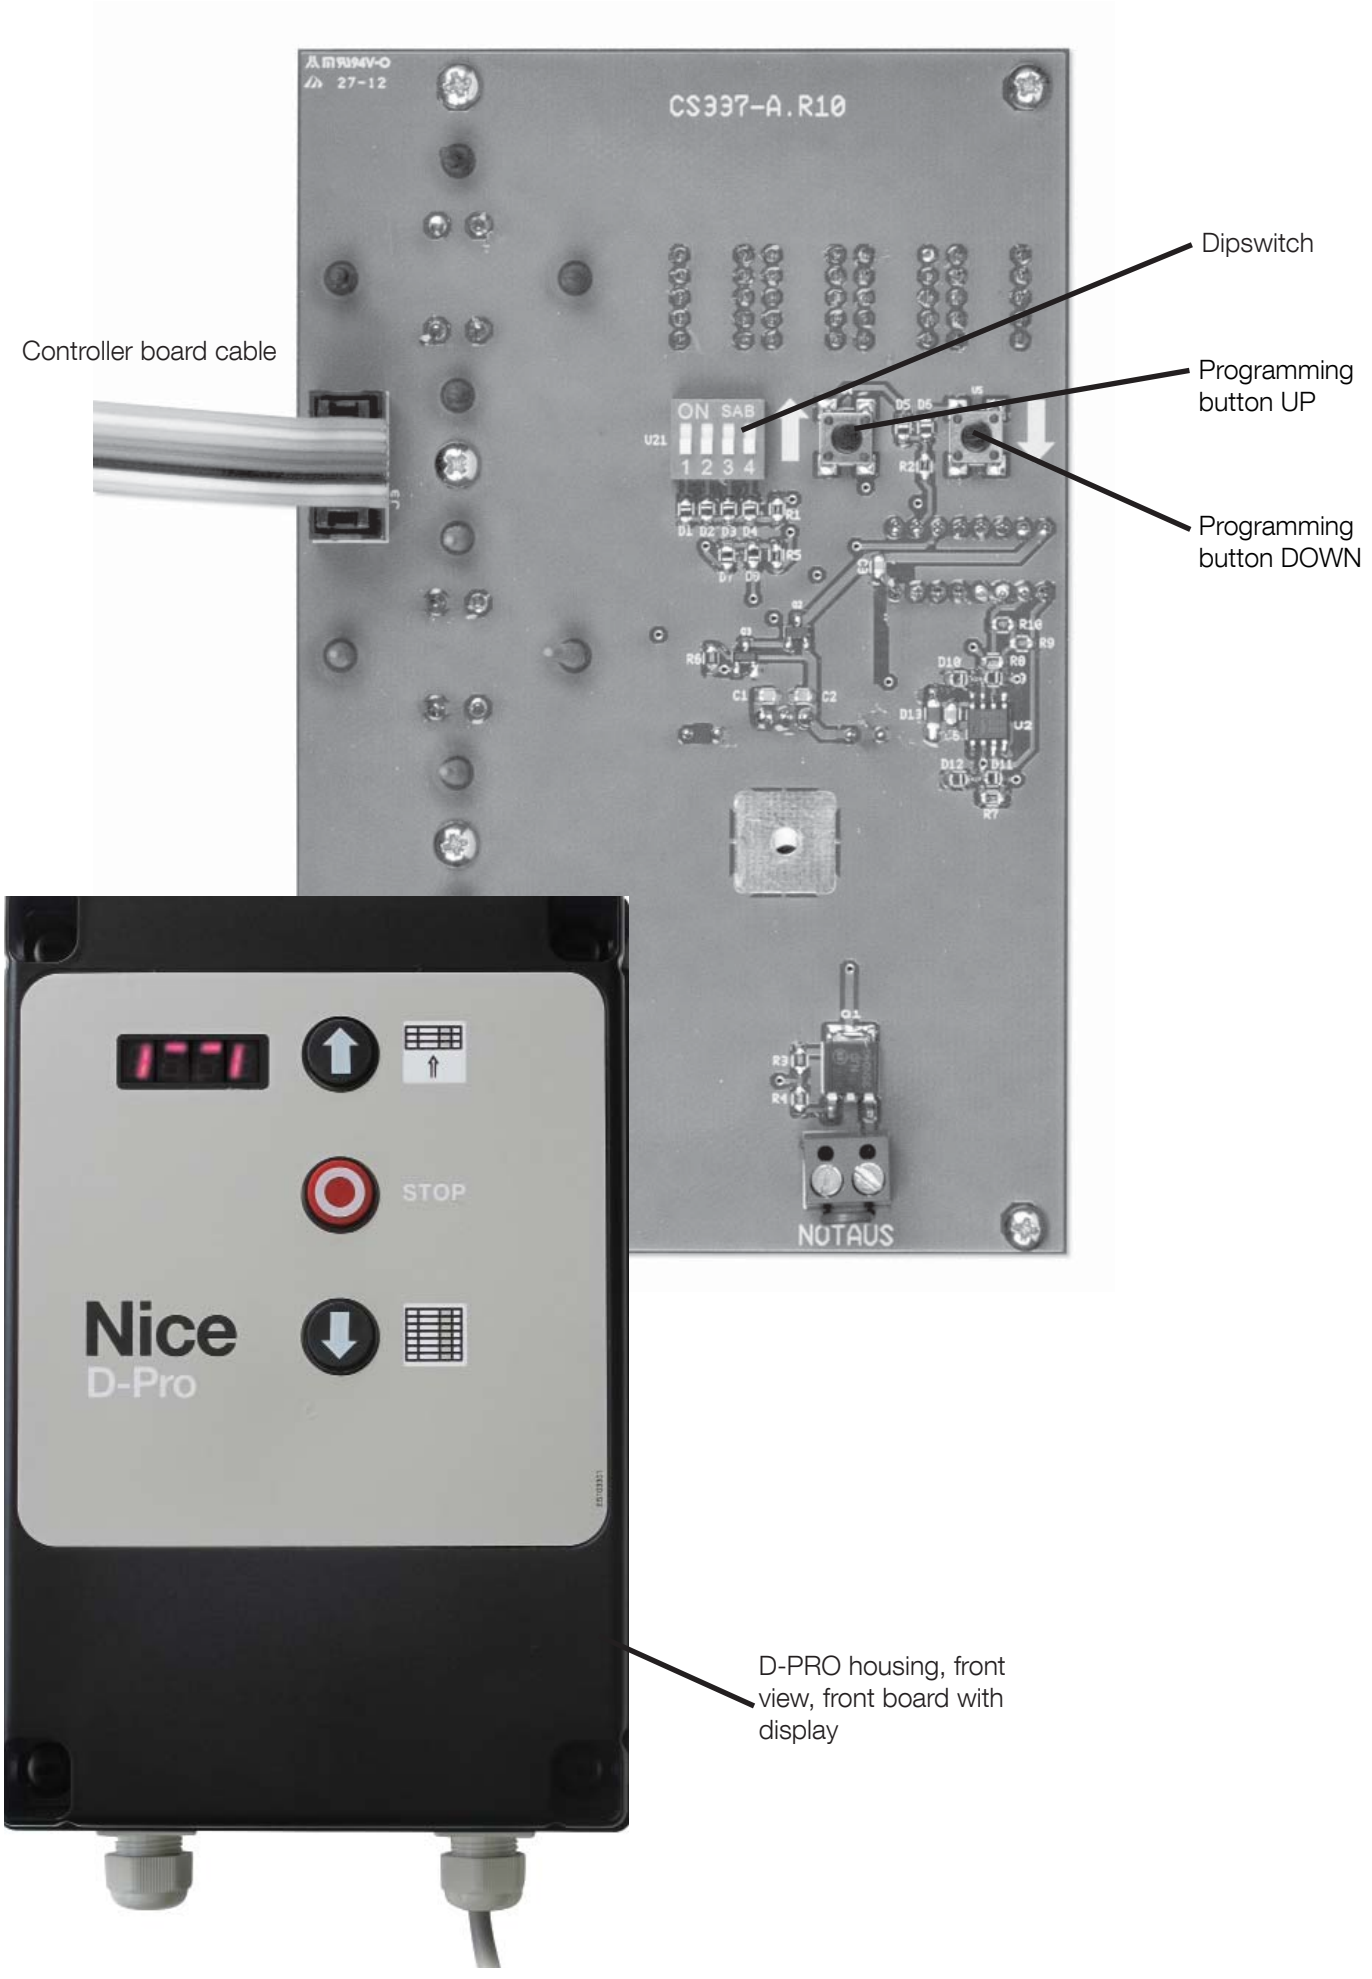
CS337-A.R10
Dipswitch
Controller board cable
Programming button UP
Programming button DOWN
ON SAB
1 2 3 4
NOTAUS
STOP
Nice
D-Pro
D-PRO housing, front view, front board with display

TECHNICAL DATA - SPECIFICATIONS

Notes

- All the technical characteristics refer to a temperature of 20°C (±5°C).
- Nice reserves the right to modify the product at its own discretion while maintaining its function and intended use.
- The full user instructions are composed of the drive user instructions and the user instructions for the associated control unit.

EN

DESCRIPTION	D-PRO AUTOMATIC - 2.2kW	D-PRO AUTOMATIC - 5.5kW
Power supply	3 x 400V AC 50Hz (protected by 6 / 10A fuse)	3 x 400V AC 50Hz (protected by 10A fuse)
Motor power	up to 2.2kW	up to 5.5kW
Motor connection	3 NO contactor contacts 400V/max. 2.2 kVA	3 NO contactor contacts 400V/max. 5.5kVA
	Protection in both cases: 6.3 AT ceramic fuse with self-extinguishing material CAUTION: only the provided ceramic fuses may be used for the motor protection.	
Standby power	< 4VA	< 4VA
Ambient temperature	from -20°C to +50°C	from -20°C to +50°C
Control voltage	24 V DC secondary protection with delayed action 0.8A fuse	

Our drives and control units are type approved by TÜV-NORD.

CE Declaration of Conformity

Declaration of conformity with the following directives: 2006/95/EC (LVD) EN 60335-1:2012, 2004/108/EC (EMC), 2006/42/EC (MRL)

Note: The contents of this declaration correspond to declarations in the official document filed in the offices of Nice S.p.a. and, in particular, the latest version thereof available prior to the printing of this manual. The text herein has been re-edited for editorial purposes. A copy of the original declaration can be requested from Nice S.p.A. (prov. of Treviso – Italy)

Manufacturer's name: NICE S.p.A.
Document: 490/D-PRO AUTOMATIC rev.01
Address: Via Pezza Alta 13, 31046 Rustignè di Oderzo (TV) Italy
Type of product: Nice control unit for sectional doors
Model / Type: D-PRO AUTOMATIC

The technical documentation for this product has been drawn up in conformity with Annex VII A of Directive 2006/42/EC.
The technical documentation is kept at the above Address.

The undersigned Mauro Sordini, as Chief Executive Officer, hereby declares under his own responsibility that the product identified above complies with the provisions of the following directives:

- DIRECTIVE 2006/42/EC OF THE EUROPEAN PARLIAMENT AND COUNCIL dated 17 May 2006, Machinery Directive, per the following harmonised standards: EN ISO 13849: 2008.
Safe functions: control of external safety devices (contact x6) cat. 2 PL d, control of end position cat. 2 PL d, safety chain, emergency stop cat. 3 PL d.

- DIRECTIVE 2006/95/EC OF THE EUROPEAN PARLIAMENT AND COUNCIL dated 12 December 2006, per the following harmonised standards: EN 60335-1:2012 (Low Voltage Directive).

- DIRECTIVE 2004/108/EC OF THE EUROPEAN PARLIAMENT AND COUNCIL dated 15 December 2004, per the following harmonised standards: EN 61000-6-2:2005, EN 61000-6-3:2007 (EMC Directive)

- Attestation of EC type approval n. 44 205 13 405182 001 NB0044 TÜV NORD CERT GmbH, Langemarckstr. 20, 45141 Essen

Oderzo, 01 October 2013

Mauro Sordini
(Chief Executive Officer)