5 Installation and dismantling
RR 3000 / 3000L / 3000GL / 3000XXL / 3000ISO

5.1 Inspection of the delivery

The door roll is partly pre-assembled when it arrives at site. The barrel with the rolled up curtain is located on a special transport- and installation rack. The columns are packed together with the lintel profile, springs and the cover-plates on a separate pallet. Drive, control unit and accessories are packed in a cardboard box.

The door should be checked for damages when it arrives at site which may have been caused during transport and completeness by comparing the parts which are arrived and the list of parts mentioned within the corresponding paperwork.

5.2 Preparation of assemblage

The installation site has to be checked with reference to the installation conditions, for example the necessary space, the character of the wall, levelness of the floor, etc. Perhaps a steel construction or an equivalent construction has to be made in advance. It is necessary to fix the columns of the door within the upper area on a solid background like a steel construction or a wall made of concrete.



Do not install the doors on isolation panel walls, honeycomb bricks and lightweight partition walls.

The light opening dimension (width and height) of the door have to checked and compared with the values given via the corresponding paperwork.

The site of installation must be closed for any traffic during the installation.

Before the installation can start the shrink-foil of the package has to be removed.



Do not remove the plastic-belts which hold the barrel for transport.

Subsequently remove the cover plates and take the springs, installation bag and adapter out of the columns and temporarily placed in a safe place.





1. The barrel is placed on a pallet which works as a tool for transport and installation.
The transport-ring is to be used by the forklift driver as shown above to avoid toppling of the complete top section while transport.


2. The side frames including the springs, lintel profile and the cover plates are located on a second pallet.






3. Control, drive and material for installation is packed together in a cardboard box.
Screws and other fixing parts are packed in an installation bag.

4. If the floor declines the first side frame has to be arranged and fixed on the side of the higher level.
The first side frame must be placed exactly perpendicular.

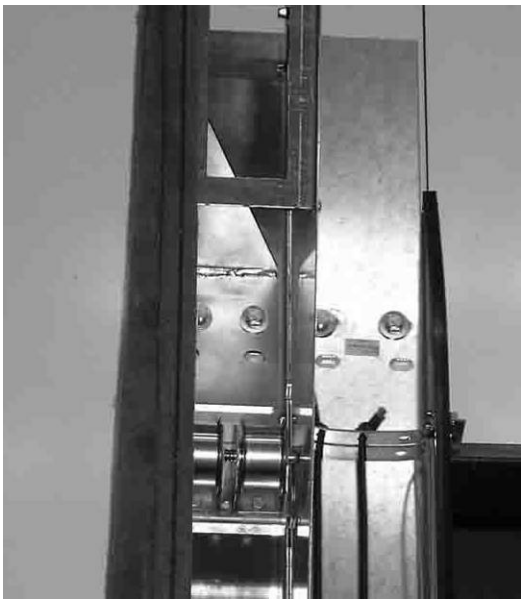

5. Fix the side frame within the upper area with at least 4 screws.

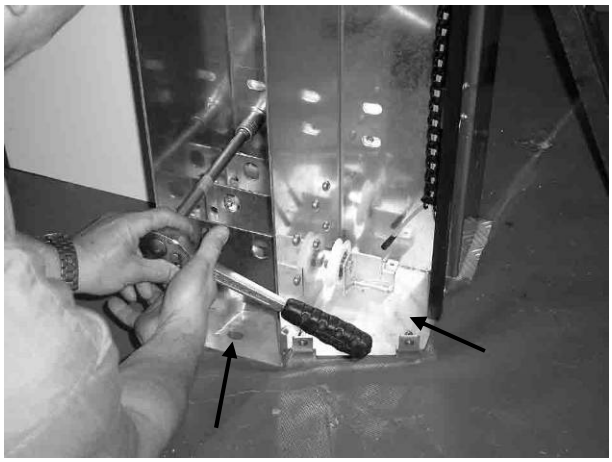

6. Fix the side frame within the lower area with at least 2 screws on the floor or alternatively on the wall.

Set up the second side frame and screw it loosely onto the wall. Now screw on the lintel profile between both side parts

Fix this second side frame in the upper area with the wall as you already did with the first one and check within the lower area the correct light opening width. Use the lintel profile (pic.8) as distance piece between both side frames.

The light opening width is given by the distance between the black plastic slide profiles of the side frames.

Now complete the fixation of the side frame too.

7. Installation of second side frame




8. Fix the lintel profile within the upper area of the door with two screws per side.



Crushing hazard


9. Lift up the barrel with assistance of a crane, forklift or equivalent device and lay down the complete barrel in the side frames as shown above.

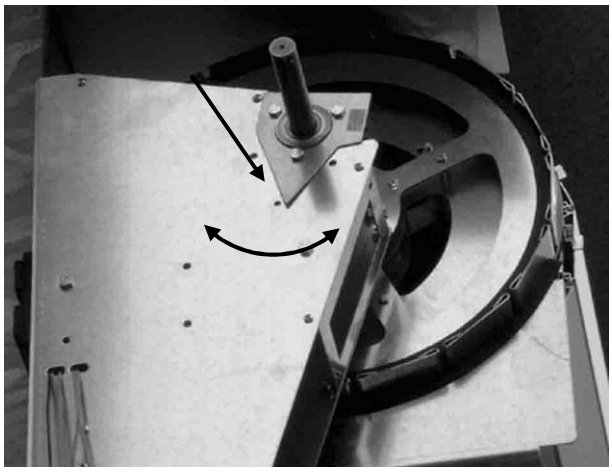

10. The arrow of the mounting plate has to be positioned to point at the hole.



With moving down the palette the barrel could rotate!

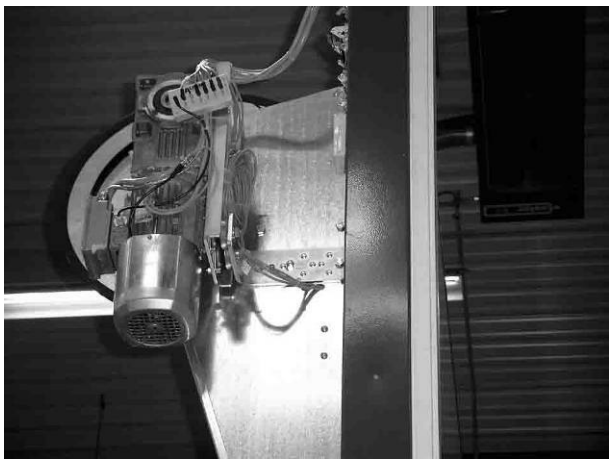


Install first side covers for doors with top roll cover (see appendix 2)

11. Screw on the mounting plate with the side frame (1). Afterwards tighten the 3 screws of the flange-bearing (2).


Move down the palette carefully.

12. Turn the hollow shaft of gear box according position of shaft key in barrel.
Lift the drive and the control together and slide the gear drive onto the shaft of the barrel.

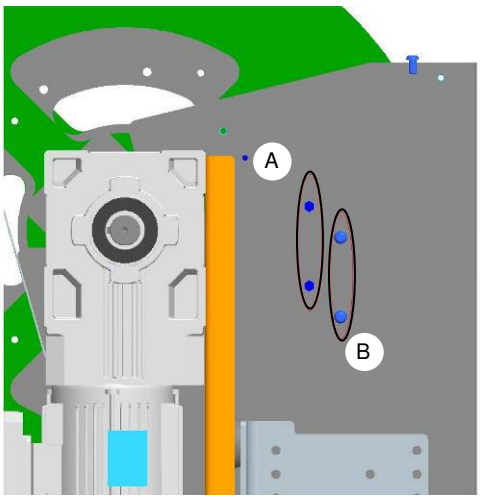


A: RR3000ISO, RR3000XXL (DH>5000mm)
B: RR3000, -L, -GL, -XXL (DH<=5000mm)

13. Chose the fixing points for MCC bracket and motor cover according door type and daylight height (DH).

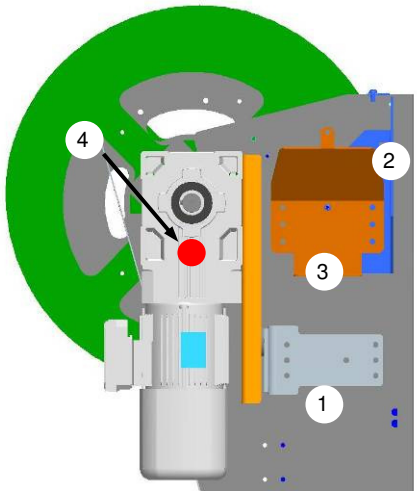



14. Connect the torque arrester (1), bracket motor cover (2) and bracket MCC (3) with the side frame.
Secure drive with washer and screw M8 x 20 (4).

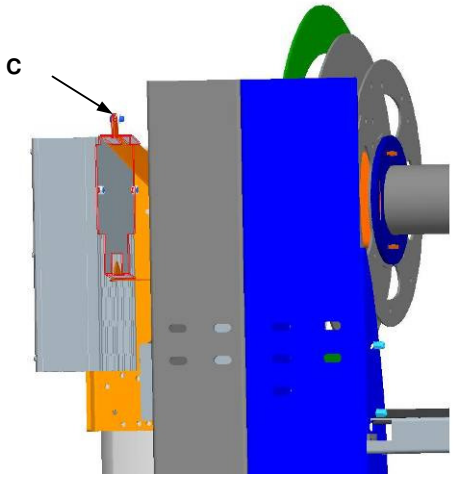

15. Hang up control system (MCC) into bracket and fix position with screw (C).


Connect MCC according separate manual.

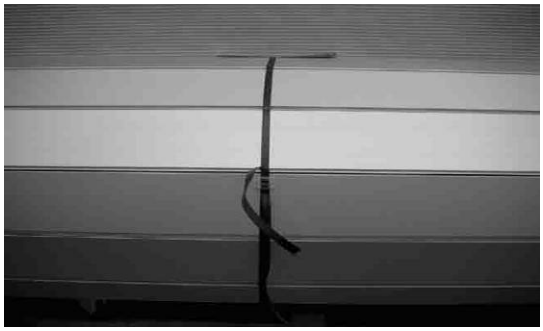

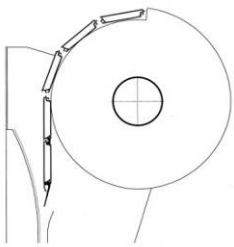



16. Turn the barrel into correct position and remove the plastic transport belts.

(correct position = bottom lamella point downward)

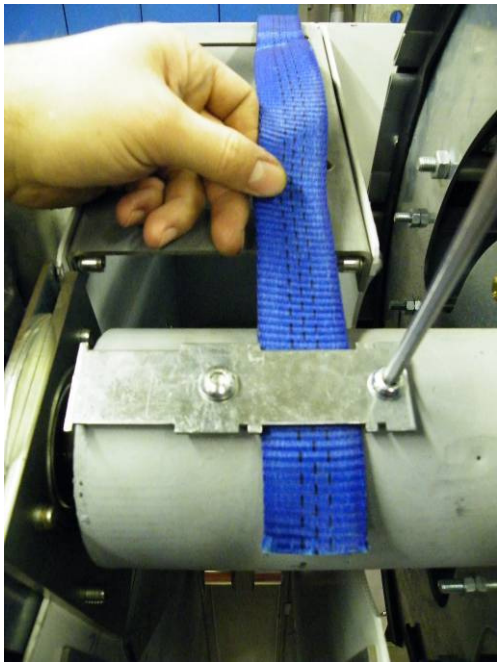


17. The fixation of the belts of the counterbalance system on the barrel is given via a clamp plate. Please wind the belts contrary to the direction of rolling up of the curtain.

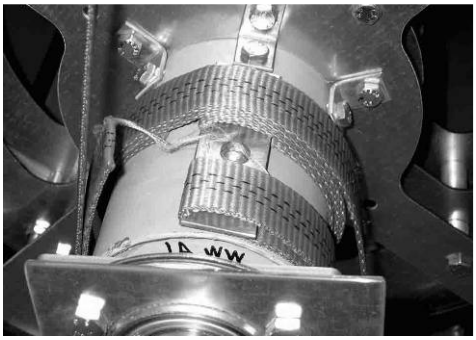

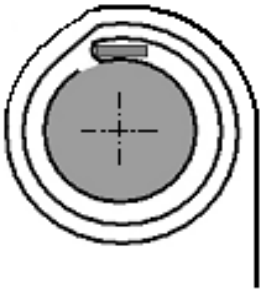


inside

18a. Place two dead windings over the clamp plate.

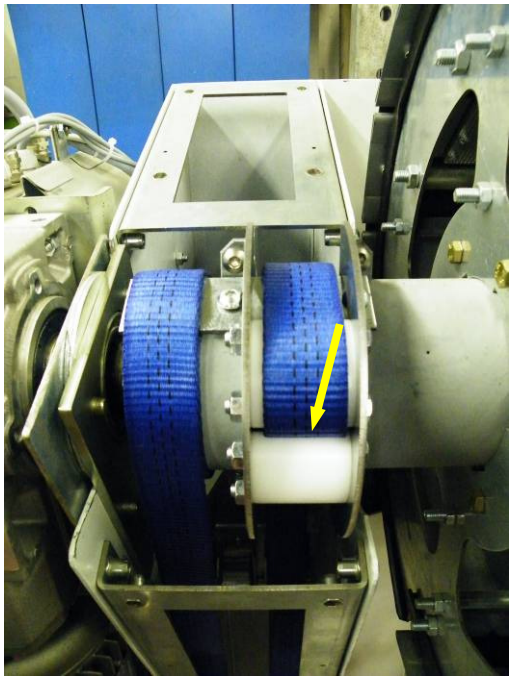


18b. Depending on door type the textile belt is pre-installed on drive side.
The inner belt is led through a special deflection system.

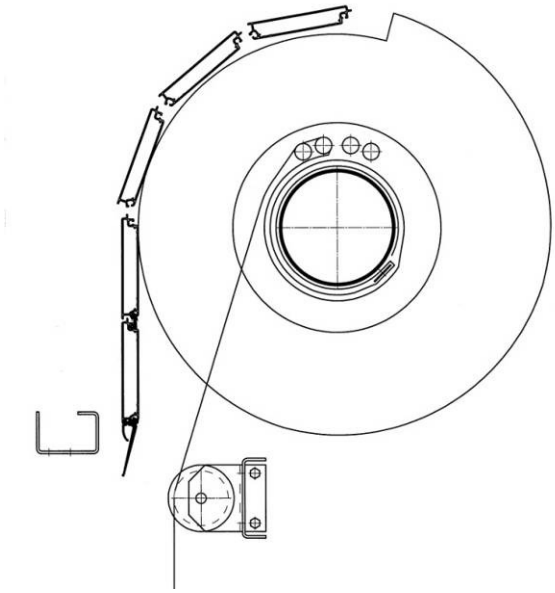

18c. With this version one belt roles up in the same direction like the door blade when the door is open.




19. The belts have to be guided perpendicular and free of twists.
The belts must be led over the deflection pulleys.

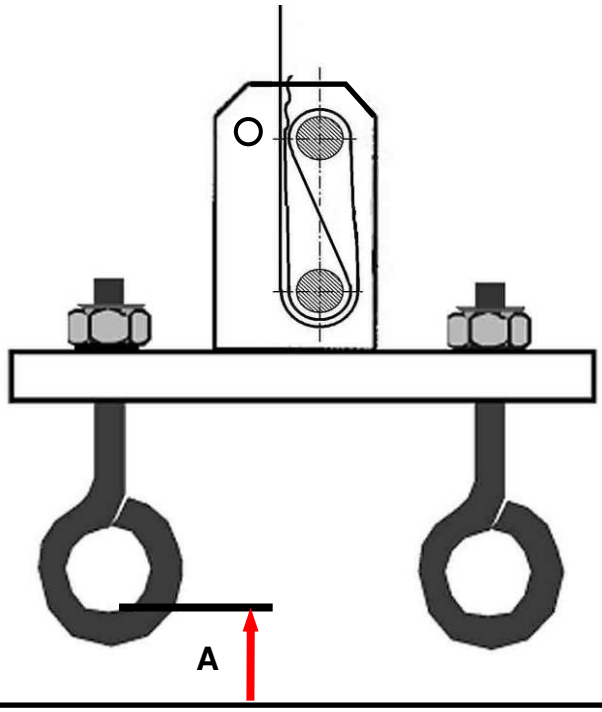

20. Fix the belts onto the upper spring acceptance according sketch.
Distance A between upper and lower spring bracket = length of spring + V (pre tension 150mm)




Attention: Check pre tension V after test run and correct value if necessary!

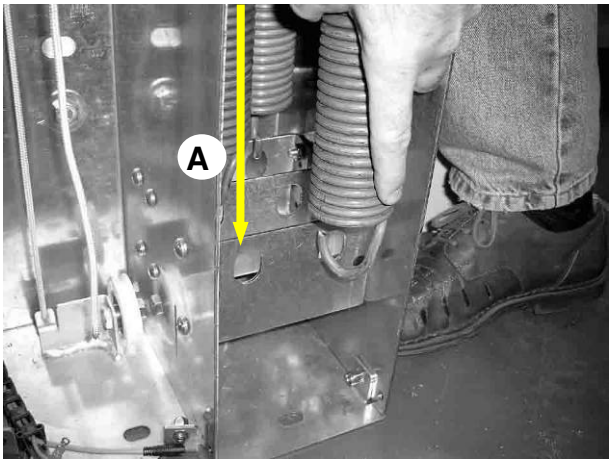


21. Hang in the springs into the upper spring acceptances.
Pre tension at open door V = 150mm.


22a. Hang in the springs in the lower acceptances.
Split the spring positions according appendix 1.

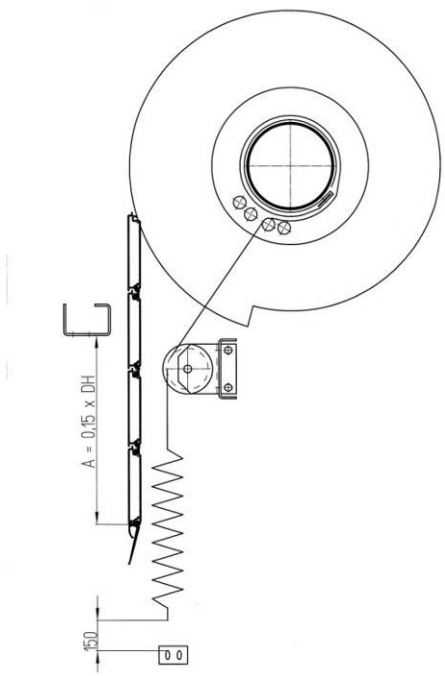


22b. At doors with belt deflection system turn the barrel into a neutral position (picture) and hang in the spring with pre tension 150mm.

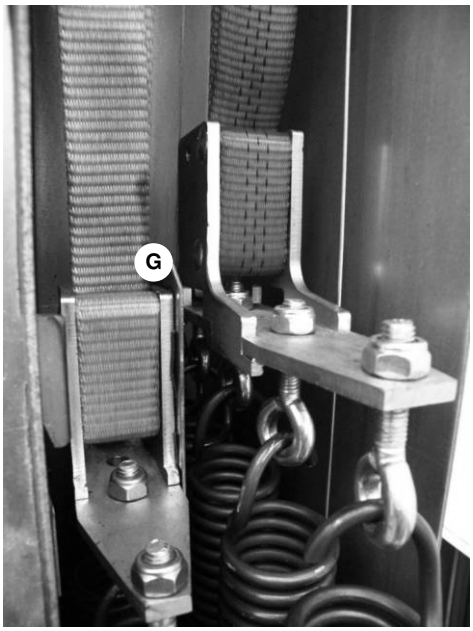


22c. Install the upper spring acceptances fitted with slipping plate (G) at belt of deflection system (22b).

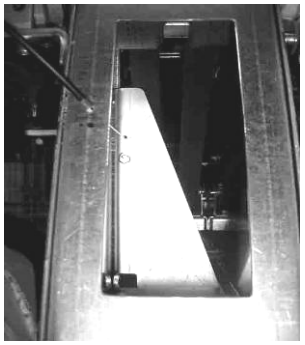


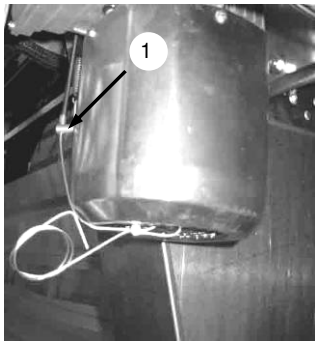


23. Pull the steal rope of the Bowden cable through the drills within the head plate and connect this end with the lever of the emergency handle. The other end of the cable must be able to affect the pin (1) of the brake as shown above.

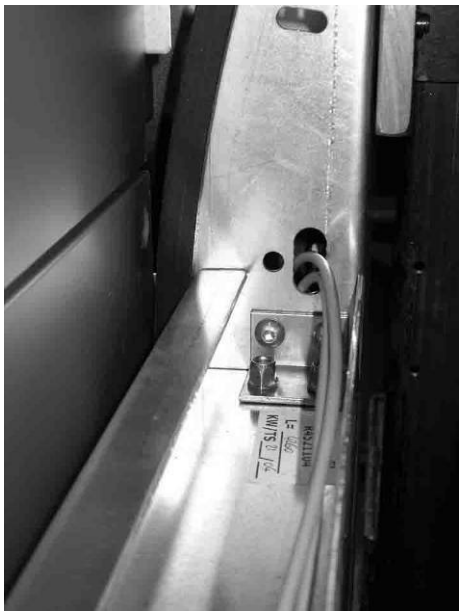

24. Use the lintel profile to guide the cable of pre-running and stationary photocell from non drive side to drive side.

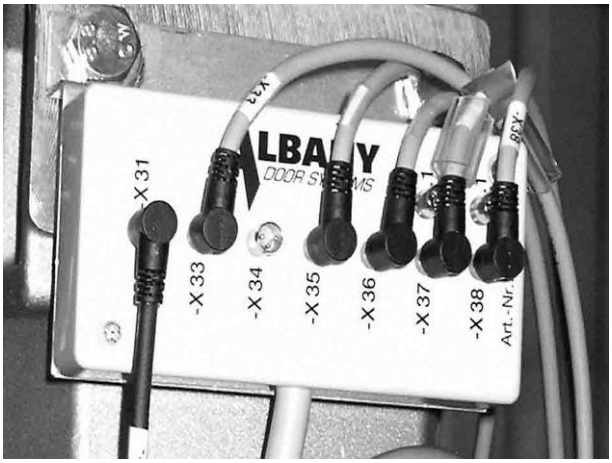

Picture shows separate plug board for wall mounted MCC. For MCC at the side frame (picture 26) the plug board is at the top side of the MCC.

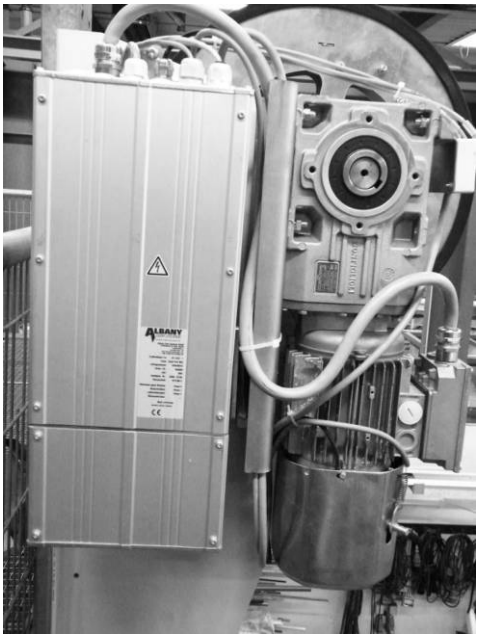


25. Connect the cables to the plug board.

⚠ The markings at the plug board must correspond with the ones of the cables.

26. Lay the cables according picture between motor plate and MCC.


Install display unit at side frame (drive side).

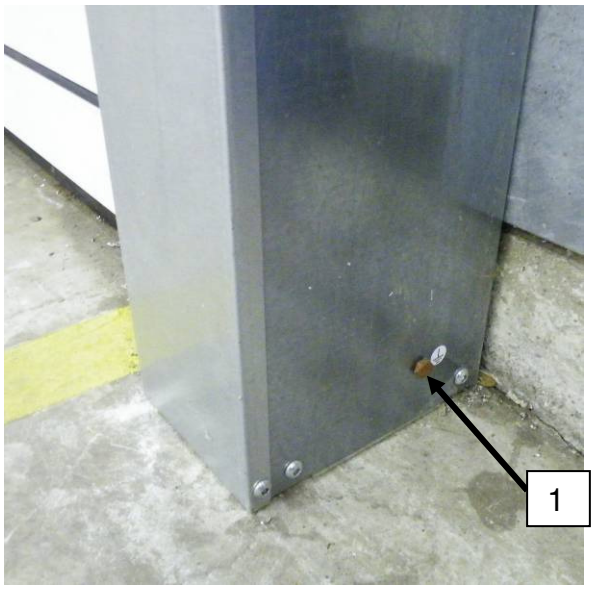




27. Connect earth connection from building (min. 6 mm²) (1)


28. Close the door down to approx. 1200 mm above the floor and fix adapter 4 to bottom lamella (2 x M5 - pic. 28).

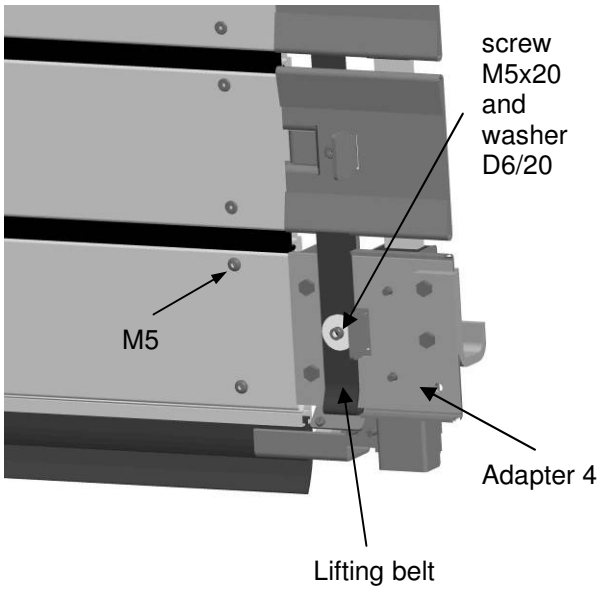

29. The jutting piece of the lifting belt must additionally be screwed together at the opposite side with a screw and washer.

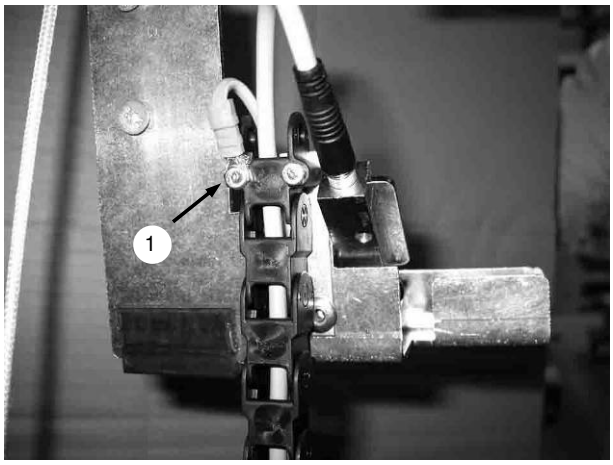


30. Screw together the loose end of the power chain with the bracket of the pre running photocell and connect the cable. Pay attention to a good contact of the earth connection (1).

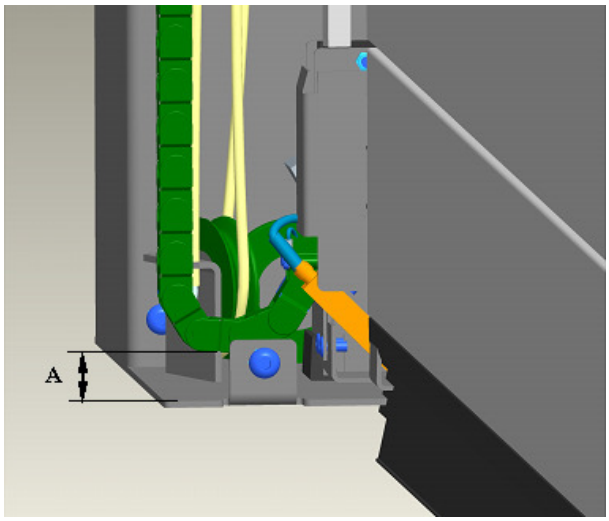

31. During assembly of the cable chains it is to be made certain that the respective chain does not touch the bottom plate in case of closed door (A: approx. to 10 - 20 mm).




32. Place the Cables of the pre-running photocell in a small radius R!

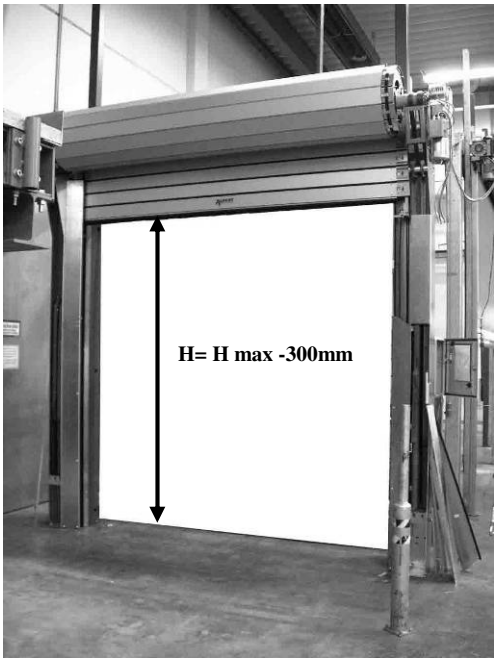


33. The door has to be opened up to H minus 300 mm.



34. Open the door completely manually. To do this you have to release the brake and push the door blade upwards, or you can use an allan-key (width: 6mm).

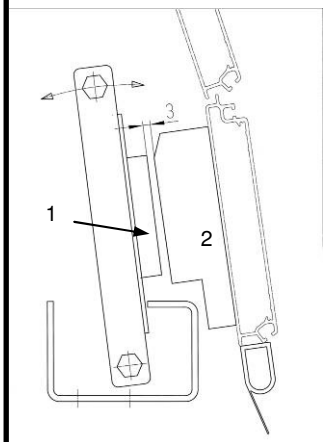


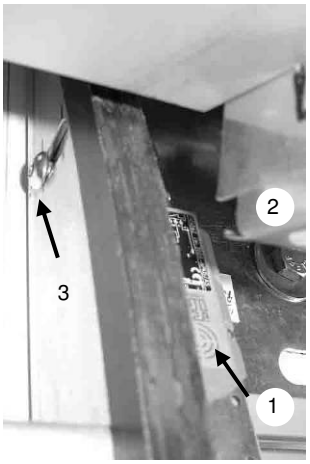

35. Check distance between proximity-switch (1) and activator plate (2) – distance appr. 3mm.


If required adjust the switch via screw (3) at closed door blade.



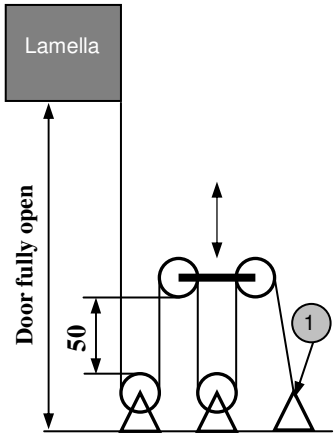

Door blade tensionsing system onlý at door types RR3000, -L, -GL


36. Pull the rope through the eye of fixation and make a knot to arrest the rope (1).
Thereafter the rope must be placed all over the pulleys as shown above.

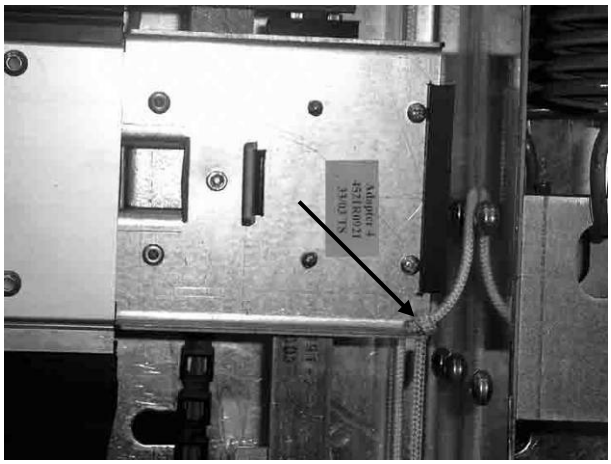

37. The other end of the rope must be fixed at the end piece of bottom lamella by knotting.
Attention: The door must be 100% open!



38. Place the inner cover plates – first the lower than the upper once.

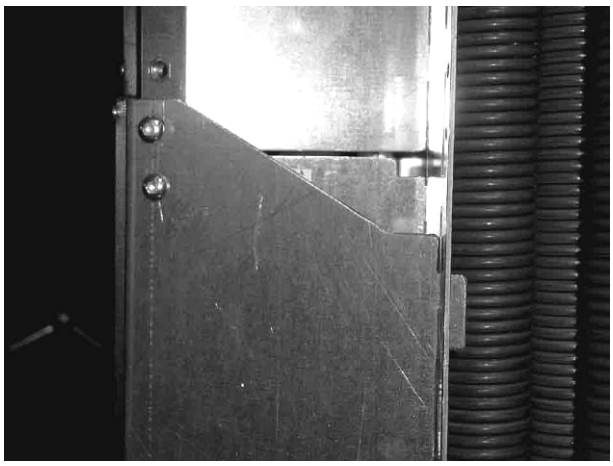

39. Place the outer cover plates and fix them together with the inner cover plates. Don´t tighten the screws fully.




40. Push the lower cover plates onto the curtain and fasten the screws when the door is closed.
The gap between the curtain covers should be <= 1 mm.




41. To fix the screws onto the upper guiding cover the door must be about 50% open.

The upper and the lower plastic rails have to be exactly in line to each other.

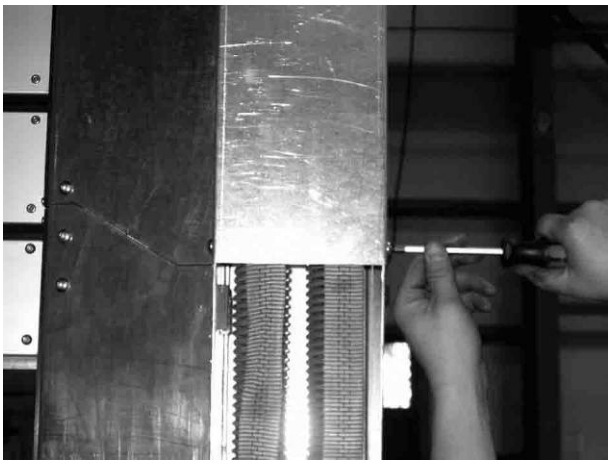


42. Mount the covers of the spring-boxes.

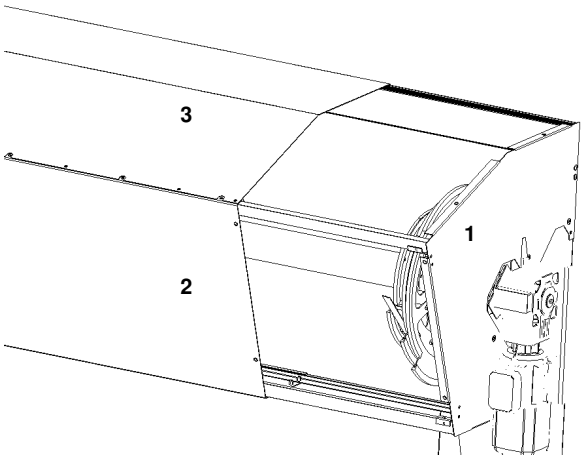


Option top roll cover: A detailed installation instruction is in appendix 2.

43. First install the side covers (1), than front cover (2) and at last top cover (3).

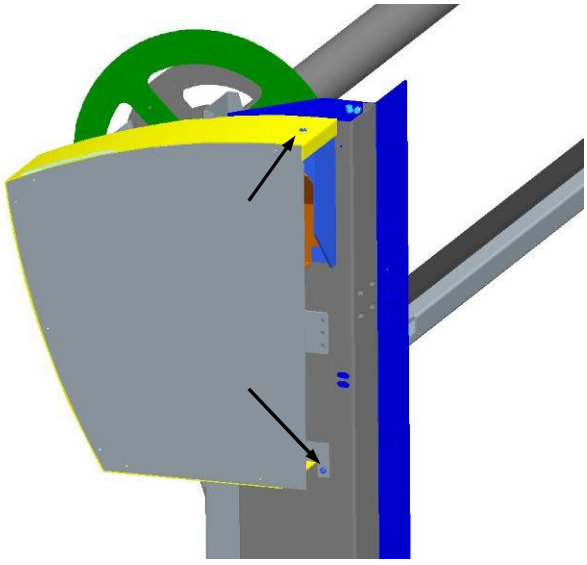

44. Motor cover has to be screwed with 2 screws at side frame and bracket.
After testing the safety equipment and a test run the installation is ready.

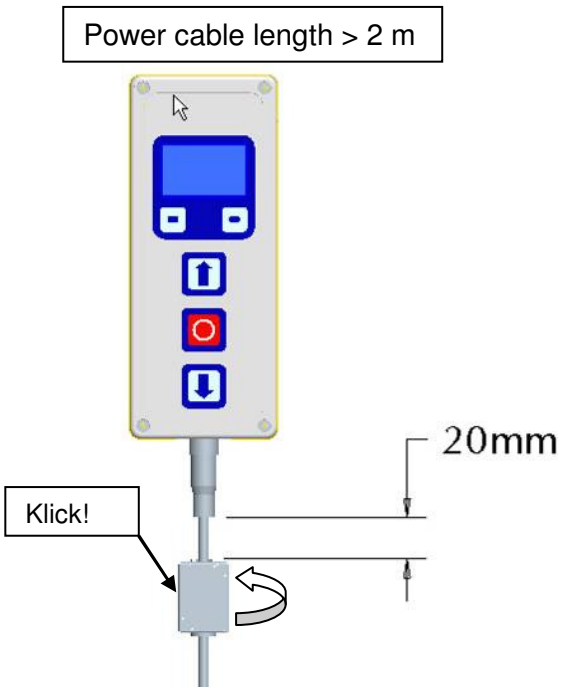

To dismantle, complete the steps backwards.

To demount the barrel it is necessary to order a suitable installation pallet.

The door packaging can be returned to the Producer.

Defect components should be disposed of on site according to local laws.

Electronic components also need to be disposed of on site according to local laws.


45.


46. Dismantling and disposal.

Appendix 1: Arrangement of springs and spring acceptance

com-plete no. of springs	Side frame drive side				Side frame non drive side			
	spring acceptance top		no. of springs		spring acceptance top		no. of springs	
	outside	inside	outside	inside	outside	inside	outside	inside
4	3-springs	3-springs	2	2				
5	3-springs	3-springs	2	3				
6	3-springs	3-springs	2	2		3-springs		2
7	3-springs	3-springs	2	3		3-springs		2
8	3-springs	3-springs	2	3		3-springs		3
9	3-springs	3-springs	2	3	3-springs	3-springs	2	2
10	3-springs	3-springs	2	3	3-springs	3-springs	2	3
11	3-springs	3-Feder*	3	2*	3-springs	3-springs	3	3
12	3-springs	3-Feder*	3	3*	3-springs	4-springs	3	3
13	3-springs	3-Feder*	3	3*	4-springs	4-springs	3	4
14	4-springs	3-Feder*	3	3*	4-springs	4-springs	4	4
15	4-springs	3-Feder*	4	3*	4-springs	5-springs	4	4
16	4-springs	3-Feder*	4	3*	5-springs	5-springs	4	5
17	5-springs	3-Feder*	4	3*	5-springs	5-springs	5	5
18	5-springs	4-Feder*	4	4*	5-springs	5-springs	5	5
19	5-springs	4-Feder*	5	4*	5-springs	5-springs	5	5
20	5-springs	5-Feder*	5	5*	5-springs	5-springs	5	5

* asynchronous counter balance system (pic. 45): RR3000XXL, -ISO (no. of springs > 10)

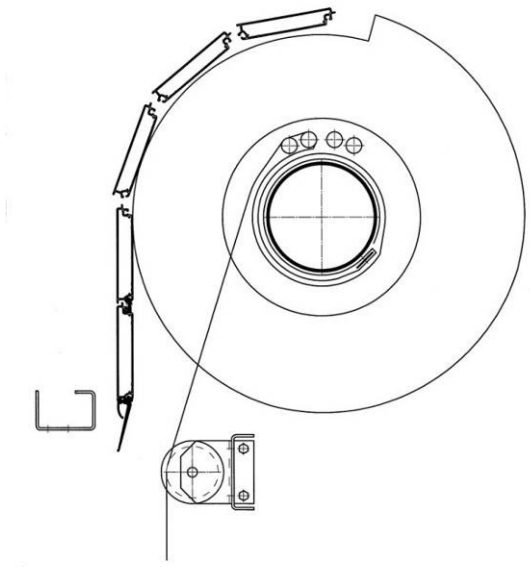


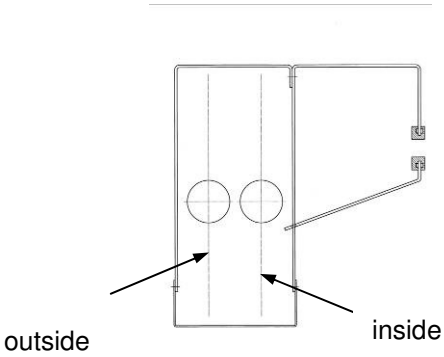


Top view side frame left / right mirror-inverted

Pic.47: asynchr. counter balance system*


Annex 2: Installation manual top roll cover

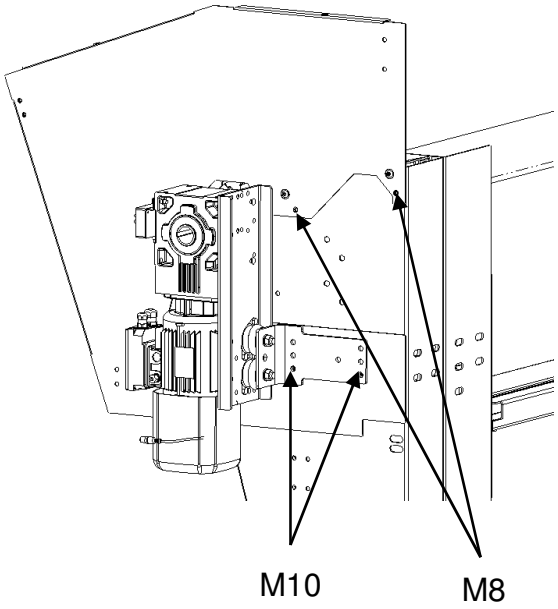


1.

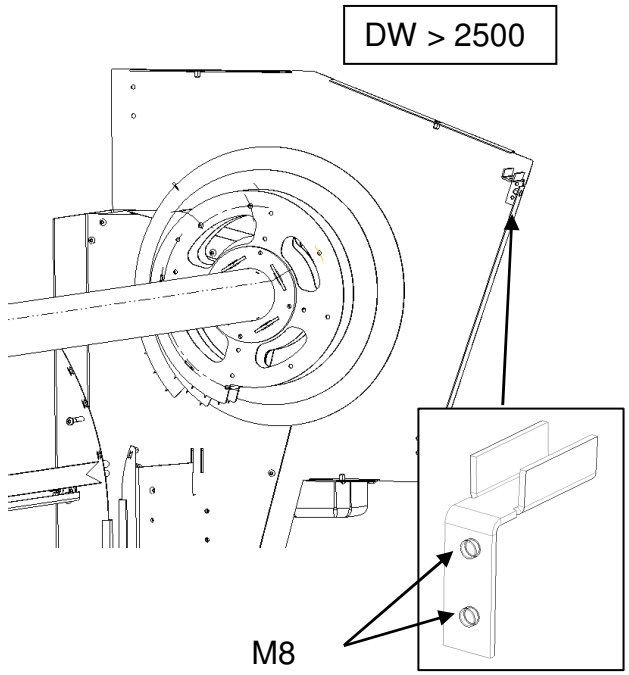


2.

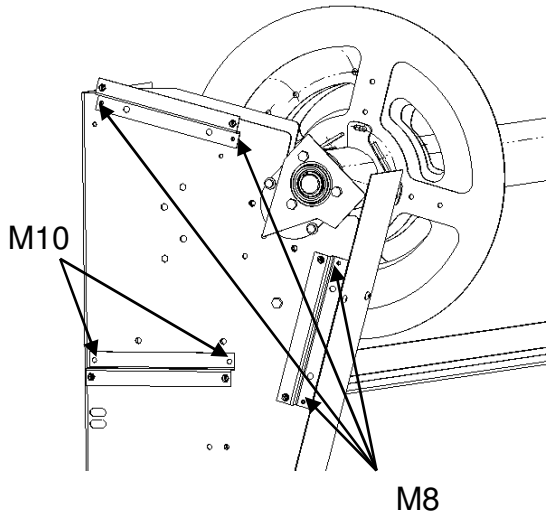


3.

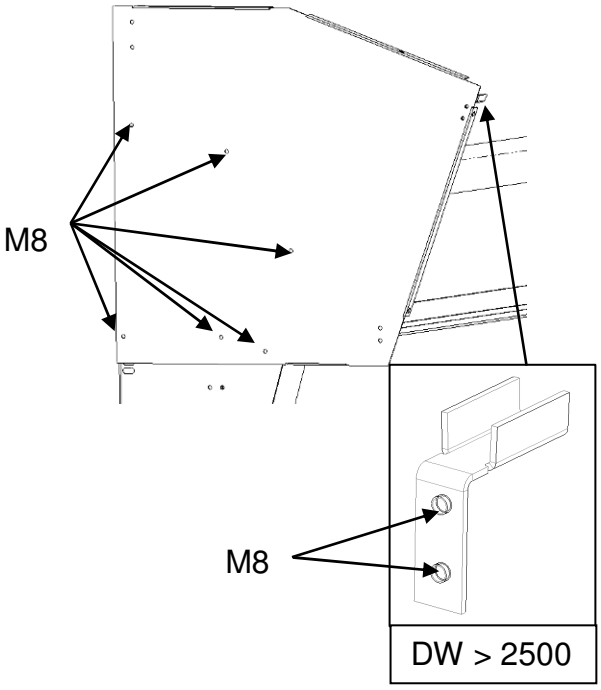


4.

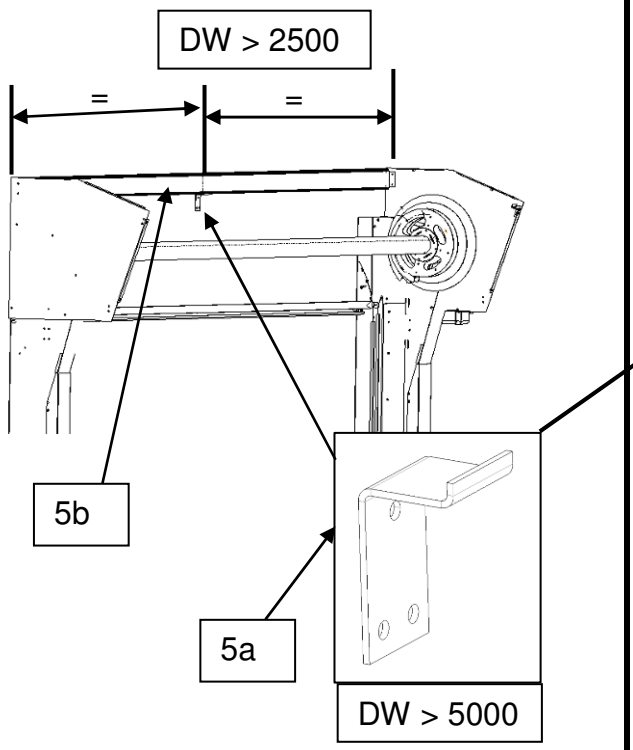
DW > 2500
=
=
5b
5a
DW > 5000


5.

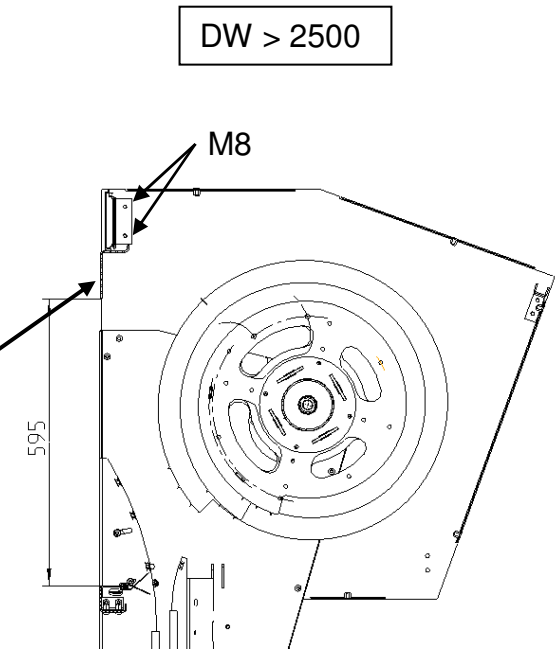
DW > 2500
M8
595


6.

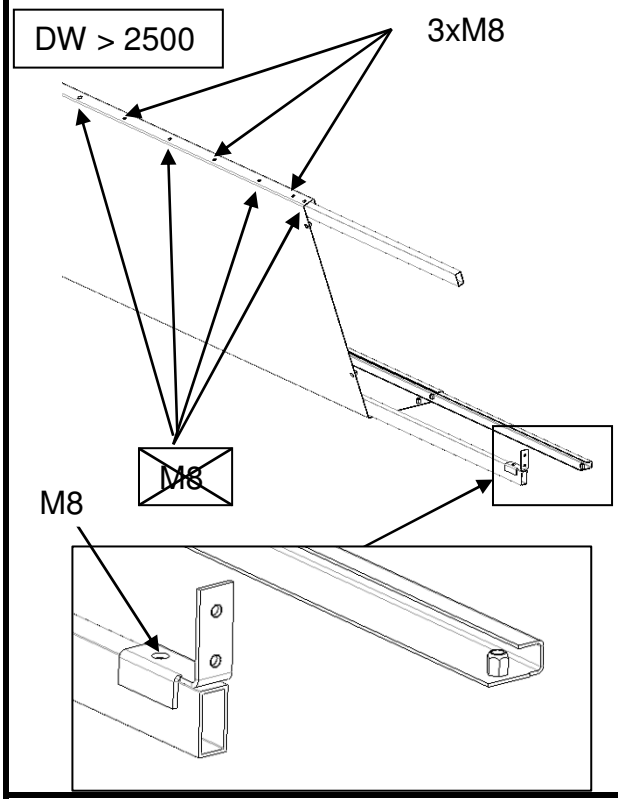
DW > 2500
3xM8
M8
M8


7.

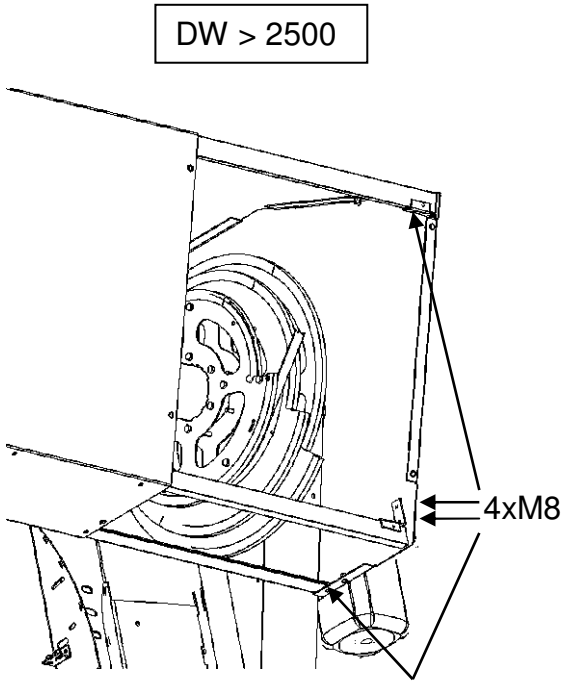
DW > 2500
4xM8


8.

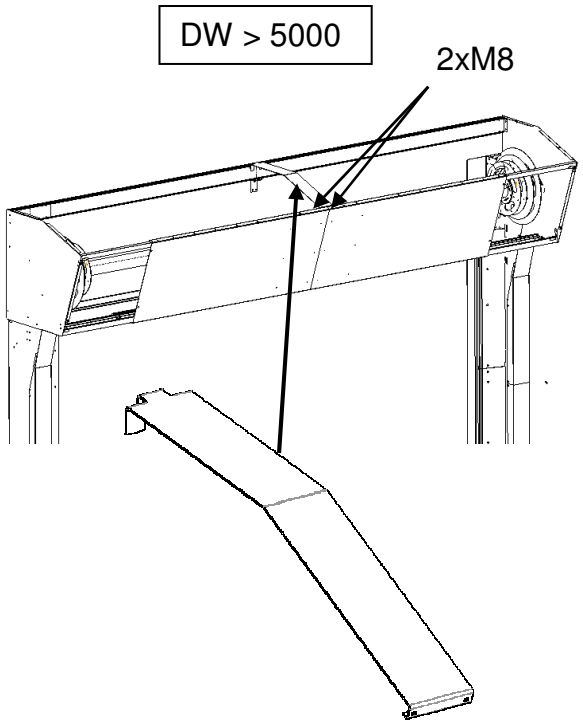


9.

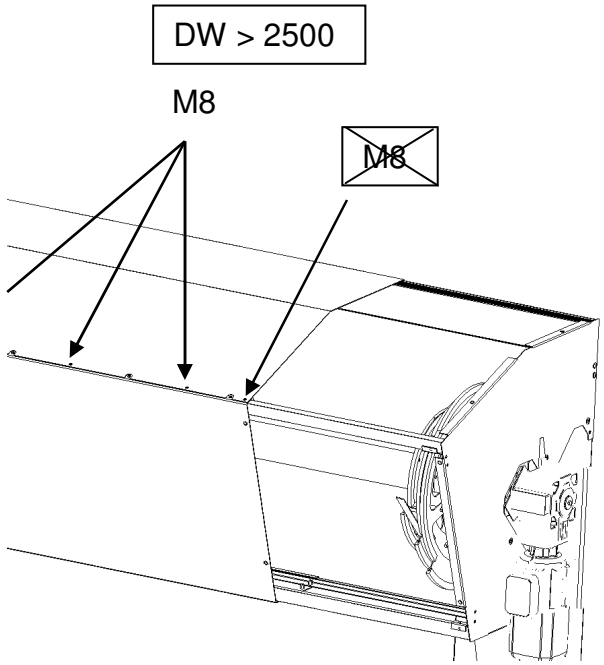


10.

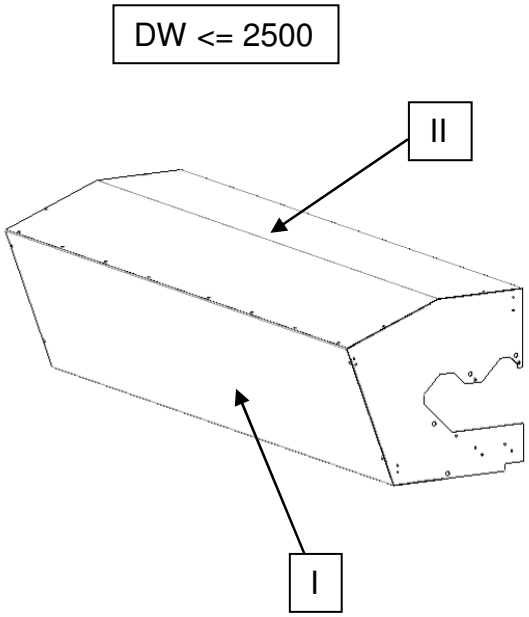


11.

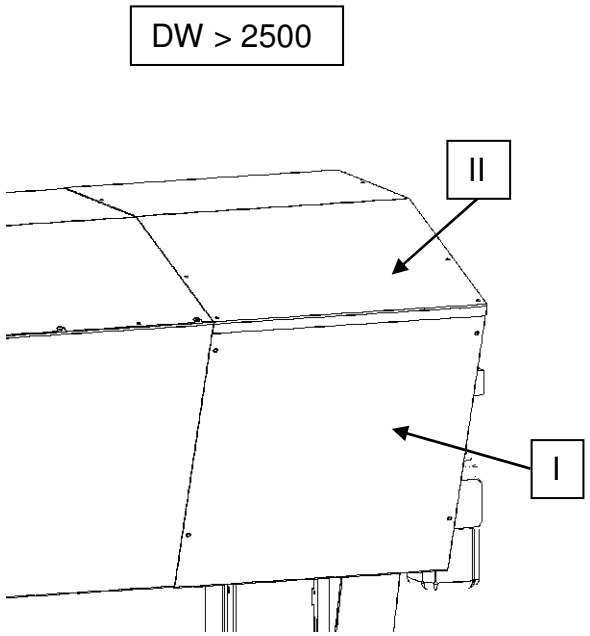


12.

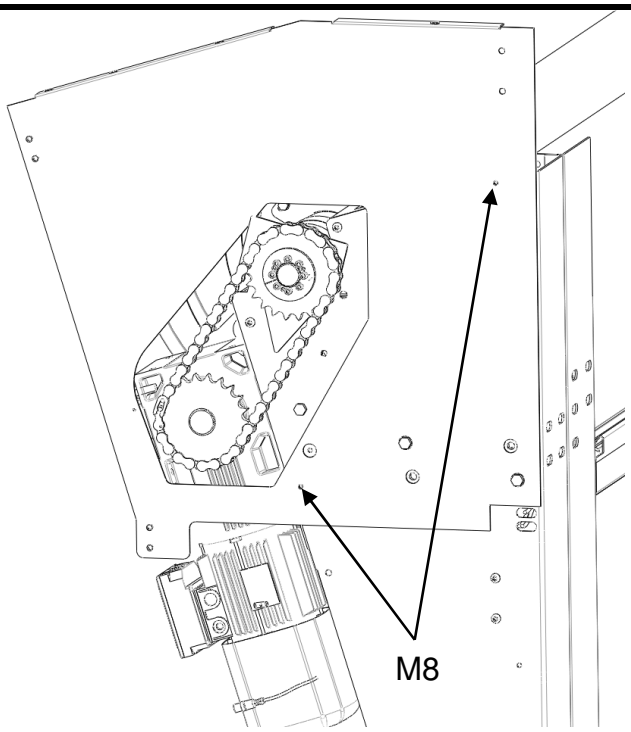


1.1.

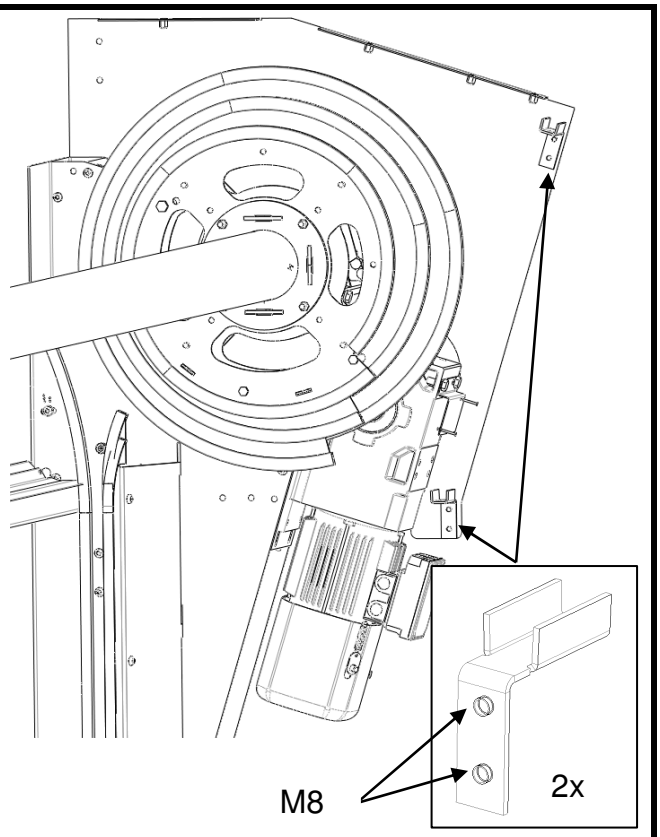


2.1.

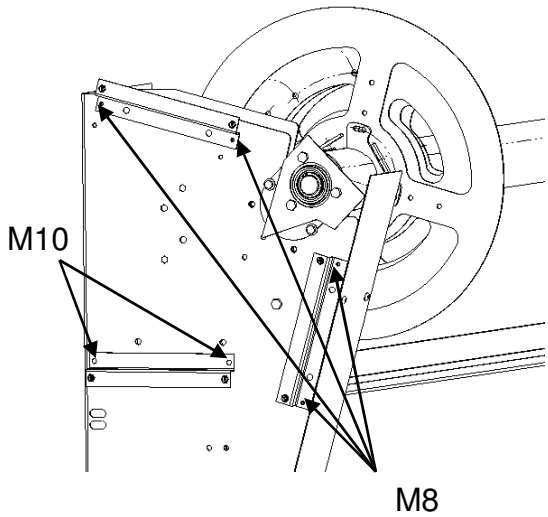


3.1.

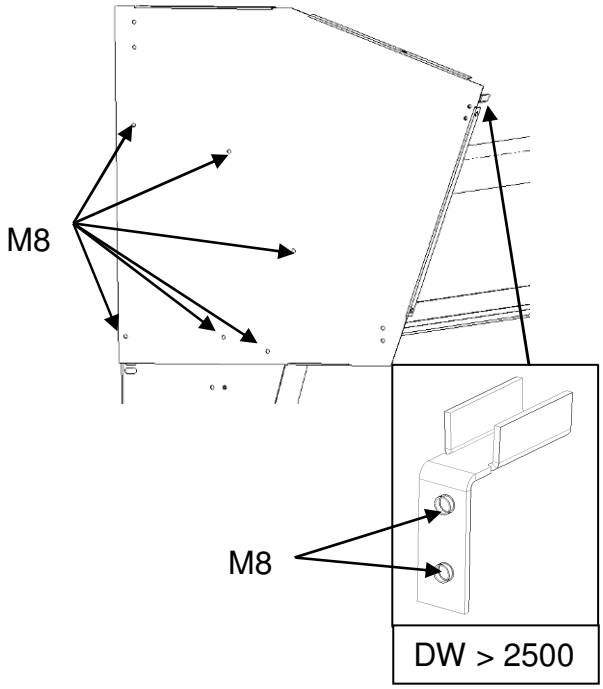


4.1.

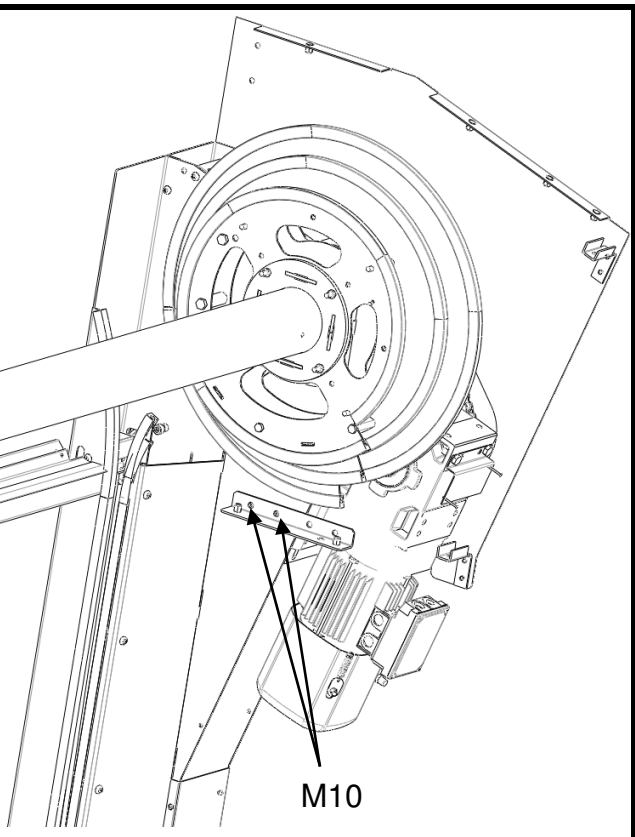


5.1.

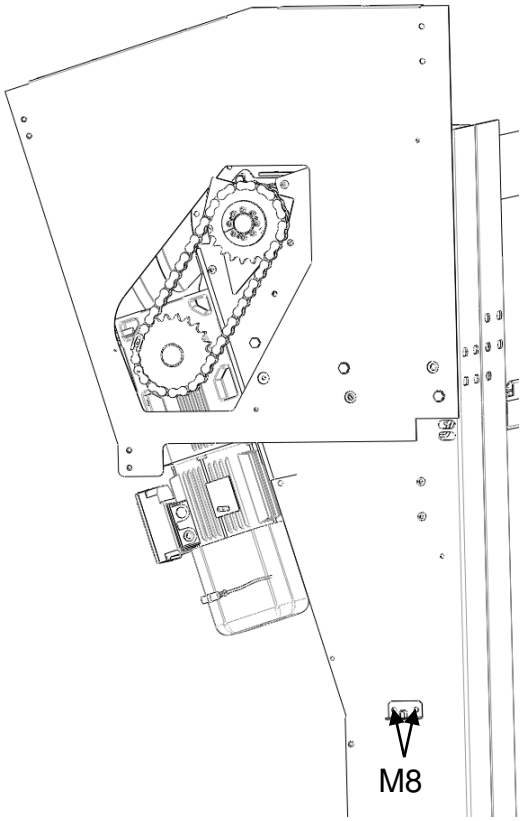


6.1.

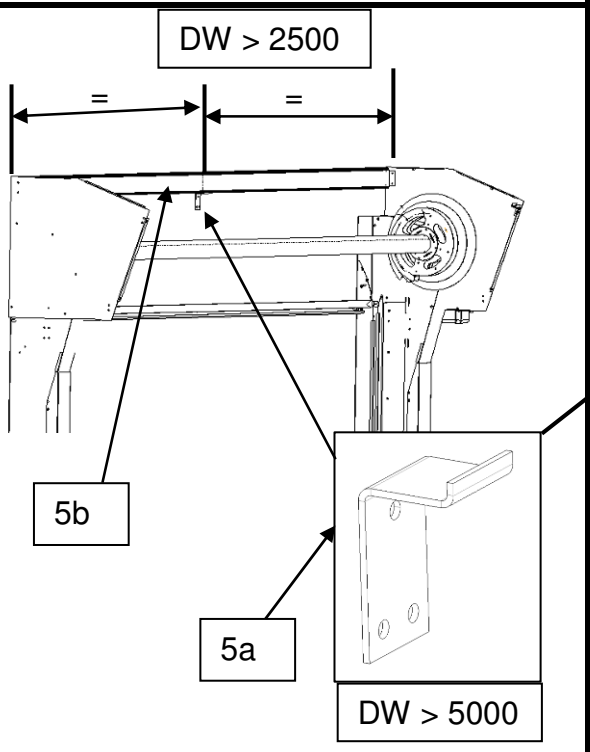


7.1.

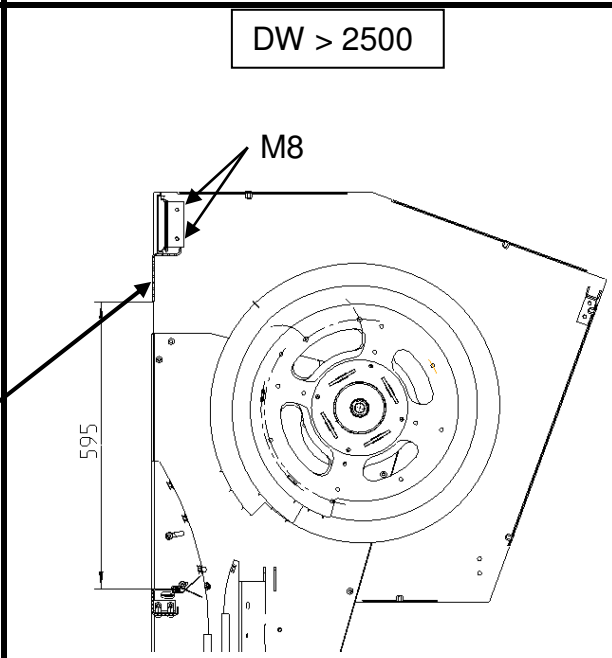


8.1

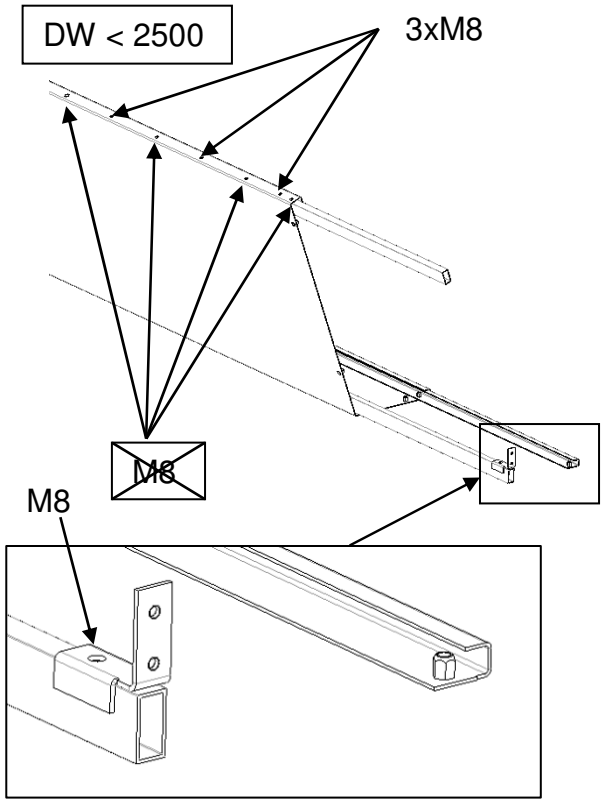


9.1 RR3000 XXL/ISO

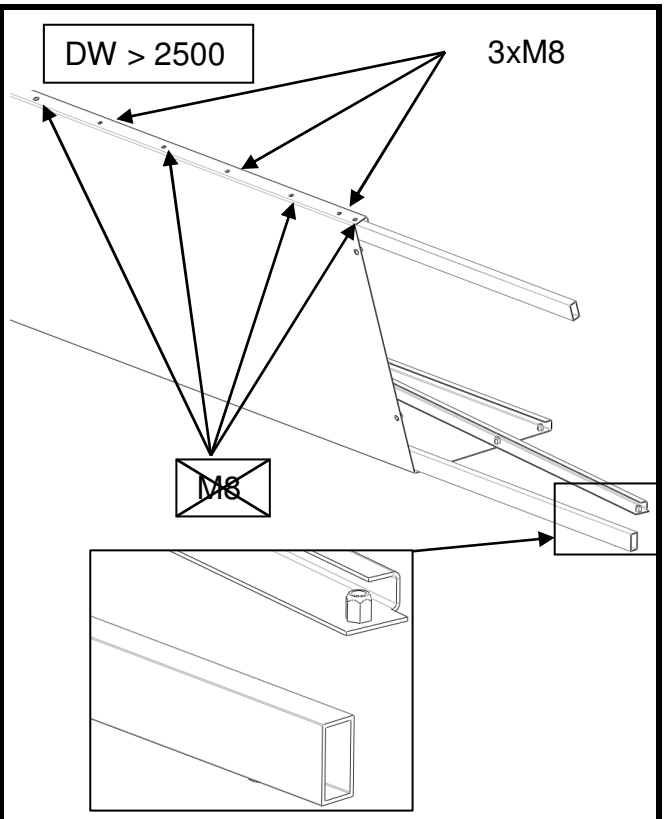


10.1 RR3000

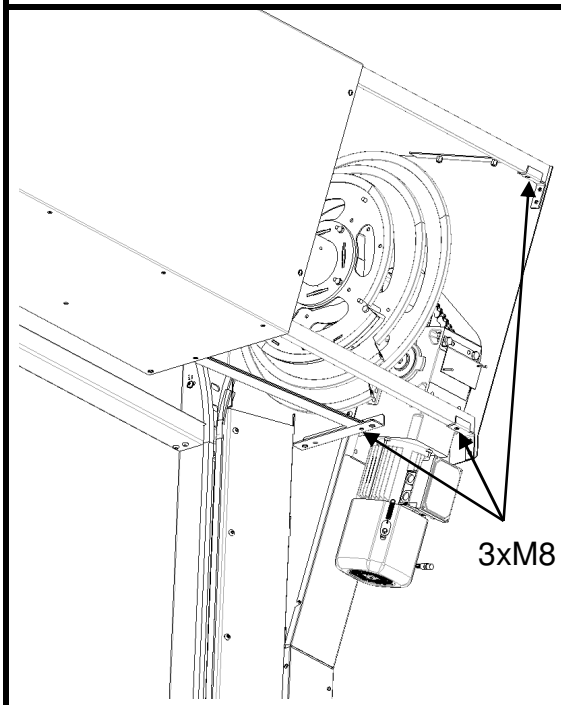


11.1

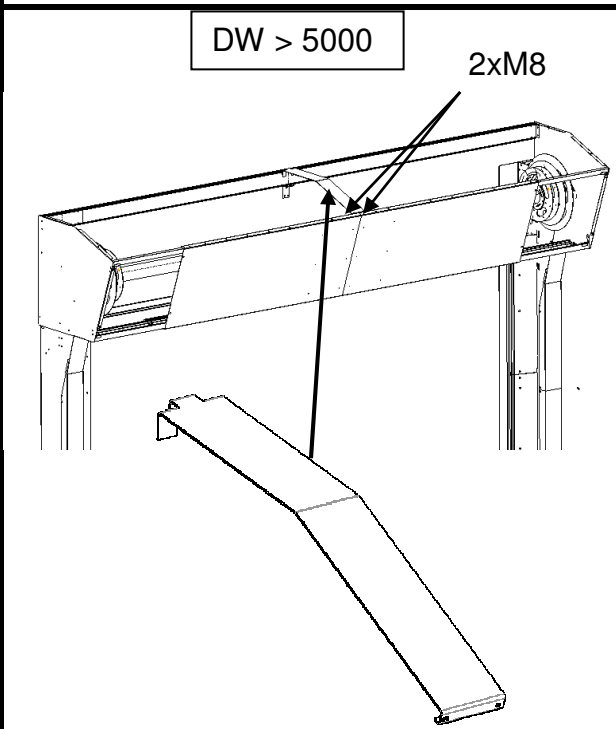


12.1

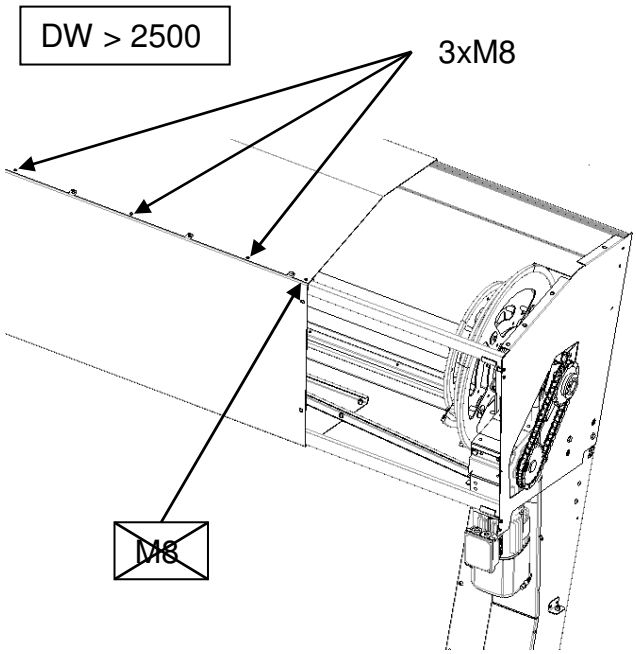


13.1

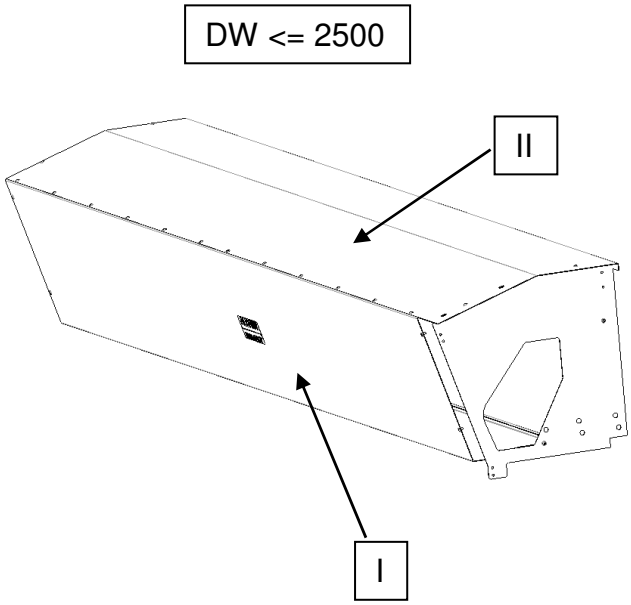

14.1

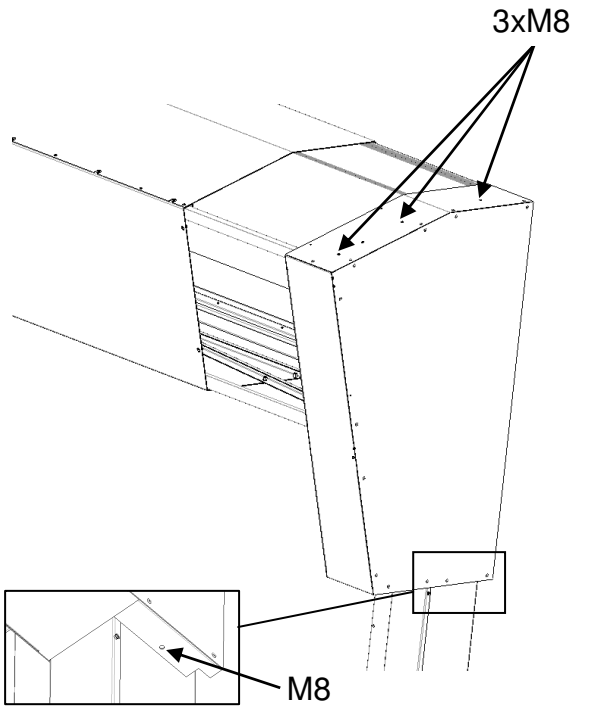

15.1

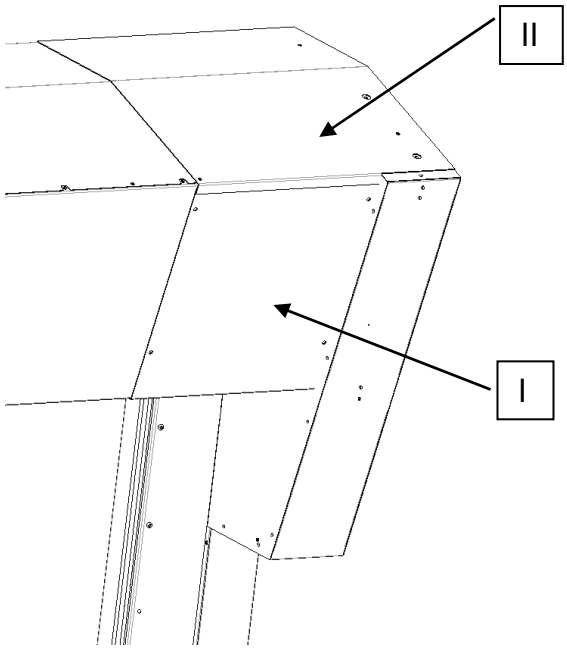

16.1