
force

smart door automation

force

smart door automation

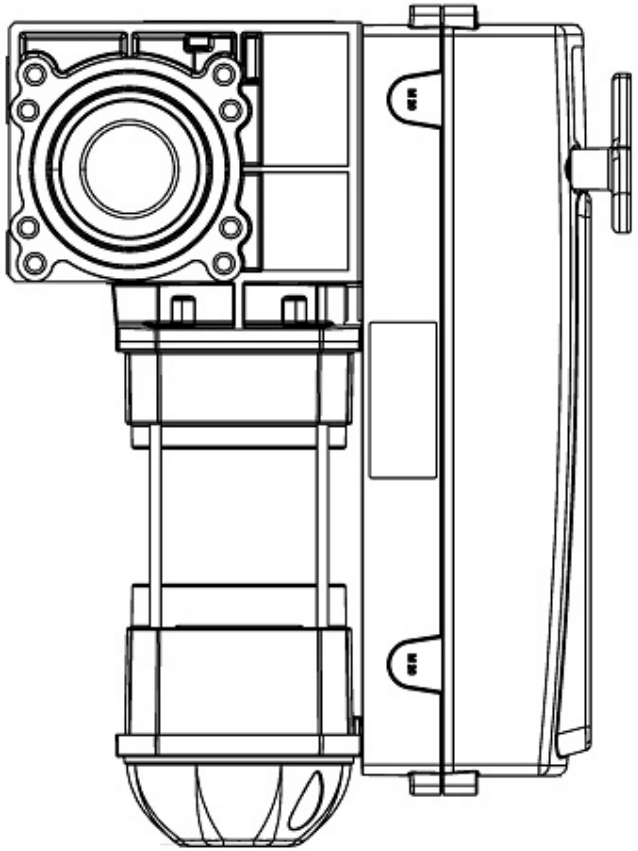


powered by flexiforce FF

Start programming



6 SECONDS





Scrolling through main menu using:



(DETAILS ON PAGE 4-6)

- **LANGUAGE** — CHANGE LANGUAGE TO YOUR PREFFERED OPTION (DETAILS ON PAGE 7)
- **MOTOR SETUP** — PROGRAM: MOTOR DIRECTION,ENCODER DIRECTION, TYPE OF ENCODER/ENDSWITCH (DETAILS PAGE 9,15)
- **ADJUST ENDPOS.** — ADJUST ENDPOSITIONS: TOP , BOTTOM, PRE-END AND SAFETY-ENDSWITCH (DETAILS PAGE 8)
- **SAFETY DEVICES** — PROGRAM: 4 WIRE PHOTOCEL, LIGHT CURTAIN, OPTOSENSORS, AIRSWITCHES (DETAILS PAGE 10,11,12,13,14)
- **OPERATING MODE** — PROGRAM: AUTOMATIC OPEN/CLOSE, DEADMANOPEN/CLOSE, AUTOMATIC OPEN DEADMAN CLOSE (DETAILS PAGE 15)
- **CODE ENTRY** — CHANGE ENTRY CODE (DETAILS PAGE 16) AFTER CHANGING ALWAYS START PROGRAMMING WITH ENTERING CODE
- **SPECIAL SETUP** — PROGRAM: AUTOMATIC CLOSE, PARTIAL OPEN, RELAYS 1, 2 AND 3 , (DETAILS PAGE 17,18)
- **SERVICE** — PROGRAM: CYCLES AND/OR DAYS TO SERVICE, SET CLOCK, READ FAULTS, RESET FAULTS(DETAILS PAGE 20,21)



CODE ENTRY



USE THIS BUTTON TO SCROLL THROUGH THE MENU (PREVIOUS CHOICE SAME LEVEL)



USE THIS BUTTON TO MOVE 1 STEP HIGH UP IN THE MENU, OR TO CHANGE THE VALUE IN THE DISPLAY (1 UP)
USE THIS BUTTON TO STEP OUT OF MAIN MENU TO NORMAL OPERATING STATUS OF MOTOR



USE THIS BUTTON TO CONFIRM THAT YOU WANT TO CHANGE WHAT IS IN THE DISPLAY, OR TO CONFIRM A CHANGE



USE THIS BUTTON TO CHANGE THE VALUE IN THE DISPLAY (1 DOWN)



USE THIS BUTTON TO SCROLL THROUGH THE MENU (NEXT CHOICE SAME LEVEL)


ENTER PROGRAMMING



6 SECONDS




NAVIGATING MAIN MENU

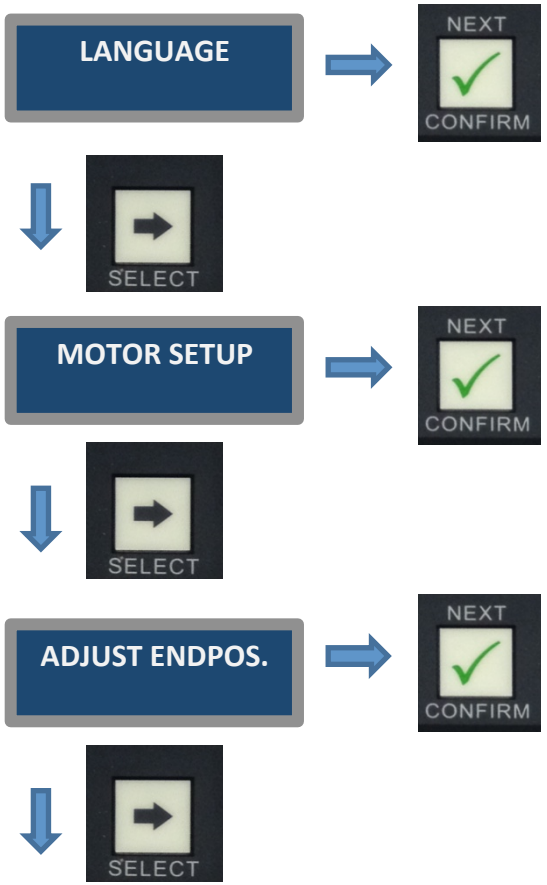


GOTO MENU LANGUAGE

GOTO MENU MOTOR SETUP


GOTO MENU ADJUST ENDPOSITIONS

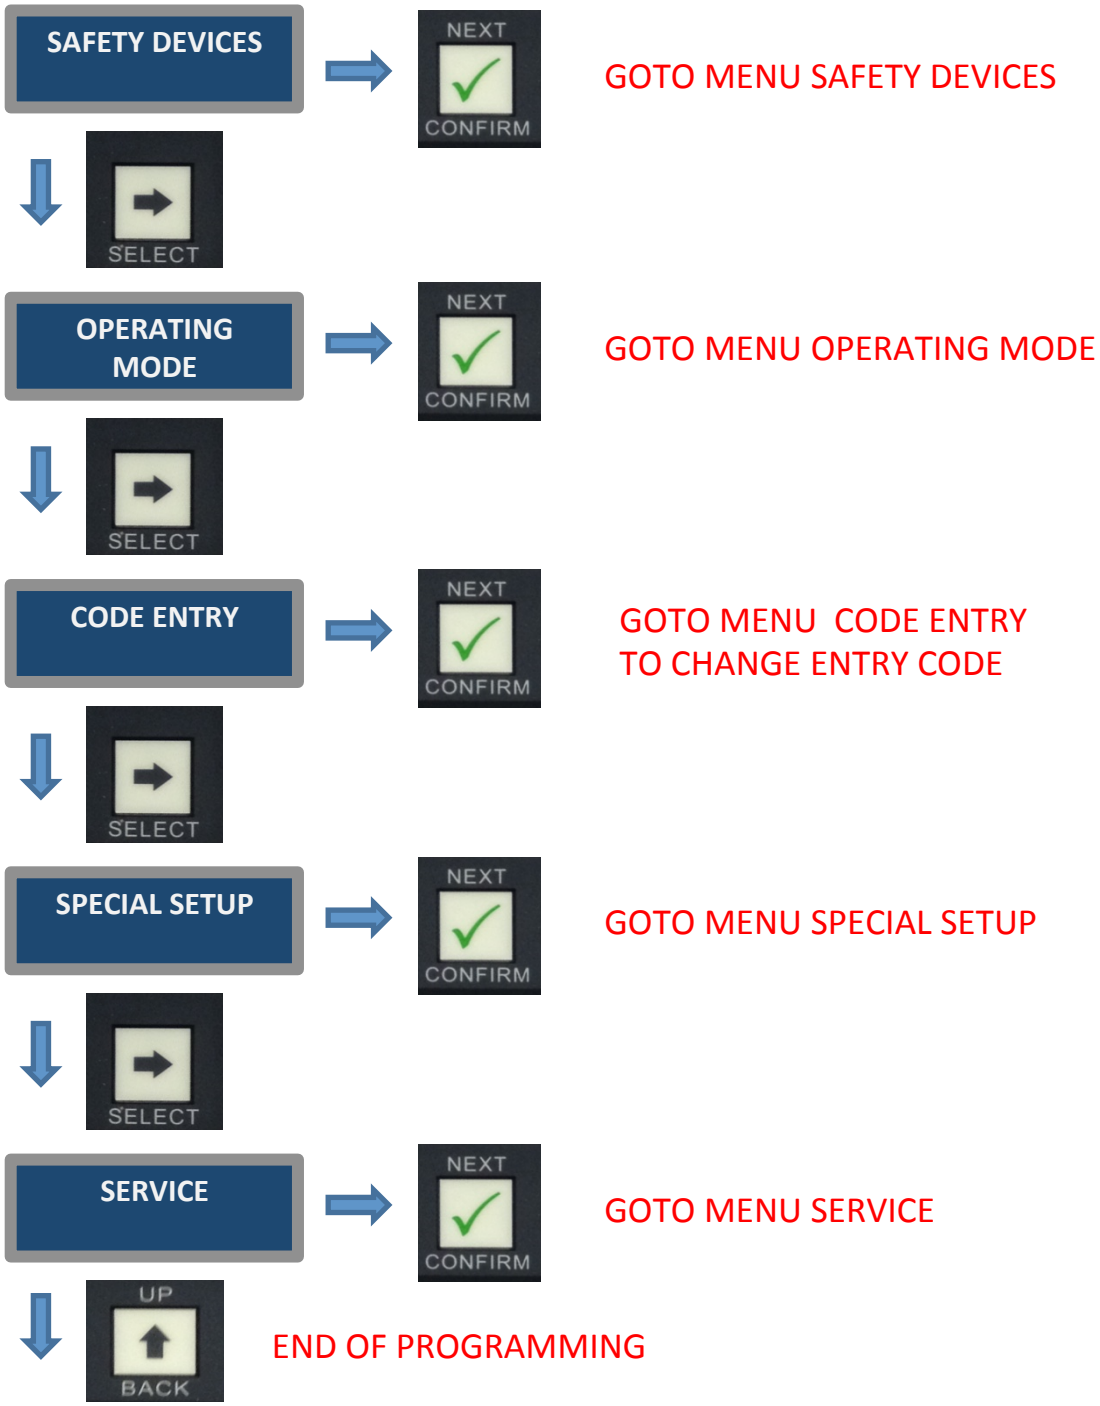
SAFETY DEVICES
NEXT
CONFIRM
GOTO MENU SAFETY DEVICES
SELECT
OPERATING MODE
NEXT
CONFIRM
GOTO MENU OPERATING MODE
SELECT
CODE ENTRY
NEXT
CONFIRM
GOTO MENU CODE ENTRY
TO CHANGE ENTRY CODE
SELECT
SPECIAL SETUP
NEXT
CONFIRM
GOTO MENU SPECIAL SETUP
SELECT
SERVICE
NEXT
CONFIRM
GOTO MENU SERVICE
UP
BACK
END OF PROGRAMMING


MENU LANGUAGE

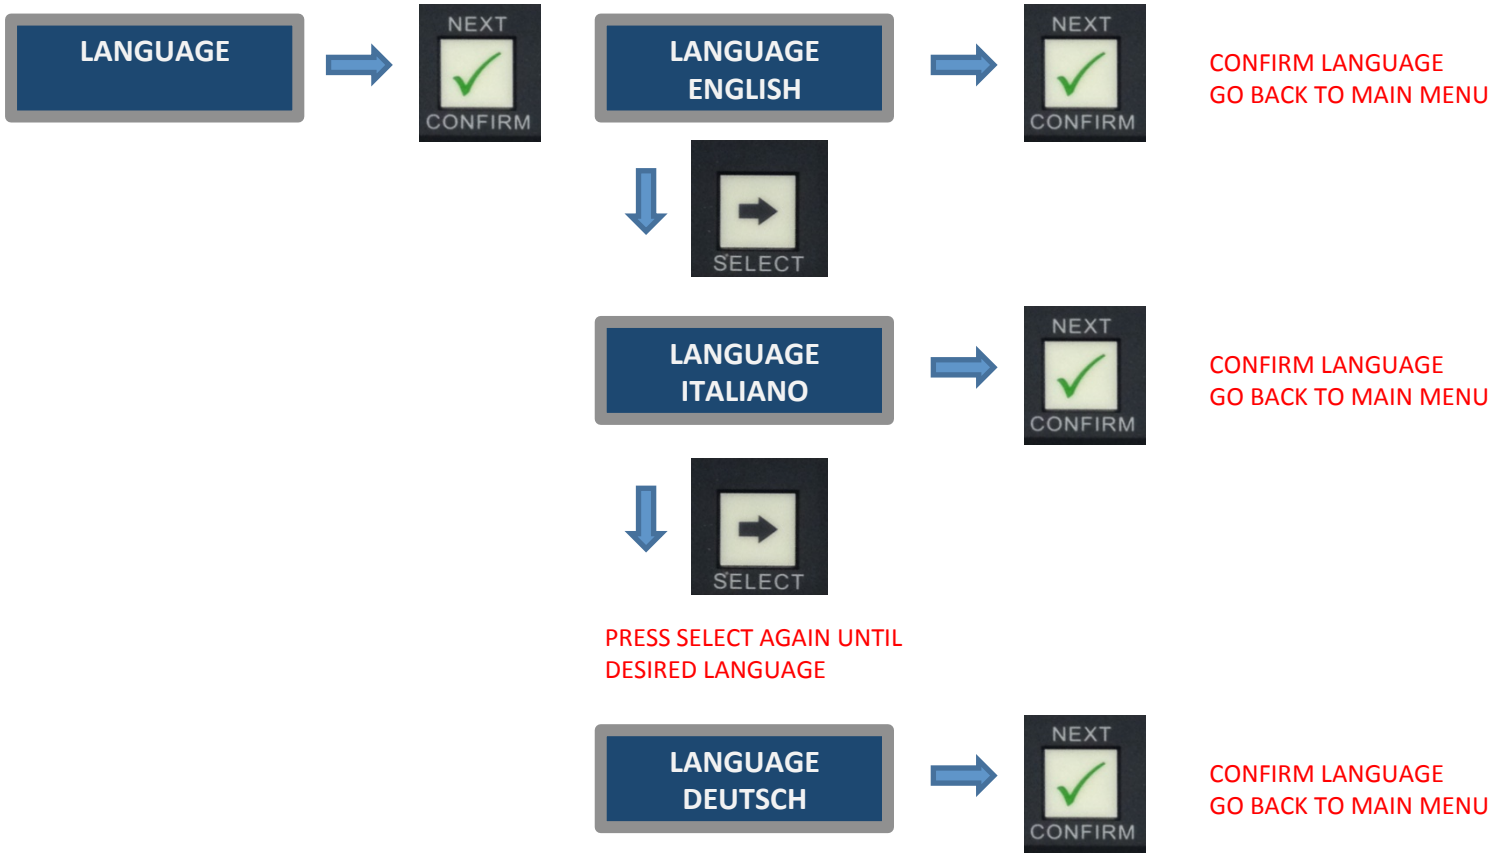

MENU ADJUSTING ENDPOSITIONS

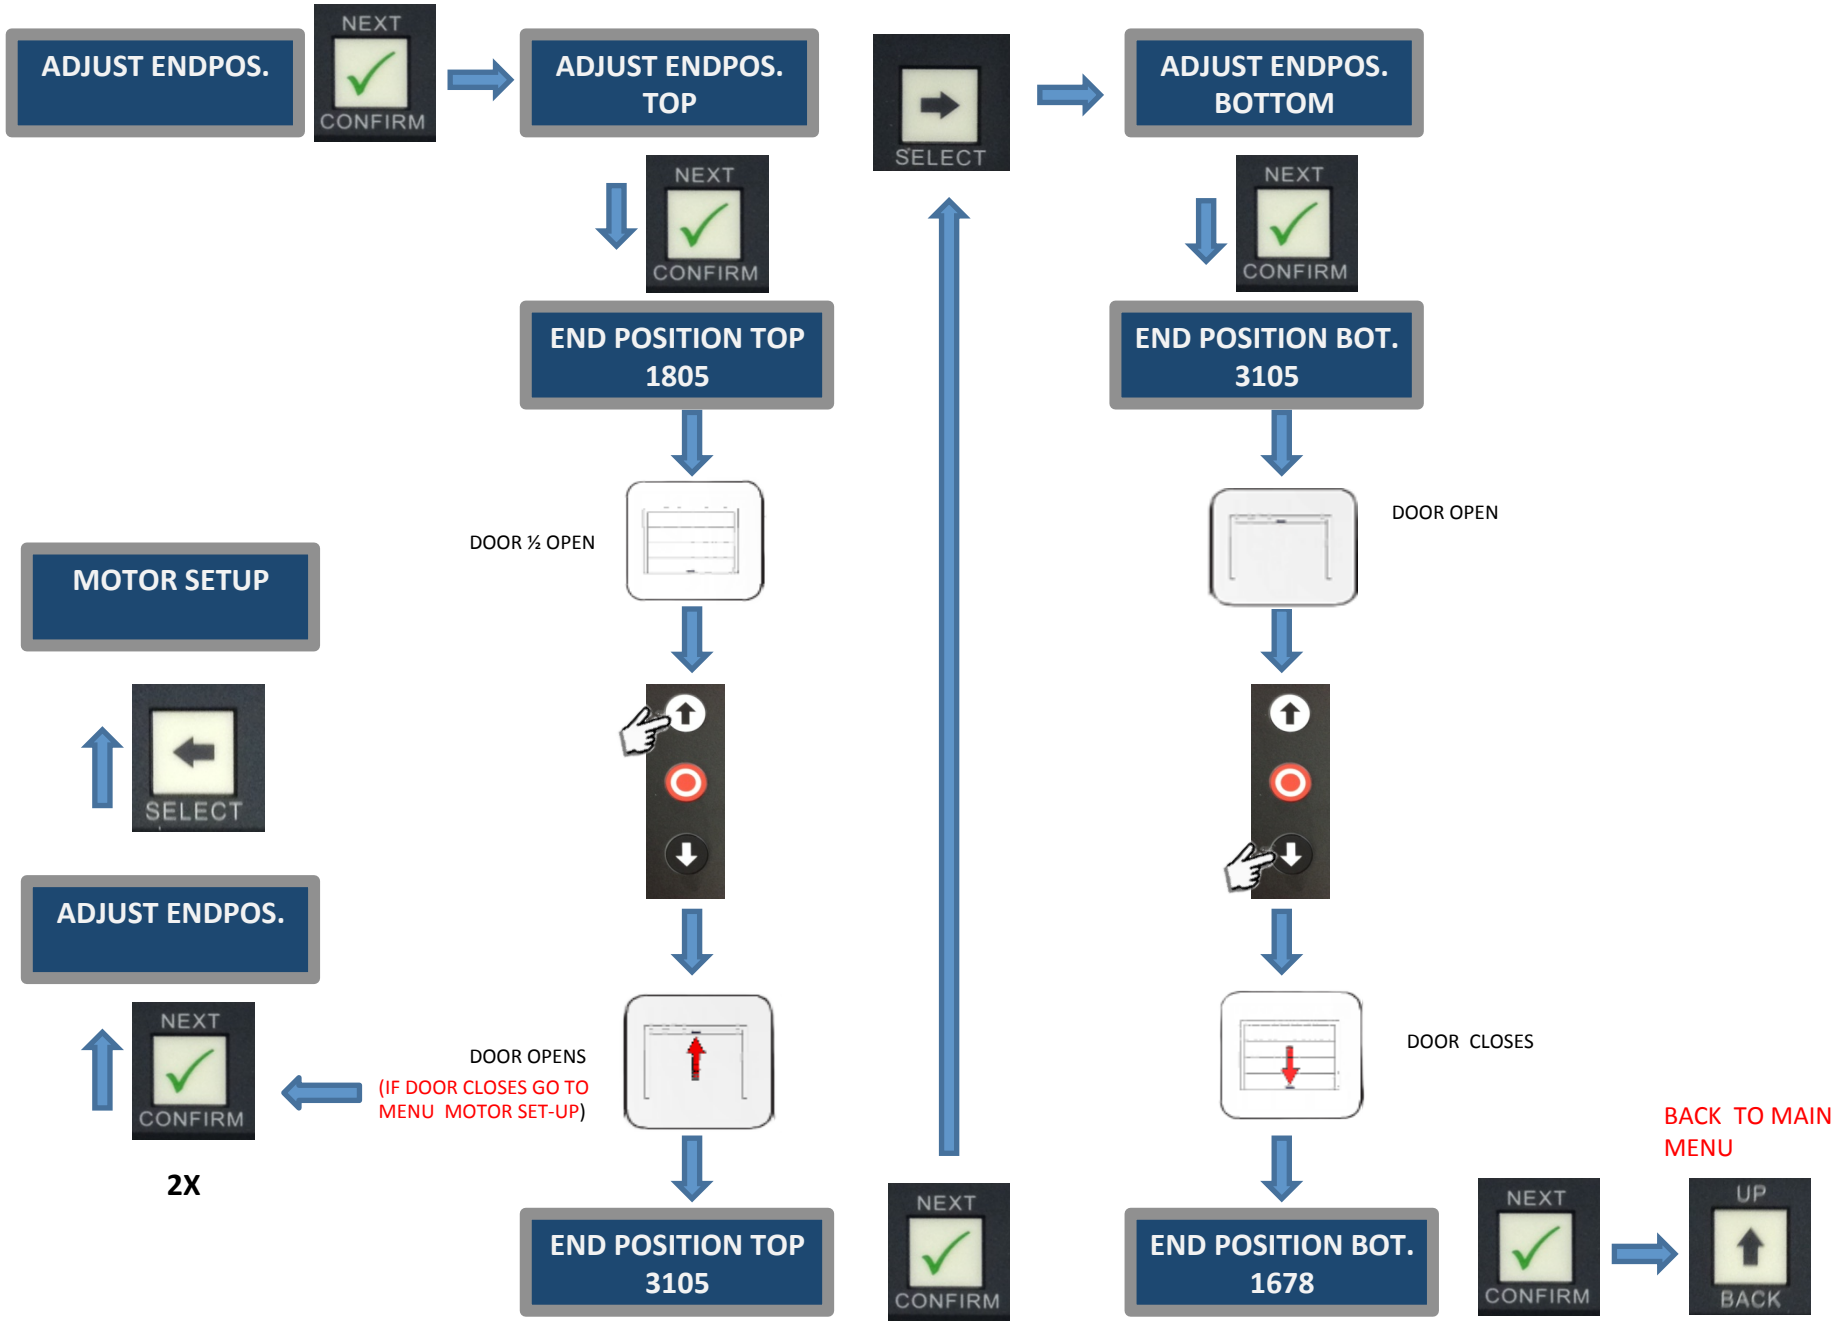


MENU MOTOR SETUP/ CHANGE MOTOR DIRECTION

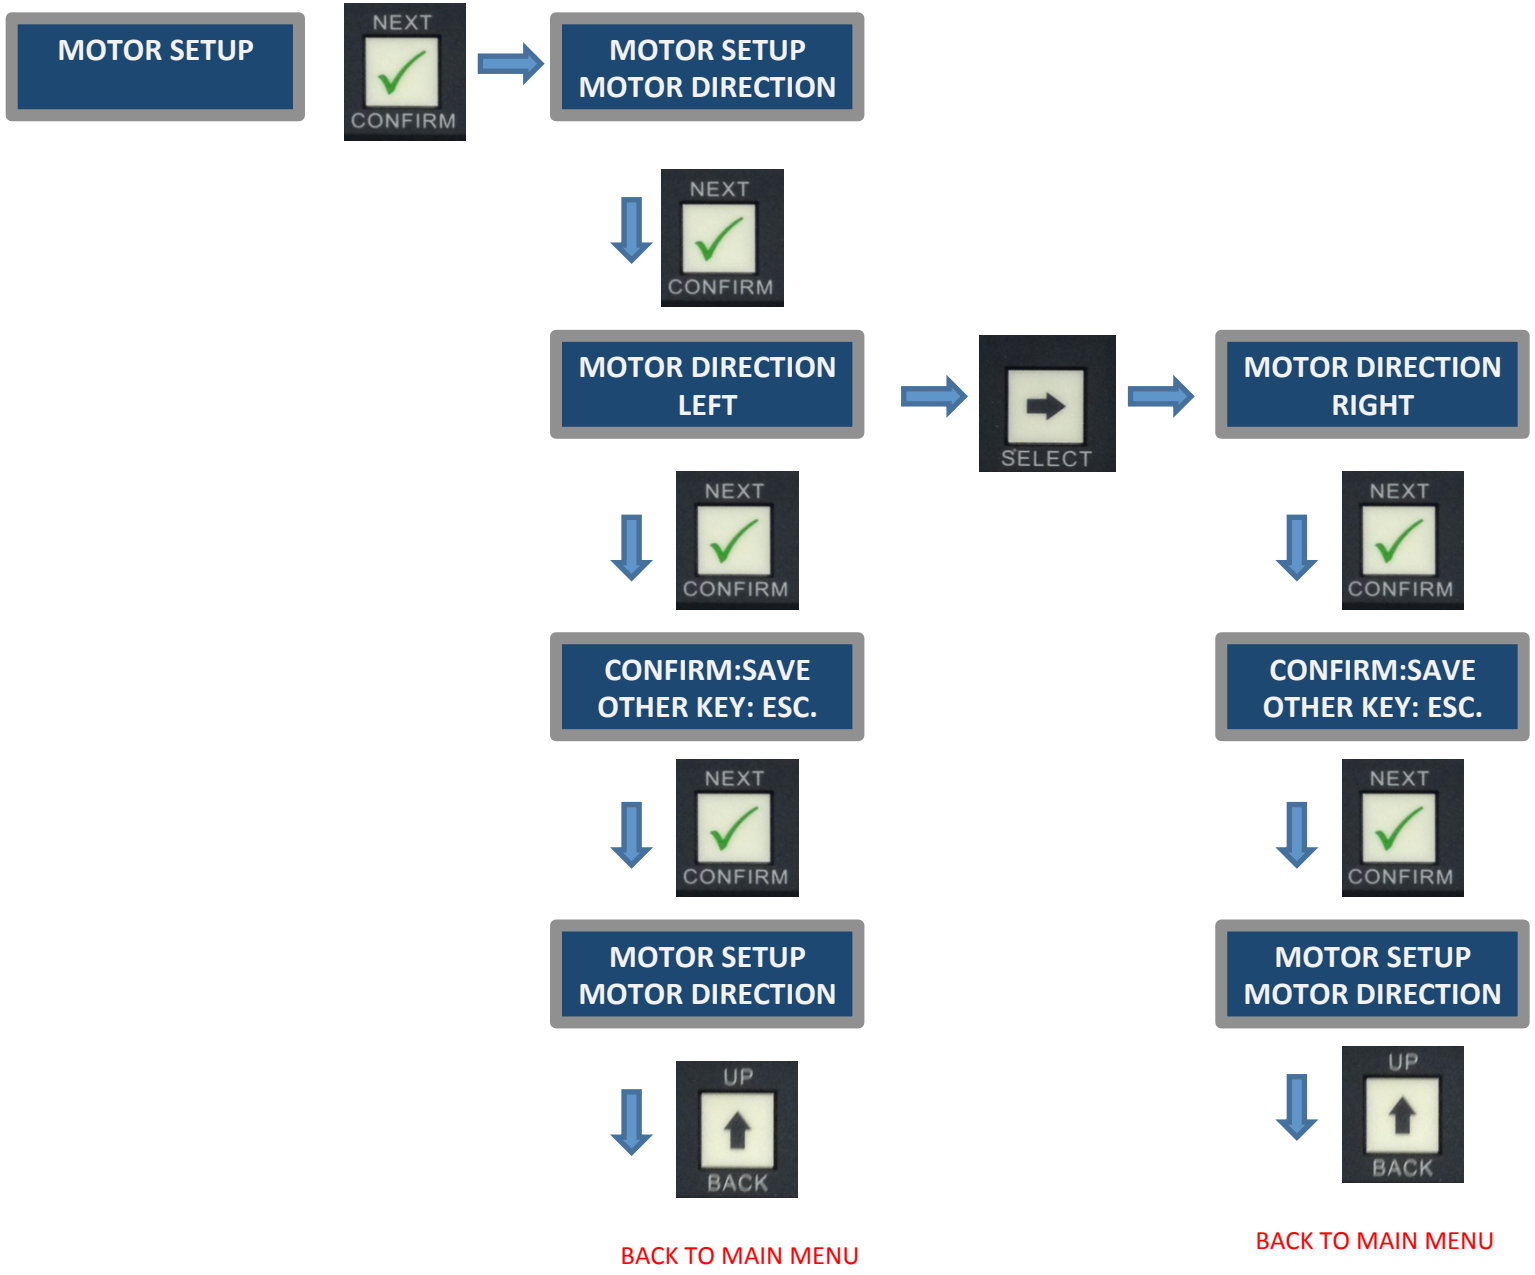

BACK TO MAIN MENU


BACK TO MAIN MENU

MENU SAFETY EDGE WITH OPTO SENSOR :OSE

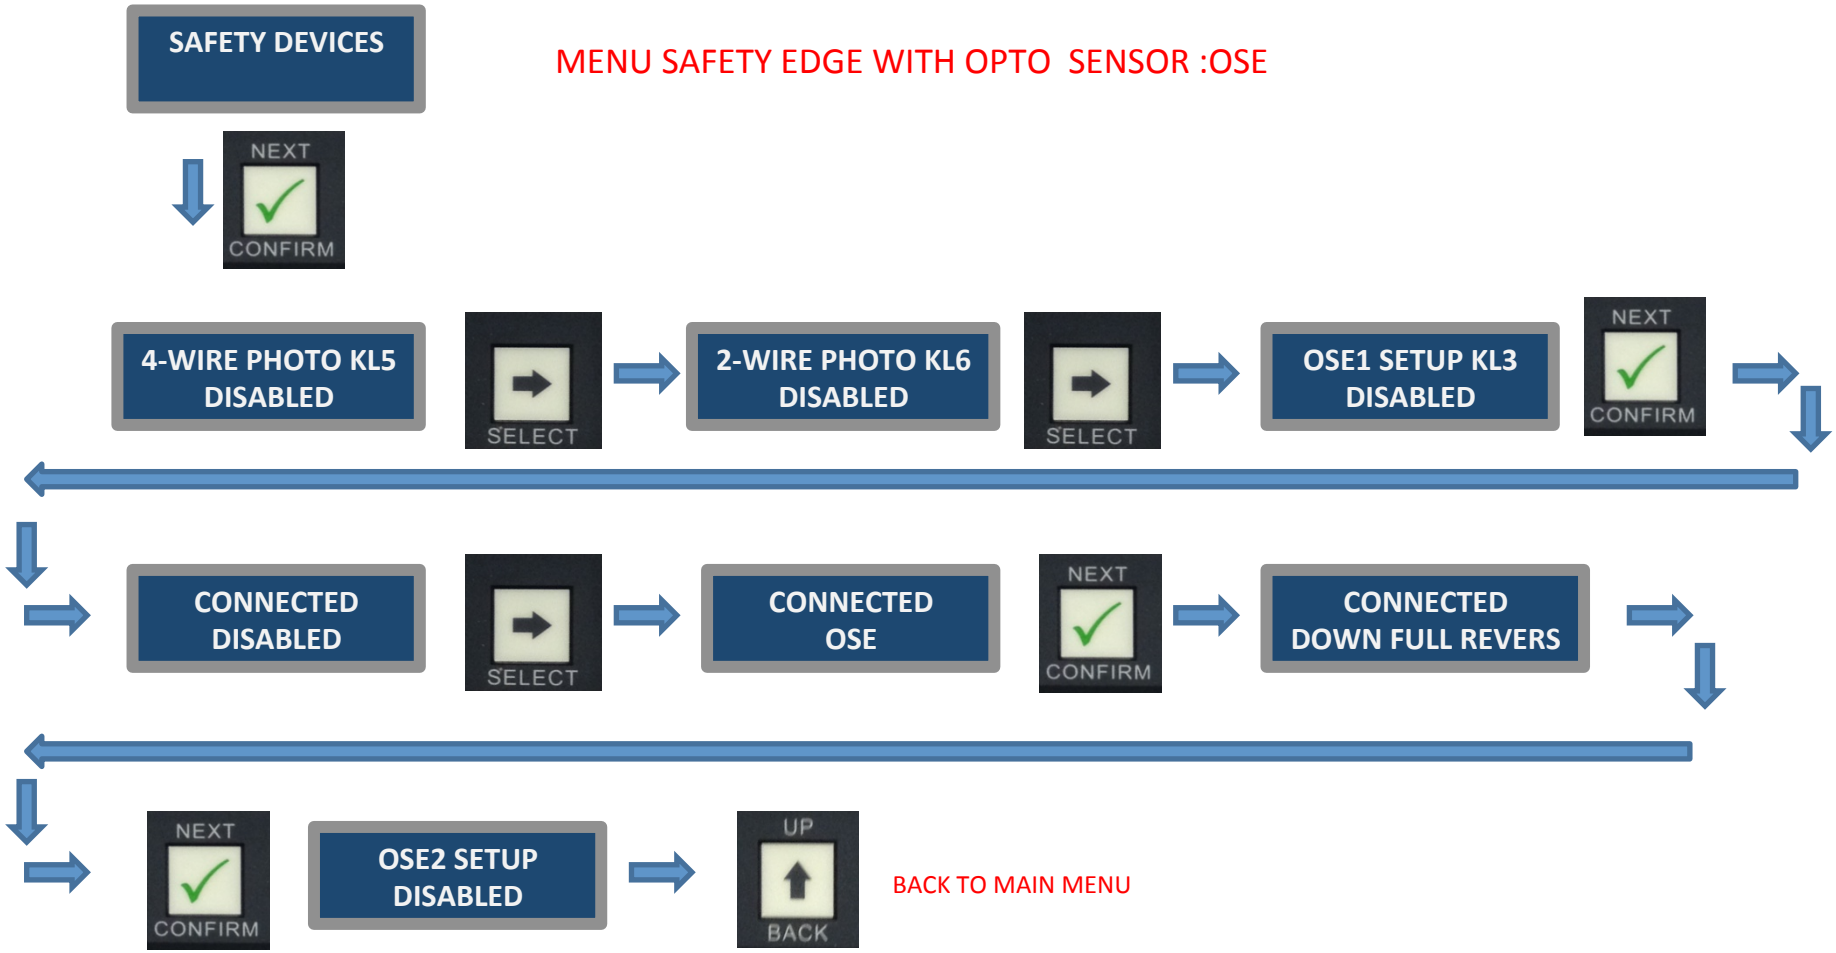


BACK TO MAIN MENU

MENU SAFETY EDGE WITH AIR SWITCH

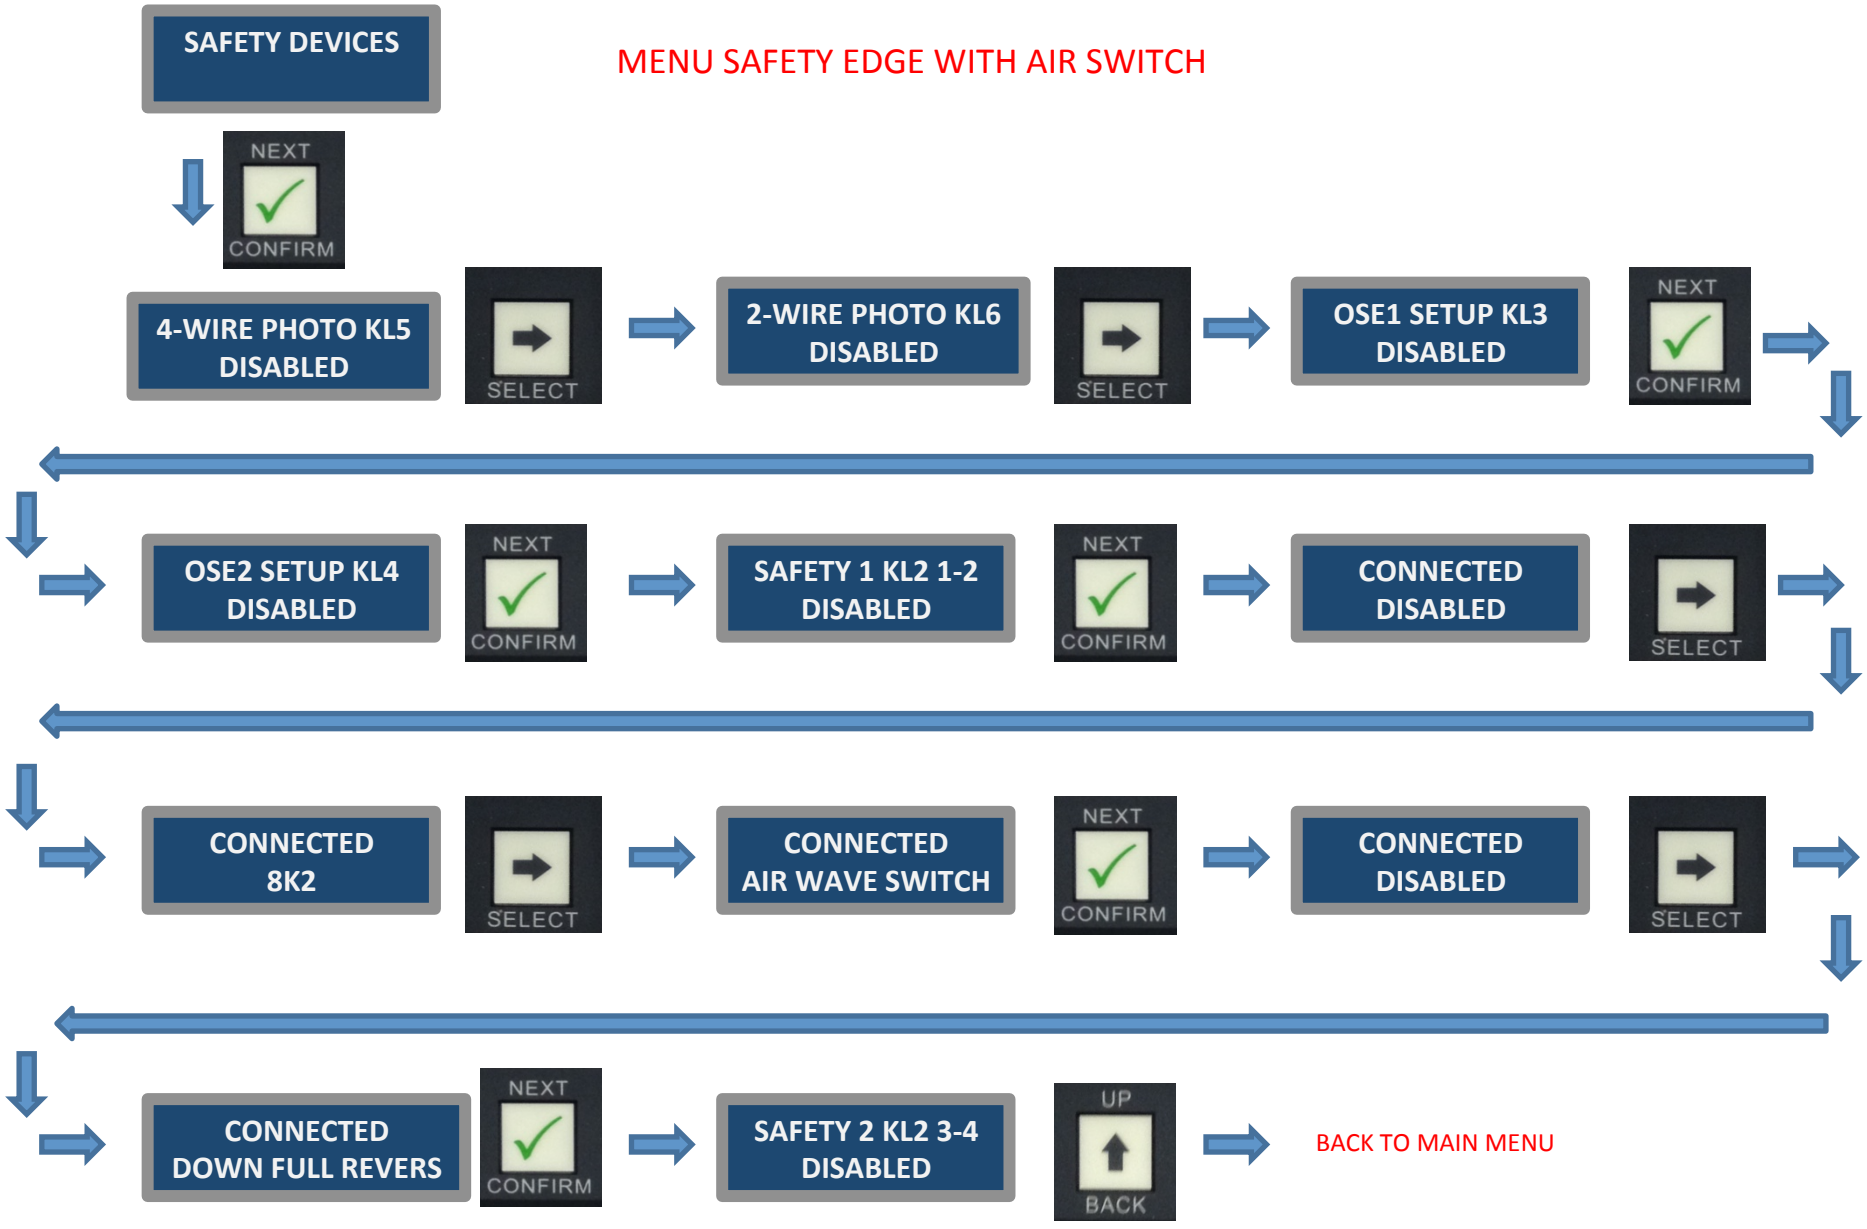

MENU SAFETY EDGE: USING LIGHT CURTAIN

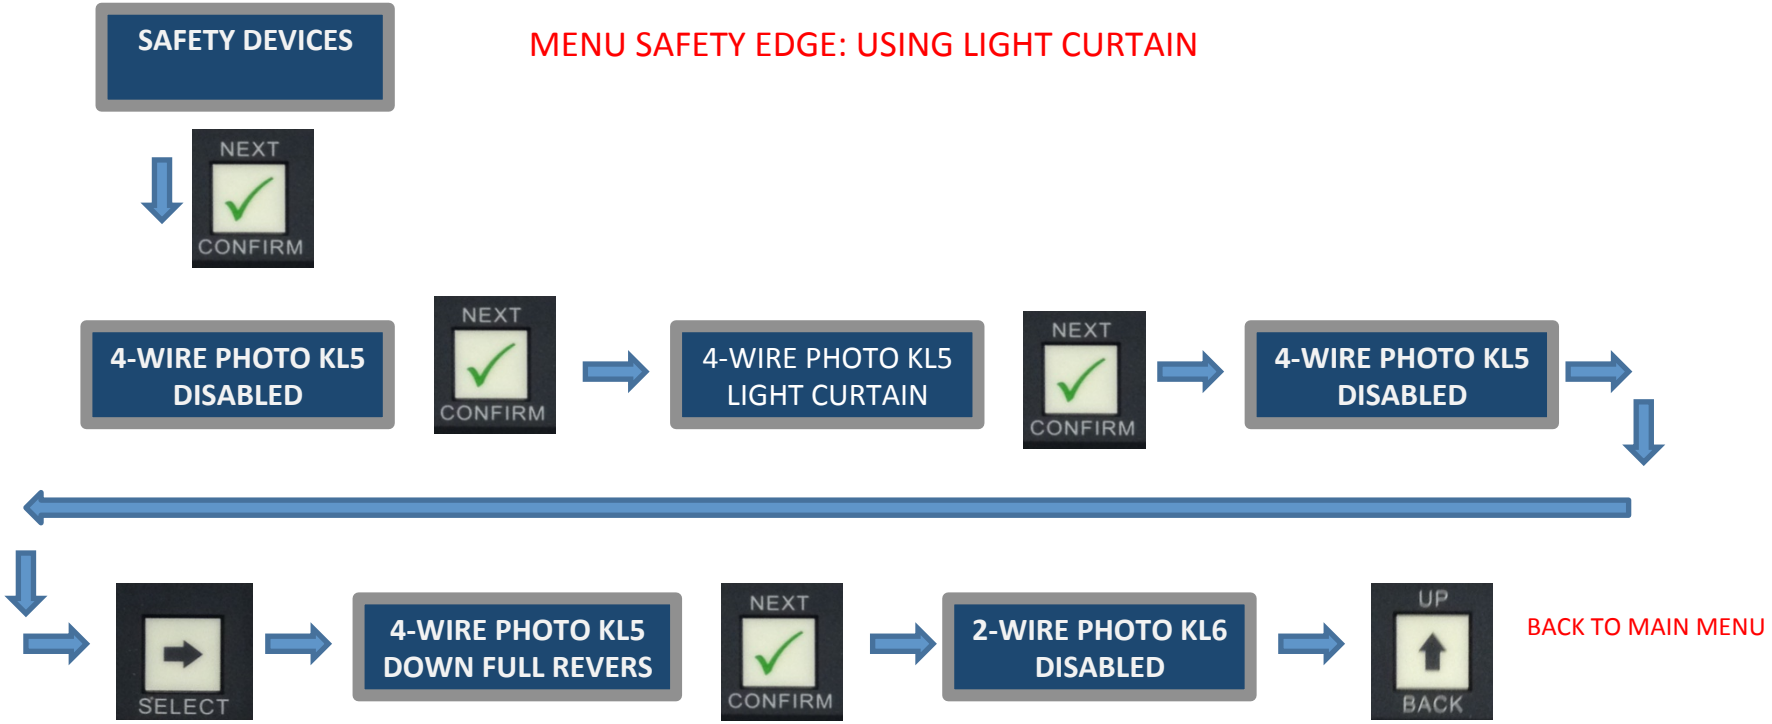

BACK TO MAIN MENU

MENU SAFETY DEVICES: USING OSE-IR IN DOORTRACK

SAFETY DEVICES

NEXT CONFIRM

4-WIRE PHOTO KL5 DISABLED

NEXT CONFIRM

4-WIRE PHOTO KL5 LIGHT CURTAIN

SELECT

4-WIRE PHOTO KL5 UNTESTED

NEXT CONFIRM

4-WIRE PHOTO KL5 DISABLED

SELECT

4-WIRE PHOTO KL5 DOWN FULL REVERS

SELECT

4-WIRE PHOTO KL5 DOWN PART. REVER

SELECT

4-WIRE PHOTO KL5 DOWN STOP

SELECT

4-WIRE PHOTO KL5 UP STOP

SELECT


4-WIRE PHOTO KL5 DOWN FULL /SW OFF

NEXT CONFIRM

DISABLE PHOTOCEL 3139 MOVE UP




OPEN DOOR FULLY (HOLD TO RUN)

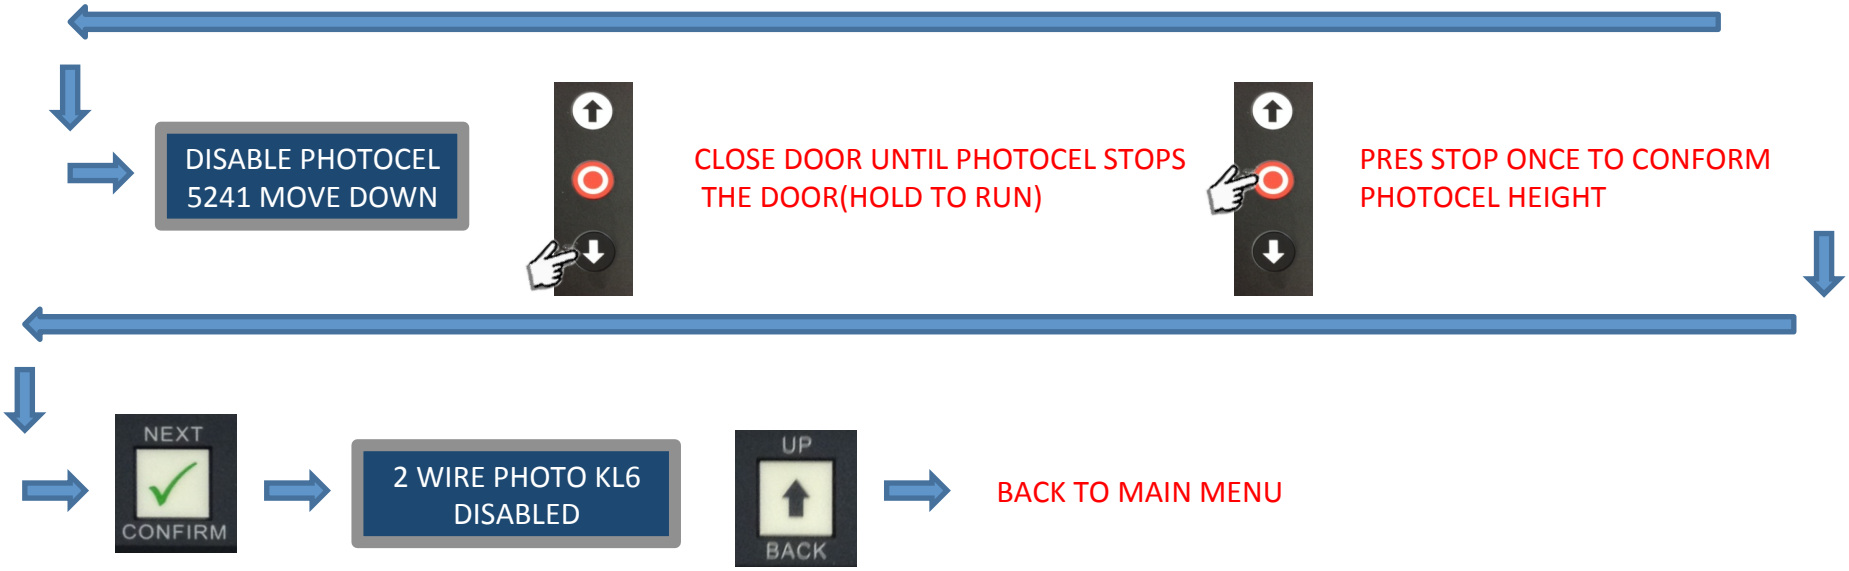

CONNECTIONS OSE-IR TO FORCE IQ KL5


TRANSMITTER:	FORCE IQ KL5:	FUNCTION:
BROWN AND BLACK	TERMINAL 1	+ 24VOLT
BLEU	TERMINAL 4	GND
RECEIVER:		
BROWN	TERMINAL 1	+24VOLT
BLEU	TERMINAL 4	GND
YELLOW	TERMINAL 3	SIGNAL

MENU OPERATING MODE

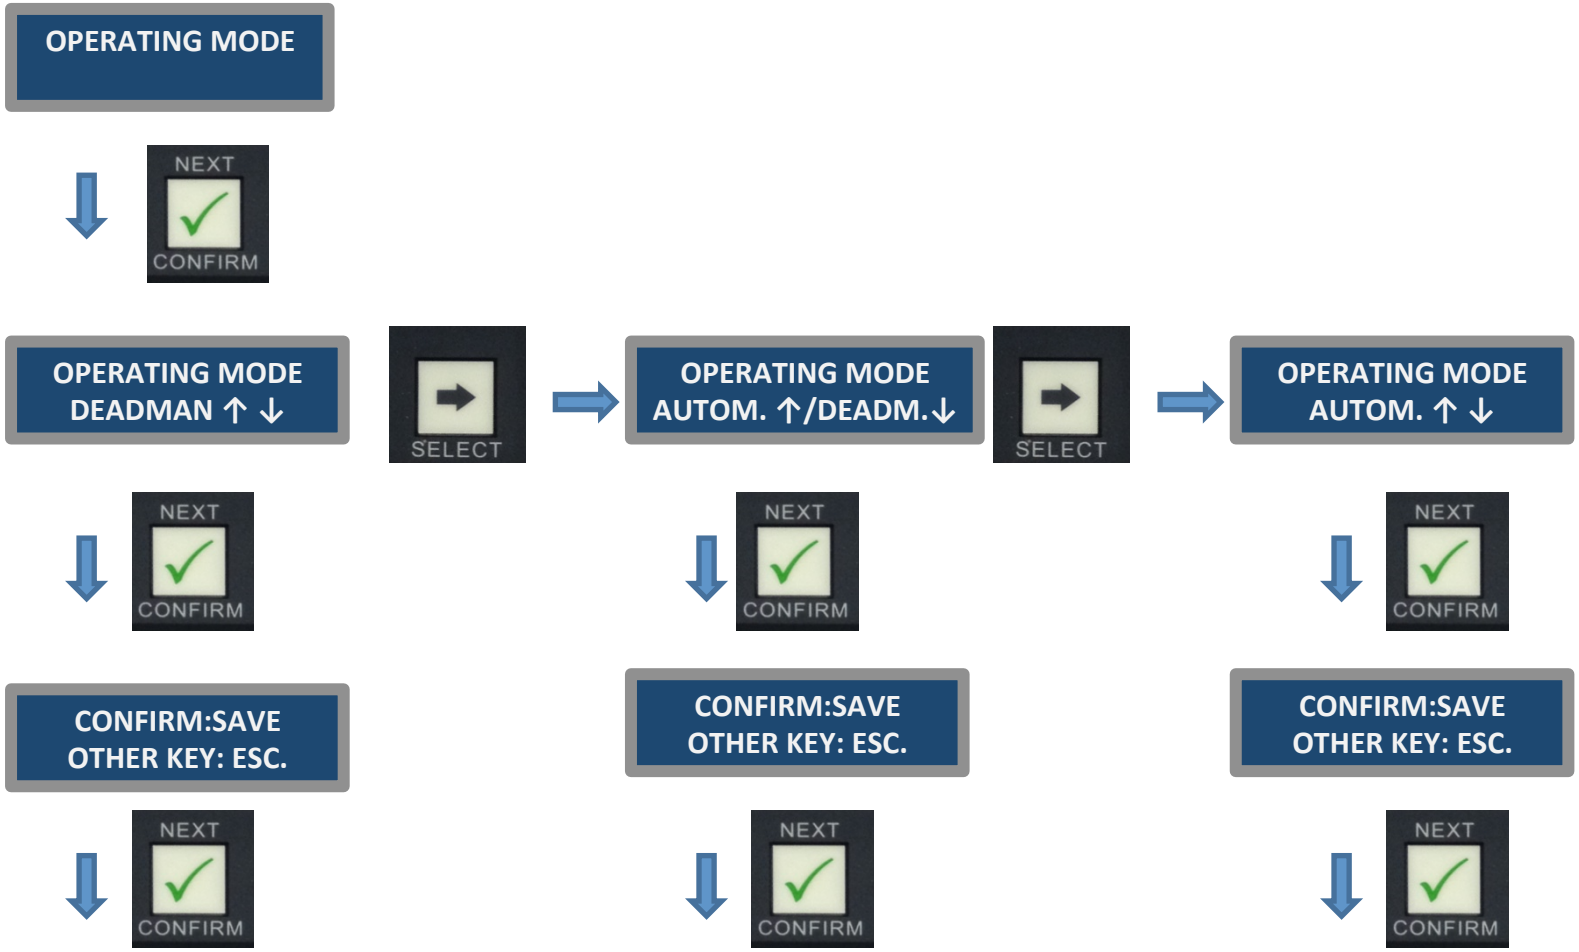

MENU CODE ENTRY= CHANGE ENTRY CODE

IF DESIRED CODE IS 26541 THEN:

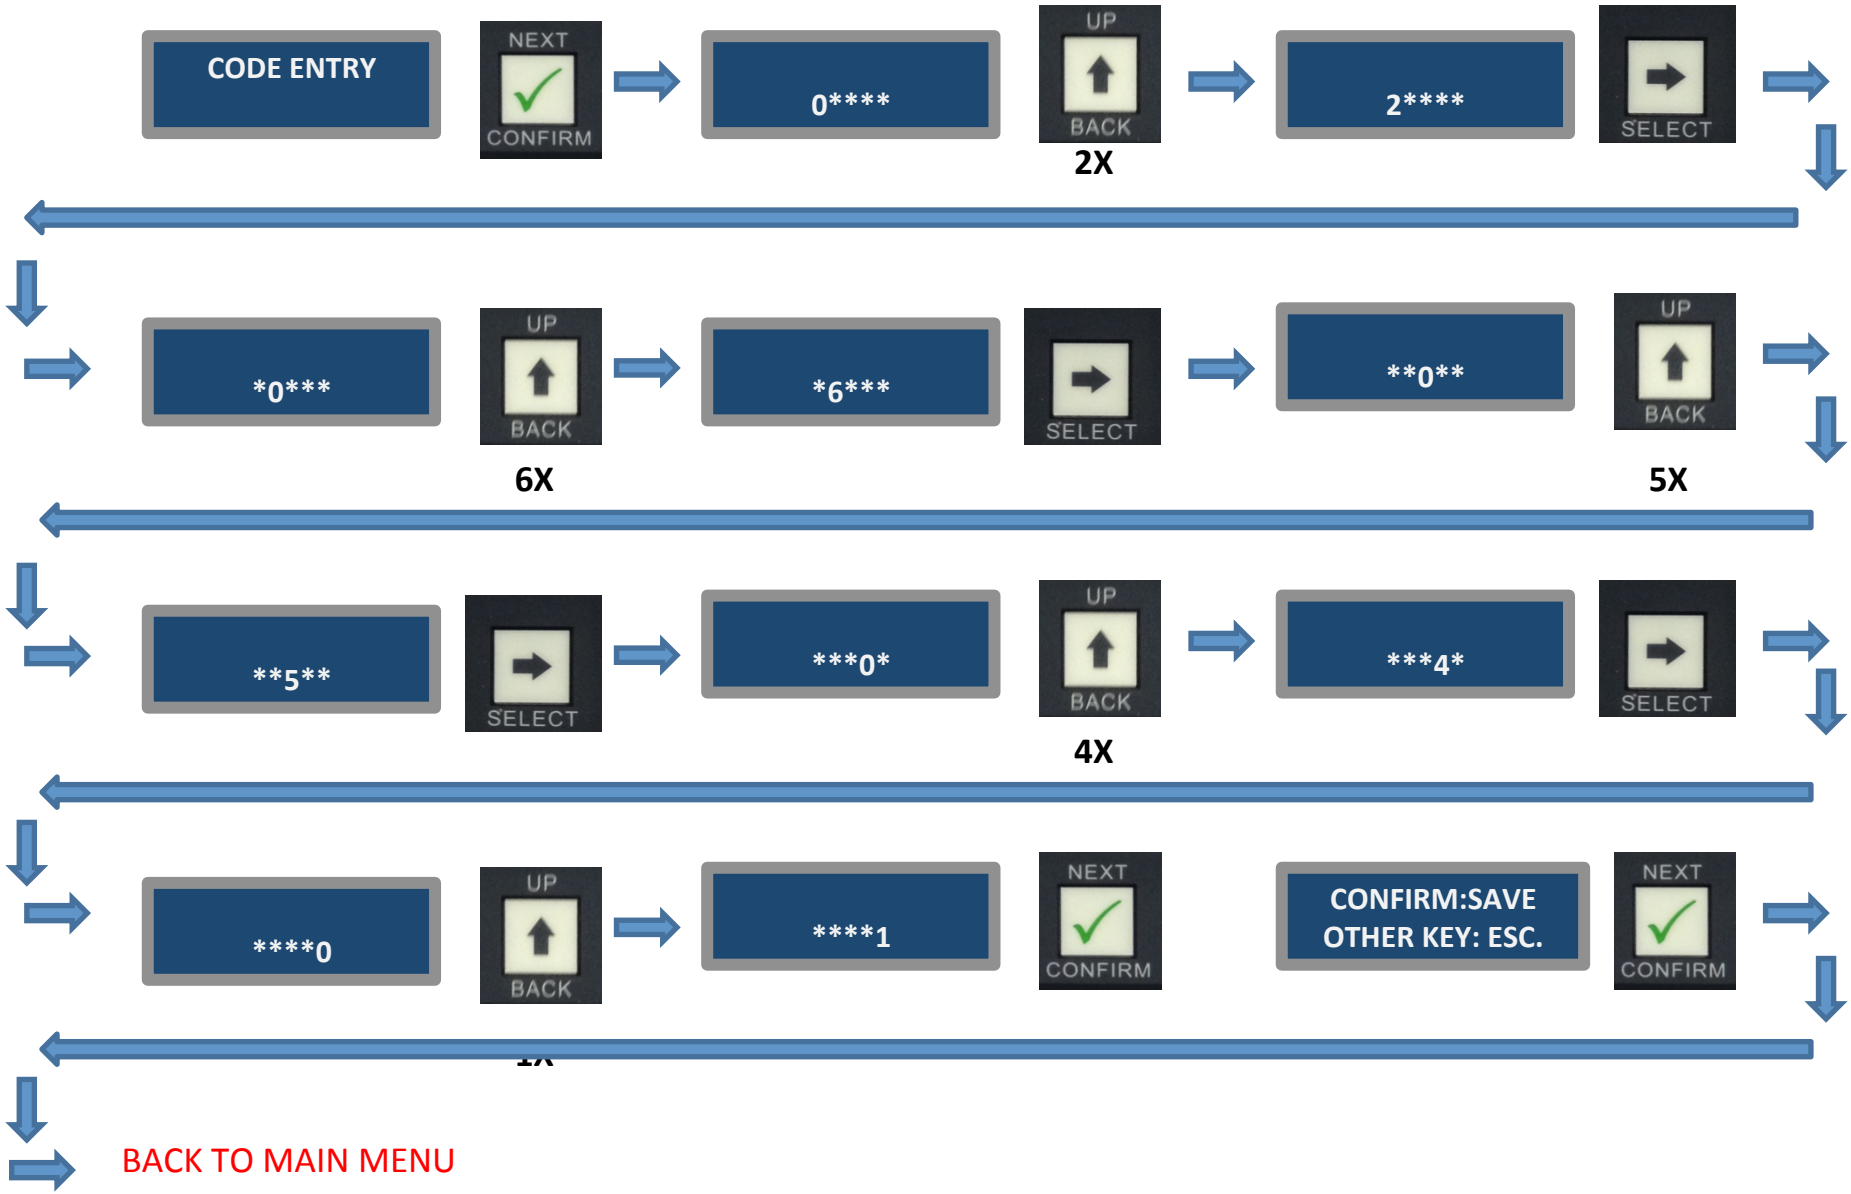


BACK TO MAIN MENU


MENU MOTOR SETUP: CHANGE ENCODER DIRECTION

MESSAGE:

BLOCKED OUT OF RANGE → GOTO MENU ADJUST ENDPOSITIONS → FOLLOW ROUTINE →  → DOOR OPENS?? → NO? > GOTO MENU MOTOR SETUP MOTOR DIRECTION

YES?

YES?> CHECK ENCODER COUNTING →  → END POSITION TOP 1805 → END POSITION TOP 3105 → NUMBERS COUNT UP? → NO? > GOTO MENU MOTOR SETUP ENCODER DIRECTION

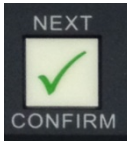
MOTOR SETUP → 


→ MOTOR SETUP MOTOR DIRECTION → 

→ MOTOR SETUP ENCODER DIR.



→ ENCODER DIRECTIO CLOCKW. DECR. → 

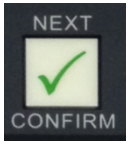
→ ENCODER DIRECTIO CLOCKW. INCR. → 

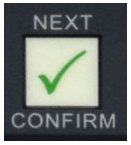CONFIRM:SAVE OTHER KEY: ESC. → 

→ MOTOR SETUP ENCODER DIRECTIO → 

→ BACK TO MAIN MENU


MENU SPECIAL SETUP: SETUP AUTOMATIC CLOSING

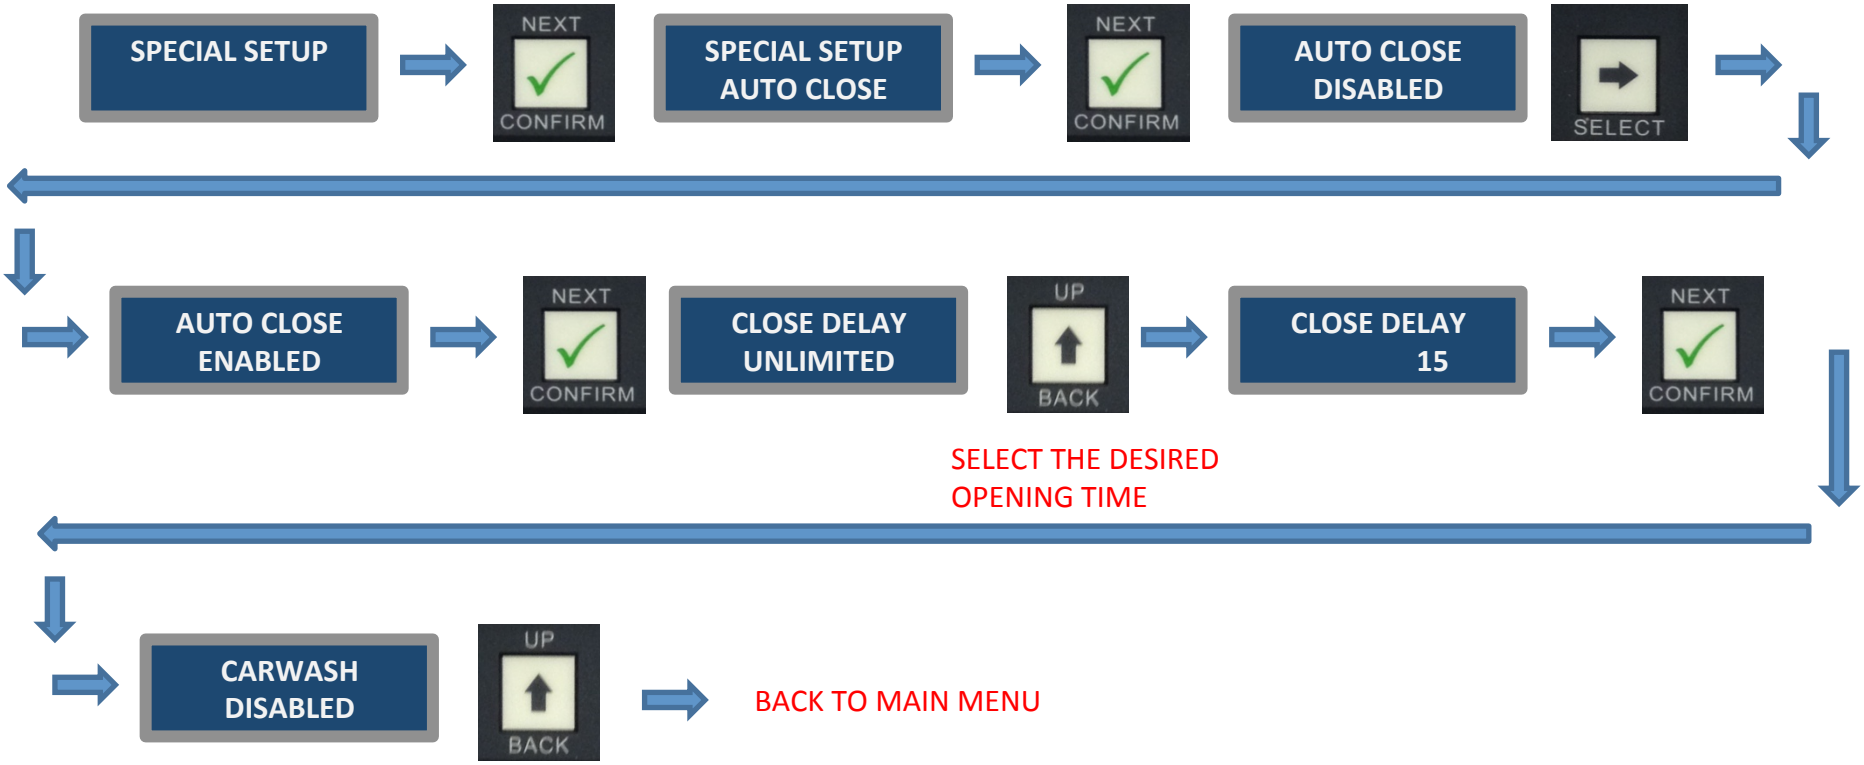


MENU SPECIAL SETTINGS: SET-UP HALF OPEN

SPECIAL SETUP → NEXT / CONFIRM → SPECIAL SETUP AUTO CLOSE → SELECT → SPECIAL SETUP AUTO OPEN → SELECT


SPECIAL SETUP PARTIAL OPEN → NEXT / CONFIRM → PARTIAL OPEN DISABLED → SELECT → PARTIAL OPEN ENSABLED → NEXT / CONFIRM

PARTIAL OPEN 1704 →  → OPEN DOOR TO DESIRED HEIGHT → PARTIAL OPEN 3457 → NEXT / CONFIRM

CONFIRM:SAVE OTHER KEY: ESC. → NEXT / CONFIRM → SPECIAL SETUP PARTIAL OPEN → UP / BACK → BACK TO MAIN MENU


USING ½ OPEN:  2X

DOOR OPENS 1/2


 1X

DOOR OPENS FULL

MENU SERVICE / MAIN MENU ITEMS

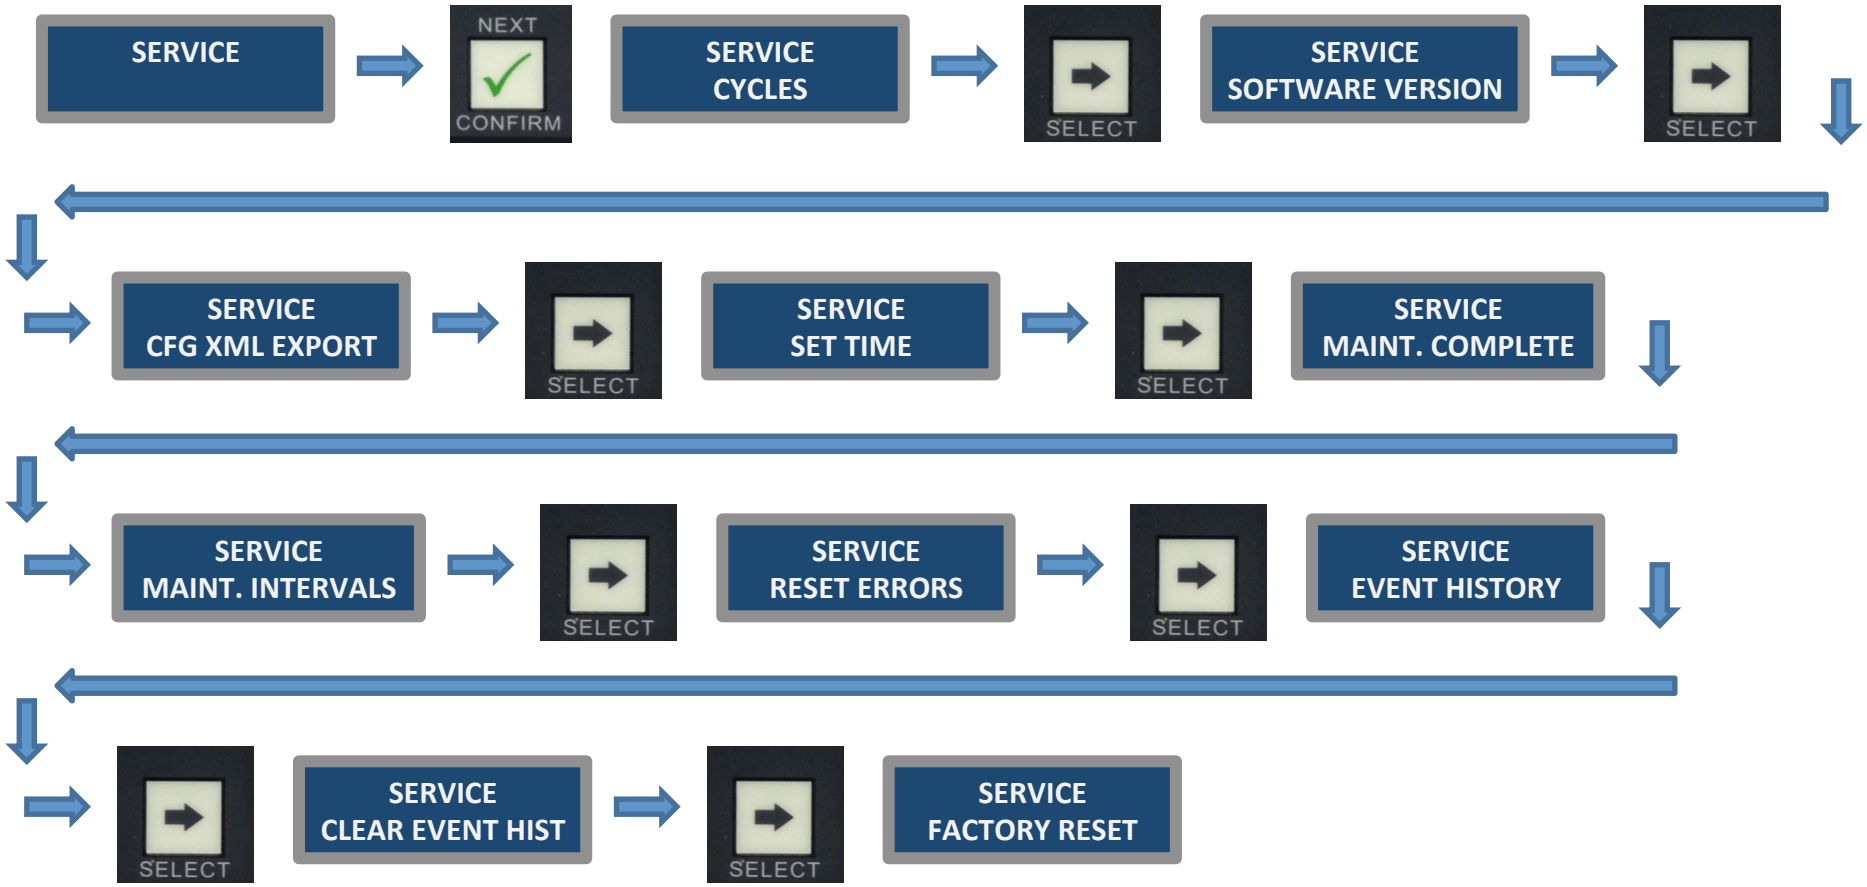


SERVICE SUB MENU CYCLES/DAYS

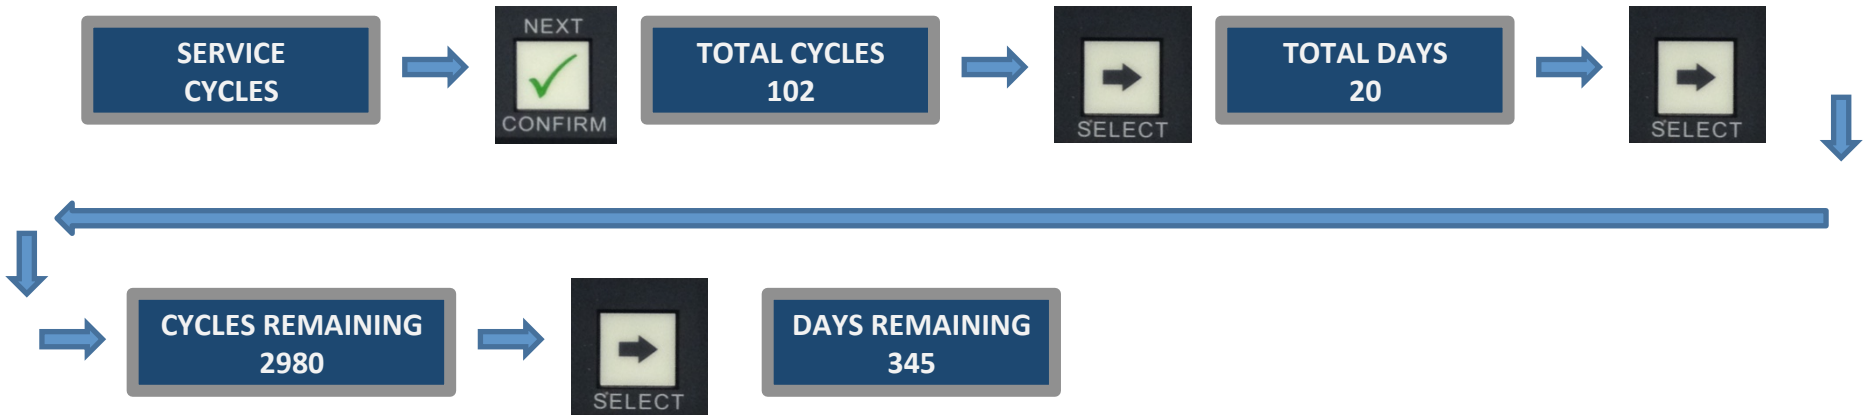

SERVICE SUB MENU SOFTWARE VERSION




SERVICE SUB MENU SET TIME

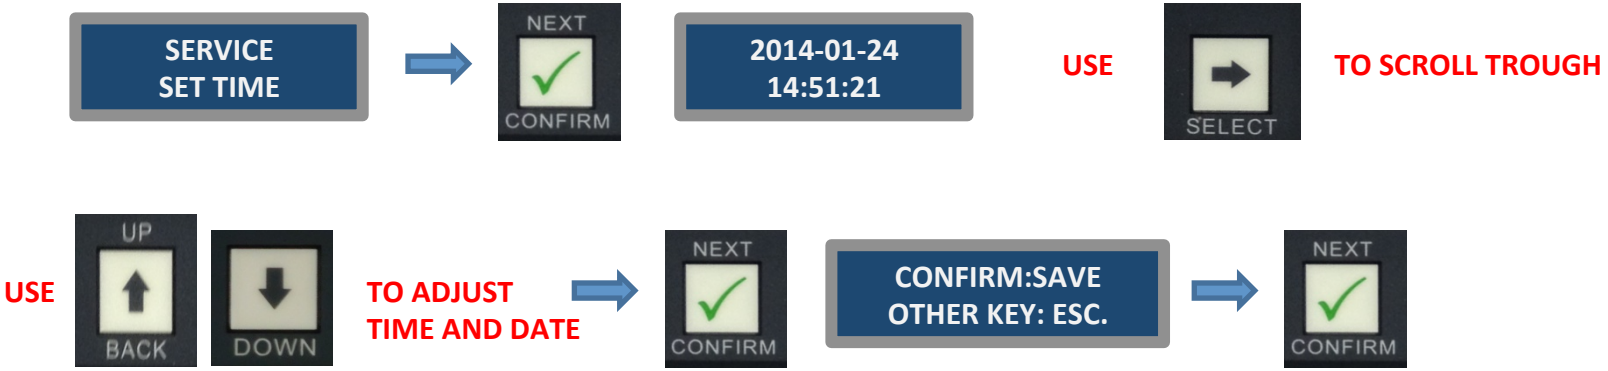


MANUAL CONNECTING POWER SUPPLY FORCE668LM SLIDE BOLT



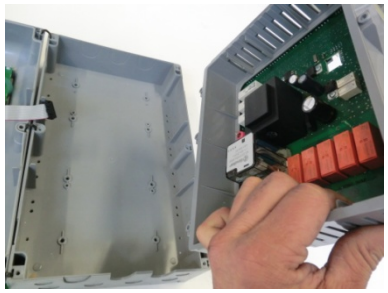





Unscrew 4 torxscrews in de ForceIQ control box and put the control board upside down

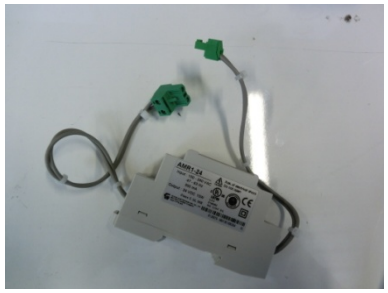

take the power supply out of the box

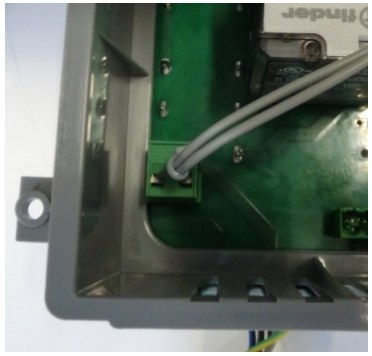


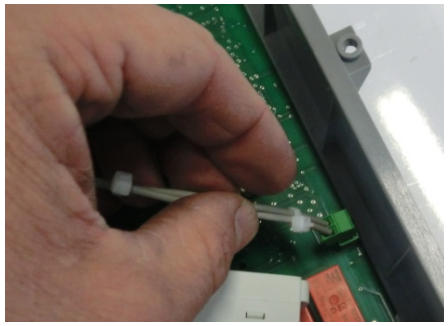

Plug the power supply connectors onto the main board (will only fit one way)




Snap the power supply onto the plastic rail of the circuitboard housing

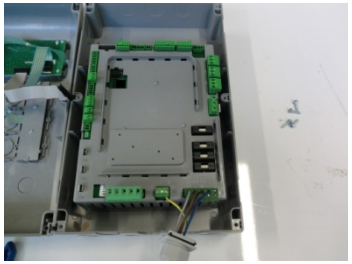

Replace the control box housing in the main control box and tighten the 4 torx screws

Connecting LM668 to Force IQ control box. If lock works the wrong way round then swap KL14 and KL15

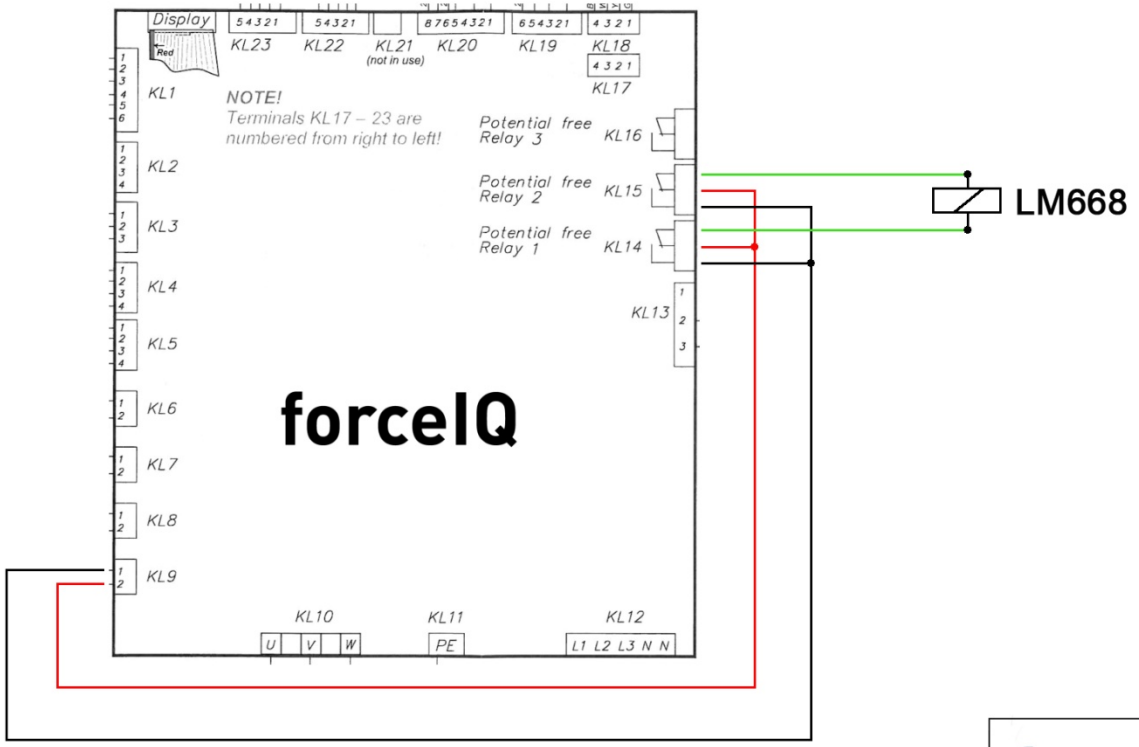


force


Wiring diagram

LM668

www.flexiforce.nl

PROGRAM LOCK 668LM IN FORCE IQ

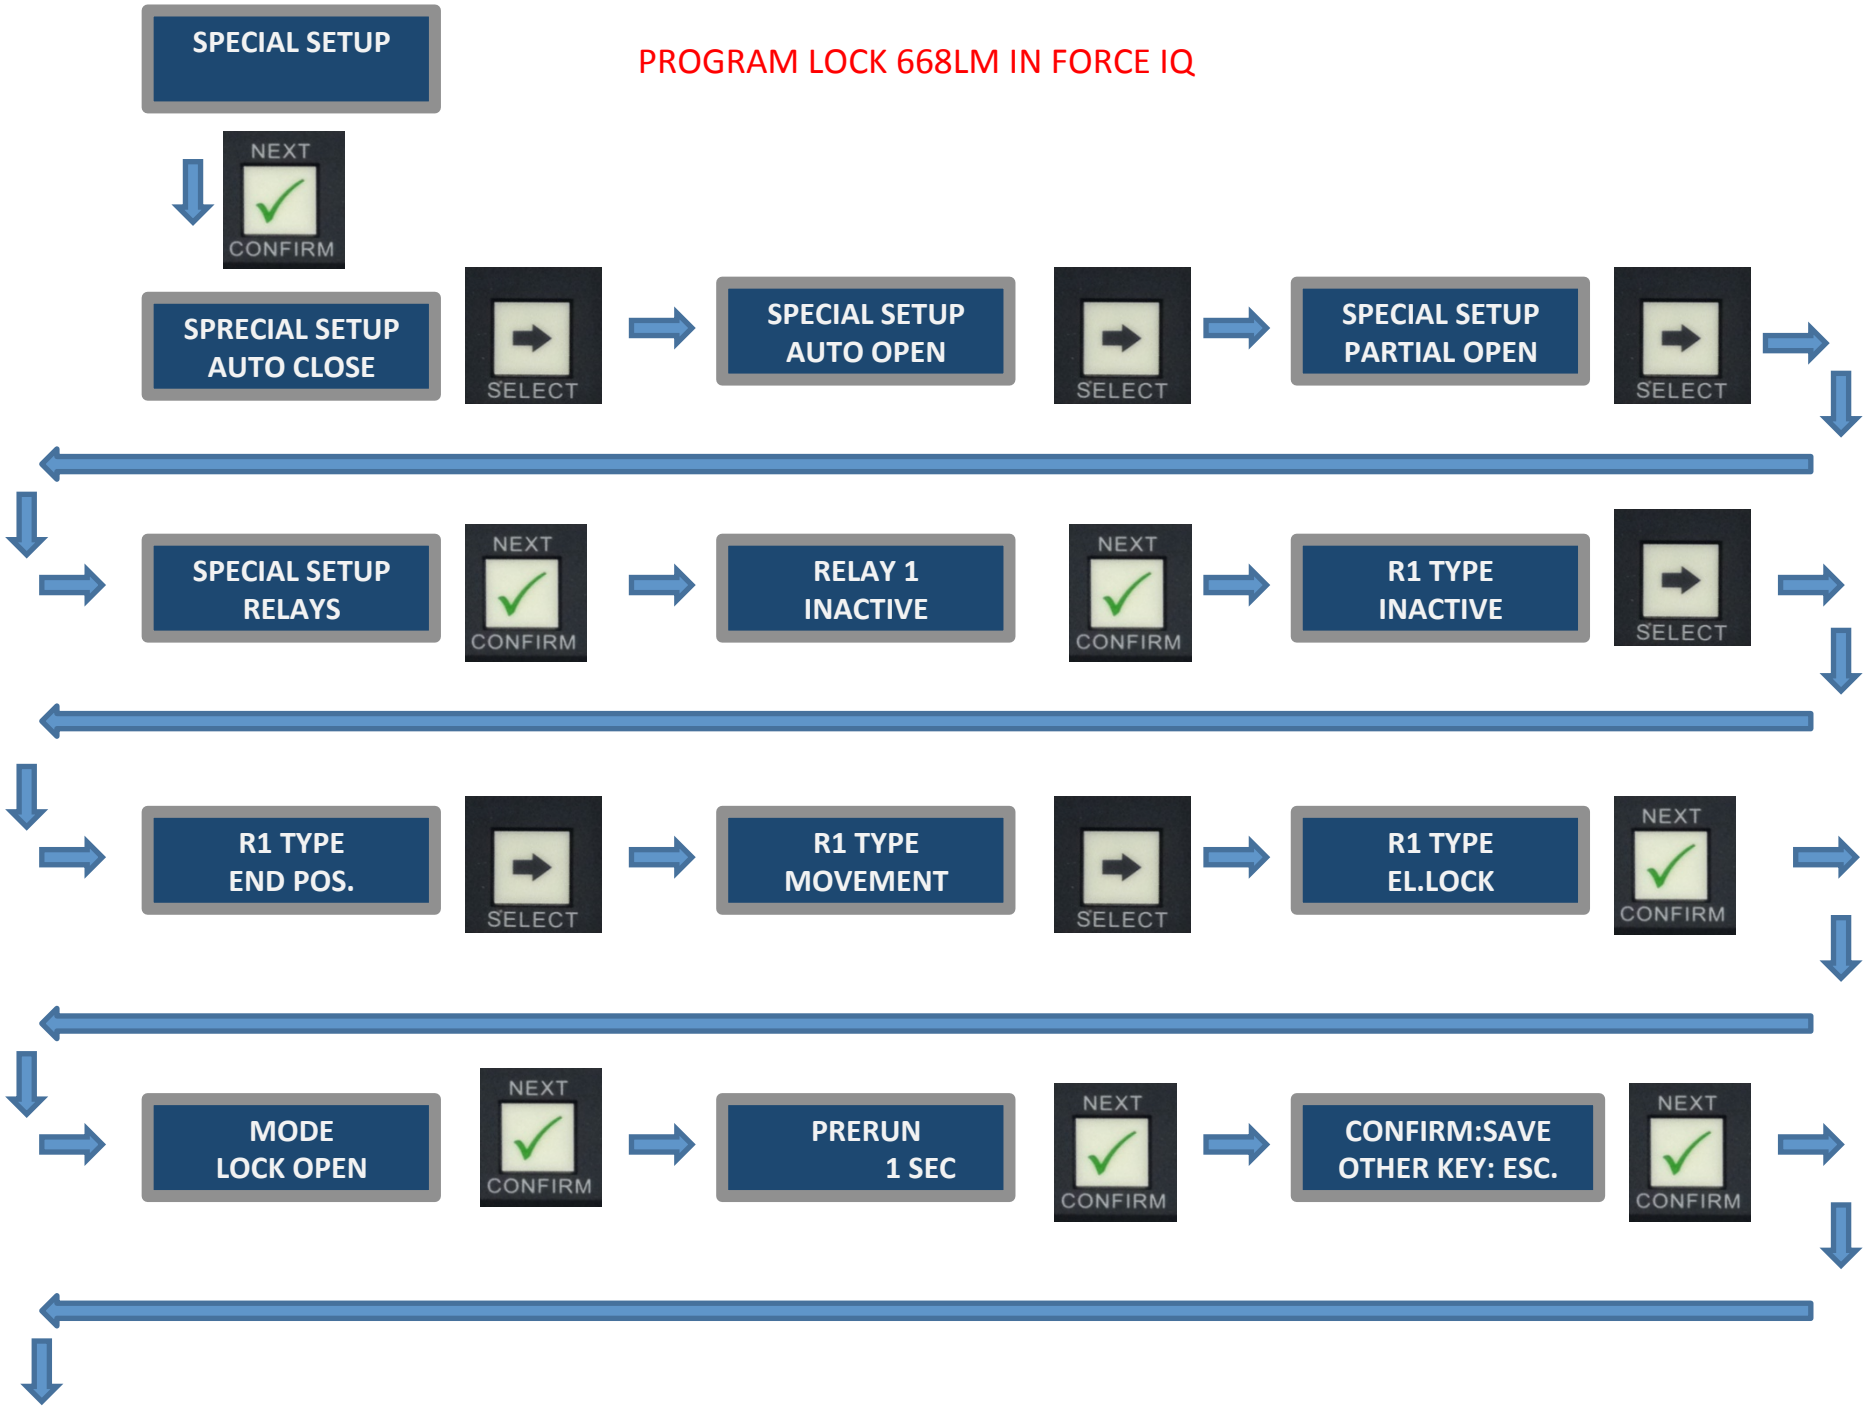

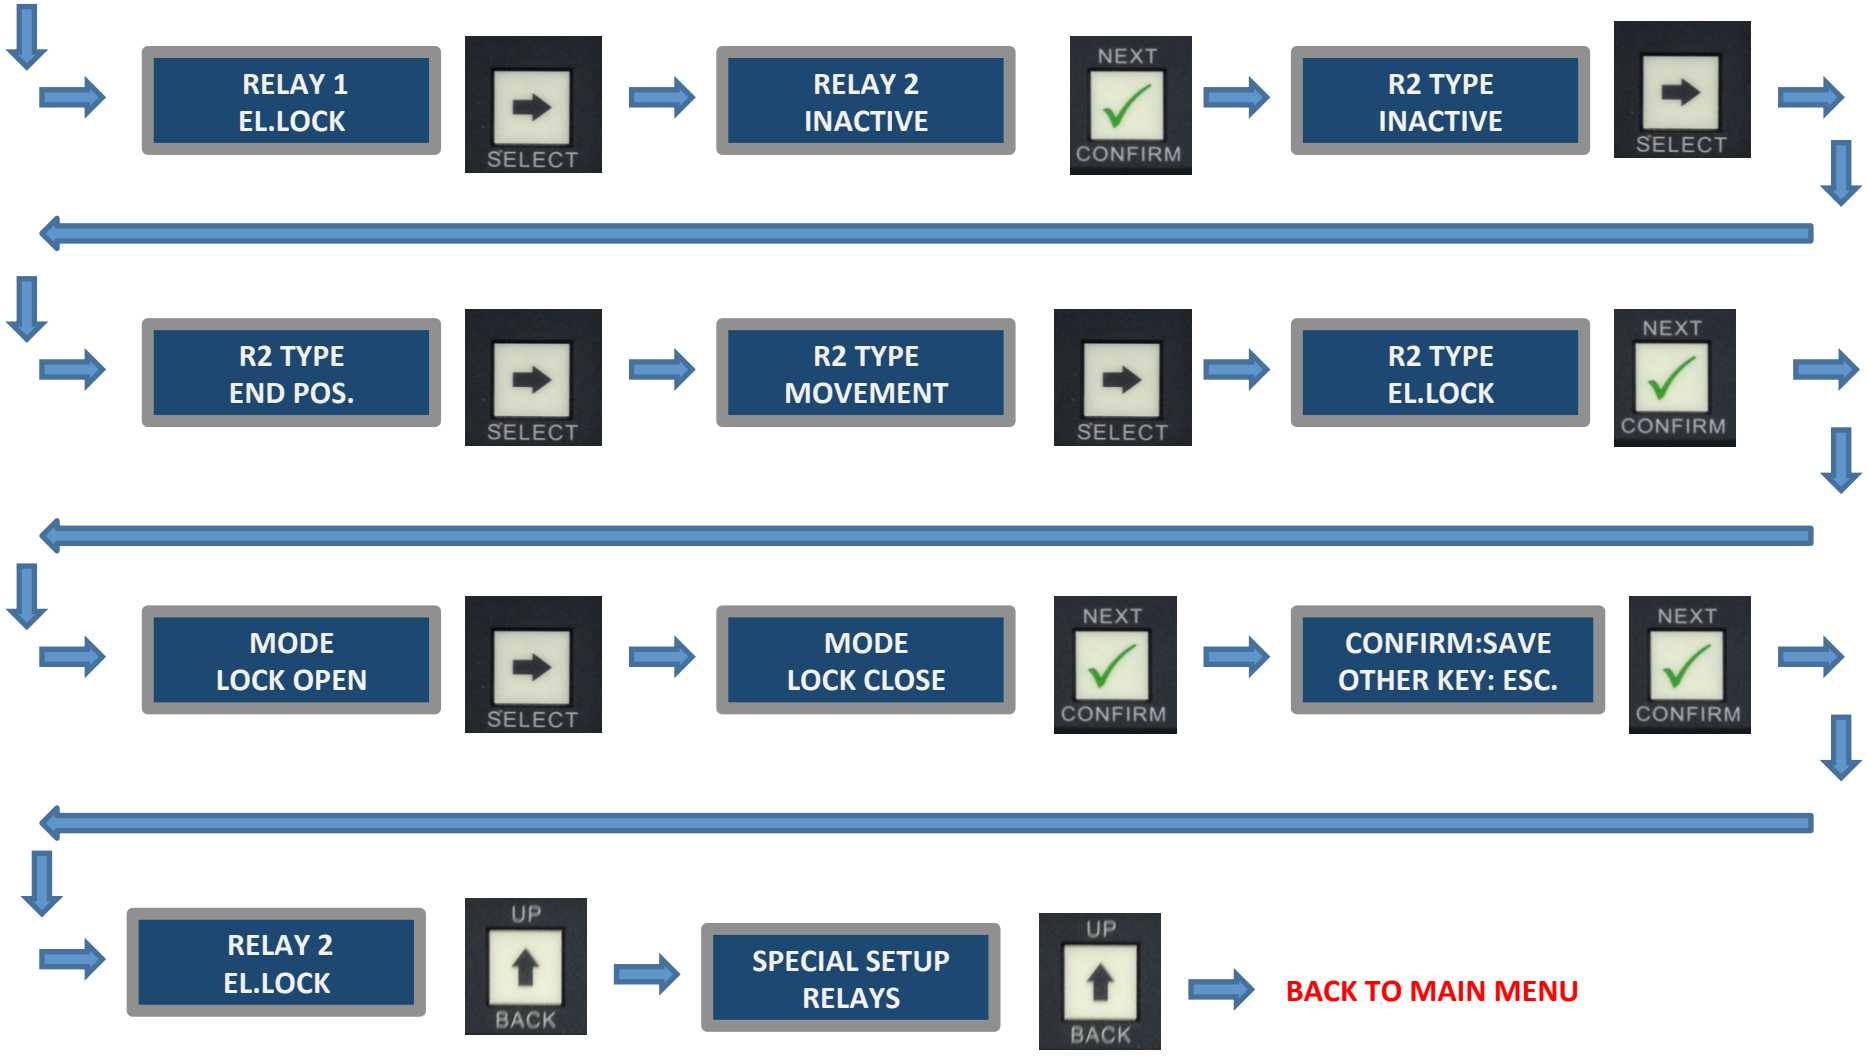
RELAY 1
EL.LOCK
SELECT
RELAY 2
INACTIVE
NEXT
CONFIRM
R2 TYPE
INACTIVE
SELECT
R2 TYPE
END POS.
SELECT
R2 TYPE
MOVEMENT
SELECT
R2 TYPE
EL.LOCK
NEXT
CONFIRM
MODE
LOCK OPEN
SELECT
MODE
LOCK CLOSE
NEXT
CONFIRM
CONFIRM:SAVE
OTHER KEY: ESC.
NEXT
CONFIRM
RELAY 2
EL.LOCK
UP
BACK
SPECIAL SETUP
RELAYS
UP
BACK
BACK TO MAIN MENU

MESSAGE:

BLOCKED MOTOR SAFETY

1 CHECK MANUAL RELEASE

2 CHECK MOTOR TEMPERATURE

3 CHECK (IF CONNECTED) SPRING BREAK DEVICE SWITCHES

4 CHECK CABLE CONNECTIONS ON MOTOR AND IN CONTROLBOX

MESSAGE:

BLOCKED DOOR SAFETY

IF CONNECTED CHECK:

1 SLACK CABLES SWITCHES

2 PASS DOOR SWITCH

3 SLIDE BOLT SWITCH

4 EMERGENCY SWITCH

5 SPIRAL CABLE

6 ALL CONNECTIONS

IF NO OPTIONS CONNECTED CHECK IF TERMINAL KL7 IS BRIDGED

MESSAGE:

BLOCKED
OUT OF RANGE

APPEARS WHEN TRYING TO USE WHEN MOTOR OR ENCODER DIRECTION IS FAULTY

FOR MOTOR DIRECTION GOTO PAGE 9
FOR ENCODER DIRECTION GOTO PAGE 15

MESSAGE:

AUTOM UP/DOWN
OSE1 TRIGGERED

AUTOM UP/DOWN
8K2 TRIGGERED

AUTOM UP/DOWN
4 WIRE PHOT. TRIG.

AUTOM UP/DOWN
AIR SWITCH TRIG.

APPEARS WHEN MENTIONED SAFETY DEVICE IS TRIGGERED

DISAPPEARS WHEN SAFETY DEVICE IS RESTORED

MESSAGE:

AUTOMUP/DEADM OSE1 DEFECT

AUTOMUP/DEADM 8K2 DEFECT

AUTOMUP/DEADM 4 WIRE PHOT. DEF.

AUTOMUP/DEADM AIR SW. DEFECT



APPEARS WHEN MENTIONED SAFETY DEVICE IS TRIGGERED LONG TERM OR SELF TEST HAS FAILED

DISAPPEARS WHEN SAFETY DEVICE IS RESTORED/REPAIRED