
ASSA ABLOY

Albany RR300 Retail

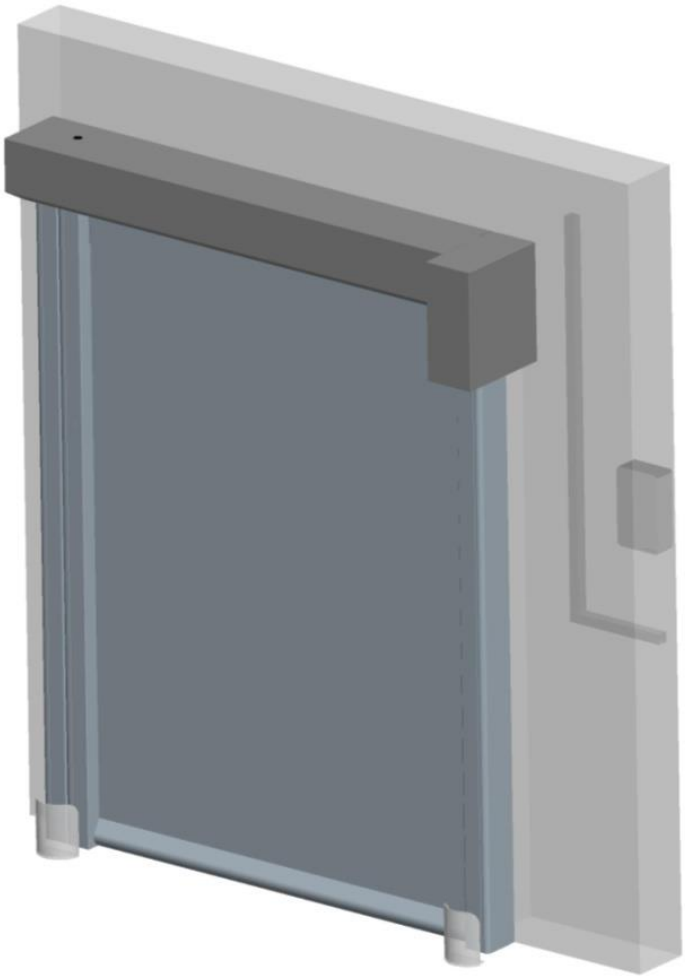

6410R0286

© 2014 ASSA ABLOY Entrance Systems AB.

All rights to the door and the related operating instructions are protected. Legal action will be taken in case of imitation or copying of the door system.

These operating instructions may not be reprinted or otherwise reproduced without the written consent of ASSA ABLOY Entrance Systems AB.

The general terms and conditions of ASSA ABLOY Entrance Systems AB are applicable.

ASSA ABLOY Entrance Systems reserves the right to make technical changes.

These operating instructions are an integral part of the door. The original version of the operating instructions is in German.

Manufacturer

ASSA ABLOY Entrance Systems AB

Lodjursgatan 10

SE-261 44 Landskrona

Sweden

Internet: www.albanydoors.com

Email: verkauf.de.albany@assaabloy.com

ASSA ABLOY

Contents

1 Introduction 5
1.1 Applicable documents 5
1.2 Declaration of conformity 5
1.3 Amendments and validity 5
1.4 Document storage 5
1.5 Target group 5
1.6 Conventions 5
1.6.1 Warnings 5
1.6.2 Operation concept 6
2 Safety 7
2.1 General safety advice 7
2.2 Personal protection 7
2.3 Duty of care by the operator 7
2.4 Intended use 8
2.5 Optional safety devices 8
2.5.1 Optional electric safety devices 8
2.5.2 Additional safety systems 8
2.6 Residual risks 8
3 Door Product Description 9
3.1 Function and installation of the door 9
3.2 Door components 10
3.3 Control unit 11
3.4 Drive 11
3.5 Identification plate (example) 11
3.6 Technical Data 12
4 Operation 13
4.1 Safety 13
4.2 Operation 13
4.3 Malfunction 13
4.3.1 Mechanical malfunctions 14
4.3.2 Electrical faults 14
5 Installation 15
5.1 Inspecting the delivery 15
5.2 Fitting preparations 15
5.3 Mechanical Installation 16
5.4 Electrical Installation 23
5.4.1 Electrical installation for control System MCS 23
5.4.2 Electrical installation for control System FUS 24
5.5 Dismantling 26

6 Life Cycle 27
6.1 Installation 27
6.2 Maintenance and Cleaning 27
6.2.1 Safety instructions 27
6.2.2 Inspection plan 27
6.2.3 Cleaning and care 28
6.3 Decommissioning 28
6.4 Storage and transport 29
6.4.1 Transport 29
6.4.2 Storage 29
6.5 Disposal 29
7 Appendix 30
7.1 Technical Data Albany RR300 Retail 30
7.2 Principle drawing 31
7.3 Fixing plan 32
7.4 Inspection plan 33
7.5 Inspection results 34
7.6 Manufacturer's certifications 35
7.6.1 Declaration of conformity 35
7.6.2 Declaration of performance 36

1 Introduction

These operating instructions apply to the use of the doors with associated control units: Albany RR300 Retail. They are part of the product and describe the intended and safe use throughout the whole product life cycle.

1.1 Applicable documents

The operating instructions are only valid in combination with the operating instructions for the control unit (only MCS-FC). Both of these documents are supplied with the product.

1.2 Declaration of conformity

The declaration of conformity document is part of this document.

Modifications that affect the technical data specified in the operating instructions or intended use, i.e. modifications that materially alter the machine, invalidate the manufacturer's declaration of conformity.

1.3 Amendments and validity

The information contained in these instructions constitutes the technical specifications applicable at time of publication. Significant changes will be incorporated in a new edition of the operating instructions. The document and version number of these instructions can be found in the footer.

1.4 Document storage

Keep these operating instructions near the door.

1.5 Target group

These operating instructions are addressed to trained, qualified and authorised personnel. All setup configurations, and in particular repairs and maintenance, may only be performed by employees of the manufacturer or other trained specialists.

1.6 Conventions

This section explains the conventions used in these instructions for safety information and operations.

1.6.1 Warnings

Warning notices give advice of existing danger for life and health of persons as well as for machine, material or environment.

The advice assembled directly at the control box and the door must be noticed and kept in readable condition at all times.

Warning notices in this document are formatted as follows:

If the danger is an electrical hazard, the appropriate pictogram is used:

SIGNAL WORD



Danger!

Consequences

⇨ Precautions

SIGNAL WORD



Danger!

Consequences

⇨ Precautions

The following warning levels are used:

SIGNAL WORD	***Hazard level***	***Consequences of non-observance***
DANGER	Immediate grave danger	Death or serious physical injury
WARNING	Potential immediate grave danger	Death or serious physical injury
CAUTION	Potential hazardous situation	Minor physical injuries, material damage

This symbol leads to information explaining the various door operations.



Important information

1.6.2 Operation concept

Aim of the operation

Step

→ Result of the step (optional)

Step ...

Result of the step (optional)

2 Safety

2.1 General safety advice

These operating instructions contain important information for commissioning, operating, transporting, storing and maintaining the door safely and properly.

- Please read the operating manual carefully and keep it at a safe place for further use.
- Take particular note of the information in this section. Also note the specific safety information included in the other sections.
- Use the door only for the intended purpose. Upon transfer of this door to third parties this user manual must also be transferred to this party.

2.2 Personal protection

- No special personal protection equipment is required for using the door. Furthermore, the regulations of the plant or facility where the door is used also apply.
- Upon failure of the electrical drive the door leaf will be moved upwards by use of the counterweight.
- Do not put your hands on the side columns of the door or in the area of the top roll during operation.
- Untidiness may cause accidents. Keep the immediate area of the door tidy.
- Go upright with normal walking speed.
- Do not climb up the door.
- When performing any type of work on the door, set the main switch (power switch) to “Off” or “0” or disconnect the CEE plug, and secure the switch or plug against accidental re-activation or reconnection.
- Stop using the door immediately in the event of mechanical or electrical damage, especially if the power cable or control cables are damaged.
- The door must only be operated on defined voltage or net frequency.
- Use only equipment or additional features which are authorized by the manufacturer of the door.

2.3 Duty of care by the operator

The door has been designed and manufactured under consideration of a risk analysis according careful selection of valid norms and further technical specifications. The system meets status of technique.

But this safety standard can only be reached in practice if all necessary measures and precautions are observed. It is the duty of the door operator to plan the respective measures and check it’s performance.

Observe the following instructions on safe operation of the door:

- That installation, initial operation, inspection, maintenance, repair work and dismantling is made only by manufacturer personnel or manufacturer trained/qualified personnel.

- That only sufficiently trained/ qualified and authorized personnel operates the door system,
- Use the machine only for its intended purpose.
- That the machine is operated only in perfectly functioning state and that the safety features are regularly checked for orderly operation,
- The operation manual (in a readable condition at all times) is kept at the site of the door system for further use if necessary,
- That the operating personnel is continuously trained with regard to working safety and operating instructions and especially the herein containing safety instructions,
- The advice assembled directly at the control box and the door must be noticed and kept in readable condition at all times.

2.4 Intended use

If not explicitly otherwise described, our doors are developed and tested for regular conditions. We would be pleased to advise you on the choice of suitable options for use under special conditions, such as persistent exposure on one side of the door to high or low temperature, positive or negative pressure, or other special ambient conditions.

The door is defined for the closing of door openings, especially on retail buildings which are planned mostly for passenger traffic.



The door is technically suitable for use in emergency escape routes by trained personnel. Additional buildings regulations requirements remain unaffected by the above.

2.5 Optional safety devices

2.5.1 Optional electric safety devices

Before each downward cycle of the door an internal “self testing” of the photocells and the control unit is made automatically. If a fault is detected, disruption of power supply for the control unit occurs immediately.

2.5.2 Additional safety systems

2.5.2.1 Sensors

Depending on the kind of door application it may be advisable to utilize additional sensors for safety reasons.

ASSA ABLOY Entrance Systems offers a big variety of further safety systems for high-speed doors including light curtain, motion sensing detectors, floor loops, etc. For individual cases we suggest consultation with an ASSA ABLOY Entrance Systems representative at the application site.

2.6 Residual risks

The door has been designed and manufactured under consideration of a risk analysis according careful selection of valid norms and further technical specifications. The system meets status of technique.

3 Door Product Description

The operation and construction of the door Albany RR300 Retail are described below. The technical data are listed in the appendix.


3.1 Function and installation of the door

Albany RR300 Retail doors are vertically opening high-speed roll-up doors for the use in retail shops. They consist of two side frames, a top roll with an electric drive unit, a door curtain and a bottom profile.

The side frames guide the bottom profile, the counterweight and the door curtain, which is rolled onto the top roll when the door opens.

During closing of the door the curtain rolls down from the top roll and is being pulled down by the self weight of the bottom profile and the door curtain.

3.2 Door components

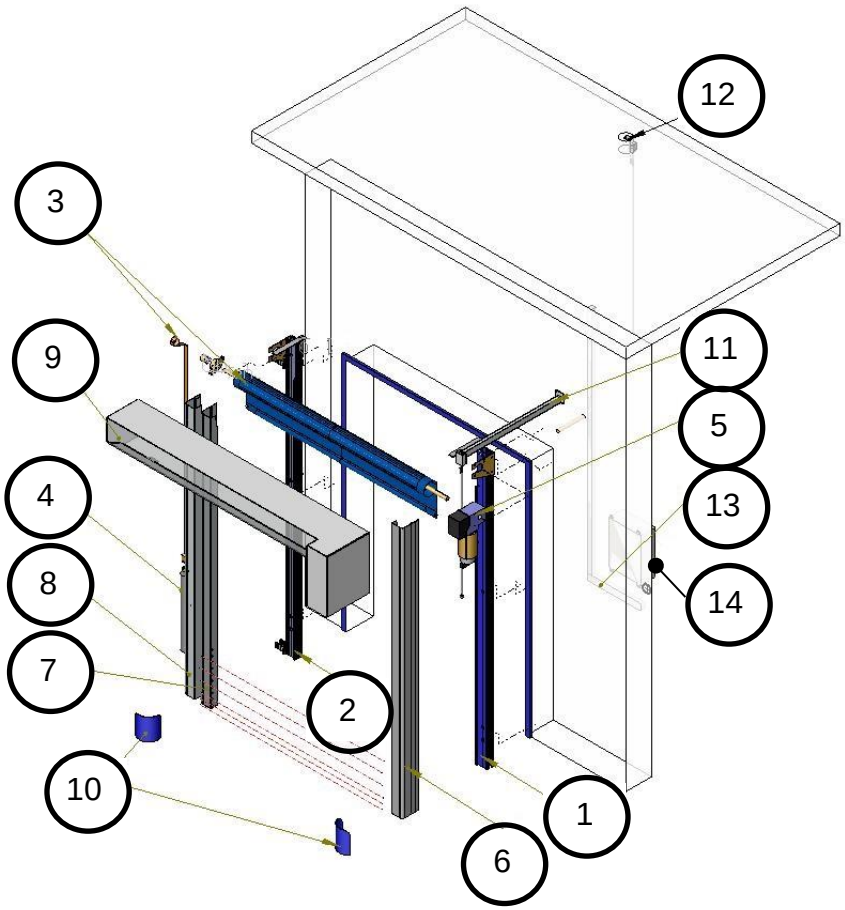

1 Right-hand side frame with head plate, light curtain receiver, top roll cover holder
2 Left-hand side frame with head plate, light curtain transmitter; top roll cover holder
Different versions of the light curtain are possible.
3 Top roll with curtain, bearing, belt holder and belt
4 Weight with securing attachments and screws
5 Motor with securing screws
6 Right-hand side frame cover
7 Left-hand side frame cover
8 Left-hand weight cover
9 Complete cover with securing screws
10 Floor pollers with dowels, optional
11 Store side with pull switch, pull cord with ball and connection cable as well as securing dowels, optional
12 Sales side pull switch with holder, pull cord with ball, connection cable and securing screws, optional
13 Cable conduit 40/40; white, with screws and dowels
14 Control box with securing screws and dowels

3.3 Control unit

The Albany RR300 Retail is being operated with a powerful frequency converter control unit, which enables soft acceleration and deceleration of the door.

DANGER

Risk of electrical shock


Operating doors with drive units or control units other than the recommended types may create a risk of electrical shock.

⇨ The door must only be operated with an original drive and control unit from the manufacturer.

3.4 Drive

The Albany RR300 Retail is being operated with an electrical drive unit. The drive unit is installed at the upper part of the door, vibration muffled and not accessible from the floor. The position of the drive unit may be selected by the customer for the right or left hand side. The temperature of the drive unit is safeguarded by a thermo element, which disrupts the power supply of the drive upon overheating.

3.5 Identification plate (example)

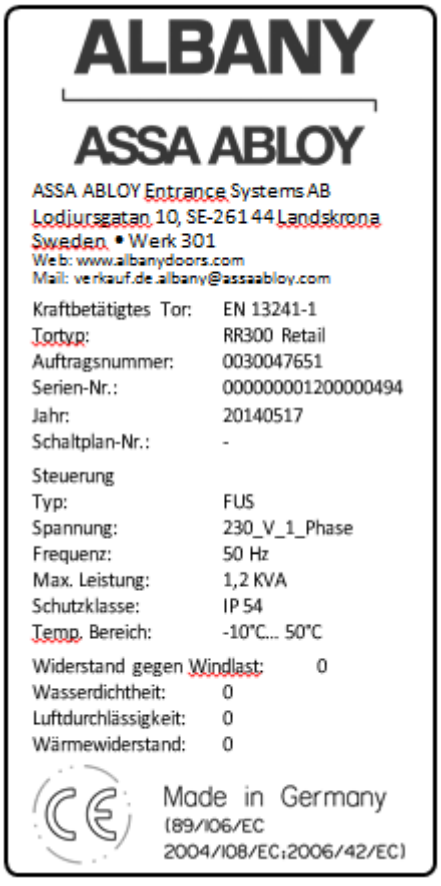



(the actual data will vary depending on the specific door)

3.6 Technical Data

The appendix contains the following technical data:

Technical Data	***Location***
Door dimensions	Principle drawing
Dimensions of the installed door	
Fitting clearances	
Fixing points	Fixing plan

See the appendix for all other technical data for the door.



ASSA ABLOY Entrance Systems reserves the right to make changes to technical information listed in this document.

4 Operation

This section describes the operation of the door, irrespective of the control unit used. See the control unit user manual for a description of the control unit concerned.

4.1 Safety

- Do not use this door for purposes it is not intended for.
- Upon damage of the door (mechanical or electrical) it must immediately be set off operation. This is especially valid on damages of the power net or control cables.
- Use only equipment or additional features which are authorized by the manufacturer of the door.
- Observe the safety instructions in Section 2 also.

4.2 Operation

The door has an electrical drive unit and can be operated using the buttons on the door control unit or by additional external actuators and safety devices.

The Open, Stop and Close buttons on the door control unit should normally be used during door setup, maintenance and repair activities.

In regular operation, the door can be controlled by external signal sources such as pull-cord switches, induction loops, radar or radio detectors or mushroom-head buttons connected to the door control unit via dry contacts.

The choice of impulse generator is part of the design and setup of the door and control system and may only be performed by trained specialists.

4.3 Malfunction

DANGER

Risk of personal injury and material damage

Improper troubleshooting can lead to damage to the product and serious personal injuries.

⇨ Troubleshooting must always be performed by suitably qualified staff.

⇨ Switch off power to the door and secure it against accidental re-activation.

⇨ Secure the main switch or CEE connector against being switched on again by locking it or by having a second person present.

⇨ Secure the action area of the door.

If the error cannot be repaired please contact the aftermarket department of the supplier or manufacturer of the door.

4.3.1 Mechanical malfunctions

Malfunction	*Possible causes*	*Necessary measures*
Door opens or closes independently	Brake at the drive defect	Exchange the brake
	Brake wrongly adjusted	Adjust the brake
Drive without any function	Power supply is off	Connect the door to the power
	Electrical connections defective	Check electrical connections
	Safety device is defective	Exchange the safety devices
curtain unwraps inclined	Door not correctly installed	Call after market
	An object was rolled up	Close the door and check for enclosed object

4.3.2 Electrical faults

Malfunction	*Possible causes*	*Necessary measures*
Door without any function	Power supply is off	Check power supply, net fuse
	Safety device damaged	Check control unit and exchange the fuse
	Main switch off	Check (main switch) switch on
	Stop-circuit interrupted	Check stop circuit. Not used stop inputs must be bridged in accordance to the electrical drawing
Door does not close	Up impulse permanently activated	Test impulse actuator
	Safety photocell interrupted / disconnected	Test safety devices
Door close only with next impulse	Toggle circuit adjusted	Check adjusted control function

5 Installation

DANGER



Risk of injury

Improper handling of the packaged door can lead to injury.

⇨ The palette must be placed on even ground.

⇨ Do not remove the pallet before the start of installation.

5.1 Inspecting the delivery

The door is mainly preassembled when delivered. The side columns are fixed together with the barrel cover, the motor cover (if ordered), fixing material and control unit onto the transport device (wooden palette).

- Check the door for damage during transport.
- Check the delivered items against the order documents to ensure that the delivery is complete.

5.2 Fitting preparations

DANGER



Risk of injury

Incorrect installation of the door can lead to injury.

Isopanel walls, chequer bricks and light partition walls must be checked for their suitability for assembly.

⇨ The door must only be installed by trained/authorized personnel.


⇨ The fitting should only be done by manufacturer personnel/subcontractor or manufacturer trained personnel.

⇨ Do not remove the straps securing the door curtain until after the drive unit has been fitted.

Complete the following preparations before installing the door:

- Check the fitting site with regard to necessary fixing points and lift up conditions. If necessary a supporting frame or other fixing possibilities must be made. The upper fixing points should be screwed onto a steel supporting frame or concrete element. Consult the installation drawing in 7.3.
- Check measures of the actual dimensions (width and height) of the door opening and compare with order papers.
- The fitting site must be secured against pedestrian and vehicle traffic.
- The plastic packing of the door must be removed before fitting.


5.3 Mechanical Installation

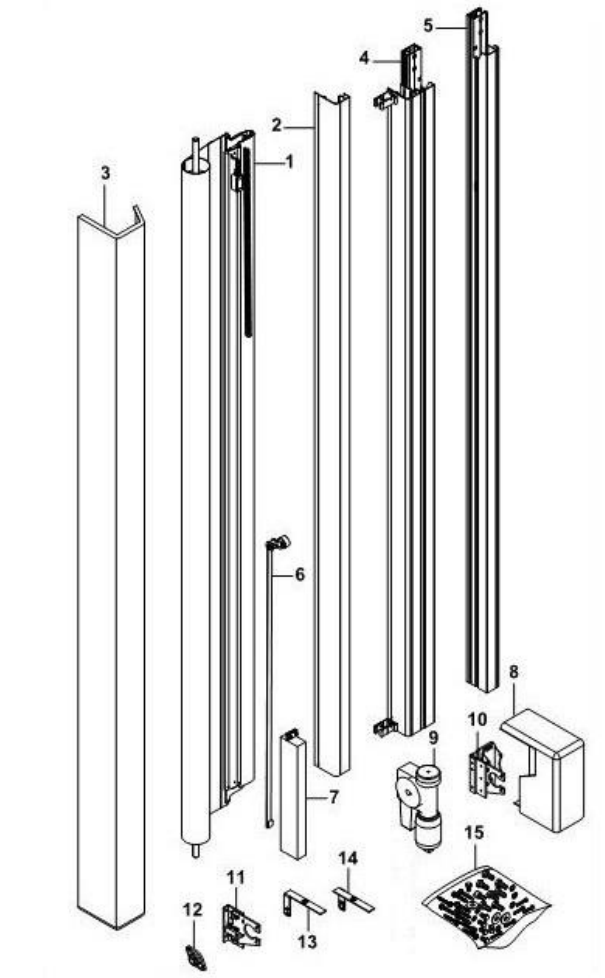


1. Top roll with door curtain
2. Counterweight cover
3. Top roll cover
4. Side frame on the bearing side with cover
5. Side frame on the drive side with cover
6. Belt with holder (pre-assembled)
7. Counterweight
8. Motor cover
9. Drive unit
10. Drive-side head plate
11. Bearing-side head plate
12. Bearing
13. Holder for top roll cover bearing-side
14. Holder for top roll cover drive-side
15. Installation material

1. Scope of delivery


Check the door for possible transport damage and check the completeness against the delivery documentation

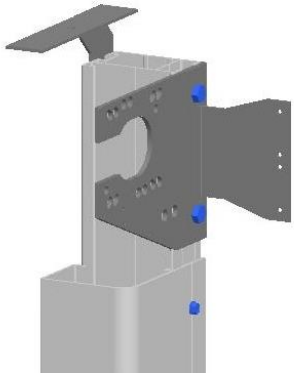


2. Metal cover (only MCS): Fix bracket for frequency converter together with head plate on drive side.

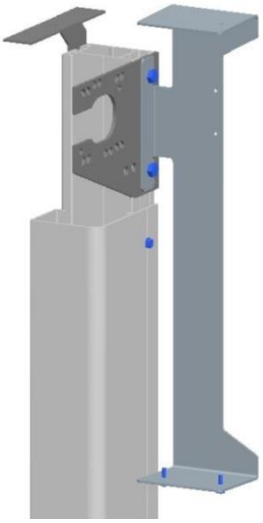

3. Plastic cover: Fix bracket for motor cover/frequency converter together with head plate on drive side.

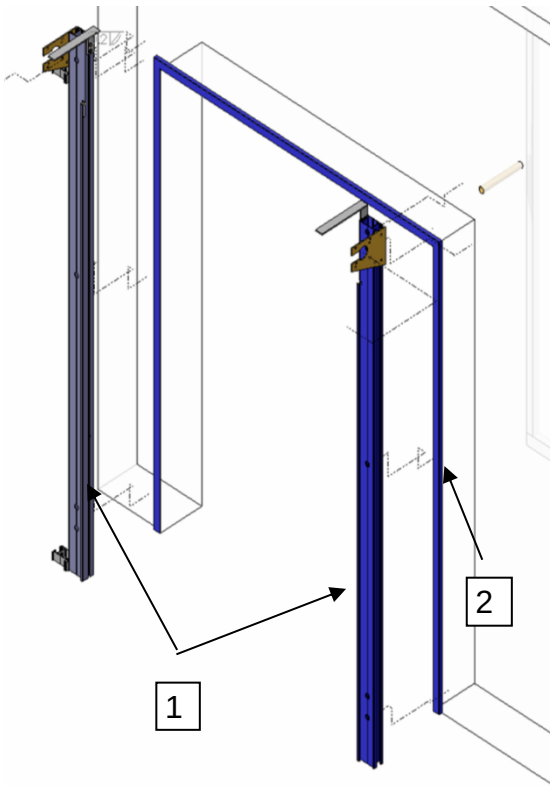


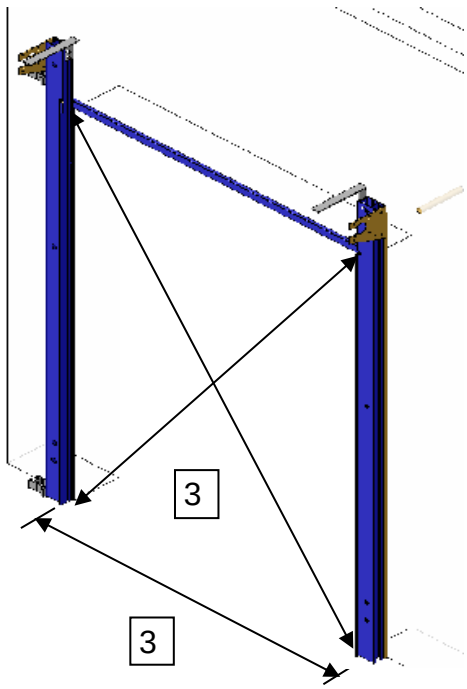


4. Align perpendicular the side frames with the help of water balance (take door frame into account). Mark holes through side frame bore holes, drill holes and fix with approved fixing material at the wall.

If necessary underlay the side frames to be perpendicular.


Control dimensions of the door.

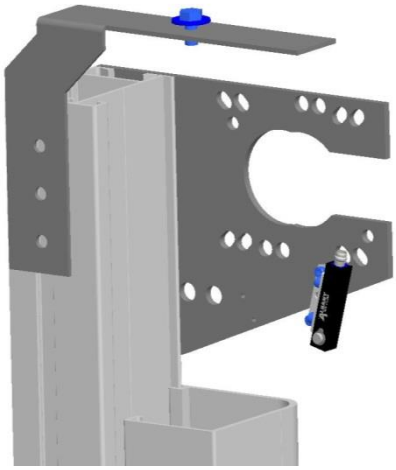


5. Option monitoring curtain: Position for photocell on non-drive side.

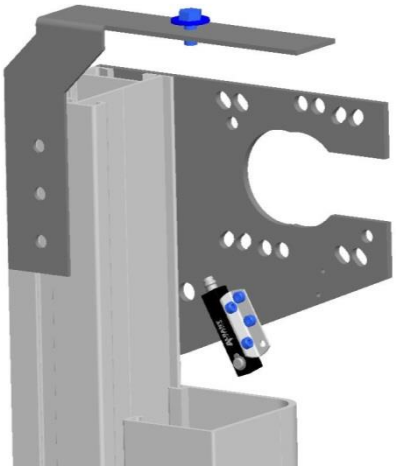

6. Option monitoring curtain: Position for photocell on drive side.

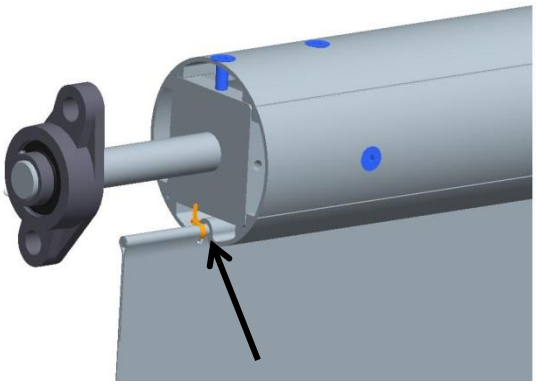


7. Slide curtain on top roll and secure with cable straps on both sides.

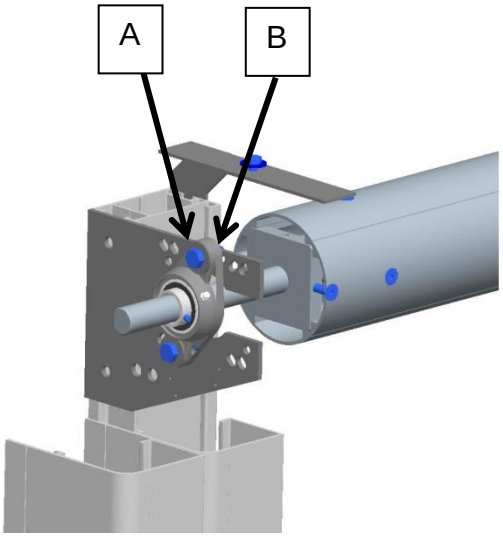


8. Place the complete top roll with door curtain into the head plates.

Position A for standard curtain and position B for reinforced curtain. Secure bearing to the top plate using two M10x30 hex head screws/nuts.

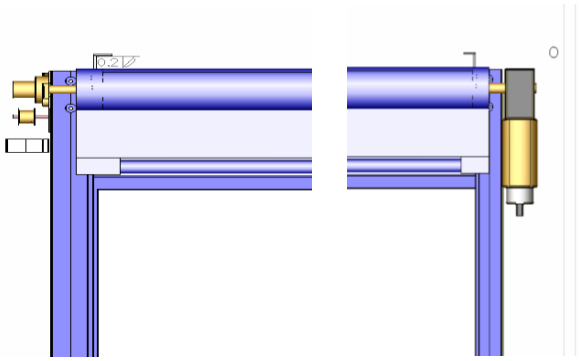


9. Move the shaft so that the sides of the curtain are evenly spaced inside the side frames.

Secure the bearing on the bearing side against movement with the set screws.

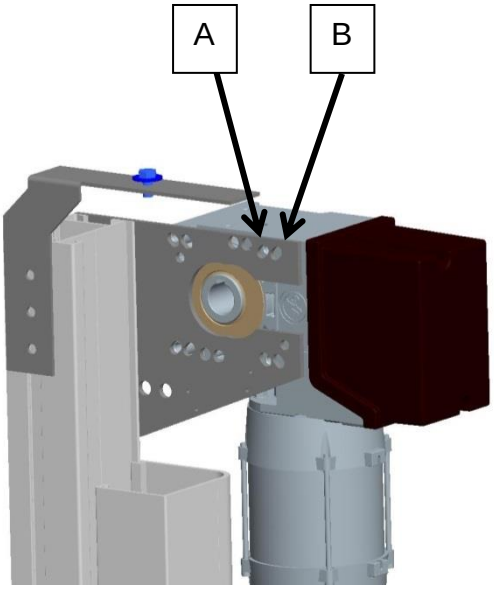

10. Now place the motor on the drive shaft. Check the plain key connection. Position A for standard curtain and position B for reinforced curtain. Secure drive unit to the top plate using four M8x20 hex head screws/ washers.

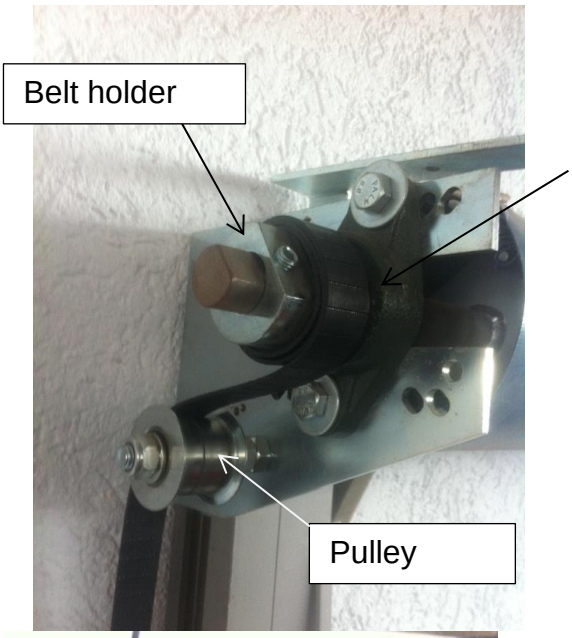







1. With the door open, unravel the counter-weight belt and allow it to slide downwards over the pulley and holder.
2. Caution: The ribbed side of the belt must be on the outside.
3. The belt has approx. 3 turns on the belt holder.
4. Thread the belt through the holding plate on the counterweight.
5. Caution: Keep the counter-weight approx. 40 mm above the floor using a support.
6. Secure the belt using the screws on the holding plate.
7. Caution: Tighten the screw connection and, if necessary adjust after a test run.
8. Remove the support from under the counter-weight so that it can hang freely.
9. Free movement test: Grasp the door curtain by the bottom profile and pull it slowly downwards until the door is almost shut. Release the door curtain. The door curtain should now roll up slowly. The speed can be regulated by the extension plate on the lower end of the weight.
10. Caution: Set the emergency opening speed to very slow. Opening time 2 - 3 seconds.
11. Cut off any excess belt length.

X= approx. 40 mm distance!


11.	**12.**

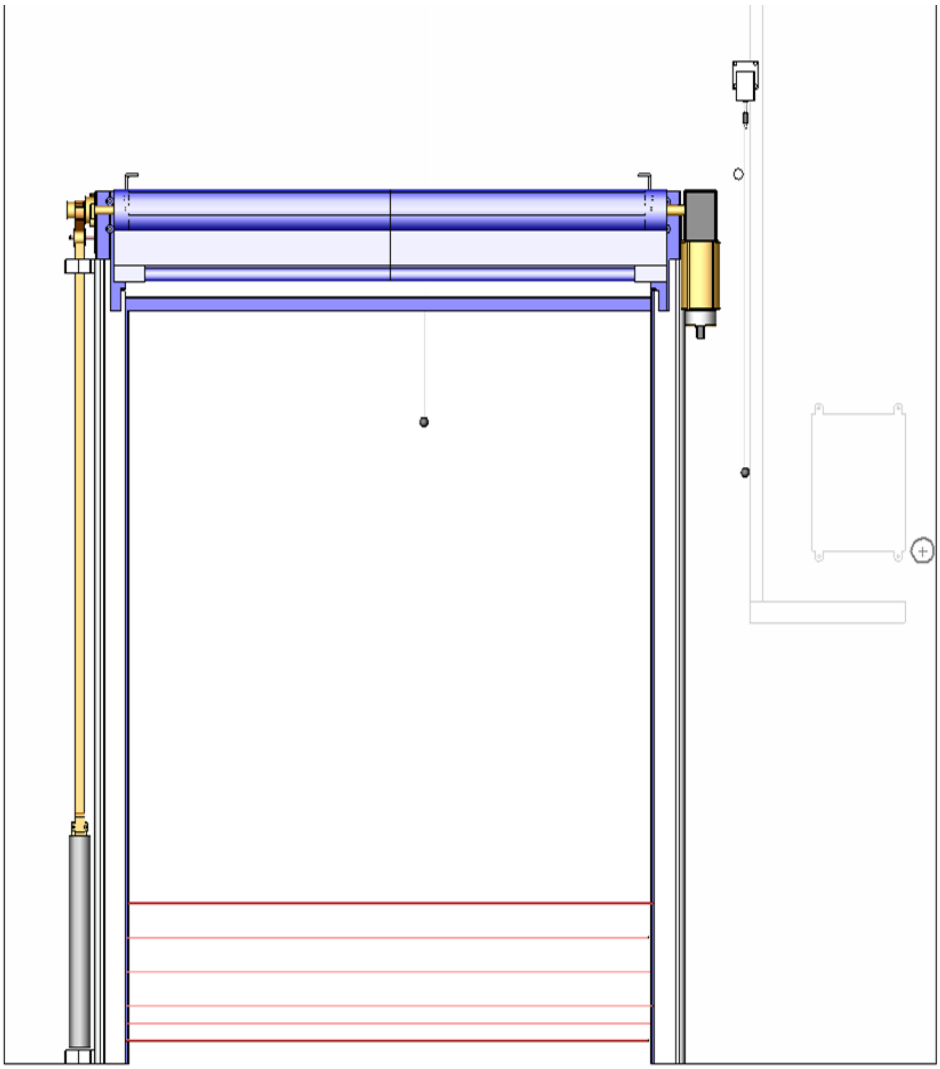

13. Position the control box at the wall. Install the optional actuators.
Connect the control box. (Different versions of the light curtain are possible.)

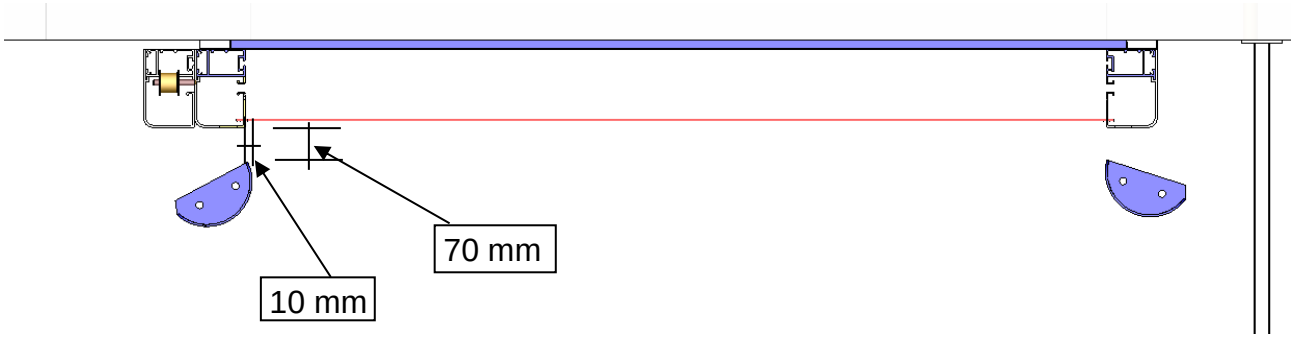


14. Installation of floor poller with anchor bolts, optional.
Attention: Reduced bolt length necessary if there is floor heating in the building.

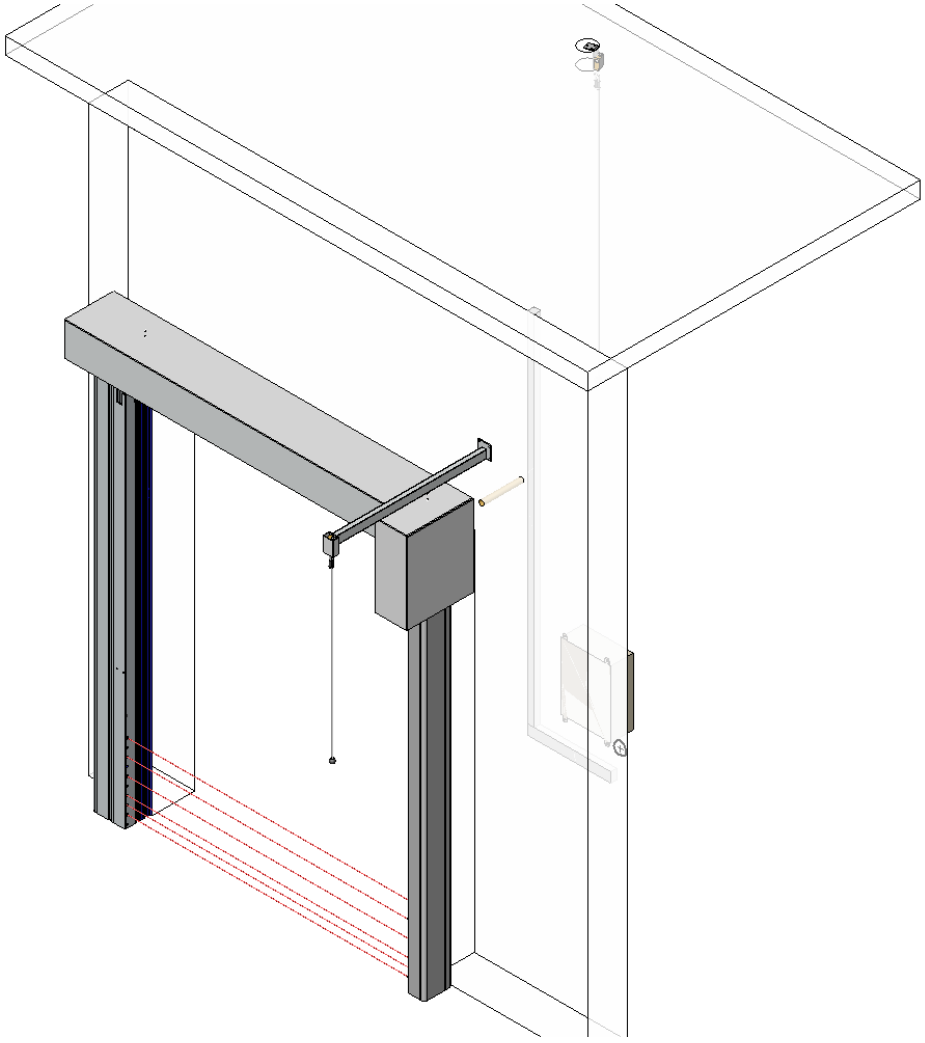


15. Screw on the drive and non drive side cover. Screw on the cover for the weight. Floor poller and pull switch are optional.


(Different versions of the light curtain are possible.)

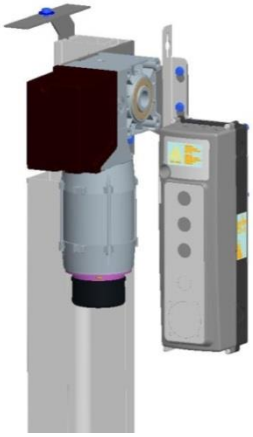


16. Metal cover: Mounting of MCS-FC with 2 hex head screws M6x16

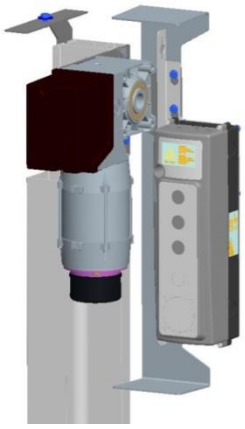

17. Plastoc cover: Mounting of MCS-FC with 2 hex head screws M6x16.

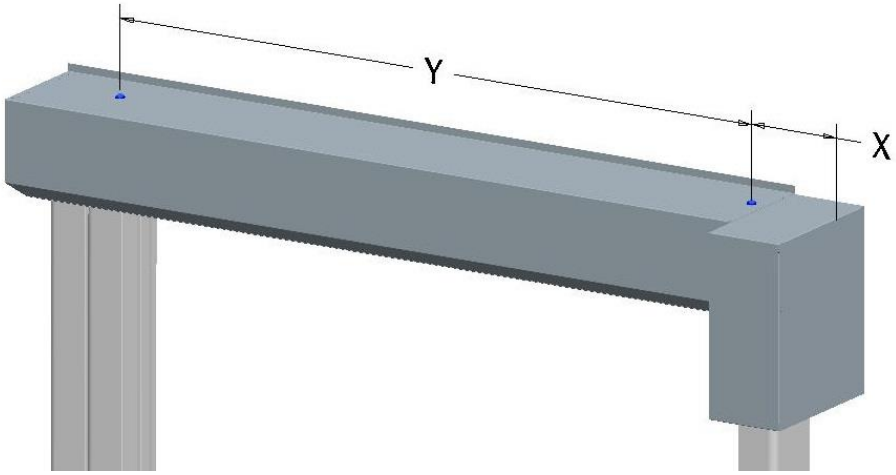


18. Sheet metal cover: Drill Ø 12 mm holes according installation. Dimension X=230 mm for small motor cover (190 mm) and X=300 mm for large motor cover (260 mm).
Measure dimensions Y and distance to the wall at the door according installation .

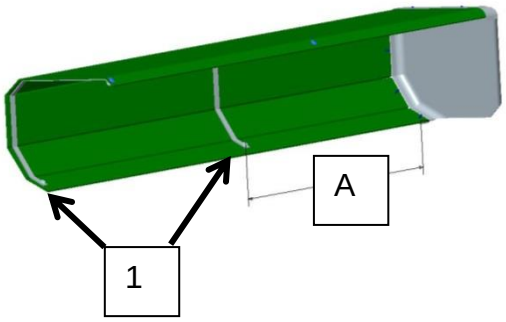




A=DW/2+100 if drive side = weight side

A=DW/2+200 if drive side ≠ weight side

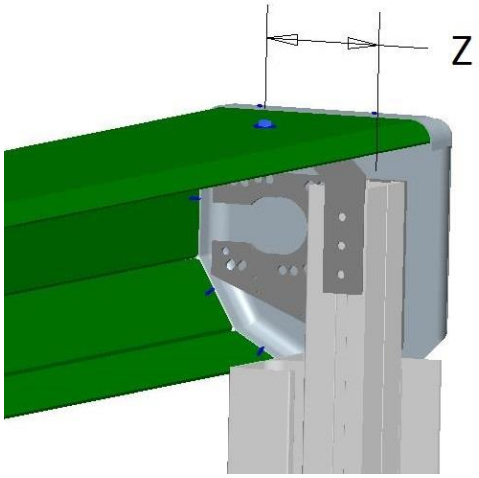

19. Plastic cover: Fix stiffener (1) with oval head screws M6x12 at cover. Fold then the cover and fix it with another two screws.
Attach the endcap on the non drive side with 5 drilling screws 3,9x19.

20. Plastic cover: Measure dimensions Z at the door.

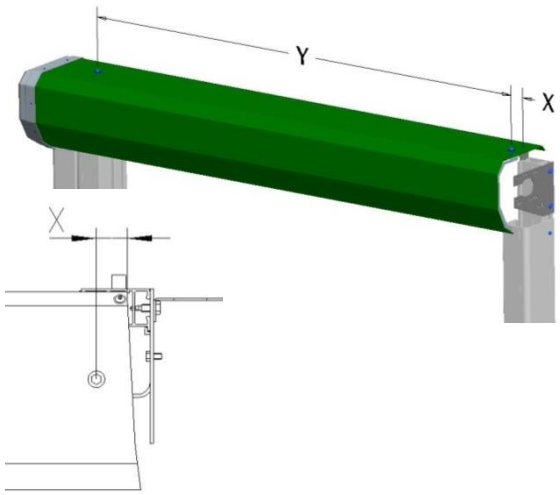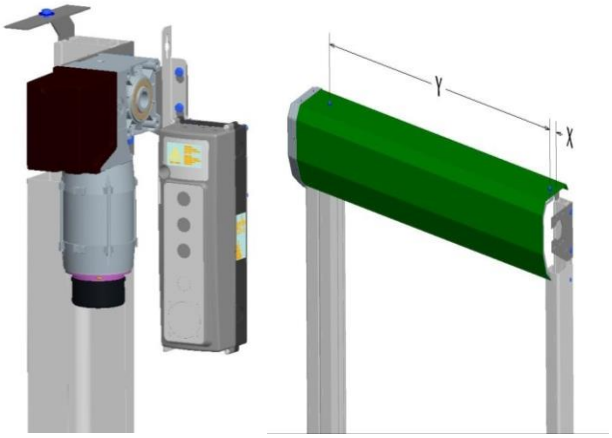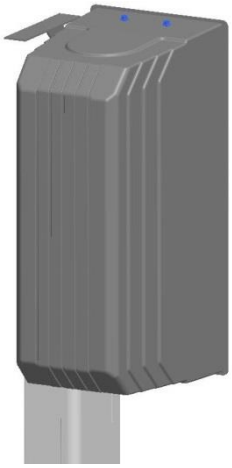	
21. Plastic cover: Drill Ø 12 mm with dimension X=43 and measure dimensions Y at the door.	**22.** Mounting of MCS-FC with 2 hex head screws M6x16; left sheet metal cover, right plastic cover
	
23. Plastic cover: Secure the motor cover to the bracket using four oval head screws M6x12.	**24.**

5.4 Electrical Installation


5.4.1 Electrical installation for control System MCS

The user manual and electrical drawing is delivered with the control system MCS. In particular, the general safety instructions in the operating instructions for the door are also applicable.


Observe the specifications of the electrical drawing and parameter list for this door.

5.4.2 Electrical installation for control System FUS

5.4.2.1 Wiring of motor cables

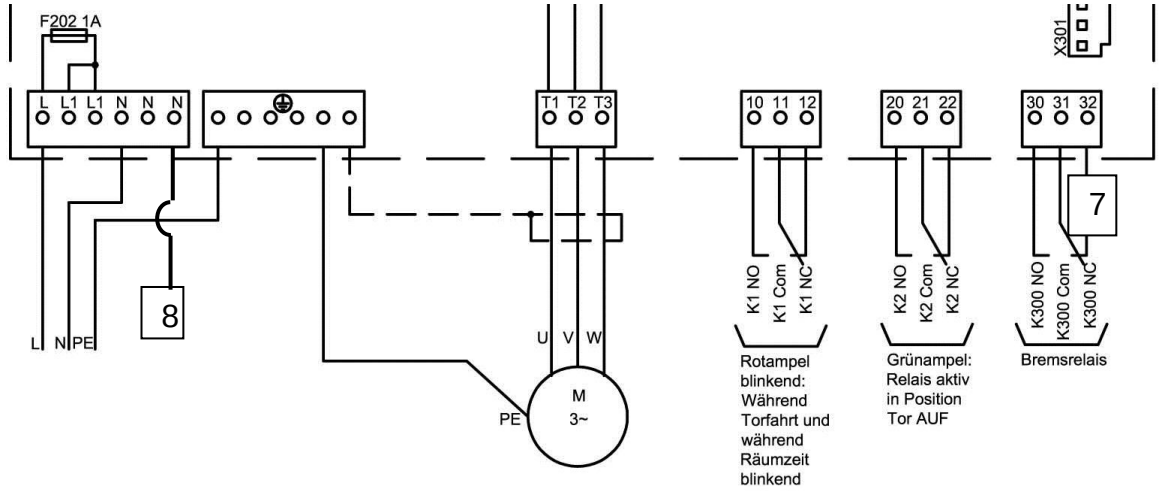

5.4.2.2 Wiring of control and actuator cables

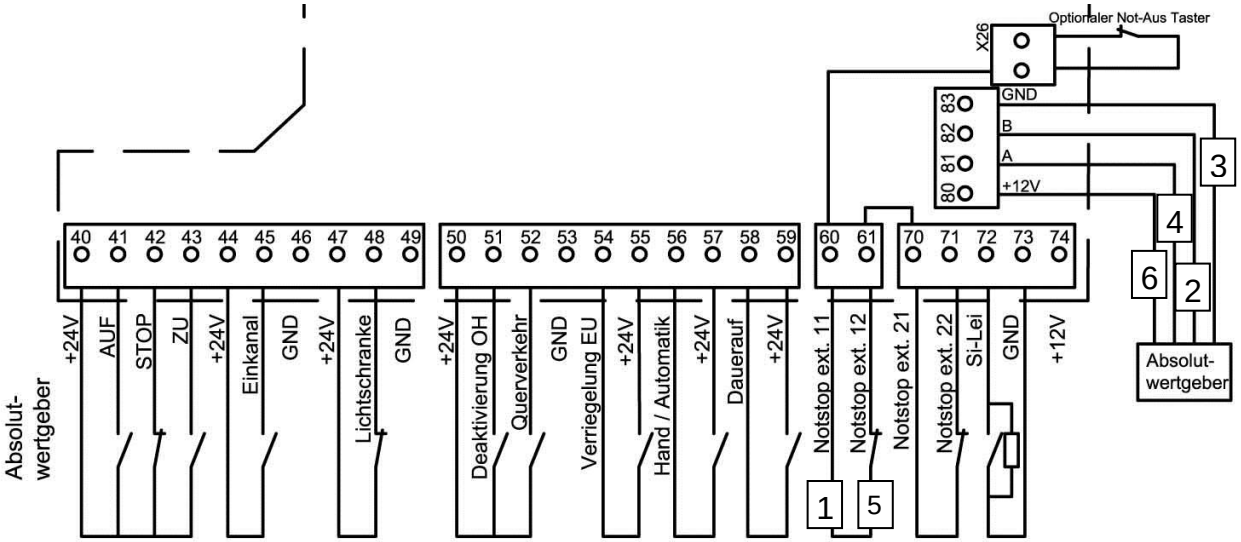

Numbers for connection of the drive unit cable set.

Connection	Light grid receiver	Light grid transmitter
47	Brown	Brown
48	Black	
49	Blue	Blue
50		White
	Pull switch, mushroom button	
40, 41	Leads 1 and 2	
	Bridges set	
1st bridge	from 70 to 71	
2nd bridge	from L to 31	
3rd bridge	From 40 to 42	

5.4.2.3 Wiring of control and actuator cables

	Works setting	Drive unit		
Parameters		GfA	Mtec	Function
P.205	-1	3	7	DES
P.100	-1	50	50	Motor frequency
P.101	-1	2.1	2.3	Motor current
P.102	-1	87	77	Cosine
P.103	100	230	230	Motor voltage
P.999	1	3	3	Release parameter
P.010	10	15	15	Time remaining open
P.130	0	0	0	Motor rotation direction
P.140	0	10	10	Boost – UP travel
P.200	0	4	7	
P.210	0	5	5	Reset end switch
P.216	2	0	0	Set ramp times manually
P.222	400	350	350	Pre-end switch, door CLOSE
P.223	60	25	25	
P.232	500	300	300	Pre-end switch, door OPEN
P.233	70	40	40	
P.310	60	95	95	Frequency UP
		If Windrips available = approx. 65!		
P.321	50	25	25	
P.350	40	40	60	Frequency CLOSE
		approx. 40 **independent** of windrips!		
P.380	100	15	15	
P.381	50	20	20	
P.460	-1	0	0	Contact strip!
P.980	0	0	0	Automatic supply active
P.221	0	0	0	Adjustment of door end position CLOSE
P.231	0	0	0	Adjustment of door end position OPEN
P.239	50	50	50	
After completing the programming of the door control, cut off the power supply briefly.				
Check motor parameters for old drive units and correct if necessary.				

5.4.2.4 Coaching and calibration of the end positions:

1. Set service to "On".
2. Press the EMERGENCY OFF switch in.
3. Select P.210 and set value to "5".
4. Pull the EMERGENCY OFF switch out.
5. "EICH" appears in the display.
6. Press the STOP button until "EIEO" appears in the display.
7. Using the "CLOSE" button, move the door curtain to the lower end position ** 20 mm above OKFF **
8. Press the STOP button until "EO" appears in the display.
9. Using the "OPEN" button, move the door curtain to the upper end position ** Opening height light or middle of guide rail inlet funnel **
10. Press the STOP button until "EO" appears in the display. Coaching of the end positions complete

5.4.2.5 Fine adjustment of the upper end position (if necessary)

1. Press the EMERGENCY OFF switch in.
2. Set P.999 to value "3".
3. Set P.231 to value "-10".
4. Pull the EMERGENCY OFF switch out.
5. By OPEN - CLOSE movements, adjust the end position, if necessary alter the value for P.231 accordingly.
6.

5.4.2.6 Fine adjustment of the lower end position (if necessary)

1. Press the EMERGENCY OFF switch in.
2. Set P.999 to value "3".
3. Set P.221 to value "-10".
4. Pull the EMERGENCY OFF switch out.
5. By OPEN - CLOSE movements, adjust the end position, if necessary alter the value for P.221 accordingly.

After completion of the programming, set the service switch to "OFF". Run at least 50 test load cycles once the installation is complete. Test the emergency opening function.

5.5 Dismantling

To dismantle the door, follow the installation instructions in reverse order.

6 Life Cycle

6.1 Installation

See the user guide for the associated control unit.

6.2 Maintenance and Cleaning

In case of necessary work of maintenance, malfunction, repair, please ask your supplier or manufacturer of the door.

ASSA ABLOY Entrance Systems
Albany Door Systems GmbH

Service Department

Am Mondschein 25

59557 Lippstadt, Germany

Tel.: +49 (0)2941 766 0

Fax: +49 (0)2941 766 294

Internet: www.albanydoors.com

Email: service.de.albany@assaabloy.com

6.2.1 Safety instructions



The maintenance and inspection work must only be performed by manufacturer trained/ authorized personnel.

- When performing any type of work on the door, set the main switch (power switch) to “Off” or “0” or disconnect the CEE plug, and secure the switch or plug against accidental re-activation or reconnection.
- Use a meter or other test device, verify that the switch box is de-energised.
- Please observe that all used ladders, scaffoldings, or such, correspond with the valid safety regulations.
- The working area must be blocked for traffic. Lubricating oil on the floor, tools and other material should be removed from the floor when work has been finished.

6.2.2 Inspection plan

Record all maintenance, repairs and modifications in the inspection list included in in chapter 7.5 for every door, to ensure that all changes can be traced.

The necessary service events, inspections and implementation notes are documented in the inspection plan included in chapter 7.4.

6.2.3 Cleaning and care

6.2.3.1 Door curtain

CAUTION



Risk of material damage

Improper cleaning of the curtain may cause damage to the surface.

- ⇨ Do not use any glass cleansing liquids (aggressive contents)
- ⇨ Never use score cleansers, scrapers, razor blades and spatula, etc.
- ⇨ Clean with warm water, small dose of mild plastic cleanser and a soft non-bobble cloth.

6.2.3.2 Side Frames

CAUTION



Risk of material damage

Improper cleaning of the door frame may cause damage to the surface.

- ⇨ Do not use high pressure cleaning machine.
- ⇨ Dust may be removed with a soft cloth.
- ⇨ Harder dirt may be removed with water and general liquid cleanser.
- ⇨ Dirt of grease or oil on metal surface may be removed with solvent containing cleanser.

6.2.3.3 Surroundings

Especially after maintenance work the floor around the side columns may be dirty with lubricants, etc. Carefully clean these areas.

6.3 Decommissioning

- Follow the installation instructions for dismantling.
- Disconnect power from the door before dismantling. In particular, ensure that all springs are de-tensioned.
- Check parts that are subject to wear and replace them if necessary before reassembly.
- Check all connectors and avoid kinking cables.
- Store all components in a clean, dry place.

6.4 Storage and transport

6.4.1 Transport


The single door components must only be removed from the packaging at the site of installation.

DANGER

Risk of injury

Improper transport may cause the load to slip and fall.

- ⇨ Observe the legal safety regulations when transporting the door to the fitting site.
- ⇨ The door must be secured against tilting or slipping.
- ⇨ Lift the door at its centre of gravity to prevent it from tipping sideways.

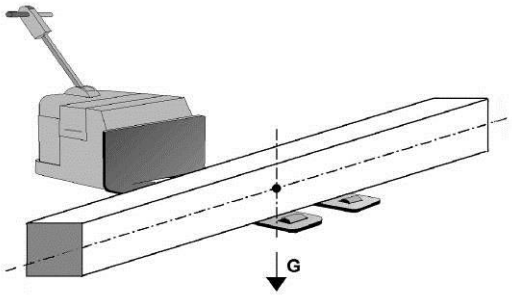

6.4.1.1 Dimensions and weight

Dimensions of the door with packaging

	Transport pallet [mm]		*Drive and control unit pallet [mm x mm]*
Door	***Length***	***Width***	***Length x width***
RR300 Retail	3500	480	-

W = width of door opening; H = height of door opening

Weight of the door with pallet [Kg] (Intermediate values can be interpolated, weights may vary depending on specific configuration options.)

W X H [m]	***2 x 2,5***
RR300 Retail	190

6.4.2 Storage

The partly preassembled door is being delivered on a transport resp. mounting palette completely wrapped with plastic material. Undamaged packing allows storage of the door outside of buildings for several days.

6.5 Disposal

The packing material of the door may be returned to the manufacturer. Defect door components should be disposed of at the site according environmental regulations.

Defect electronic components should be disposed to special waste disposal.


7 Appendix

7.1 Technical Data Albany RR300 Retail

The table below contains the technical data for the Albany RR300 Retail series doors. A capsule summary of the maximum opening and closing speeds is also provided in Section **Fehler! Verweisquelle konnte nicht gefunden werden.**.

	Albany RR300 Retail
Door principle:	Roll door
Running direction:	vertical
Application:	Interior door
Wind class	0
Available sizes:	
W min:	750 mm
W max:	2500 mm
H min:	1600 mm
H max:	3000 mm
Side frame:	aluminium
Bottom profile	Soft curtain material
top roll	aluminium
Door curtain:	woven Polyestermonofil
Top roll cover	Powder coated steel, plastic
Motor cover	Powder coated steel, plastic
Drive:	electrical
Control unit:	FUS, MCS-FC
Maximum opening speed:	1,5 m/s
Maximum closing speed:	0,7 m/s
Main power FUS:	1/N/PE 180-240V (±10%), 50/60Hz
Main power MCS-FC:	1/N/PE 230V (±10%), 50/60Hz: 10 A slow fuse extern
Motor performance:	0,37 kW
Control voltage:	24 V DC
Operating temperature range:	+10°C - +40°C
Motor protection:	IP54
Sound pressure level:	70 dB A

7.2 Principle drawing

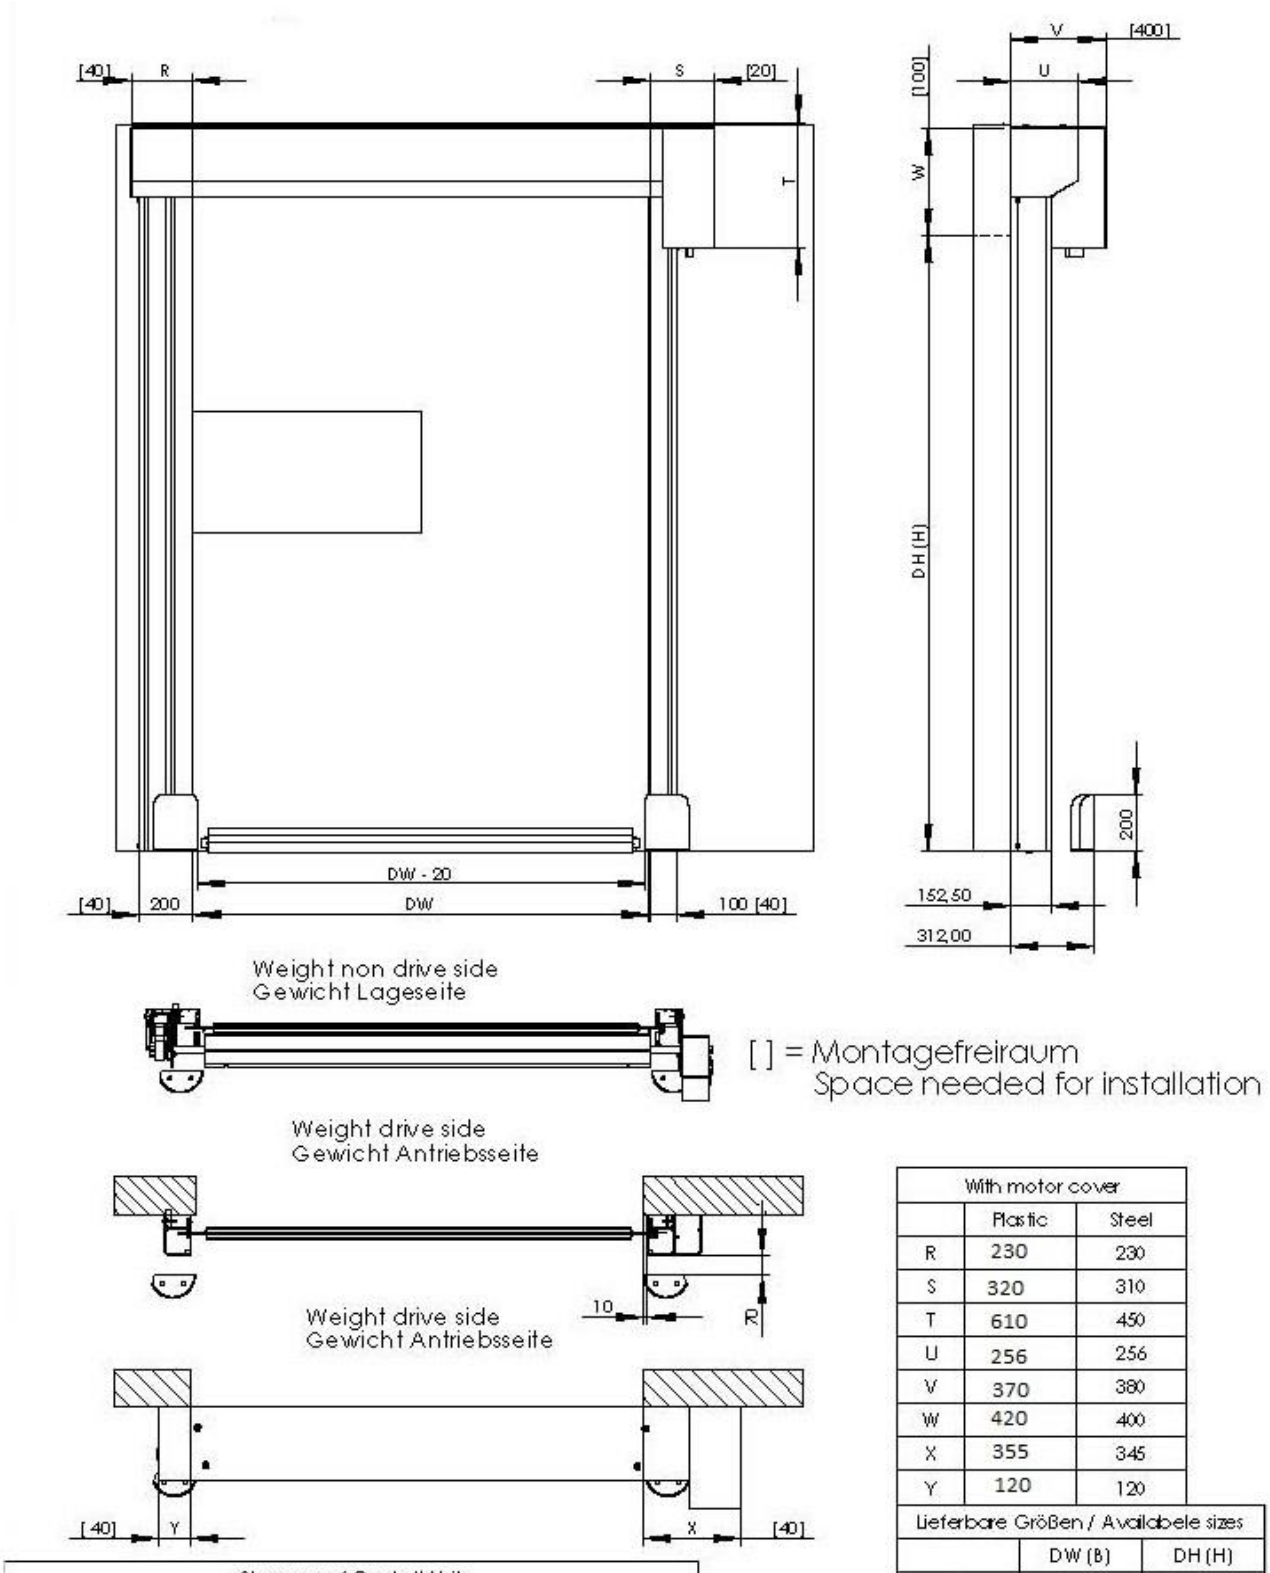


With motor cover		
	Plastic	Steel
R	230	230
S	320	310
T	610	450
U	256	256
V	370	380
W	420	400
X	355	345
Y	120	120

Lieferbare Größen / Availabele sizes		
	DW (B)	DH (H)
min:	750	1600
max:	2500	3000

Steuerung / Controll Unit			
		FUS	MCS-FC
Öffnungsgeschwindigkeit/ Opening Speed	max [m/s]	1,5 m/s	1,5 m/s
Schließgeschwindigkeit/ Closing Speed	max [m/s]	0,7 m/s	0,7 m/s
Abmessungen BxHxT Dimensionen WxHxD	mm	200x300x100	215x345x140

9300R0017_a	Blatt 1
Stand: 15.05.2014	

7.3 Fixing plan

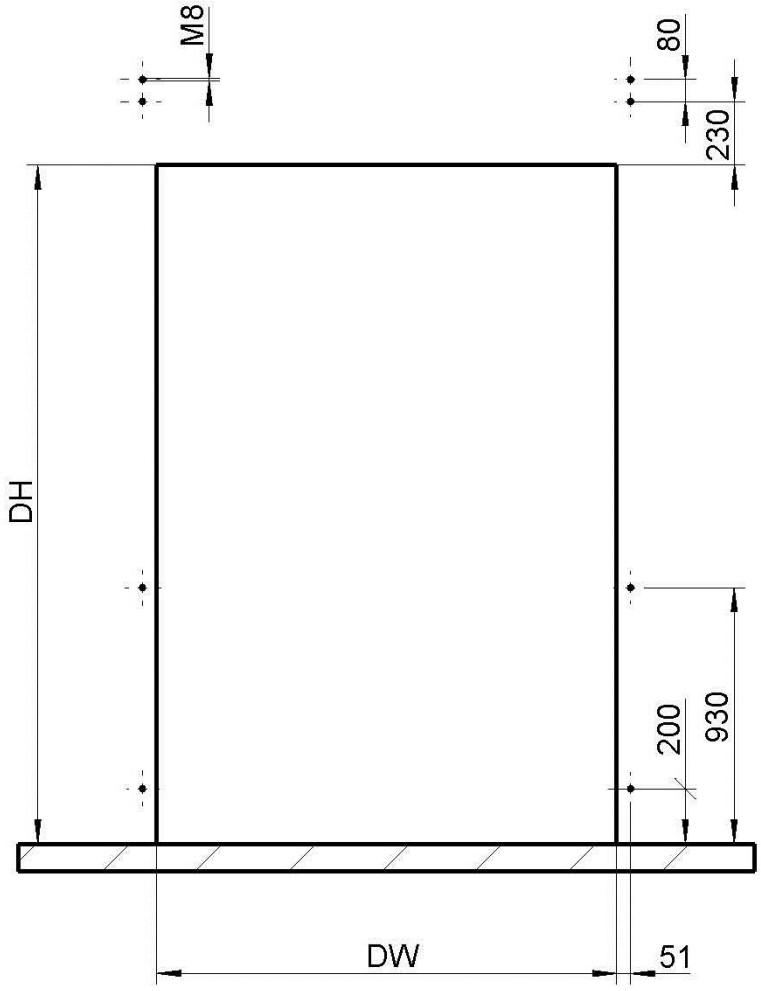

9200R0014/0
Stand: 2014-06-12

7.4 Inspection plan

Installation fixings	
Tighten screws	1
Check fixing of floor poller	1
Drive	
Check the fixing of the drive unit	1
Check brake condition and funtion	1
Drive shaft	
Check screws to drive shafts and flange bearings	1
Check fixing of main shaft	1
Check belt fixing and pulley	1
Door curtain	
Check curtain for cracks and traces of scrapes or shavings in the guides and especially the bottom edge	1
Check fixation of door leaf at the top roll	1
Check tight position and wear & tear of the wind tabs	1
side frame	
Check fixing and condition of the profiles with attachments	1
Check cable laying	1
Remove dirt from the photocell optics	3
Check the condition and function of the counterweight system, readjust if necessary	1
Renew flat belt	2
Control box and additional attachments (e.g. impulse activator)	
Check main switch/CEE-plug and control box lock	1
Check the fixing	1
Electrical components	
Visual inspection for mechanical damage	1
Check potential balance	1
Function	
Check function of photocell, additional safeties and actuators	1
Check automatic closing time	1
Assess possibility of emergency opening	1
Check opening and closing position of the bottom profile	1
Check winding performance of door curtain	1
Check main closing edge according to EN 13241-1 respectively local standards	1

1	yearly or 100.000 cycles The UVV check up for doors in emergency exits has to be performed every 6 months.
2	100.000 cycles
3	clean if necessary

7.5 Inspection results

It is the responsibility of the operator to chronologically file the mandatory annual inspection and service results. These tests must be specifically ordered by the operator and do not occur automatically from the manufacturer.

Date	Inspection results and actions take (If necessary attach separate report)	Signature of Inspector and Company	Repairs finished

7.6 Manufacturer's certifications

7.6.1 Declaration of conformity

Declaration of conformity

ASSA ABLOY

ASSA ABLOY, the global leader in door opening solutions

We **ASSA ABLOY Entrance Systems AB**
Lodjursgatan 10
SE-261 44 Landskrona
Sweden

declare under our sole responsibility that the type of equipment with serial number:
Albany RR300 Retail from 2840000000

complies with the following directives:
2004/108/EC ElectroMagnetic Compatibility Directive (EMCD)
2006/42/EC Machinery Directive (MD)

Harmonized European standards which have been applied:

EN 13241-1	EN 12453/12445	EN 12604/12605	EN 12978
EN 60335-1	EN 61000-6-2	EN 61000-6-3	EN ISO 13849-1

Other standards or technical specifications, which have been applied:

EC type examination or certificate issued by a notified or competent body
(for full address, please contact ASSA ABLOY Entrance Systems AB) concerning the equipment:
Initial product testing (ITT) - TÜV Nord Cert GmbH: LCS 4478106336796

The manufacturing process ensures the compliance of the equipment with the technical file.
The manufacturing process is regularly accessed by 3rd party.

This declaration is valid only if installation is performed by or on order of Albany Door Systems GmbH and in compliance with all provisions of the current version of the manufacturer's detailed installation instructions and the ultimate safety of the installed system is verified by the installation supervisor and confirmed in the commissioning certificate.
This declaration is rendered null and void if modifications to the system are performed by the operator or a third party.

Compilation of technical file:

Holger Siewert
ASSA ABLOY Entrance Systems AB
Lodjursgatan 10
SE-261 44 Landskrona
Sweden

E-mail: holger.siewert@assaabloy.com

Place	Date	Signature	Position
Landskrona	2014-07-21	Holger Siewert	Product Development Manager

Holger Siewert

CE49 Declaration of conformity
6420R0108 EN00.docx

7.6.2 Declaration of performance

Declaration of Performance ASSA ABLOY

Construction Product Regulation (EU) 305/2011

ASSA ABLOY, the global leader in door opening solutions

We **ASSA ABLOY Entrance Systems AB**
Lodjursgatan 10
SE-261 44 Landskrona
Sweden

declare under our sole responsibility that the type of equipment with serial number:

Albany RR300 Retail from 2840000000

applies the following harmonized European standards:
EN 13241-1

The door Albany RR300 Retail is intended to be used internally for industrial or commercial premises.

EC type examination or certificate issued by a notified or competent body
(for full address, please contact ASSA ABLOY Entrance Systems AB) concerning the equipment:
Initial product testing (ITT) - TÜV Nord Cert GmbH: LCS 4478106336796

System of assessment and verification of constancy of performance according annex V: System 3
The manufacturing process ensures the compliance of the equipment with the technical file.
The manufacturing process is regularly accessed by 3rd party.

Declared performances in accordance with harmonized technical specifications of EN 13241-1:

Essential characteristics	**Performance**
Resistance to wind load	Class 0
Dangerous substances	pass
Safe opening	pass
Mechanical resistance and stability	pass
Operating forces	< 400 N

Signed for and on behalf of ASSA ABLOY Entrance Systems by:

Place	Date	Signature	Position
Landskrona	2014-07-21	Holger Siewert	Product Development Manager



CE51 Declaration of performance 6420R0112