5 Mounting and dismounting *RR 3000R*

5.1 Inspection of the delivery

The RR3000 R is already partly pre-assembled when it arrives at site. The barrel with the rolled up curtain is located on a special transport- and installation rack. The columns are packed commonly with the springs and the cover-plates on a separate pallet. Drive, control unit and accessories are housed in a cardboard box.

The door should be checked when it arrives at site respectively on damages which could caused while transport and on completeness by comparison of the parts which are arrived and the list of parts mentioned within the corresponding paperwork.

5.2 Preparation of assemblage

The installation site has to be checked referring the conditions of installation as like as the necessary space, the character of the wall and.... Perhaps a steel construction or an equivalent construction has to be made in advance. The need is given to fix the columns of the door within the upper area on a solid background like a steel construction or a wall made in concrete.

⚠ **Do not install the doors on isolation panel walls, honeycomb bricks and lightweight partition walls.**

The light opening dimension (width and height) of the door have to checked and compared with the values given via the corresponding paperwork.

The site of installation must be closed for any traffic whiles the installation continues.


Before the installation can start the shrink-foil of the package have to be removed. Subsequently the cover plates and the springs must be stripped out of the columns and parked on a save place temporarily.



1. The barrel is placed on a pallet which works as a tool for transport and installation too.
The transport-shoe is to be used by the forklift driver as shown above to avoid a topple of the complete top section while transport.





2. The side frames including the springs and the cover plates are located on a second pallet.

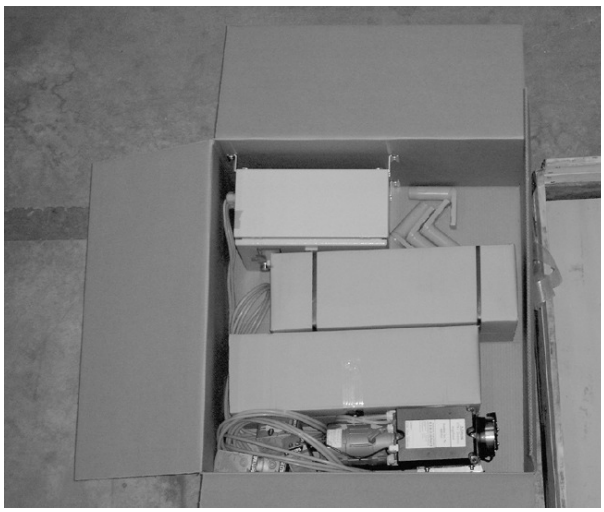


3. Control, drive unite and material for installation is housed in a common cardboard box.



4. If the floor declines the first side frame have to be arranged and fixed on the side of the higher level.
The side frame must be placed exactly perpendicular.

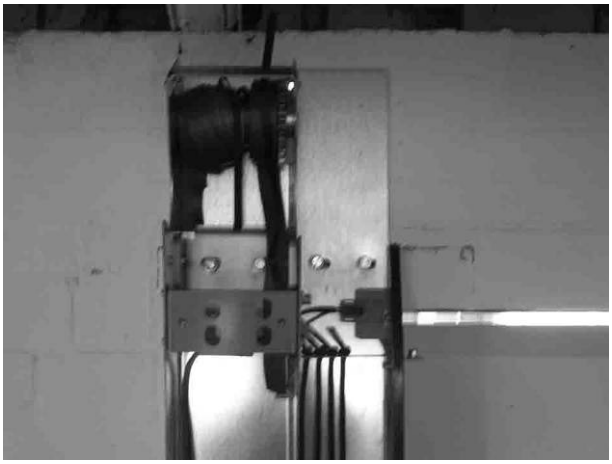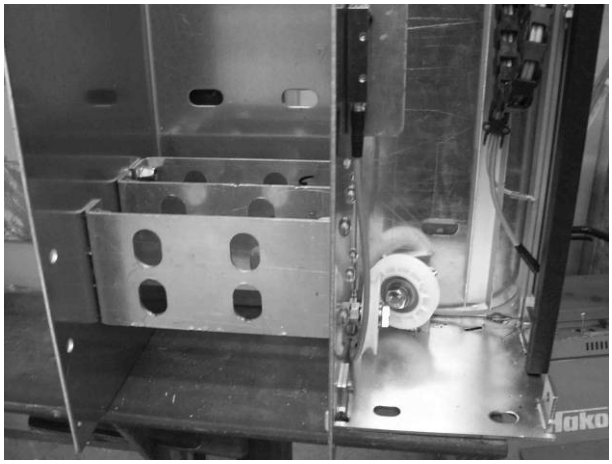	
5. Fix the side frame within the upper area with at least 3 screws.	**6.** Fix the side frame within the lower area with 2 screws in minimum either strictly on the floor or alternatively on the wall.
Set up the second side frame and screw it loosely onto the wall. Now screw on the lintel profile between both side parts Fix this second side frame in the upper area with the wall as you already did with the first one and check within the lower area the correct light opening width. The light opening width (DW) is given by the distance between the black plastic slide profiles of the side frames. Now complete the fixation of the side frame too.	
7.	**8.** Fix the lintel profile within the upper area of the door with two screws per side. The lintel profile serves as a cable duct for the cables of the stationary and the advanced running safety photocell as well.

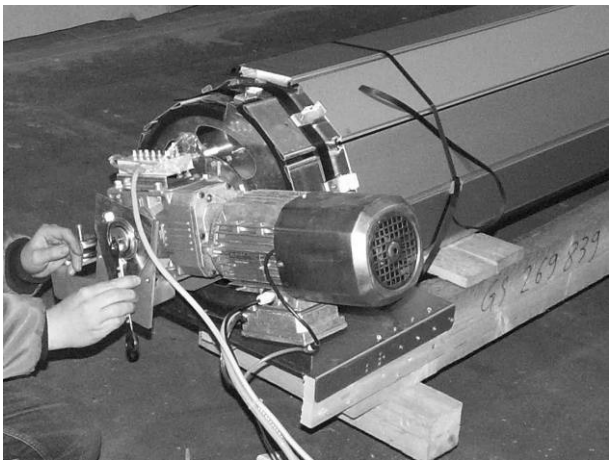


9. Install the drive unit onto the drive side shaft end.





10. Lift up the barrel with assistance of a crane , forklift or equivalent device and lay down the complete barrel on the side frames as shown above.

⚠ While take down the pallet again the barrel can start to turn!

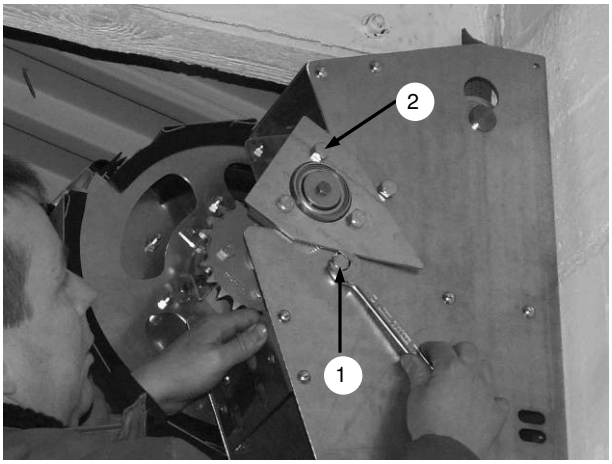



11. Screw on the mounting plate with the side frame (1). Afterwards tighten the 3 screws of the flange-bearing (2).

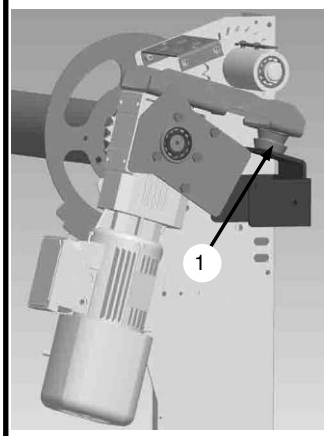

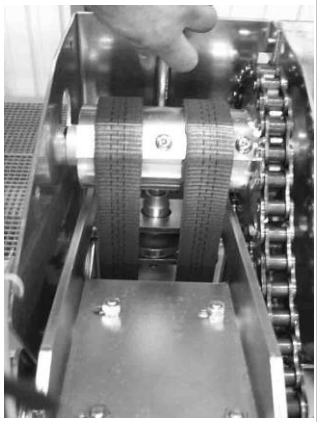

12. Connect the buffer (1) from top with the frame bracket. Use the screw and nut M12mm.

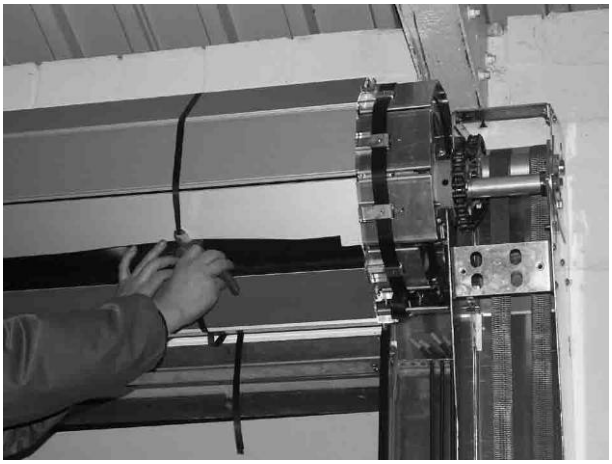


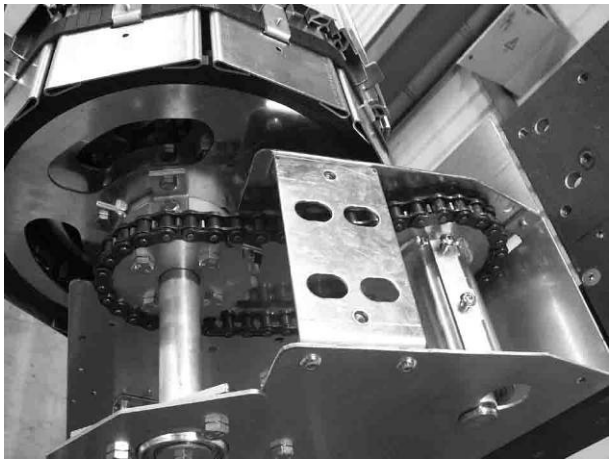


13. Now turn the top roll with a wrench SW6 into the correct position and then remove the PVC-belts which hold the barrel in the transport condition. (Correct position = bottomlamelle down)


14. Connect barrel and belt shaft via roller chain.

⚠ Clamp plate on belt shaft on top.

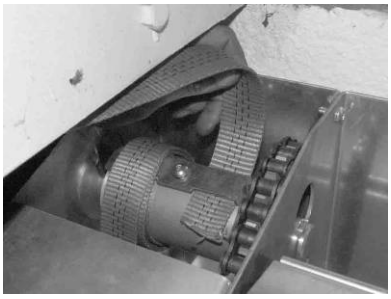


inside

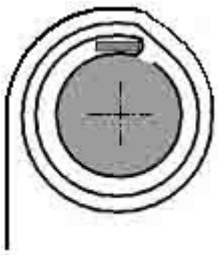

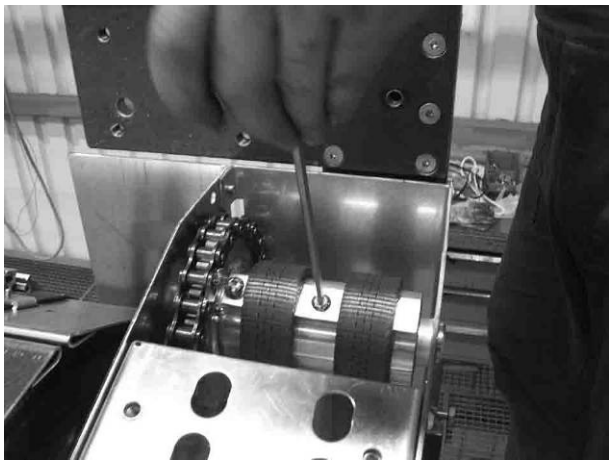


15. Place two dead windings on the barrel.

16. Arrest the belt by fixing the clamp plate.

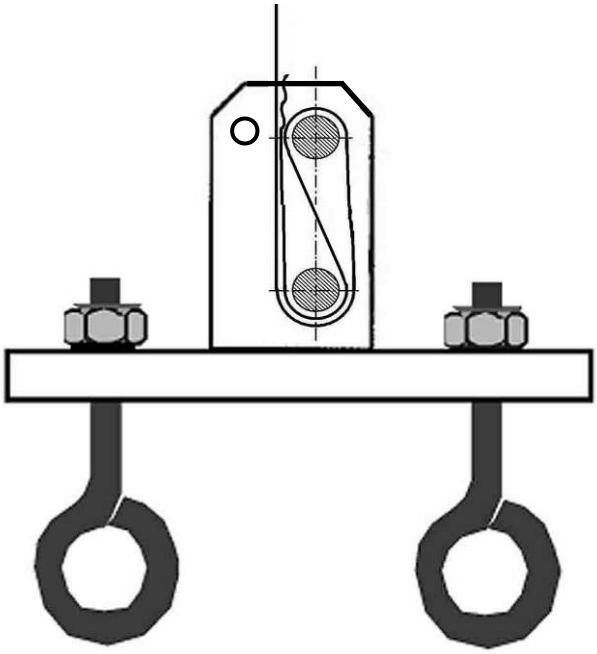


17. The sketch shows the fixation of the belts onto the upper spring acceptance of the counterweight system.

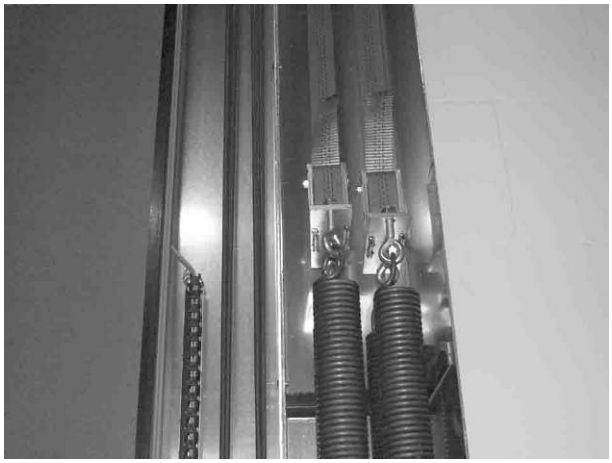


18. Connect the belts with the upper spring acceptances.
The pre-tension of the springs with opened door: 150mm.




19. Hang in the springs in the upper acceptances first before you use the lower acceptances.

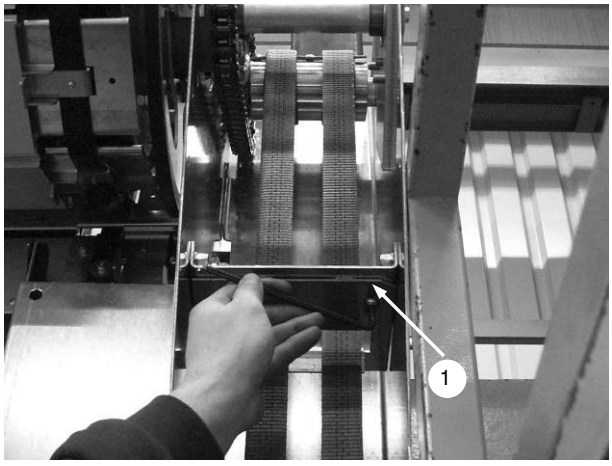

20. Adjust the belt guiding (1) so that the belt connects the soft edge with low pre tension (door is open position).

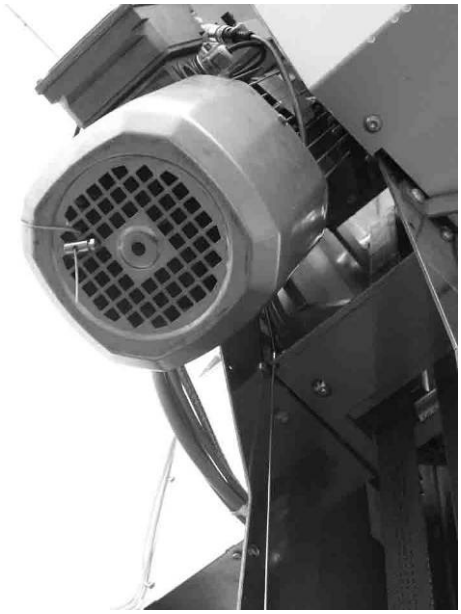


21. Pull the steel rope through the hole of the upper stiffening plate. Guide it through the brake lever and fix it at the motor cover.
The other end has to be fixed at the hand lever.

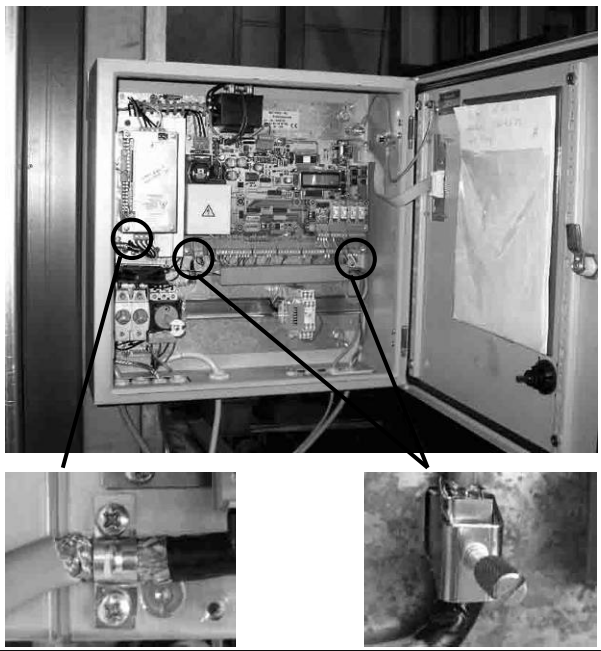


22. Make the electrical connections with the control box. (as detailed in chapter 8 and 9 of the manual)

⚠ Pay attention that the shield weaves has spread contact with the mounting plate

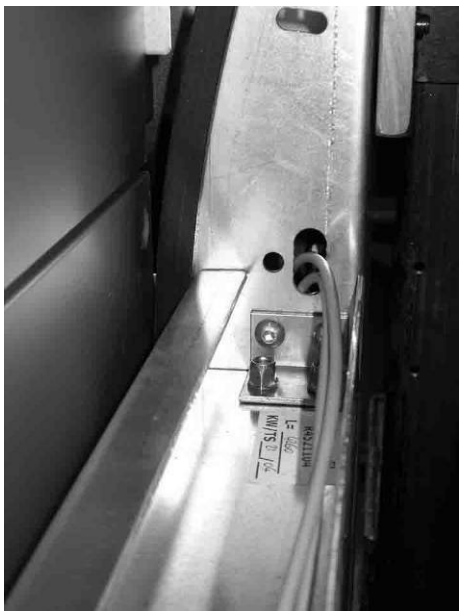


23. Guide the cable of the stationary – and of the prerunning photocell through the side part.
Thereby use the lintel profile as cable conduit.

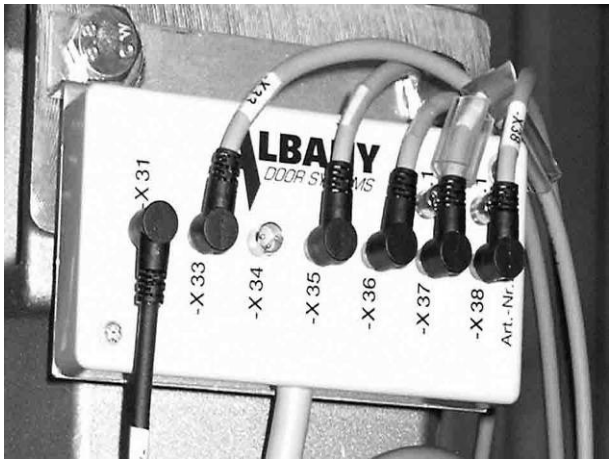


24. Connect the cables to the plug board.


⚠ The markings at the plug board must correspond with the ones of the cables.

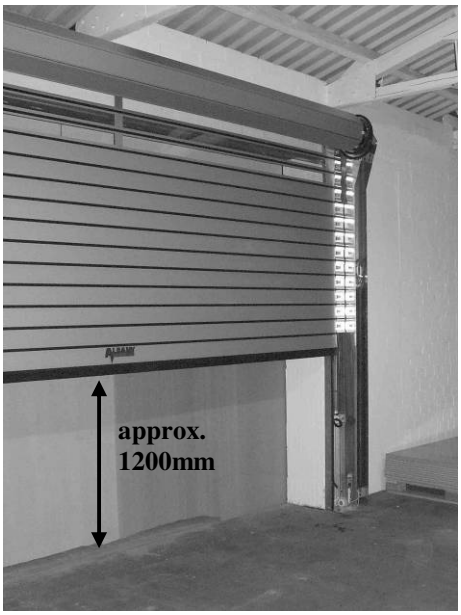


25. Close the door down to approx. 1200 mm above the floor and connect Adapter 4 with the bottom lamella.

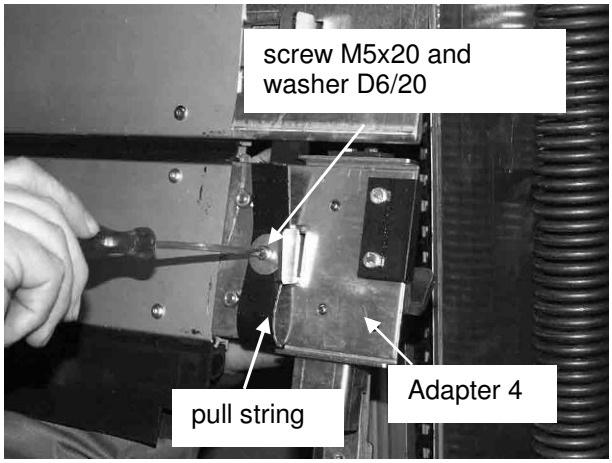


26. After installation of the adapter 4 (incl. pre-running photocell) the jutting piece of the pull string must additionally be screwed together at the opposite side with a screw and washer.

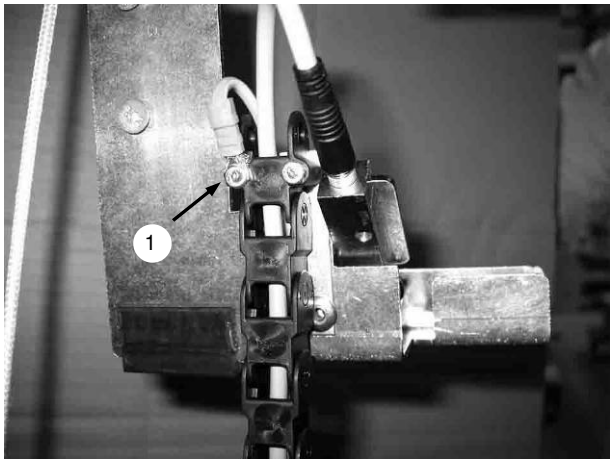


27. Screw together the loose end of the power chain with the bracket of the pre running photocell and connect the cable. Pay attention to a good contact of the earth connection (1).

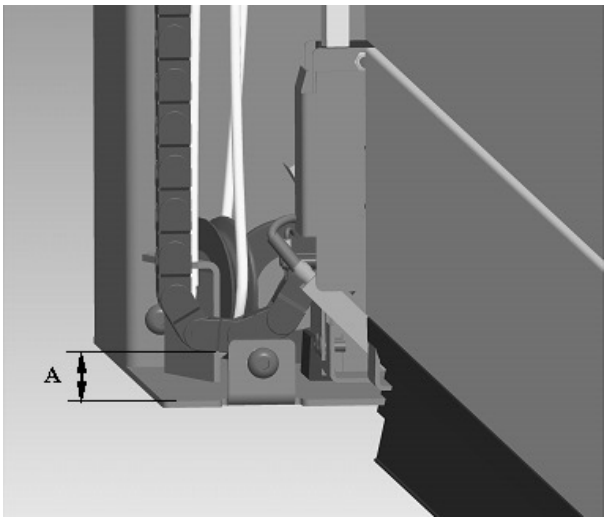

28. During assembling of the energy chains is to be made certain that the respective energy chain does not touch the floor in case of closed door (measure of A: approx. to 10 - 20 mm)

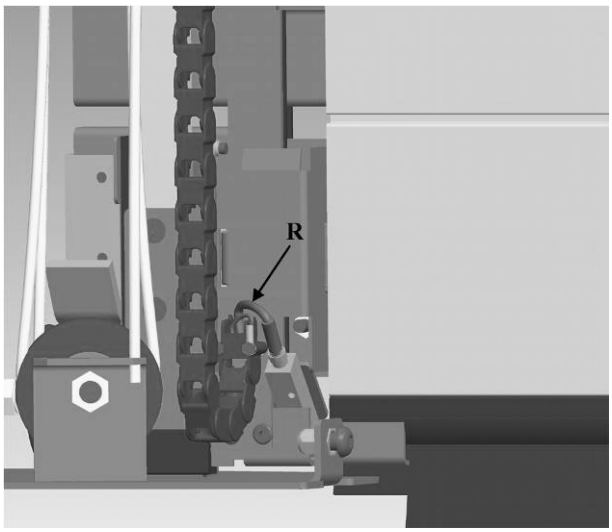


29. Place the Cables of the pre-running photo-cell in a small radius R!

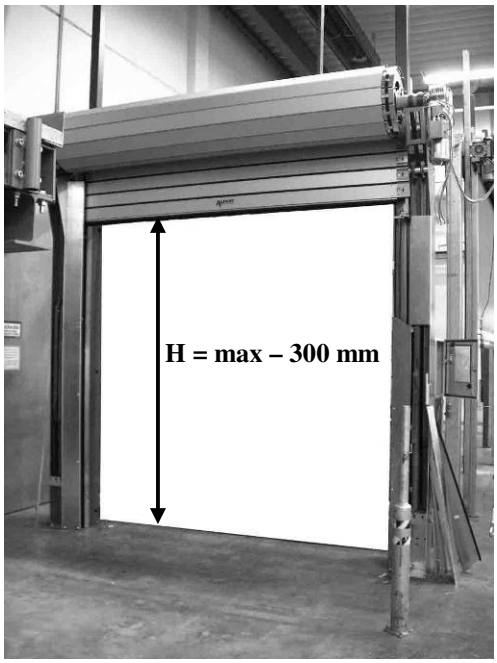

30. The door have to opened up to H minus 300 mm.




31. Open the door completely by hand with use of an allan-key (width: 5 or 6mm).
Hereby you can release the motor brake carefully.

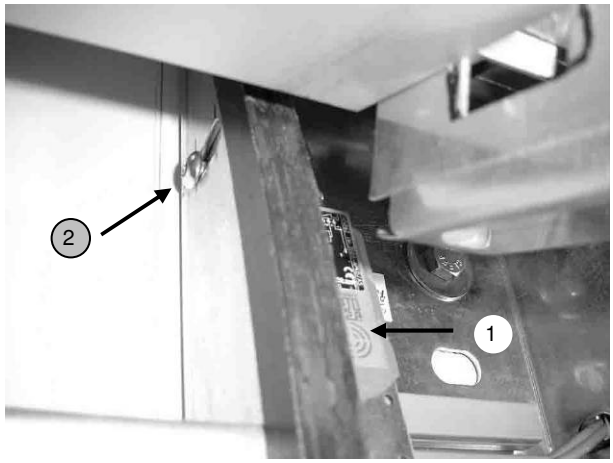


32. The position of the inductive proximity-switch (1) is adjustable via a screw (2) and the corresponding elongated whole. The distance to adapter 4 has to be about 3mm and can be adjusted at closed door.



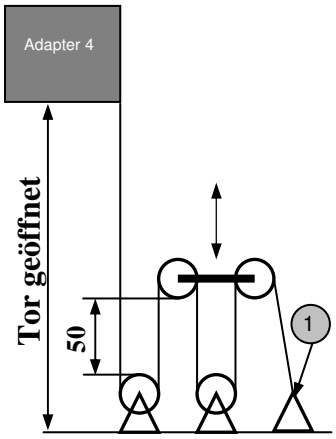

33. Pull the rope through the eye of fixation and make a knot to arrest the rope (1).
Thereafter the rope must be placed all over the pulleys as shown above.

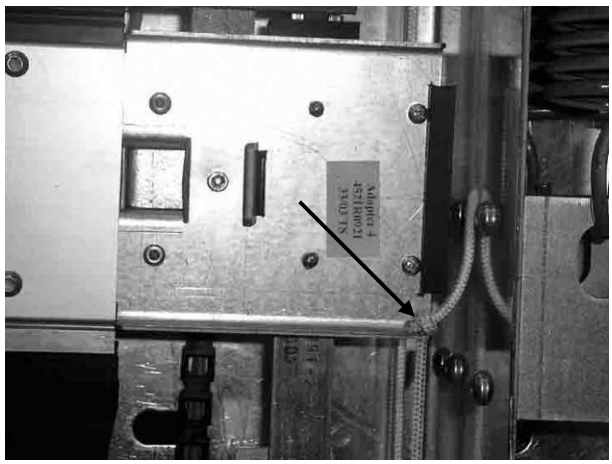

34. The other end of the rope must be fixed at adapter 4 of bottom lamella via knot. (Thereby the door is 100% open). The distance between pulleys and bottom plate is 50mm.





35. To fix the screws onto the guiding cover the door must be about 50% open. The cover can be adjusted by elongated holes.

Gap between lamella and guiding <1mm.


36. Install the cover stiffener.




37. Mount the covers of the spring-boxes. When the check of the safeties gave a positive result and the initial run recorded the successful installation, the installation of the basic door is finished.




38. Close the inspection hole for stationary photo to cell with a cap.

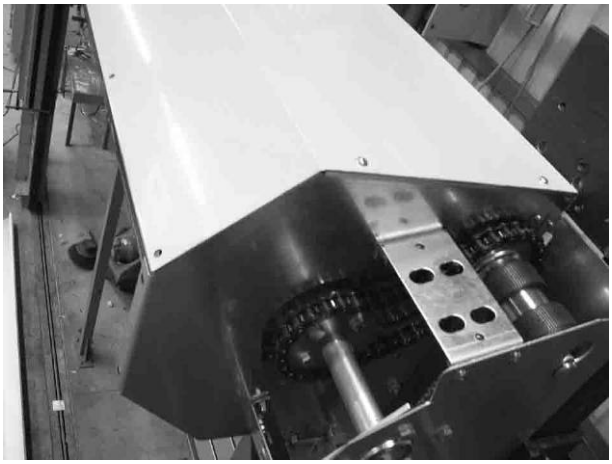


39. Install the support plates of the top roll cover at the side frames. Than fix at first the top cover than the front cover.

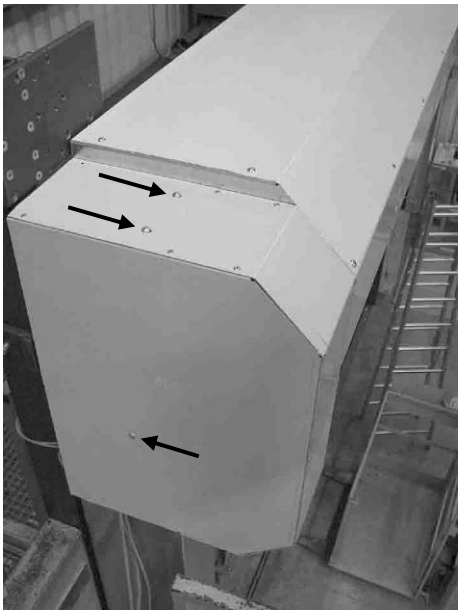

40. Install the motor cover.

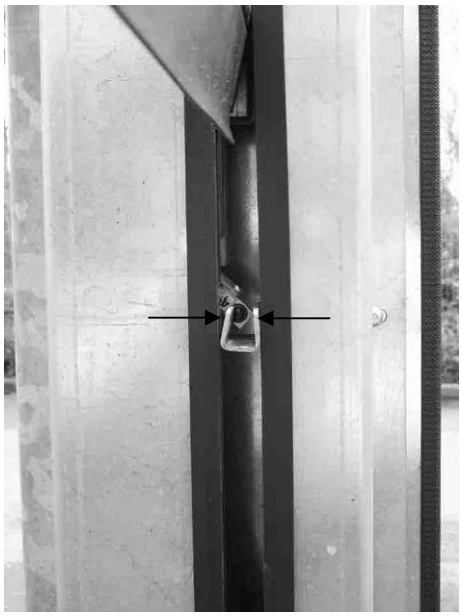

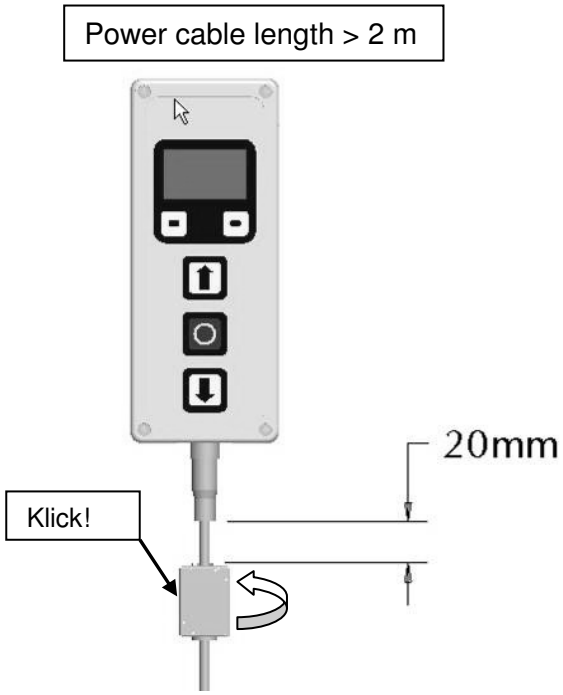

41. Make sure that the guiding of pre running photo cell moves without sticking in the track.
If necessary bend the U a little together.

42.

Dismantling of the door works opposite to the sequence of the installation.

To dismantle the barrel a suitable pallet have be ordered in advance.

The material of packaging can be given back to the manufacturer. Spoiled door-components must be wasted by the customer environment-friendly and in harmony with the valid law.

Defect electronic equipment belongs to special waste and because of this specific laws have to be respected in case of disposal.