

1.1 DICO CPU040 Card

1.1.1 Topographic Diagram and Connections of the DICO CPU040 Card

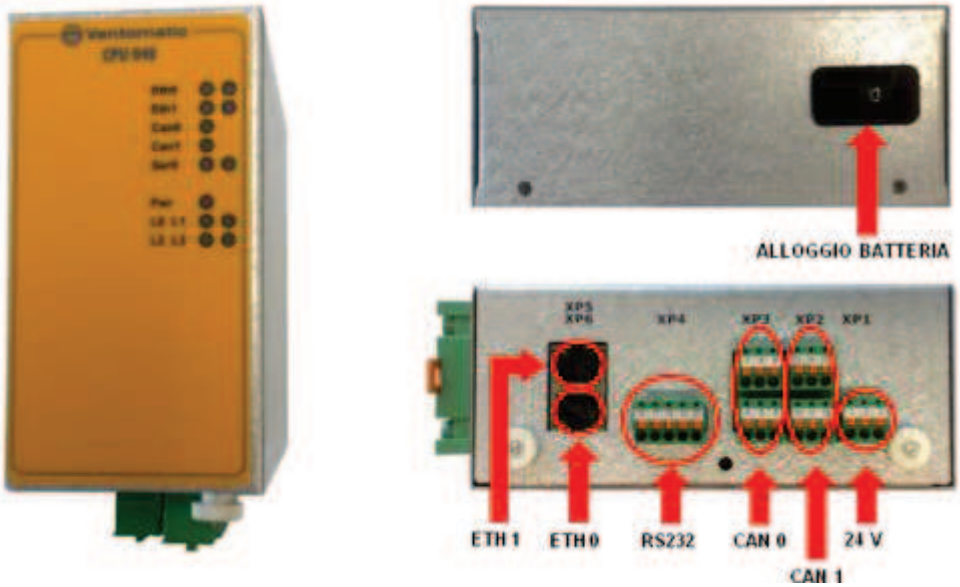

1.1.2 Jumpers of the DICO CPU040 Card

Set the jumpers of the "**CPU 040**" card as shown in the picture below:

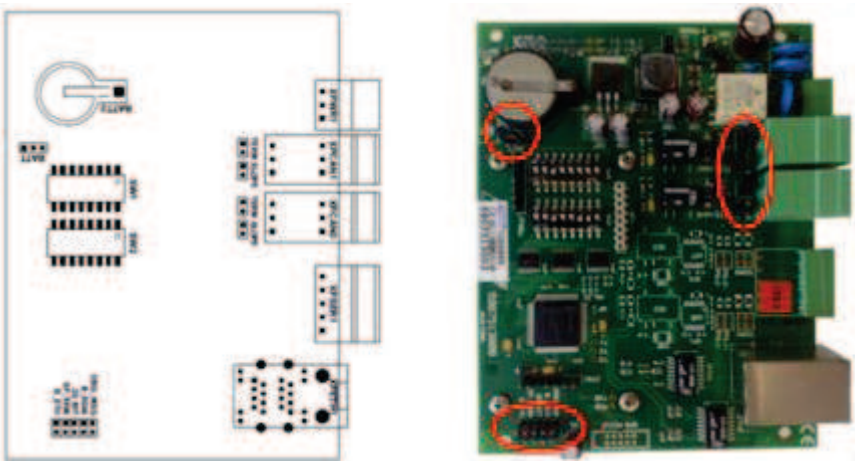

The jumpers to be set are the following:

BATT	TERM	TERM
ON	ON	ON

1.1.3 DIP switches of the DICO CPU040 Card

Set the DIP switches of the "CPU 040" card as shown in the table below:

SW1.1	SW1.2	SW1.3	SW1.4	SW1.5	SW1.6	SW1.7	SW1.8
OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF



If **Master** (Packing Board):

SW2.1	SW2.2	SW2.3	SW2.4	SW2.5	SW2.6	SW2.7	SW2.8
OFF	ON	ON	OFF	OFF	ON	OFF	OFF

If **Ventodigit IV** (FILLING UNIT Board):

SW2.1	SW2.2	SW2.3	SW2.4	SW2.5	SW2.6	SW2.7	SW2.8
OFF	OFF	OFF	ON	OFF	ON	OFF	ON

If **Ventolink IV** (Packing Board):

SW2.1	SW2.2	SW2.3	SW2.4	SW2.5	SW2.6	SW2.7	SW2.8
OFF	ON	ON	OFF	OFF	OFF	ON	ON

If **Ventocheck IV (**Ventocheck 1 Board, Ventocheck 2 Board**)**:

SW2.1	SW2.2	SW2.3	SW2.4	SW2.5	SW2.6	SW2.7	SW2.8
OFF	OFF	ON	OFF	OFF	OFF	OFF	ON
OFF	OFF	ON	OFF	OFF	OFF	ON	OFF

1.1.4 "Ignore application" Function of the DICO CPU040 Card

The function "**Ignore application**" forces the card to execute only the program "**Monitor/BIOS**" installed in it, "**ignoring**" the application previously uploaded.
This function is achieved by setting the switch "**Ignore application**" (**SW2.1**) to "**ON**"

1.1.5 IP Address of the DICO CPU040 Card Network 192.168.1.xxx

By setting the Dip-Switch following tables shown above (depending on the function in which the DICO CPU040 card is used) you assign to it the Ethernet IP Address of "**Default**".
The setting of "**Default**" provides that all boards are in the network "192.168.1.**xxx**" Subnet Mask "255.255.255.0"; "**xxx**" (last number of the network) is set by setting the dip-switch SW2 (in binary coded).
The values that "**xxx**" assumes the following tables depending on the function in which the card is used are:


- If **Master** xxx = **100** → "**192.168.1.100**" Subnet Mask "**255.255.255.0**"
- If **Ventodigit IV** xxx = **21** → "**192.168.1.21**" Subnet Mask "**255.255.255.0**"
- If **Ventolink IV** xxx = **99** → "**192.168.1.99**" Subnet Mask "**255.255.255.0**"
- If **Ventocheck IV** (Ventocheck 1) xxx = **33** → "**192.168.1.33**" Subnet Mask "**255.255.255.0**"
- If **Ventocheck IV** (Ventocheck 2) xxx = **34** → "**192.168.1.34**" Subnet Mask "**255.255.255.0**"

1.1.6 IP Address of the DICO CPU040 Card different from Network 192.168.1.xxx

You can set the **IP** address other than "**192.168.1.xxx**" :

- Set the dip-switches according to the tables in chapter 1.1.3
- Setting the switch "**Ignore application**" (**SW2.1**) to "**ON**"
- Energize the card CPU040 and connect to the card with Explorer entering the following address:

If **Master** : "**192.168.1.100**"
If **Ventodigit IV** : "**192.168.1.21**"
If Vento**link IV** : "**192.168.1.99**"
If **Ventocheck IV** : "**192.168.1.33**"
If **Ventocheck IV** : "**192.168.1.34**"

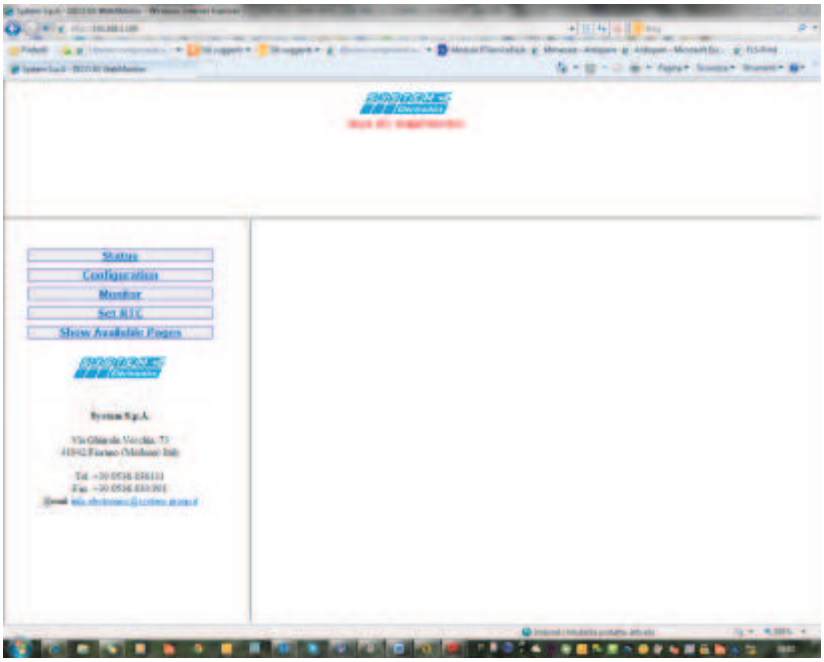

- Click "**Configuration**"



- Set **IP Address** and **Net Mask**
- Click "**Submit "**



- Power OFF the card
- Setting the switch "**Ignore application**" (**SW2.1**) to "**OFF**"
- Setting the switch **SW1.5** to "**ON**"

2 Connection to the Dico CPU040 / 508EX / 708EX Card

To connect a "**CPU040**" card, "**508EX**" or a "**708EX**" card, to the **PC** proceed as follows:


- Set the **TCP/IP** address of the **PC** you wish to use
- Connect the card to the **PC**

2.1 Setting of the TCP/IP PC Address


Click **"Start"**




Click "**Pannello di Controllo**" (*Control Panel*)

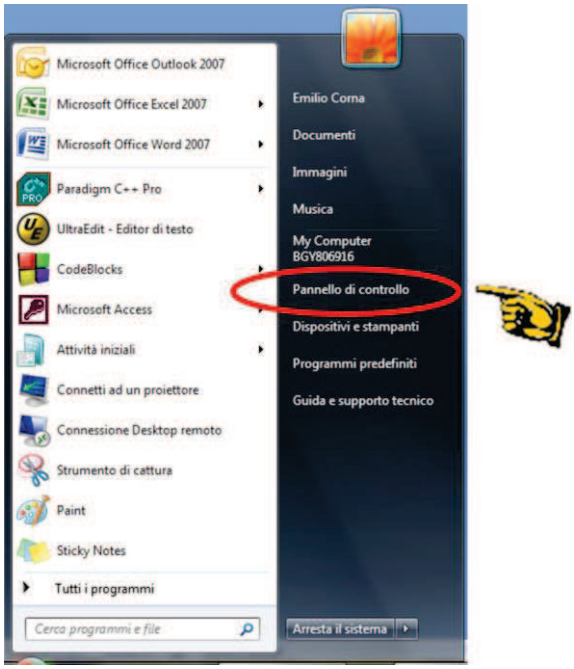


Click **"Visualizza stato della rete e attività" (*View network status and tasks*)**

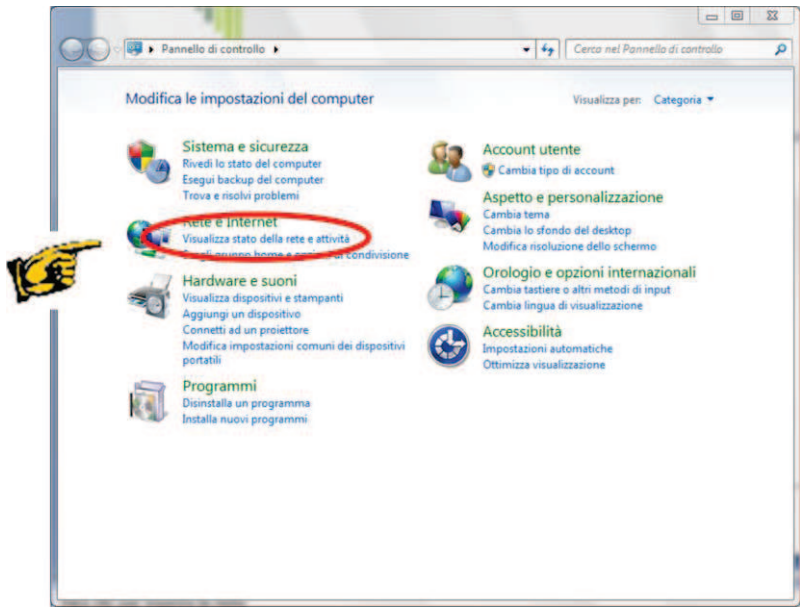


Click **"Connessione alla rete locale LAN" (*Local Area Connection*)**

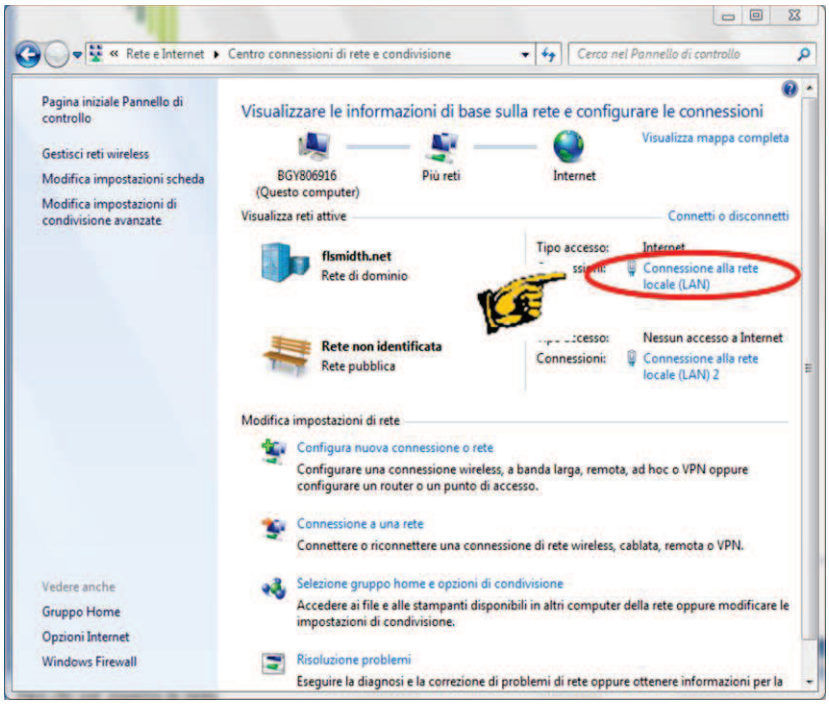


Click **“Proprietà” (*Properties*)**

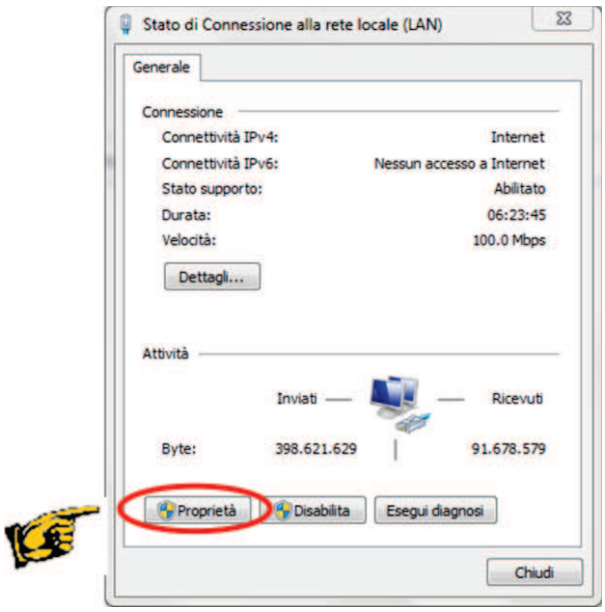

Select **“Protocollo Internet versione 4 (TCP/IPv4)” (*Internet protocol version 4*)**
Click **“Proprietà” (*Properties*)**

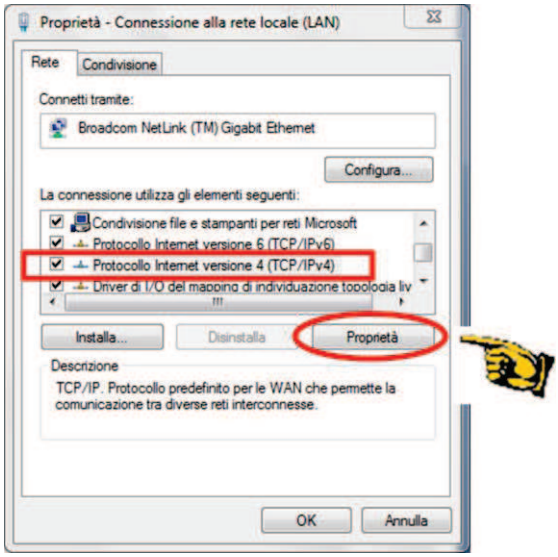


Select **"Utilizza il seguente indirizzo IP" (*Use the following IP address*)**
Set"**Indirizzo IP: " (*IP address*)** **192.168.1.150**
Set "**Subnet mask : "** **255.255.255.0**
Click **"OK"**

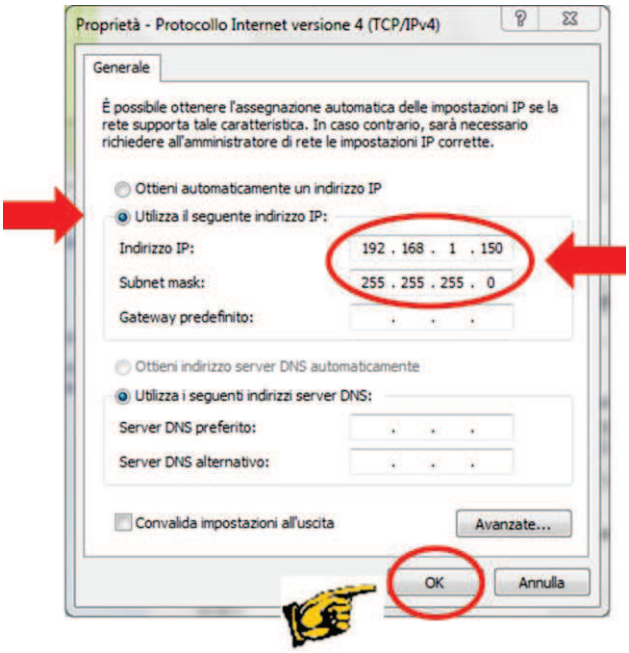


2.2 PC to CPU040 / 508EX / 708EX connection

2.2.1 PC-CPU040 connection

Connect an Ethernet crossover cable from the Ethernet port of the **PC** to the "ETH 0" (XP6) connector of the **CPU040** card

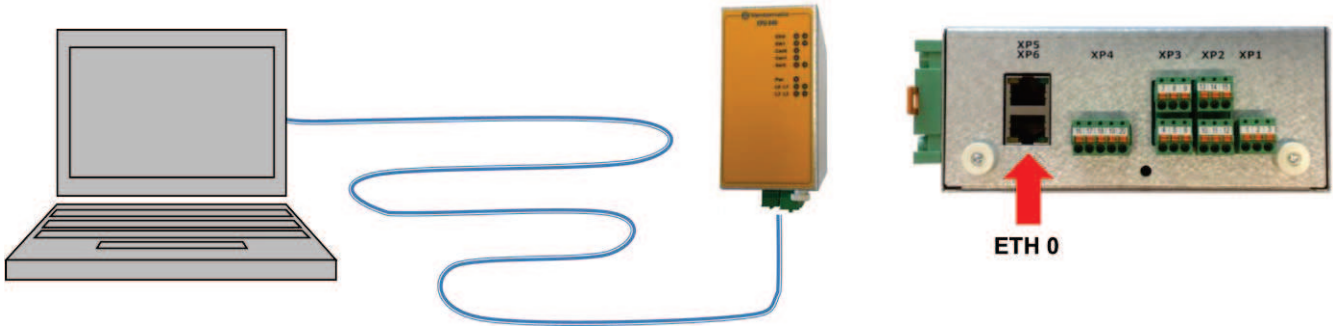

Power on the CPU040

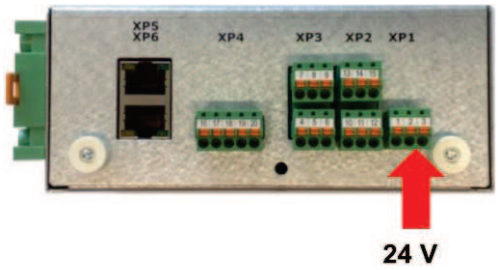

3 Uploading of an Application on a Dico CPU040 / 508EX / 708ex card

The sequence to upload an application on a **CPU040** ,"**508EX**", or a "**708EX**" card, is the following:

- Choose the application file
- Connect the card
- Invalidate the old application
- Upload the new application

3.1 Choice of Application File

Download the ***.bin** file required**:**

3.2 Connection to the CPU040 Card

3.2.1 Connection to the CPU040 Card

Connect to the card with Explorer entering the following address:

If **Master** (Packing Board) : "**192.168.1.100"**
If **Ventodigit IV** (FILLING UNIT Board) : "**192.168.1.21**"
If Vento**link IV** (Packing Board) : "**192.168.1.99**"
if **Ventocheck IV** (Ventocheck 1 Board) : "**192.168.1.33**"
(Ventocheck 2 Board) : "**192.168.1.34**"

3.2.2 Connection to the 508EX Card

Connect to the card with Explorer entering the following address: "**192.168.1.100"**

3.2.3 Connection to the 708EX Card

Connect to the card with Explorer entering the following address: "**192.168.1.100"**

3.3 Invalidation of the Old Application

If the card doesn't have a "**validated application**" or is in "**Ignore Application**" status, go to chapter " **Uploading of an Application".**
If the card has a "**validated application**", the screenshot displayed after the connection is the following:



Click "**Monitor**"



The "login" window is displayed:

For **Ventomatic Italia**

- Enter the user name "**Administrator**"
- Enter password "**468303**"

For **Ventomatic India**

- Enter the user name "**FLS_India_Admin**"
- Enter password "**468043**"

Click "**Login"**



Click "..EX"



Click "**Invalidate Flash**" to invalidate the Flash memory (the green LED above the button lights up)




Click "**Reset**"




The card no longer has a validated application.
Connect again to the card with Explorer (Chapter 3.2: Connection to the CPU040 / 508EX / 708EXCard).

3.4 Uploading of a New Application


If the card doesn't have a "**validated application**" or is in "**Ignore Application**" status, the screenshot displayed after the connection is the following:

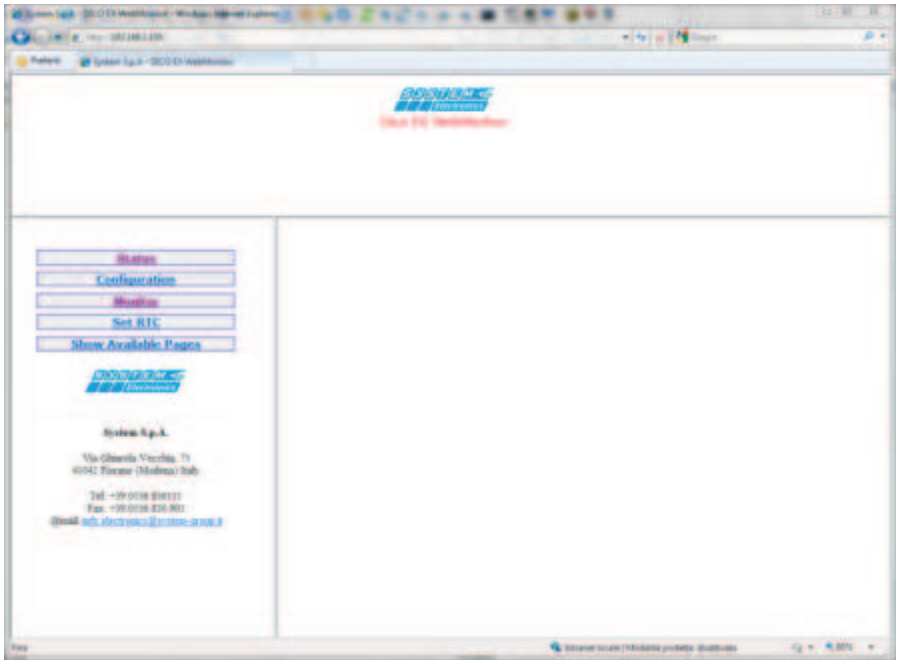


Click "**Monitor**"

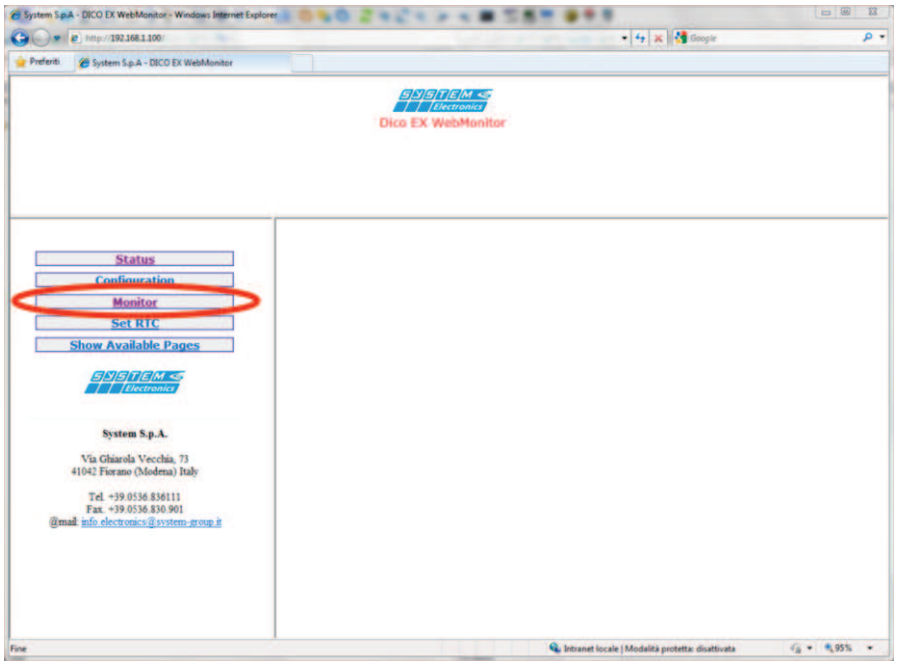

Click “Browse” and choose the .BIN file required
Click “Upload File”

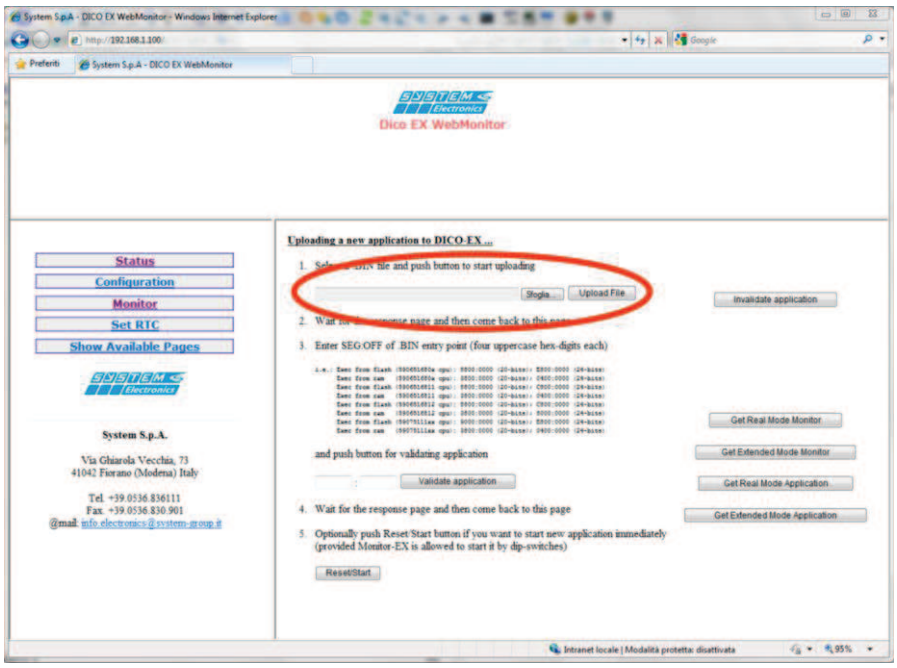


Wait until the message “Upload Successful !” is displayed.

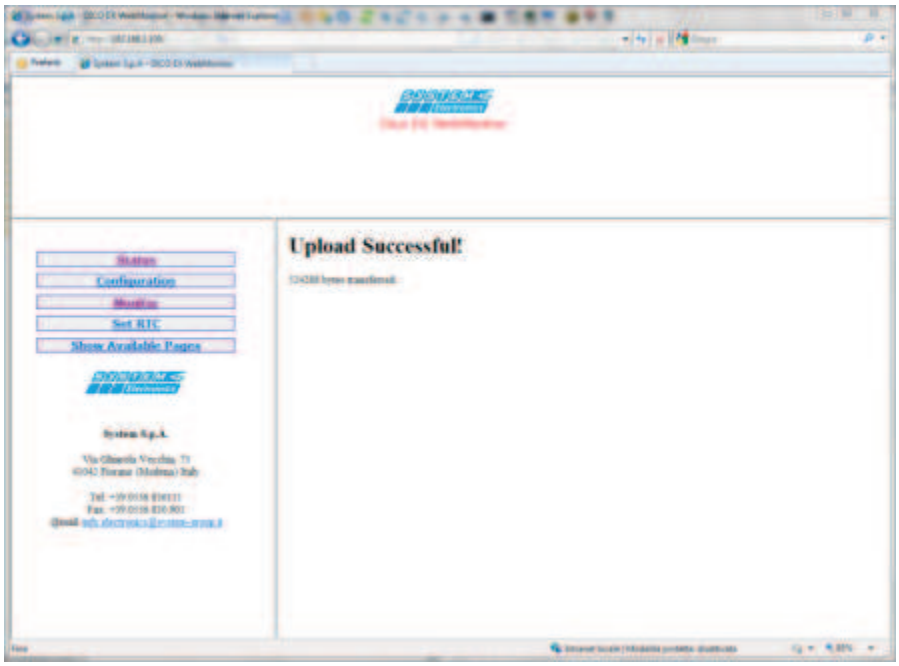


Click "**Monitor**"
Set **Segment-Offset** in the Flash addressing table:
For **CPU040** card: **8000:0000**
For **508EX / 708EX** card: **0400:0000**

Click **"Validate Application**"

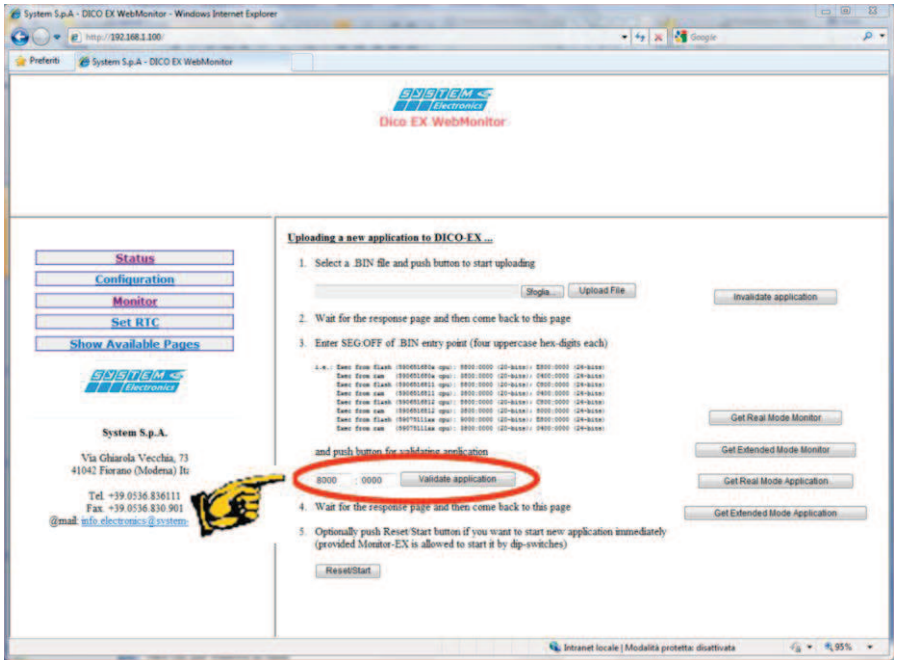


Wait until the message "**Operation Validate flash done"** is displayed.

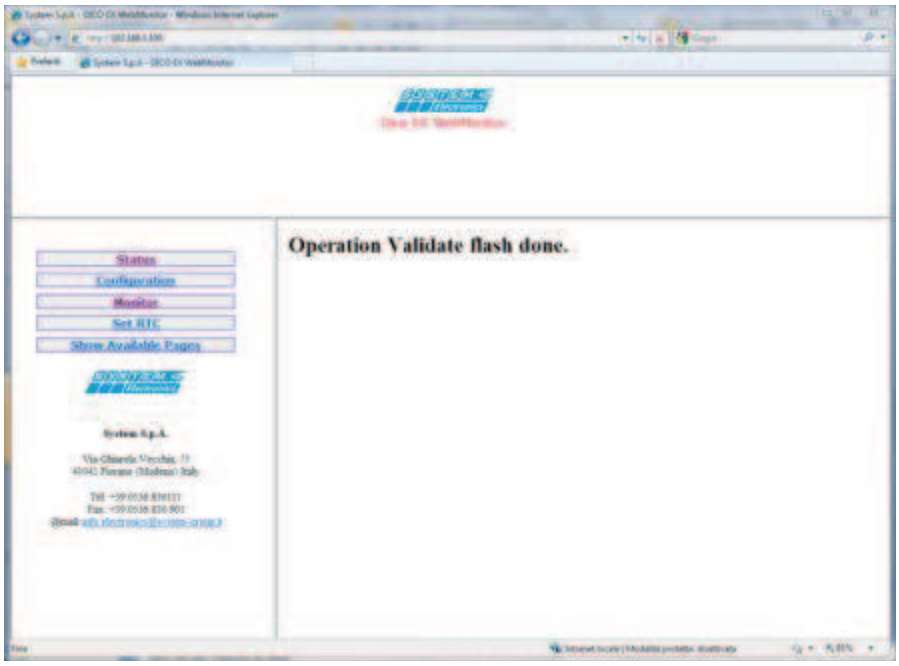


ATTENTION! Should the flash validation operation fail, execute the “Ignore application” function (see chapter " Ignore Application Function on the DICO CPU040 / 508EX / 708EX Card") and repeat all the operations carried out up to now.

Click “**Monitor**”

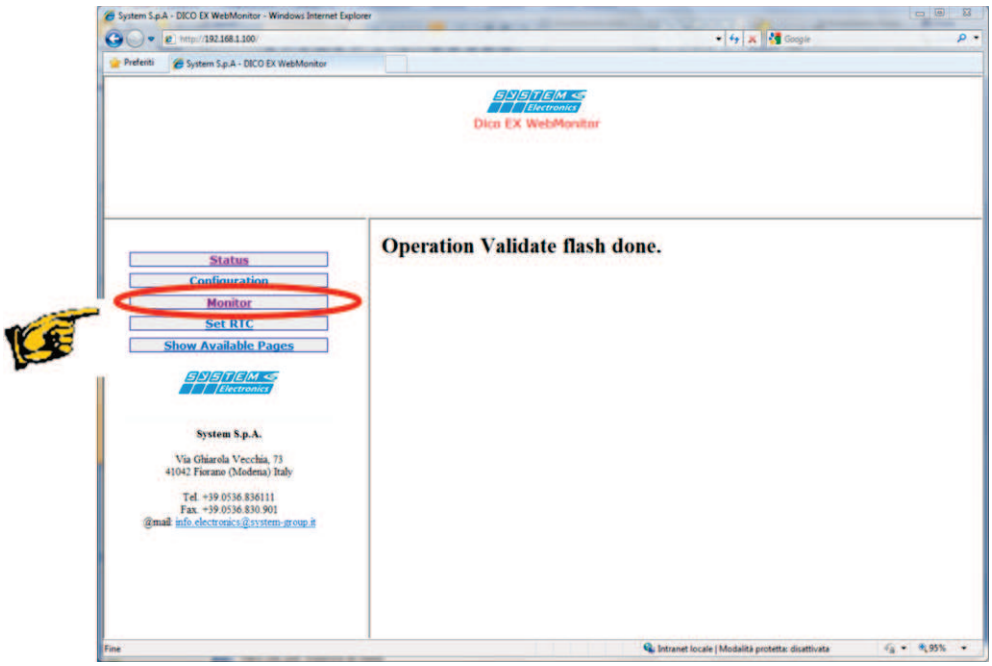

ATTENTION!
If set to “ON”, the switch “**Ignore Application**” (**SW2.1**) shall be set again to “**OFF**”.

Click “**Reset/Start**” to reset the card

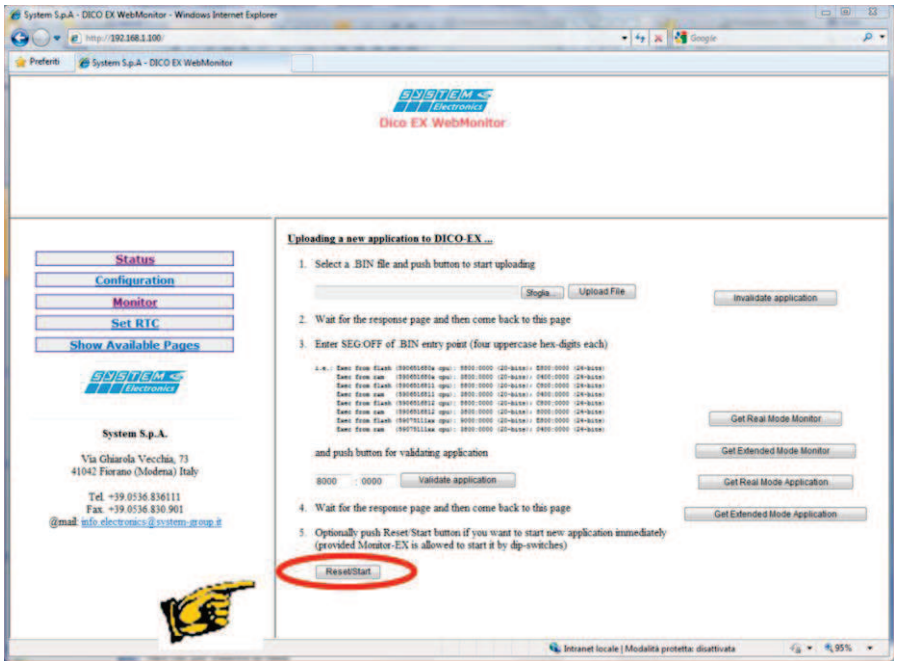

The message "**Now resetting, please wait for a while"** is displayed.



The "**Uploading of a new Application**" has been completed**.**