



MST03

Operation Manual



Catalogue

Asset Temperature Logger (MST03)	3
App Introduction	3
Software Installation	3
Device List	4
Device Information Interface	5
Device Name	5
LED	6
Sensor Parameters Configuration	6
Adv Parameters Configuration	7
Historical Data	8
Upgrade Firmware	10
Change Password	11
Factory Reset	11
Shutdown	11
Statement	12

Asset Temperature Logger (MST03)

App Introduction

MinewLink APP is designed to manage Minew's smart hardware products. Users can scan devices to view basic information and configure settings, enabling interconnectivity among multiple devices.

Software Installation

Download the MinewLink App:


For Android Systems: Search for "MinewLink" in the Google Play to download.

If you encounter any issues during the download, please contact our staff to obtain the App installation package.


Device List

1. On the homepage, select the 'Sensor Devices' category, and click on the 'Asset Temperature Logger' module to enter the device list interface. . adding all nearby MST03 devices to the list. The displayed device information includes: model, MAC address, temperature, battery level, and signal strength.

2. The top search supports MAC address search, and a one-click toggle next to the search box switches between Celsius (°C) and Fahrenheit (°F).

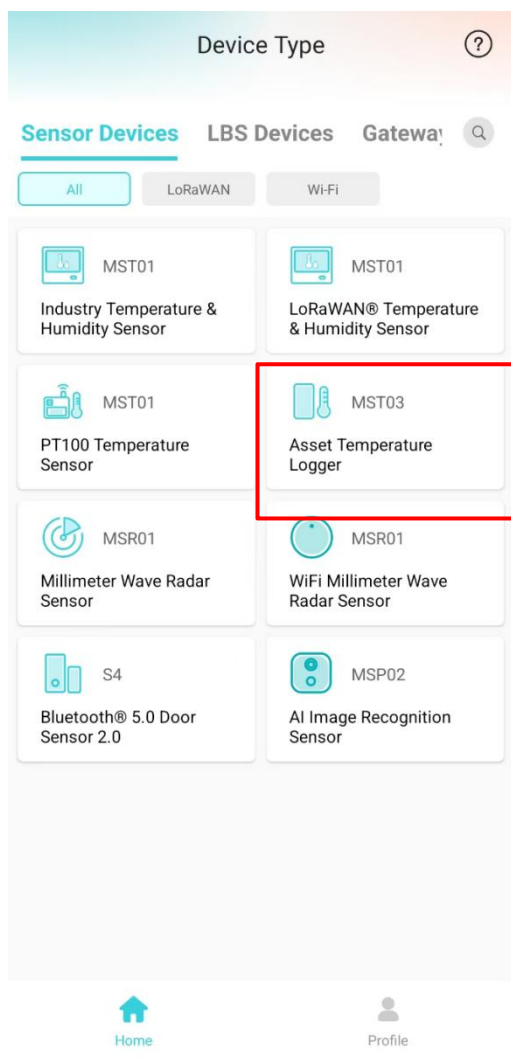


Device type

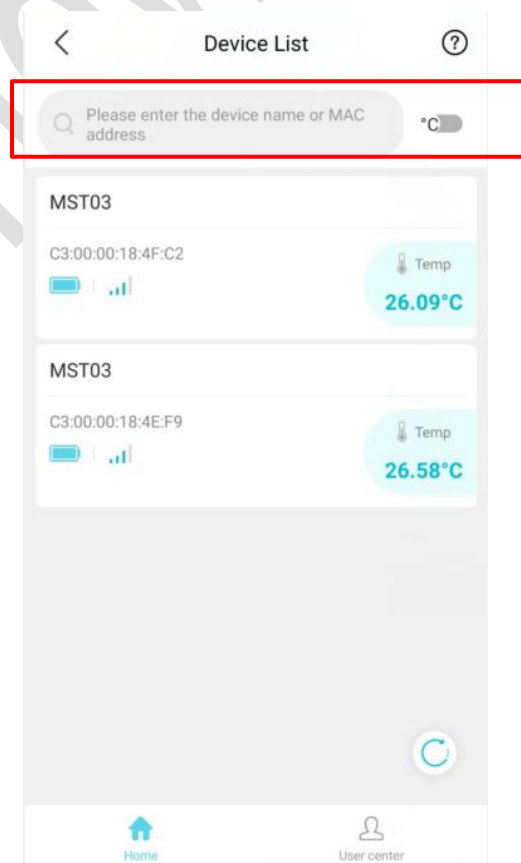

Device List

Device Information Interface

- 1) · Enter Device List: On the homepage, click the "MST03 Asset Temperature Logger" module to view all devices of this type.
- 2) · Device Connection: Select a device to connect. The system will prompt for a device key. Enter the correct password "minewtech1234567" and click confirm to complete the connection.
- 3) · Auto Disconnection: The device will automatically disconnect from the app after 5 minutes and return to the device list screen.

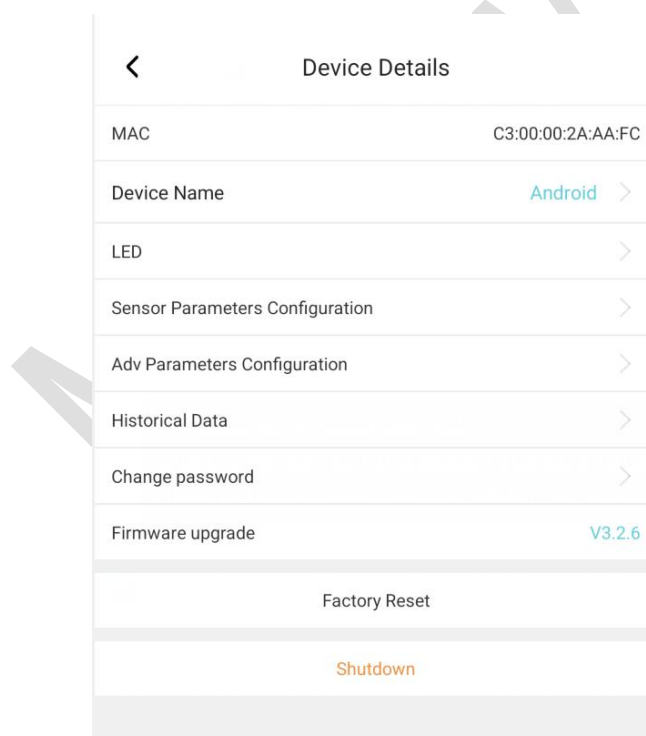

Device Name

Click on the "Device Name" entry in the device details interface, enter the device name in the popup. It supports uppercase and lowercase letters, numbers. The length is limited to 8 characters.

LED

Supports configuring the frequency and duration of the led. You can also turn off the led individually. Click 'Confirm' to apply the changes.


Sensor Parameters Configuration

1、 Access Sensor Parameters Configuration:

In the device information interface, click on the 'Sensor Parameters Configuration' option. Users can configure parameters such as Temperature Range, Sampling Interval, and Measurement Delay.

2、 Notes:

(1) The upper temperature limit must be greater than the lower temperature limit, or the configuration will fail.

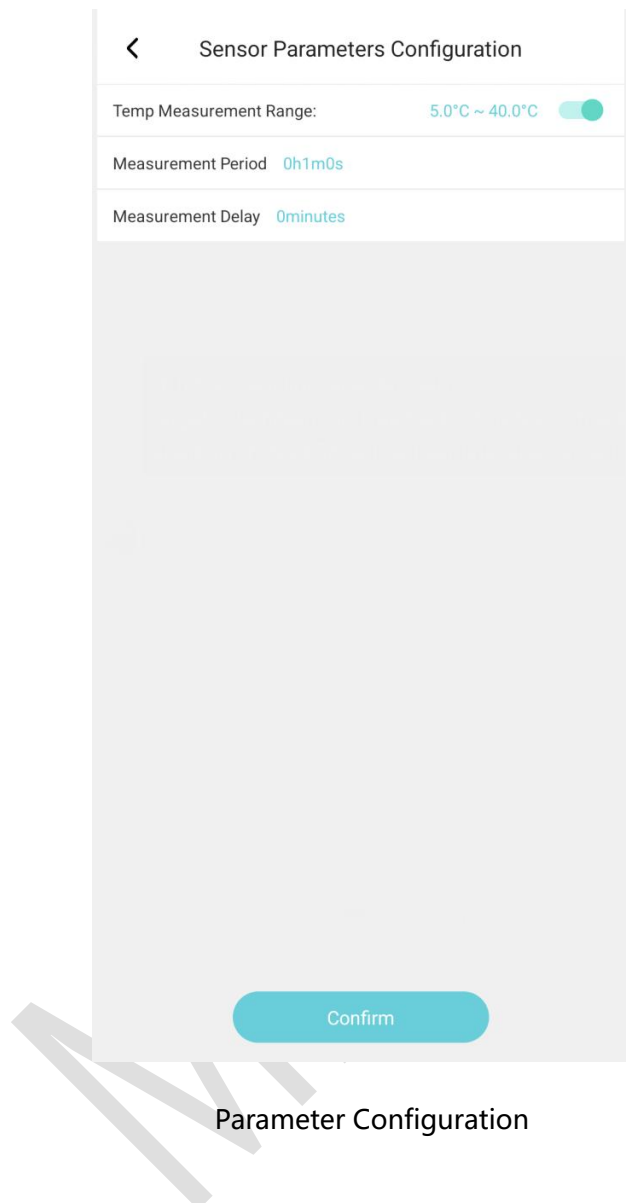

Adv Parameters Configuration


1. Access Adv Parameters Configuration:

On the device information interface, click on the 'Adv Parameters Configuration' option.


2. Frame Switching and Configuration:

Within the opened interface, toggle between the 'Device Info' (referred to as Info frame) and 'Combination' frames using tabs.

Users can individually configure the Adv interval and power for both Info and Combination frames.

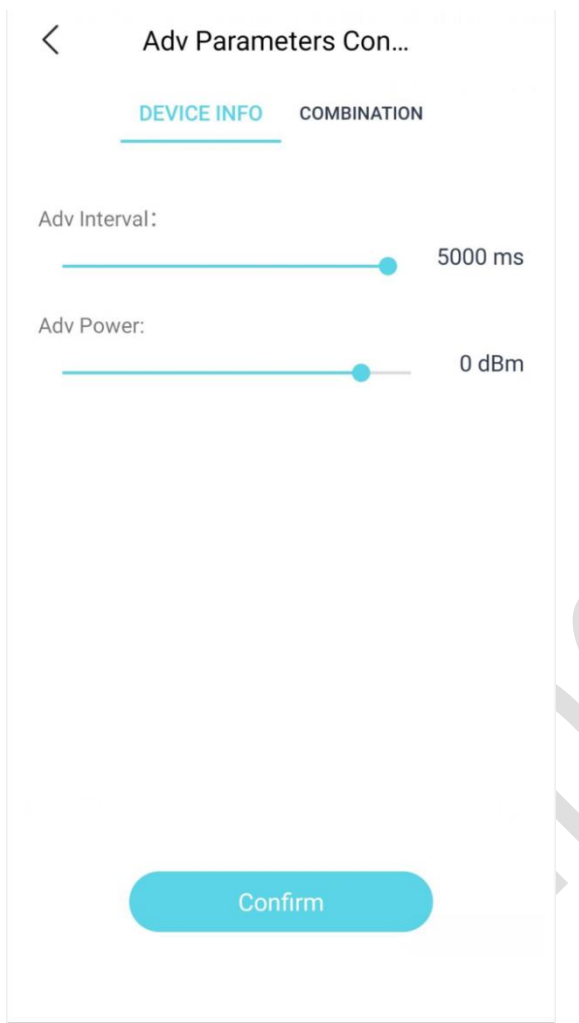

Info frame

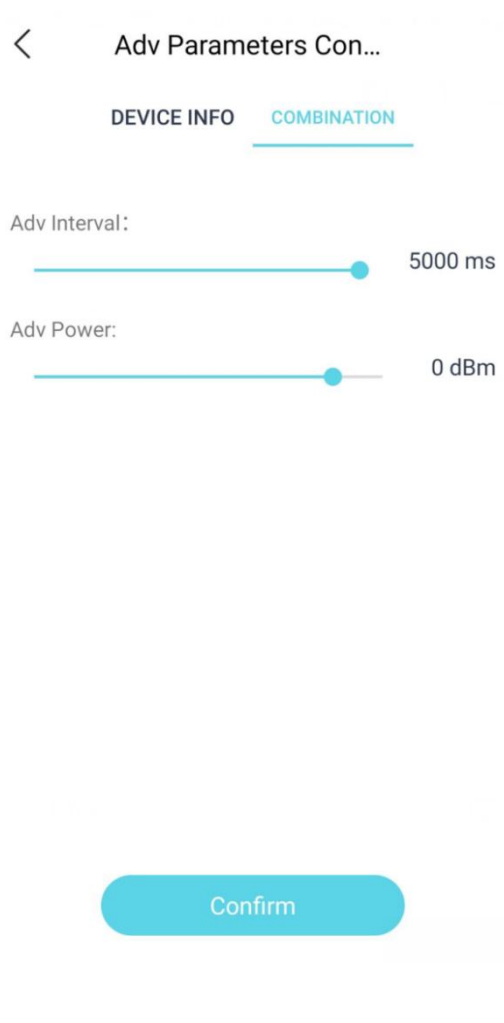

Combination frame


Historical Data

1、Get Historical Data:

On the device information interface, click on the 'Historical Data' option.

Users can view historical data by selecting a time period. The default end time is

the current time, and the default start time is 24 hours before. Alternatively, users can fetch all data with a single click.

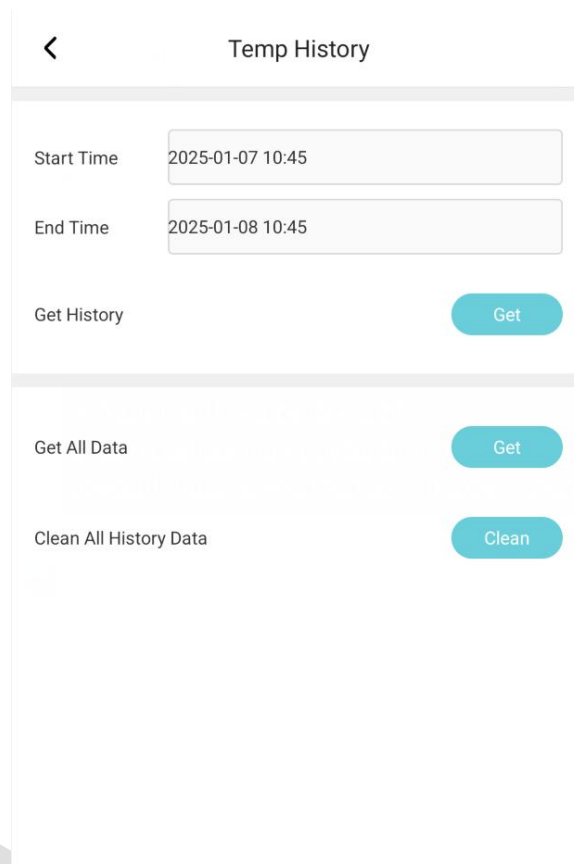

Note:


(1) If the temperature sampling interval set previously is too large, there might be a situation where 'No Data Found' occurs. In this case, a Toast notification will appear, indicating 'No Data Found.'

2、View Temperature Data

After loading the retrieved data, visually inspect the temperature data in a line graph. Review the highest and lowest temperatures, temperature alarm occurrences, and current values for all configured parameters during the specified

time period.

Data export and sharing are supported in both PDF and Excel formats.

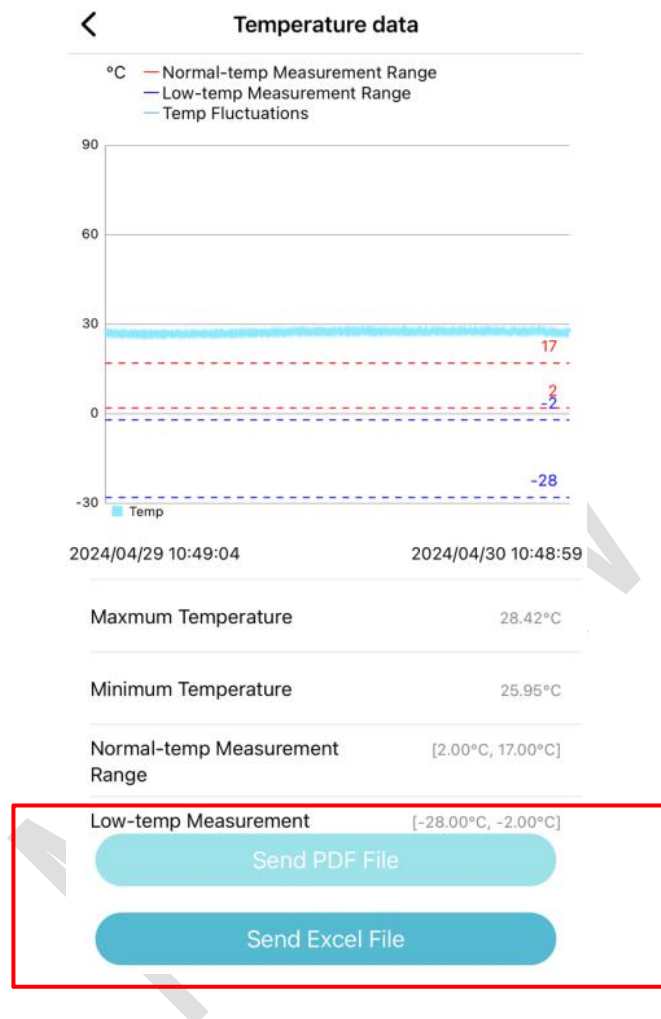

Upgrade Firmware

Click on the "Upgrade Firmware" option in the device information interface. A pop-up will ask if you want to upgrade the firmware. Click the "Confirm" button in the pop-up, select the firmware upgrade package locally, and transfer it to the device via Bluetooth for the upgrade.

Change Password

Support password change, effective after disconnecting.

Factory Reset

Click on the "Factory Reset" option in the device information interface. Click the "Confirm" button in the pop-up, and the device will be restored to factory settings, with all parameters reverting to their default values as listed below:

Name	Default Value	Parameter Range
Temperature unit	°C	°C/°F
Temperature Range switch	On	On/Off
Temperature Range	5°C~40°C	-30°C~50°C
Measurement Period	10s	5s ~ 24h
Info Frame Interval	5000ms	100ms~5000ms
Info Frame Power	0dBm	-40dbm~+4dbm
Combination Frame Interval	5000ms	100ms~5000ms
Combination Frame Power	0dBm	-40dbm~+4dbm
Measurement Delay	5minutes	1minutes~30minutes
Password (16 digits)	minewtech1234567	/

Shutdown

Shut down the device can only be done through the app. The device itself

does not support manual shutdown. Clicking the "Shutdown" button will prompt a confirmation dialog. If confirmed, the device will disconnect, and the app will return to the device list page, indicating a successful shutdown

Statement

Rights Statement: This manual and all the contents it contains are owned by Shenzhen Minew Technologies Co., Ltd. and is protected by the laws of China and applicable international conventions regarding copyright. The company has the right to change the content of this manual according to the needs of technological development and change the version without notice. Without the written permission and authorization of the company, any individual, company group, or organization may not change the contents of this manual or otherwise use part or all of the contents of this manual, violators will be held responsible according to law.

SHENZHEN MINEW TECHNOLOGIES CO LTD. reserves the right of final interpretation of this manual to the extent that it differs from the actual product, and is subject to change without notice. The company does not assume responsibility for property or personal injury caused by abnormal operation of the customer, please follow the technical specifications in the manual to design and operate the corresponding products.