REKLUSE®



RIDERS GUIDE

How to get the most out of your Auto Clutch

What the Rekluse Auto Clutch does

- **Automatically engages** the clutch from a stop
- Provides **perfect hookup** and acceleration
- **Eliminates stalling**
- Gives you **full control of shifting**, just like your OE clutch

What it doesn’t do

The Rekluse auto clutch is **not an automatic transmission**. You still need to shift to **maintain the proper gear selection** when accelerating, cruising, and decelerating.

LET’S RIDE

- **Always check Free Play Gain**
- **Lugging is not loving. Don’t lug the bike in tall gears.**
- **Don’t trust the gear indicator. Know the gear you are in.**

VIDEOS ARE BETTER

Check out videos for everything in this guide at:

REKLUSE.COM/VIDEOS

Doc ID: 193-6200A
Doc Rev: 050124

GETTING STARTED

- Always start your bike in **Neutral** and let the engine warm up. If the bike is cold, clutch the bike manually until it is warm.
- To begin moving, slowly apply the throttle.
- Upshift gears as you normally would using the clutch lever as you shift or use clutchless shifting techniques.
- Your Rekluse auto clutch engages during normal riding from idle to 1,800 RPM. While cruising, keep the RPM at or **above 2000 RPM** to keep the clutch from slipping. **Check your Free Play Gain before each ride**


⚠WARNING

Failure to check and verify Free Play Gain can cause failure or damage to this product.

FREE PLAY GAIN


Maintaining Free Play Gain is very important.

- **Too much Free Play Gain** results in drag and poor disengagement
- **Too little Free Play Gain** results in excessive slipping, heat, and premature clutch wear or failure
- Refer to your Rekluse Manual for detailed instructions

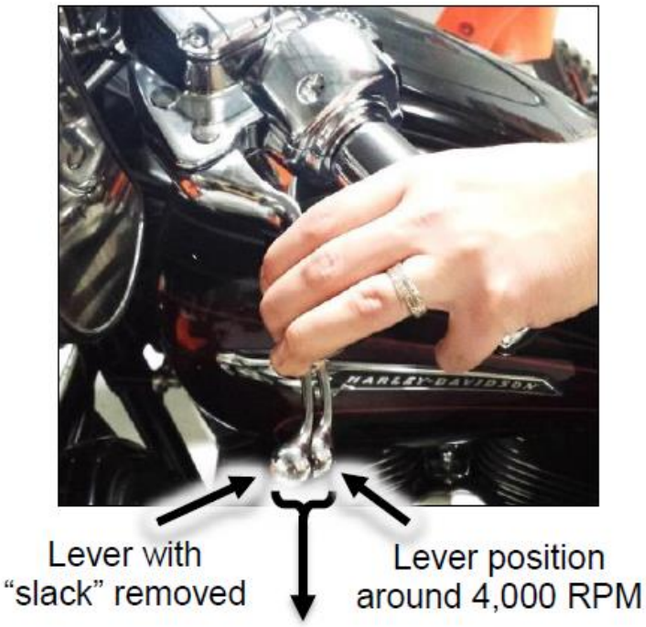

Free Play Gain
1/8"-1/4" (3 mm-6 mm) lever movement

MAINTAINING PROPER ENGINE RPM

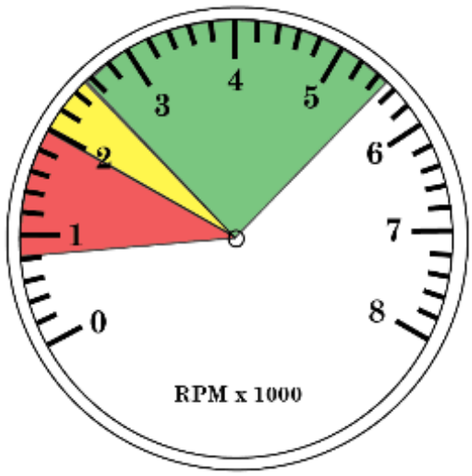

The Rekluse auto-clutch **engages as the engine RPM rises**. **Riding at a very low RPM can cause slipping**, wear, and clutch failure because **the clutch has not fully engaged yet**.

Idle to 2000 RPM

Cruising at this RPM should only be done in 1st. Cruising in this zone in any gear higher than 1st may result in clutch damage or free-wheeling which can be dangerous.

2,000-2,400 RPM

This is a healthy zone when cruising under moderate throttle. There is no need to downshift unless you are pulling a heavy load, riding uphill, or accelerating quickly.

ABOVE 2400 RPM

Keep the RPM in this zone when loaded with weight, riding uphill, or accelerating quickly.

DON'T TRUST THE GEAR INDICATOR

Some Harley-Davidson models have a gear indicator on the gauges. **This indicator may display the wrong gear when using an auto clutch.** Always know what gear your transmission is in.

For instance, if the bike is in 4th gear at a stop and you roll on the throttle, the bike may display "2nd" gear because it does not realize the clutch is slipping. This will damage the clutch!

⚠WARNING

Starting in a gear too tall WILL cause clutch damage!

Doc ID: 193-6200A
Doc Rev: 050124

USE OF OTHER AFTERMARKET PRODUCTS

Hydraulic or Cable Conversions

If your bike was converted from cable to hydraulic or the other way around, call Rekluse to ensure you have the right components.

Clutch Components

This clutch is **NOT** designed or intended for use with **any non-Rekluse aftermarket clutch components**. The use of aftermarket components will prevent proper clutch function.

Aftermarket clutch levers (including adjustable levers)

Some aftermarket levers claim “Lighter Lever Pull”. These levers may cause clutch drag, difficulty shifting, and failure to disengage the clutch and are not recommended.

ITEMS TO NOTE:

- **Do not dyno-test** this product without reviewing the included Dyno sheet.
- Thoroughly read and understand the **Safety Information** and **User’s Guide** before operating the bike with this product
- **Do not “rev” the throttle while in gear and not moving**. Revving the engine while in gear will lurch the bike forward or move it unexpectedly



Do not dyno-test this product without reviewing the included dynamometer document.

PARKING

Use the included lever safety straps every time you park or leave the bike. **Refer to the Safety Information sheet for more information.**

- Pull the lever tight against the handlebar.
- Wrap the safety strap around the lever and handlebar, pull it tight, then fasten it.



FREE-WHEELING

If engine RPM drops too low in a tall gear the auto-clutch can disengage and “free-wheel”. If this occurs, select an appropriate gear for your speed, and gently roll on the throttle until the clutch engages again.

To prevent free-wheeling maintain a proper engine RPM. See the previous section for details.

⚠CAUTION

It is important not to downshift while in a free-wheeling state or loss of control may occur when the clutch re-engages. Refer to the Safety Information sheet for more information.

OIL

Your clutch requires the correct OE primary chaincase oil.

- Always use the OE-recommended oil type and weight
- Rekluse recommends our **Factory Formulated Oil**
- Change the oil according to the bike manufacturer's recommended interval. Old or worn oil will result in poor clutch performance

NEED ADDITIONAL HELP?

Website

www.rekluse.com/support

Phone

(208) 426-0659

Monday thru Friday: 8 am – 5 pm Mountain Time

Email

customerservice@rekluse.com


REKLUSE