



AVR ISP Programmer (In-Sytem programmer) for ATMEL

[AVR In-System Programmer](#)

Four-port in-system programmer for Atmel AVR Microcontrollers
www.rpmsys.com

[Gratis Programmer](#)

Ladda ned 100% Gratis Programmer & Gratis Ringsignaler!
Ringsignaler.Funmobile.com

Ads by Google

Introduction:

This AVR ISP original by ATMEL you can found on "AVR software and technical Library - April 2003" CD-rom. It's a small component count I design new PCB and change some component that easy to build small PCB. The new firmware was written by [John Samperi](#) for AT90S2313. This code can program more devices.

Specification

- Device support

AT90Sxxxx

AT90S1200 rev. A*
 AT90S1200 rev. B*
 AT90S1200 rev. C*
 AT90S1200*
 AT90S2313*
 AT90S2323*
 AT90S2333
 AT90S2343*
 AT90S4414*
 AT90S4433
 AT90S4434
 AT90S8515*
 AT90S8535

ATtinyXX

ATtiny12
 ATtiny15
 ATtiny19
 ATtiny28
 ATtiny26 *

ATmegaXXXX

ATmega8 *
 ATmega8 BOOT *
 ATmega16*
 ATmega16 BOOT*
 ATmega32*
 ATmega32 BOOT*
 ATmega64*
 ATmega64 BOOT*
 ATmega8515 *
 ATmega8515 BOOT*
 ATmega103
 ATmega603
 ATmega128
 ATmega128 BOOT
 ATmega161
 ATmega161 BOOT
 ATmega163
 ATmega83
 ATmega163 BOOT
 ATmega83 BOOT
 ATmega8535??


ATmega8535 BOOT??

* Verified device


- Use power supply from target board
- RS-232 control at 19200 BPS
- Support AVR Studio 4


Schematic detail

The schematic for AVR ISP show in picture 1, IC1 DS275 use for RS-232 Driver because it small and no need external component IC2 AT90S2313 is the CPU to communication and receive command from PC that run AVR Prog to control target CPU. The wire from AVR ISP to target CPU not exceed 15 cm

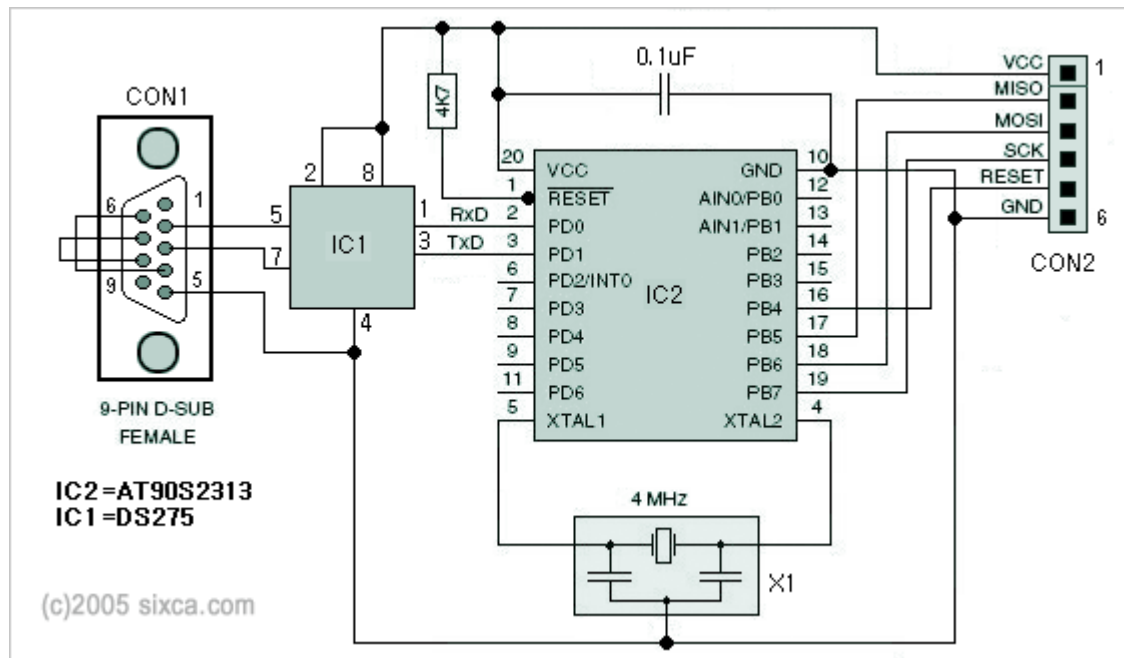

Picture 1 . Schematic of AVR ISP

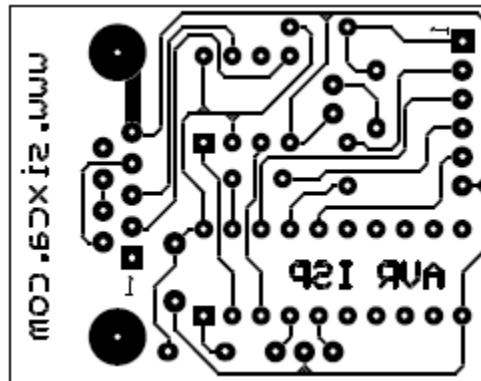

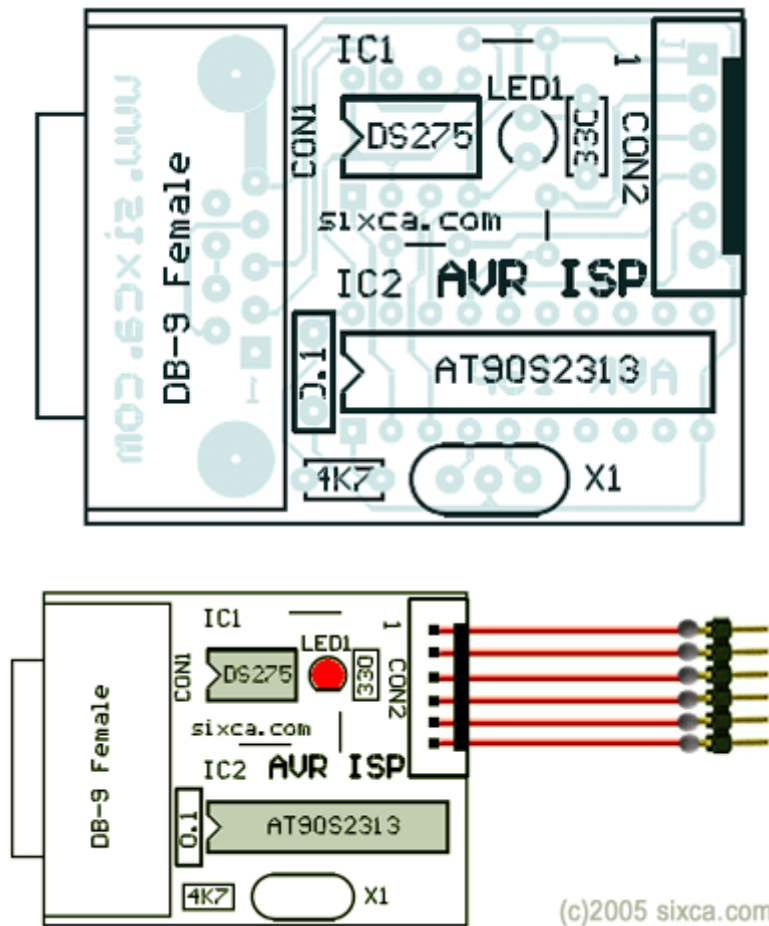

Picture 2. component installation.

This firmware compiled to run on crystal 4MHz ,so the target device must connect crystal 4MHz on XTAL1 and XTAL2 pin. But, if your target device use internal oscillator and enabled .its not need any external oscillator.

To use this AVR ISP with target device that run at 8MHz you can do this by recompile the firmware source code. Before recompile you need to change the line in source code as below


```
.equ xtal_8mhz=0 ; if 0 then 4MHz Xtal
```

Change to :

```
.equ xtal_8mhz=1 ; if 0 then 4MHz Xtal
```

After change firmware you can compiler it by Avrasm found from ATMEL web site

To use AVR ISP

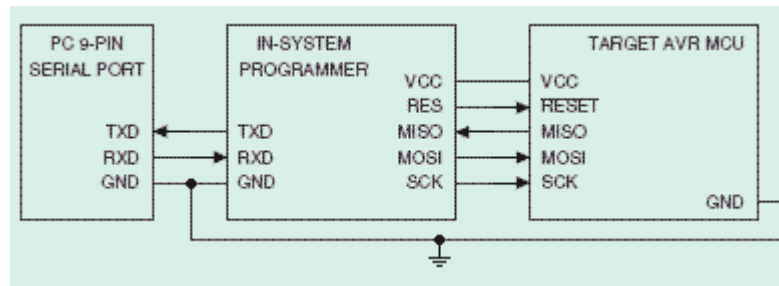

Picture 3.Show how to use AVR ISP

Download

- Source code
- Object code(Hex)
- schematic
- AVRProg