
FIRMWARE & RADIO SETUP

The D1b has no flight controller, so there is no firmware to flash. Everything happens in your transmitter. Do it with the propeller OFF.

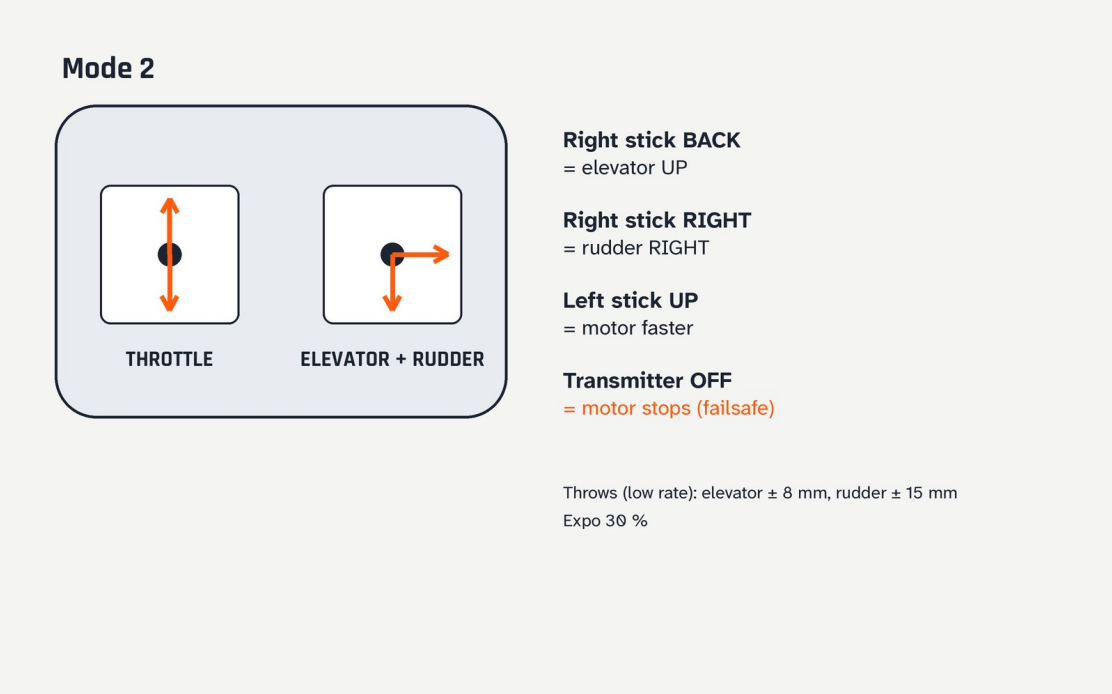

1 CHANNELS

Function	Plug in	Stick (Mode 2)	AETR*	Spektrum
Throttle	ESC	Left stick up/down	CH3	CH1
Elevator	Servo right side	Right stick up/down	CH2	CH3
Rudder	Servo left side	Right stick left/right (aileron channel)	CH1	CH2

* AETR = Futaba, FrSky, RadioMaster, Jumper. Rudder sits on the aileron channel so you steer with the right stick. If your radio lets you choose, you can also use CH4 and steer with the left stick.

2 THROWS AND EXPO

Surface	Low rate (first flights)	High rate	Measured
Elevator	± 8 mm	± 12 mm	at the trailing edge next to the fuselage
Rudder	± 15 mm	± 25 mm	at the trailing edge, bottom

Expo: 30 % on elevator and rudder.

3 FAILSAFE, ESC, TIMER

- Failsafe: Throttle 0 (motor off), surfaces neutral. Test: transmitter off, the motor must stop within 1 second.
- ESC: Calibrate the throttle range as the ESC manual says.
- ESC: Brake off. Low-voltage cut-off on (3.2 V per cell).
- Timer: 8 min for the first flights. Land, then check the battery: rest voltage ≥ 3.7 V per cell.