


"JUMP MODE" (HOLD A, PRESS B)

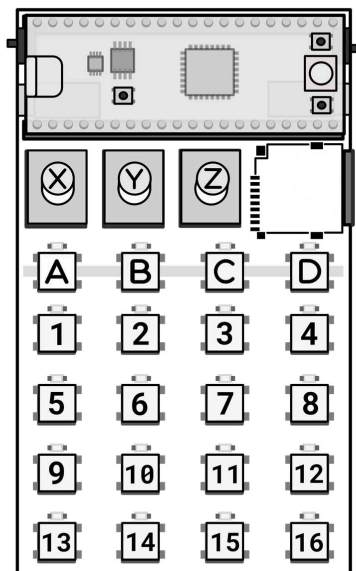

JUMP

PRESS 1-16

RETRIGGER

HOLD 1-16, PRESS 1-16

LOOP

HOLD 1-16, HOLD 1-16,
HOLD 1-16

TOGGLE EFFECT

HOLD A, PRESS 1-16

ANY MODE

CHANGE BANK+SAMPLE HOLD B, PRESS 1-16,
PRESS 1-16

CHANGE VOLUME HOLD A, TURN X

LOW-PASS FILTER HOLD A, TURN Y

TIME STREEETCH HOLD A, TURN Z

RANDOMIZE SEQUENCE HOLD B, TURN X

CHANGE PITCH HOLD B, TURN Y

CHANGE TEMPO HOLD B, TURN Z

CHANGE SAMPLE HOLD C, TURN X

TUNNELING! HOLD C, TURN Y

CHANGE QUANTIZATION HOLD C, TURN Z

RANDOM JUMPS HOLD D, TURN X

RANDOMIZE EFFECTS HOLD D, TURN Y

CHANGE RUNE HOLD D, TURN Z

"FX MODE" (HOLD A, PRESS C)

JUMP HOLD A, PRESS 1-16

SATURATION PRESS 1

LOSS PRESS 2

DISTORTION / FUZZ PRESS 3

BITCRUSHER PRESS 4

TIMESTRETCH PRESS 5

DELAY PRESS 6

COMB FILTER PRESS 7

FAST REPEAT PRESS 8

GATE / TIGHTEN PRESS 9

REVERB PRESS 10

STEREO PAN PRESS 11


SCRATCH PRESS 12

FILTER PRESS 13

PITCH CHANGE PRESS 14

REVERSE PRESS 15

TAPE STOP PRESS 16

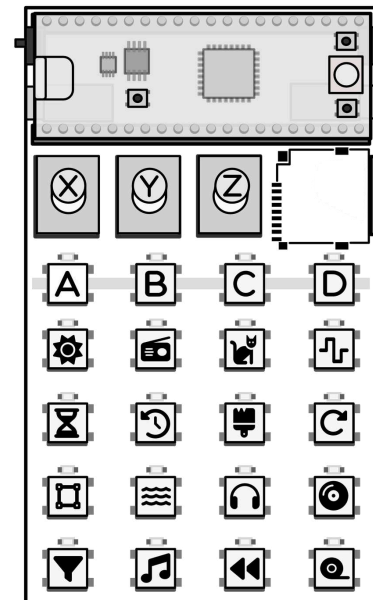

EFFECT HOLD

SATURATION 1

LOSS 2

DISTORTION / FUZZ 3

BITCRUSHER 4

TIMESTRETCH 5

DELAY 6

COMB FILTER 7

FAST REPEAT 8

GATE / TIGHTEN 9

REVERB 10

STEREO PAN 11

SCRATCH 12

FILTER 13

PITCH CHANGE 14

REVERSE 15

TAPE STOP 16

AND....

TURN X

TURN Y

PREAMP

TYPE

AMOUNT

PREAMP

POSTAMP

BITS

FREQUENCY

FEEDBACK

DURATION

SPREAD

SPREAD

DURATION

DURATION

EXPANSE

DRY/WET

RATE

DEPTH

RATE

DURATION


DEPTH

DURATION

DEPTH

DURATION

"JUMP MODE" (HOLD A, PRESS B)

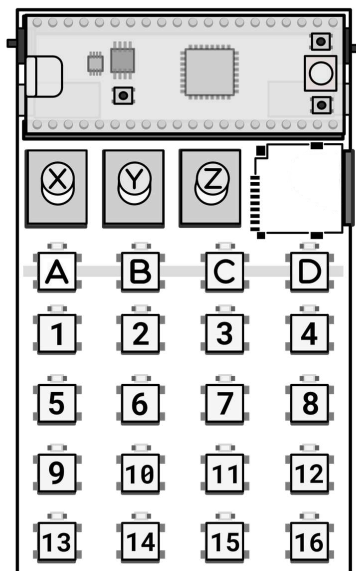

JUMP

PRESS 1-16

RETRIGGER

HOLD 1-16, PRESS 1-16

LOOP

HOLD 1-16, HOLD 1-16,
HOLD 1-16

TOGGLE EFFECT

HOLD A, PRESS 1-16

ANY MODE

CHANGE BANK+SAMPLE HOLD B, PRESS 1-16,
PRESS 1-16

CHANGE VOLUME HOLD A, TURN X

LOW-PASS FILTER HOLD A, TURN Y

TIME STREEETCH HOLD A, TURN Z

RANDOMIZE SEQUENCE HOLD B, TURN X

CHANGE PITCH HOLD B, TURN Y

CHANGE TEMPO HOLD B, TURN Z

CHANGE SAMPLE HOLD C, TURN X

TUNNELING! HOLD C, TURN Y

CHANGE QUANTIZATION HOLD C, TURN Z

RANDOM JUMPS HOLD D, TURN X

RANDOMIZE EFFECTS HOLD D, TURN Y

CHANGE RUNE HOLD D, TURN Z

"FX MODE" (HOLD A, PRESS C)

JUMP HOLD A, PRESS 1-16

SATURATION PRESS 1

LOSS PRESS 2

DISTORTION / FUZZ PRESS 3

BITCRUSHER PRESS 4

TIMESTRETCH PRESS 5

DELAY PRESS 6

COMB FILTER PRESS 7

FAST REPEAT PRESS 8

GATE / TIGHTEN PRESS 9

REVERB PRESS 10

STEREO PAN PRESS 11


SCRATCH PRESS 12

FILTER PRESS 13

PITCH CHANGE PRESS 14

REVERSE PRESS 15


TAPE STOP PRESS 16

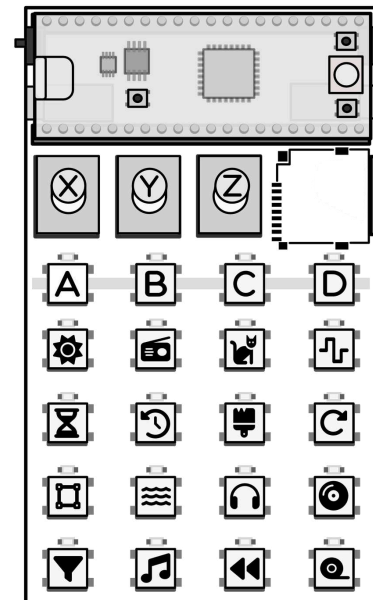

EFFECT	HOLD	TURN X	TURN Y
SATURATION	1	PREAMP	
LOSS	2	TYPE	AMOUNT
DISTORTION / FUZZ	3	PREAMP	POSTAMP
BITCRUSHER	4	BITS	FREQUENCY
TIMESTRETCH	5		
DELAY	6	FEEDBACK	DURATION
COMB FILTER	7	SPREAD	SPREAD
FAST REPEAT	8	DURATION	
GATE / TIGHTEN	9	DURATION	
REVERB	10	EXPANSE	DRY/WET
STEREO PAN	11	RATE	DEPTH
SCRATCH	12	RATE	
FILTER	13	DURATION	DEPTH
PITCH CHANGE	14	DURATION	DEPTH
REVERSE	15		
TAPE STOP	16	DURATION	

AND....

REALLY QUICK START

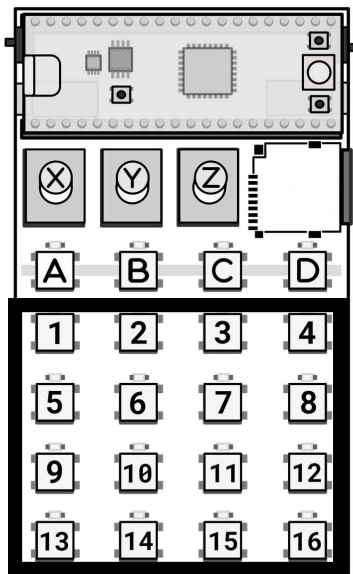

**PRESS ANY OF THE
BOTTOM 16 KEYS - IT
WILL JUMP TO A NEW
PART OF THE SAMPLE!!
TRY PRESSING TWO AT
THE SAME TIME TO
STUTTER.**

HOLD A. KEEP HOLDING!

WHILE HOLDING YOU CAN DO

LOTS OF THINGS:

TURN THE KNOBS TO


CONTROL: VOLUME, FILTER,

AND TIME STREEETCH.


PRESS THE BOTTOM 16

KEYS TO TOGGLE 16

DIFFERENT EFFECTS!!!

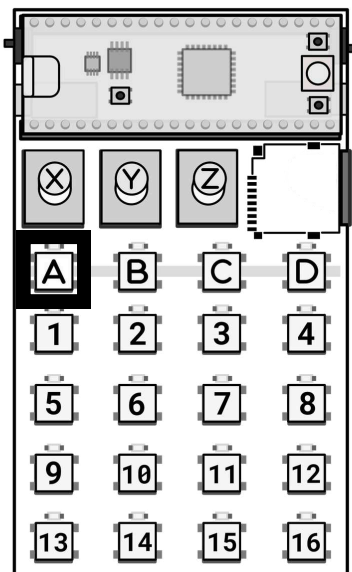

ZEPTOCORE

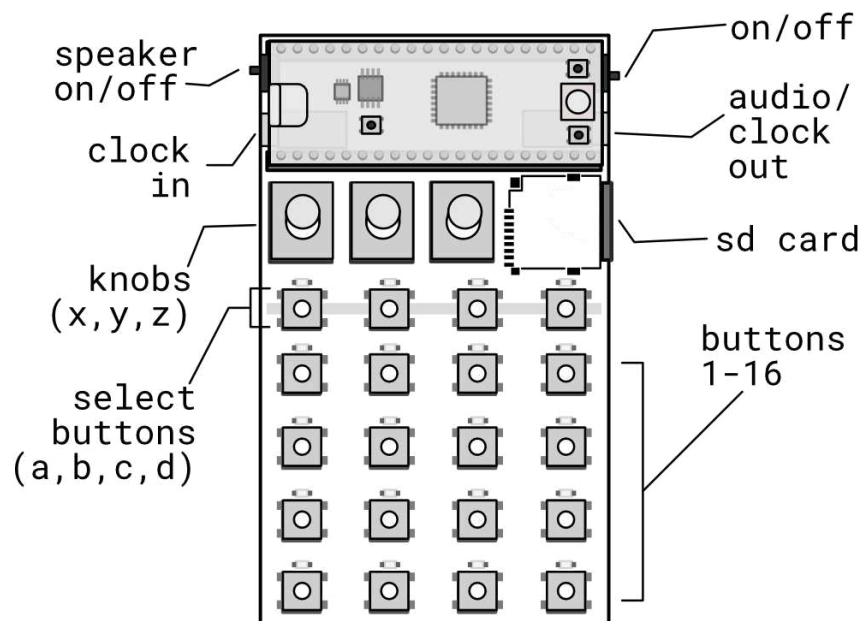

QUICKSTART GUIDE


MUCH MORE INFO AT

ZEPTOCORE.COM

LOAD YOUR OWN SAMPLES AT

ZEPTOCORE.COM/TOOL

REALLY QUICK START

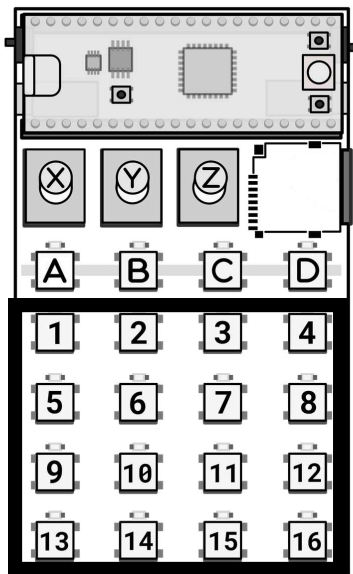

**PRESS ANY OF THE
BOTTOM 16 KEYS - IT
WILL JUMP TO A NEW
PART OF THE SAMPLE!!
TRY PRESSING TWO AT
THE SAME TIME TO
STUTTER.**

HOLD A. KEEP HOLDING!

WHILE HOLDING YOU CAN DO

LOTS OF THINGS:

TURN THE KNOBS TO


CONTROL: VOLUME, FILTER,

AND TIME STREEETCH.


PRESS THE BOTTOM 16

KEYS TO TOGGLE 16

DIFFERENT EFFECTS!!!

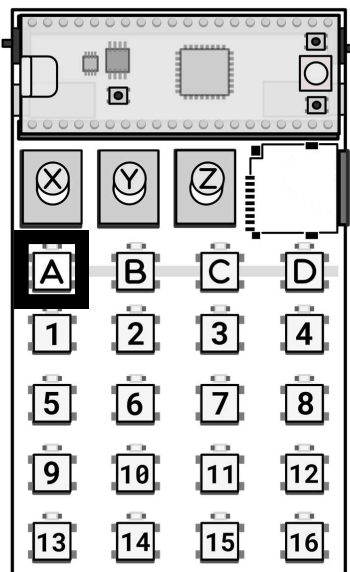

ZEPTOCORE

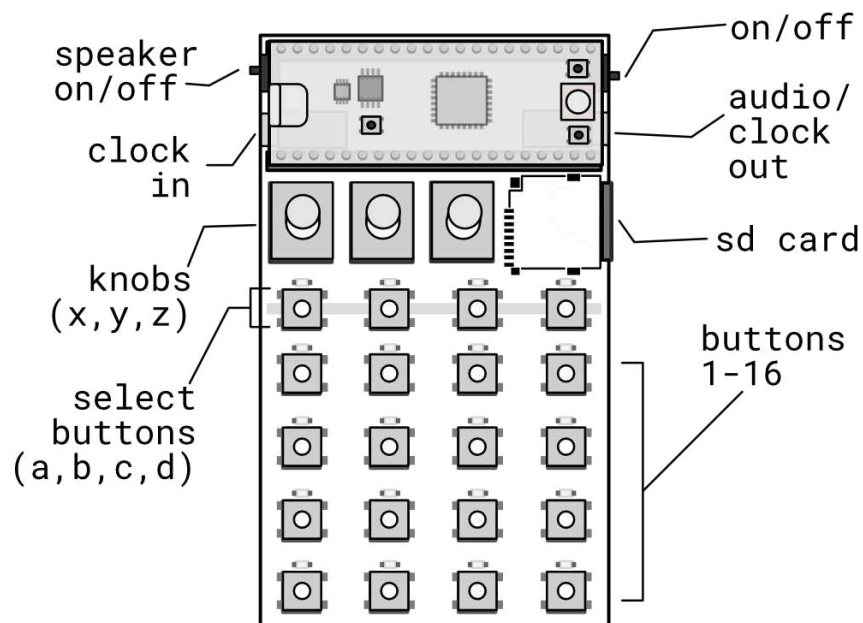

QUICKSTART GUIDE

MUCH MORE INFO AT

ZEPTOCORE.COM

LOAD YOUR OWN SAMPLES AT

ZEPTOCORE.COM/TOOL