
Walther CP 99

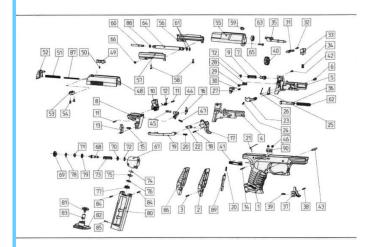

CP99 Parts list	Dealer Price	Retail Price	Π	T		Dealer Price	Retail Price	Γ		Dealer Price	Retail Price
1 Frame			Ħ:	31	Locking lever			61	0-ring		
2 Backstrap			Π:	32	Pin			62	Slide spring		
3 Pin for backstrap			Π	33	Locking lever catch			63	Slide screw		
4 Receiver; right	Т		Π	34	Spring			64	Barrel sleeve		
5 Receiver; left			Π:	35	Release lever			65	Bushing for breech		
6 Cover plate screw			Π	36	Guide rod			66	Barrel rivet		
7 Valve bushing	Т		Пз	7	Magazine catch			67	Valve body		
8 Receiver housing	Т		Π	38	Magazine catch pin			68	Pestle		
9 Valve spring			11:	39	Magazine catch spring			69	Valve nut		
10 Hammer			П	40	Cylinder			70	Disk at pestle		
11 Hammer pin	Т		Π	41	Safety			71	0-ring		
12 Hammer spring	1		Π	42	Screw for receiver right and left			72	0-ring		
13 Sear			Π	43	Pin for frame			73	Pestle spring		
14 Pin	Т		Π	44	Hammer			74	Filter		
15 Sear spring	T		Π	45	Firing pin			75	Puncture		
16 Decocking lever; sma			Π	46	Safety rivet			76	Packing at detonator		
17 Trigger	Т		114	7	Hammer spring			77	Nut at detonator		
18 Trigger pivot pin	Т		Π	48	Slide rear part			78	0-ring		
19 Trigger bar			Π	49	Decocking lever			79	Spring clip		
20 Trigger bar spring			11:	50	Spring			80	Magazine body		
21 Trigger bar spring	Т		П	51	Slide spring			81	Cartridge screw		
22 Transfer link			П	52	Cover plate			82	Magazine shoe		
23 Cylinder latch			TI:	53	Rear sight			83	Nut		
24 Cylinder latch spring			Ħ	54	Pear sight screw			84	Pin for magazine		
25 Pawl			Ħ	55	Slide front part			85	Pin for magazine		
26 Pawl spring	\top		T	56	Inner slide, left			86	Backstrap, large		
27 Trigger lock			15	7	Inner slide, right			87	Guide rod for spring		
28 Trigger lock nut		1	TI:	58	Screw			88	0-ring		
29 Screw	\top		11:	59	Front sight			89	Magazine release slide		
30 Trigger lock spring	1	i i	Π	30	Cylinder pin		i i	90	Locking plate	T .	

Last Updated on 01/25/2001 By jaf