

ATM3330e Test Setup

Nov. 2022

ATM3330e EVK Setup

- HW: ATM3330 EVK, 2.4GHz & 900MHz antennas, PV cell, PPK II, Multi-meter
- SW:
  - SDK5.2, Tera Term,
  - Example code: BLE_adv (power profile), BLE_harv_adv (energy harvesting)



© Atmosic Technologies. All rights reserved. CONFIDENTIAL

ATM3330e EVK Current Measurement

- SDK5.2 example:
  - Path: atmosic_sdk/platform/atm33/ATM33xx-5/examples/BLE_adv
  - make clean (just once)
  - make REF_BCN:=power_profile run_all (make BOARD=ATMEVK_3330e_QN REF_BCN:=power_profile run_all)

- Configuration:
  - Path: atmosic_sdk/platform/atm33/ATM33xx-5/README
  - Path: atmosic_sdk/platform/atm33/ATM33xx-5/examples/BLE_adv/README
  - Path: atmosic_sdk/platform/atm33/ATM33xx-5/examples/BLE_adv/reference_beacons.mk
  - Path: atmosic_sdk/platform/atm33/ATM33xx-5/examples/BLE_adv/tag_data
  - ATM33_e Series EVK Power Consumption Evaluation User Guide


© Atmosic Technologies. All rights reserved. C O N F I D E N T I A L

ATM3330e EVK Current Measurement


- Current measurement:
  - Install Jumper JP11, remove Jumper J21
  - 2. Connect a dipole on the RFIO port
  - 3. Connect EVB with a USB cable to PC (prevent leakage current from the chip)
  - 4. Measure current of Tx (2.5mA)/ Rx (1.4mA)/ 1s interval (12.1uA) / Retention (18.1uA) / Hibernation (1.3uA).
  - 5. Remove Jumper JP11, install Jumper J21 back

© Atmosic Technologies. All rights reserved. C O N F I D E N T I A L

ATM3330e EVK Current Measurement

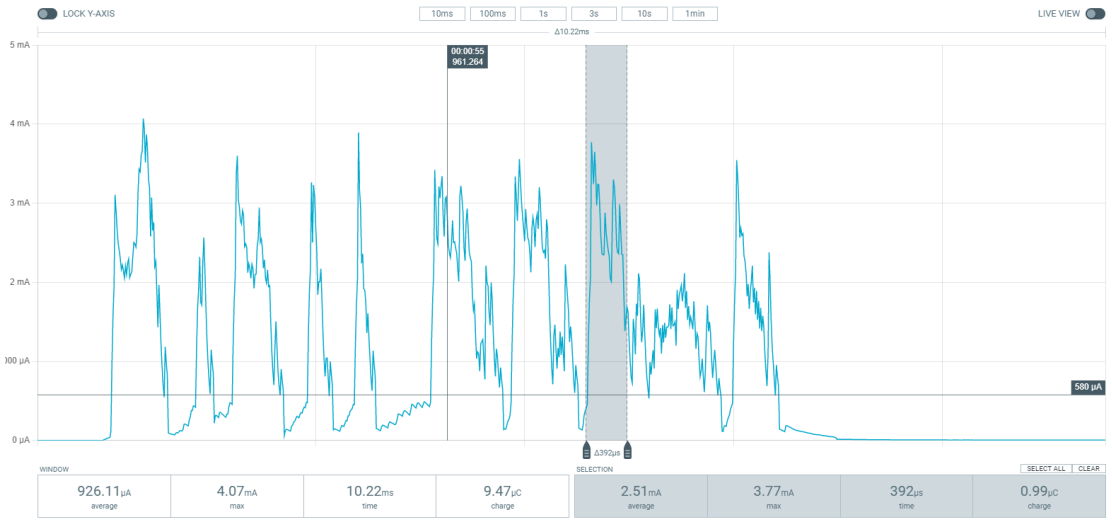




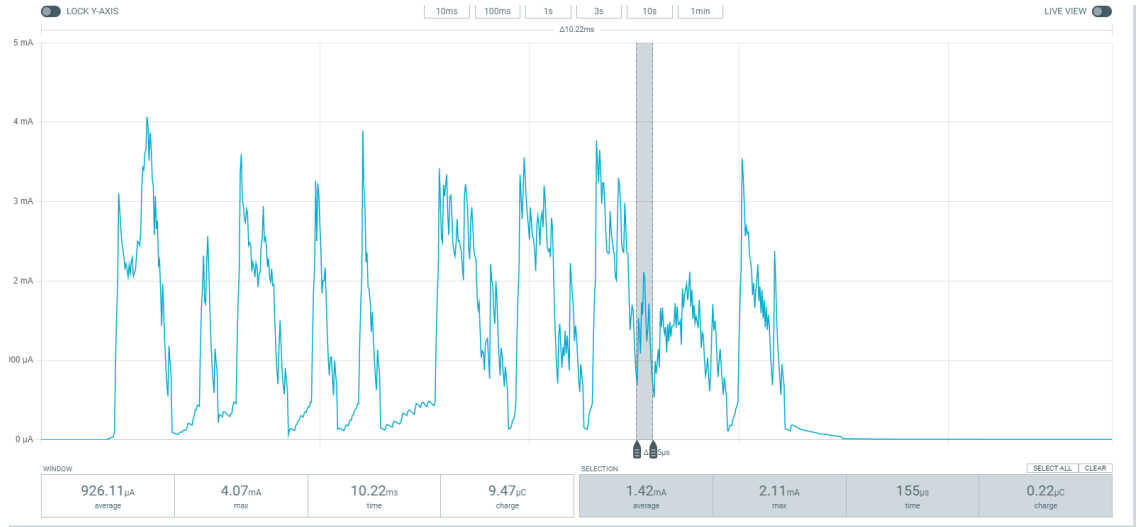



© Atmosic Technologies. All rights reserved. CONFIDENTIAL

ATM3330e EVK Current Measurement

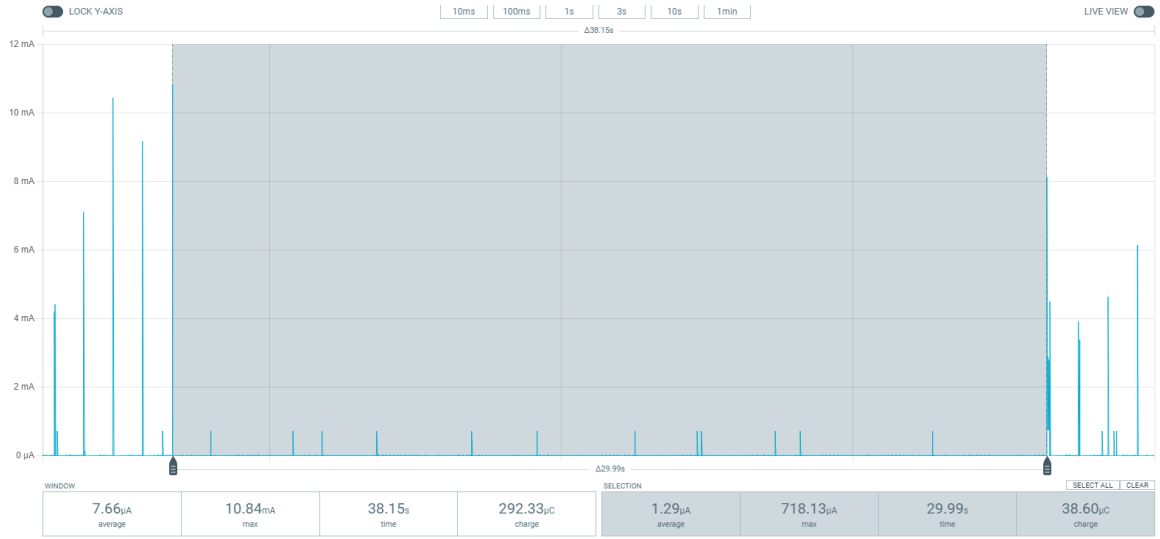

© Atmosic Technologies. All rights reserved. C O N F I D E N T I A L



© Atmosic Technologies. All rights reserved. C O N F I D E N T I A L