IDE Auxiliary Flash Programming Tool

User Guide

SUMMARY: This document describes the functionality and instructions on how to use the Flash Programming Tool as an auxiliary tool with third party IDE tools for the ATM2/ATM3 or ATM33/e Wireless SoC Series.

CONFIDENTIAL



Atmosic™

Table of Contents

Acronyms and Abbreviations 5

1. Overview 6

2. Install IDE Auxiliary Flash Programming Tool 7

3. Install J-Link 8

4. Install 3rd Party IDE Tools 8

5. Features 8

5.1 Main GUI 9

5.1.1 Main GUI - Settings 9

5.1.2 Main GUI - Flash Address Mapping (ATM2/ATM3) 10

5.1.3 Main GUI - Flash Address Mapping (ATM33/e without OTA support) 11

5.1.4 Main GUI - Flash Address Mapping (ATM33/e Supported OTA) 11

5.1.5 Main GUI - Image File Path (ATM2/ATM3) 12

5.1.6 Main GUI - Image File Path (ATM33/e Unsupported OTA) 13

5.1.7 Main GUI - Image File Path (ATM33/e Supported OTA) 14

5.1.8 Main GUI - OTA Checkbox (Only Supports ATM33/e) 15

5.1.9 Main GUI - Start Button 16

5.1.10 Main GUI - Setup Wizard Menu 17

5.1.11 Main GUI - Edit NVDS Menu 18

5.1.12 Main GUI - Coredump Menu 20

5.2 IDE Project Setup Wizard GUI 21

5.3 NVDS GUI 23

5.4 Coredump 24

6. How to Write Flash File to EVK 24

6.1 Write Unsupported OTA Image 25

6.2 Write Supported OTA Image 31

7. Write the Files in the Output Directory to EVK 35

7.1 Write Unsupported OTA Image 35

7.2 Write Support OTA Image 35

8. How to Generate IDE Project 38

9. How to Modify NVDS Setting 45

10. How to Get Core Dump Information 49

11. Troubleshooting 51

References 53

Revision History 53

CONFIDENTIAL

List of Figures

Figure 5-1 Main GUI
Figure 5-2 ATM2/ATM3 Flash Address Mapping in Main GUI
Figure 5-3 Unsupported OTA Flash Address Mapping in Main GUI
Figure 5-4 Support OTA Flash Address Mapping in Main GUI
Figure 5-5 ATM2/ATM3 Image File Path in Main GUI
Figure 5-6 Unsupported OTA Image File Path in Main GUI
Figure 5-7 Support OTA Image File Path in Main GUI
Figure 5-8 Support OTA Checkbox in Main GUI
Figure 5-9 Start Button in Main GUI
Figure 5-10 Setup Wizard Menu in Main GUI
Figure 5-11 - Setup Wizard Sub Menu in Main GUI
Figure 5-12 Edit NVDS Menu in Main GUI
Figure 5-13 Edit NVDS Sub Menu in Main GUI
Figure 5-14 Coredump Menu in Main GUI
Figure 5-15 Coredump Sub Menu in Main GUI
Figure 5-16 IDE Project Setup Wizard GUI
Figure 5-17 Addition Input Format in IDE Project Setup Wizard GUI
Figure 5-18 NVDS GUI
Figure 6-1 Set Path Type to SDK
Figure 6-2 Set Support OTA Checkbox
Figure 6-3 Select SDK Path
Figure 6-4 Set Platform and Version Type
Figure 6-5 Set Example
Figure 6-6 Set Flash Data File
Figure 6-7 Set the File to be Written
Figure 6-8 Generate Config and Show Flash Address Mapping
Figure 6-9 Write Flash Data Complete Dialog
Figure 6-10 Select Path Type to SDK
Figure 6-11 Set Support OTA Checkbox
Figure 6-12 Select SDK Path
Figure 6-13 Select Platform and Version Type
Figure 6-14 Select Example
Figure 6-15 Select Flash Data Files

CONFIDENTIAL

Figure 6-16 Set the File to be Written
Figure 6-17 Generate Config and Show Flash Address Mapping
Figure 6-18 Write Flash Data Complete Dialog
Figure 7-1 Set Path Type to Image
Figure 7-2 Set Image Path
Figure 7-3 Set the File to be Written
Figure 7-4 Write Flash Data Complete Dialog
Figure 7-5 Set Path Type to Image
Figure 7-6 Set Image Path
Figure 7-7 Set the File to be Written
Figure 7-8 Write Flash Data Complete Dialog
Figure 8-1 Set Path Type to SDK
Figure 8-2 Select SDK Root Directory
Figure 8-3 Select Platform and Version Type
Figure 8-4 Select Example
Figure 8-5 Select Generate IDE Project Sub-menu
Figure 8-6 Select DE Platform
Figure 8-7 Select Compile Option
Figure 8-8 Select Addition option
Figure 8-9 Click Generate Button
Figure 8-10 Generate IDE project complete
Figure 8-11 Click Windows Close Button to Go Back to Main GUI
Figure 9-1 Select From EVK Sub-menu
Figure 9-2 Display NVDS information from EVK
Figure 9-3 Select NVDS Tag Name from EVK
Figure 9-4 Modify Tag Name Content from EVK
Figure 9-5 Click Save Button to Save Modification from EVK
Figure 9-6 Save NVDS Setting Complete
Figure 9-7 Click Windows Close Button to Go Back to Main GUI

List of Tables

Table 1 - Error Message Description

CONFIDENTIAL

Acronyms and Abbreviations

Acronyms	Definition
EVK	Atmosic Evaluation Kit
GUI	Graphical User Interface
IDE	Integrated Development Environment
NVDS	Non-Volatile Memory Store
OTA	Over The Air
SDK	Atmosic Software Development Kit

CONFIDENTIAL

1. Overview

This document is applicable to the ATM2/ATM3 series (with SDK5.3.0 only) and ATM33/e series (with SDK5.2.0 or later) which consists of:

ATM2		ATM3		ATM33/e
ATM2201-x0x	ATM2201-x1x	ATM3201-x0x	ATM3201-x1x	ATM3330e-5DCAQN
ATM2202-x0x	ATM2202-x1x	ATM3202-x0x	ATM3202-x1x	ATM3330-5DCAQN
ATM2221-x0x	ATM2221-x1x	ATM3221-x0x	ATM3221-x1x	ATM3325-5DCAQK
	ATM2231-x1x		ATM3231-x1x	
	ATM2251-x1x			

ATM2/ATM3 series only supported Generate .conf and Setup Wizard functions.

***Note**: Functions that require the use of J-Link, such as Edit Non-Volatile Data Store (NVDS), Coredump, Write flash image are not supported.*

IDE Auxiliary Flash Programming tool installation requires the following software to be pre-installed:

1) Atmosic SDK 5.3 or newer (please refer to Install Flash Programming Tool)
2) J-Link Software Pack (please refer to Install J-Link)
3) Supported 3rd party IDE tools, such as IAR Workbench, SEGGER Embedded Studio and Keil MDK

The IDE Auxiliary Flash Programming Tool supports several main functions: Writing the image to Flash, modifying the NVDS file settings, IDE project setup wizard and getting core dump file. The functions are described as follows:

1) **Write the image to Flash:** Divide the Flash into several partitions, and each partition cannot overlap; each flash partition will correspond to an image file, and the user can decide which flash partition to write by selecting the image file path in the IDE tool, and find the image file address error in advance before writing.

   In addition, whether the user can write Over-The-Air (OTA) depends on whether the flash partition is divided into more blocks. The smaller the flash partition is divided, the more space for OTA to be written to the flash. Therefore, according

CONFIDENTIAL

to the number and type of image files written, the writing methods can be divided into Support OTA and Unsupported OTA.

See **Non-upgradeable Scheme and Upgradeable Scheme sections in the ATM33/e SDK User Reference Manual** for details.
(available from the Atmosic Support website)

2) **Modify NVDS file settings:** There is multiple label information available for modification in NVDS. The user can directly select the NVDS file, then switch to the NVDS GUI to modify the tag value and write it back to EVK; the user can also read and replace the local NVDS file from EVK first, and then let the user modify and write back to EVK.


3) **IDE project setup wizard:** Help users to generate the 3rd party IDE project directories in example directory, such as IAR, SEGGER Embedded Studio and Keil. The user can modify IDE project settings by compiling options during the generated process.

4) **Getting core dump file:** Read core dump information from EVK.

CONFIDENTIAL

2. Install IDE Auxiliary Flash Programming Tool

The IDE Auxiliary tool is already contained by the SDK directory. You can find the executable file at <SDK path>\tools\ide_tool\flash\<OS>\Main.exe. Therefore, you can invoke the IDE Auxiliary Tool from Start Menu/AtmosicSDK.

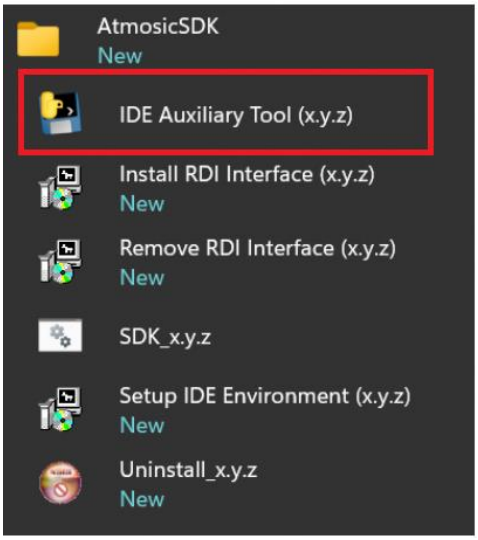

Note: *<OS> means your operating system you are using. e.g., enter Windows_NT for Windows, Linux for Linux, Mac OS is currently not supported.*

3. Install J-Link

The IDE Auxiliary Tool accesses EVK information through J-Link, please see the References section to download the J-Link installation file and install it before using this tool.

4. Install 3rd Party IDE Tools

The IDE Auxiliary tools can generate 3rd party IDE project directories. Depending on the IDE project directory, you can install the corresponding 3rd party IDE tools.

5. Features

The IDE auxiliary tool can be divided by features:

- Main GUI
- IDE Project Setup Wizard GUI
- NVDS GUI
- Coredump

Note: *The NVDS GUI requires SDK installation to operate correctly.*

CONFIDENTIAL

5.1 Main GUI

5.1.1 Main GUI - Settings

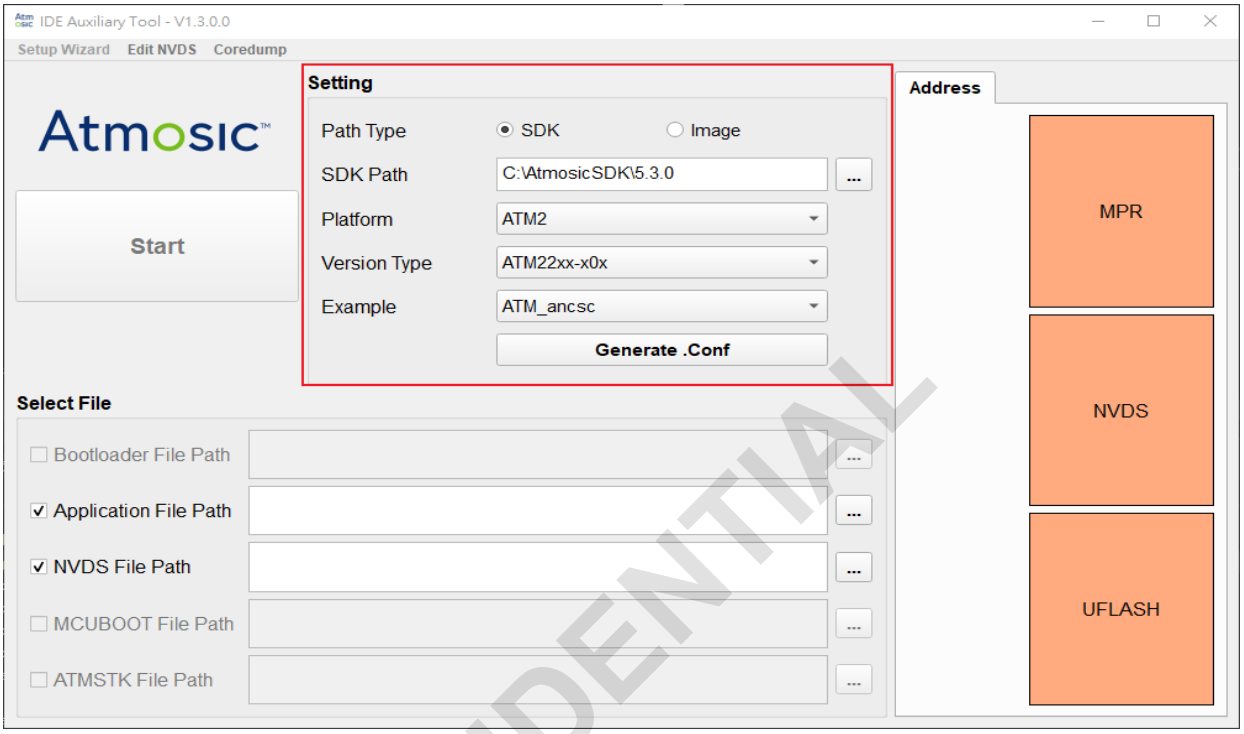


Figure 5-1 Setting in Main GUI

- Path Type

  If the user has not created an example output directory, select SDK , otherwise, select Image .

- Atmosic SDK Path (or Image Path)

  Image file directory path. If Path Type is SDK , select the SDK directory for the path, otherwise select the example output directory.

- Platform

  Currently supported platforms are ATM2/ATM3 and ATM33/e. (This setting is only available when Path Type is SDK)

- Version Type

  Currently supported version type is ATM22xx-x0x/ATM22xx-x1x/ATM32xx-x0x/ ATM32xx-x1x/ATM33xx-5.
  (This setting is only available when Path Type is SDK)

- Example

CONFIDENTIAL

List of all examples supported by the SDK.
(This setting is only available when Path Type is SDK)

- Generate .Conf

  Use this button to generate an example output directory. All image file paths and OTA support options must be selected before the user clicks on this button.

  ***Note**: This setting is only available when Path Type is SDK.*

5.1.2 Main GUI - Flash Address Mapping (ATM2/ATM3)

Write to flash partition is as follows:

- Write Application and NVDS partition, see Figure 5-2.

  ***Note**: Currently the tool only supports ATM2/ATM3 generation of configuration files, but cannot write to flash.*

The flash address information can be obtained from the Application / NVDS image files. If address mapping conflicted with each other then the wrong address information will change to red color and popup warning dialog. See Figure 5-5 for the ATM2/ATM3 file list.

CONFIDENTIAL

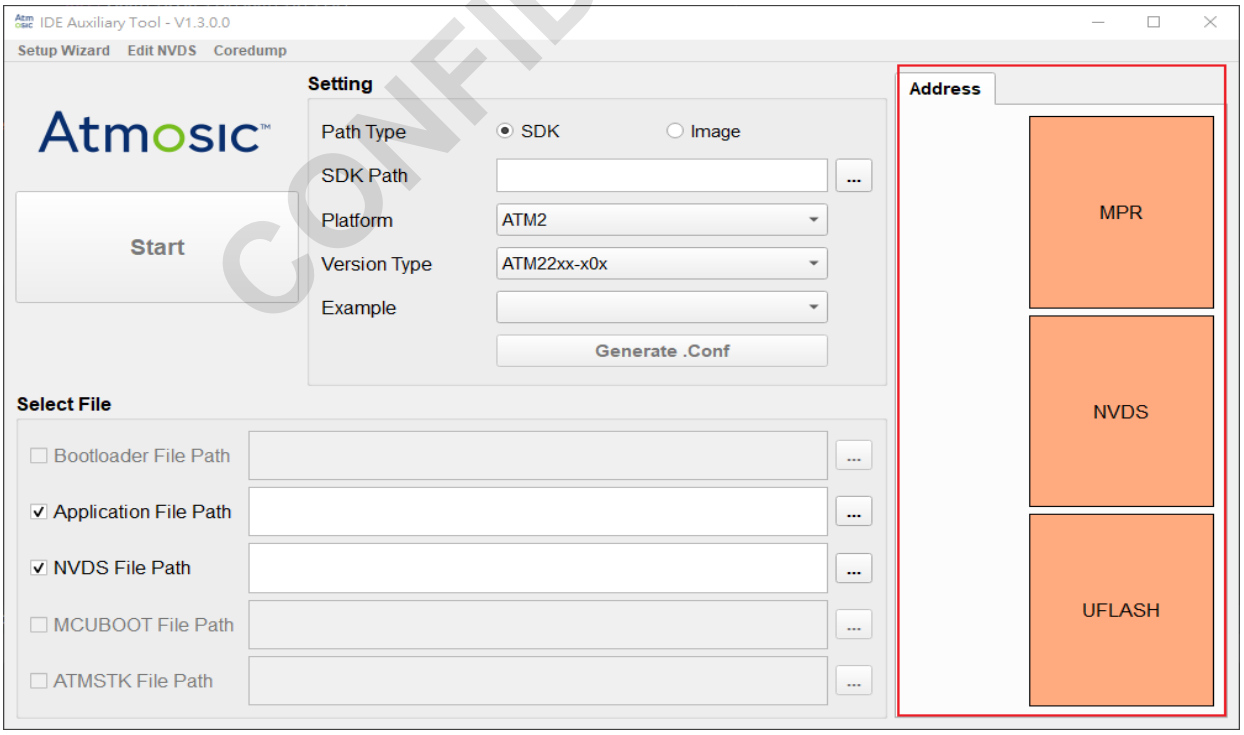


Figure 5-2 ATM2/ATM3 Flash Address Mapping in Main GUI

5.1.3 Main GUI - Flash Address Mapping (ATM33/e without OTA support)

For writing to flash partition, there are two types,

- Write to Bootloader and Application partition, referred to as Unsupported OTA, see Figure 5-3.
- Write to MCUBoot, Bootloader and Application partition, referred to as Supported OTA, see Figure 5-4.

This section describes writing to the Unsupported OTA partition.

The flash address information can be obtained from the Bootloader / Application / NVDS image files. If address mapping conflicted with each other then the wrong address information will change to red color and popup warning dialog. See Figure 5-6 for the Unsupported OTA file list

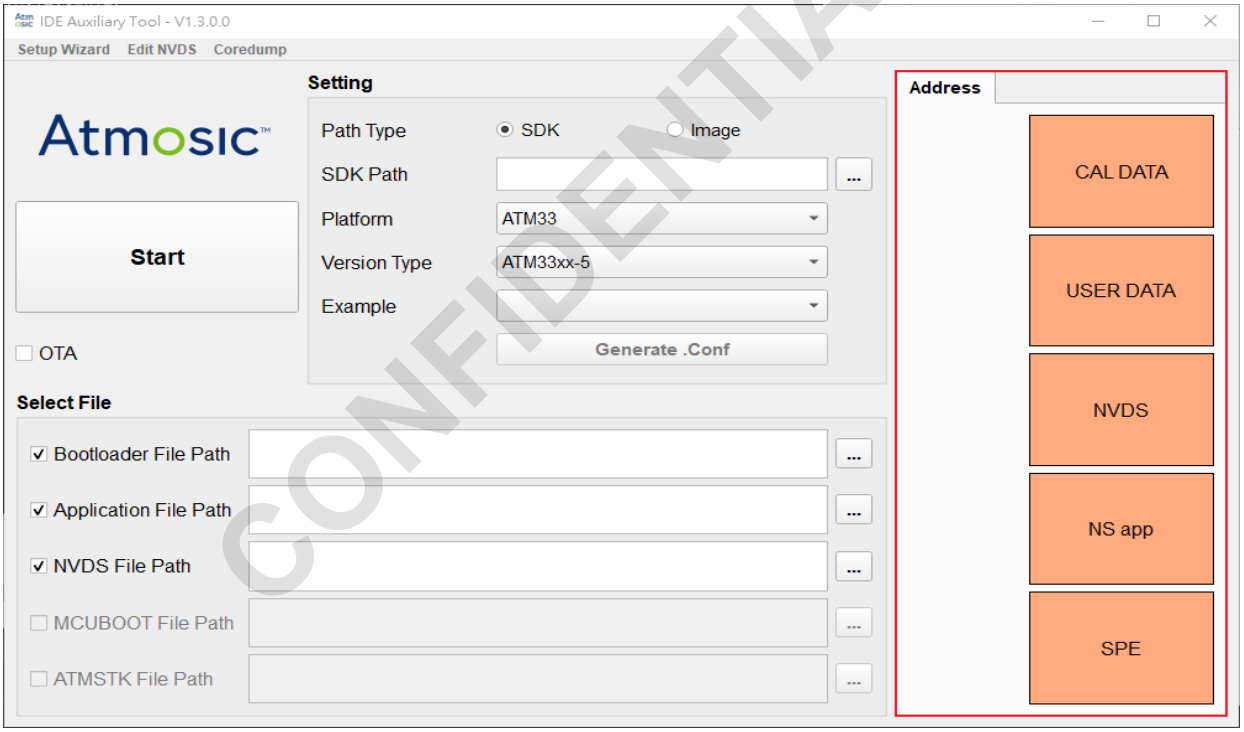


Figure 5-3 Unsupported OTA Flash Address Mapping in Main GUI

5.1.4 Main GUI - Flash Address Mapping (ATM33/e Supported OTA)

The flash address information can be obtained from the Bootloader / Application / NVDS / MCUBOOT / ATMSTK image files. If address mapping conflicted with each other then the wrong address information will change to red color and popup warning dialog.

See Figure 5-7 for the Supported OTA file list.

CONFIDENTIAL

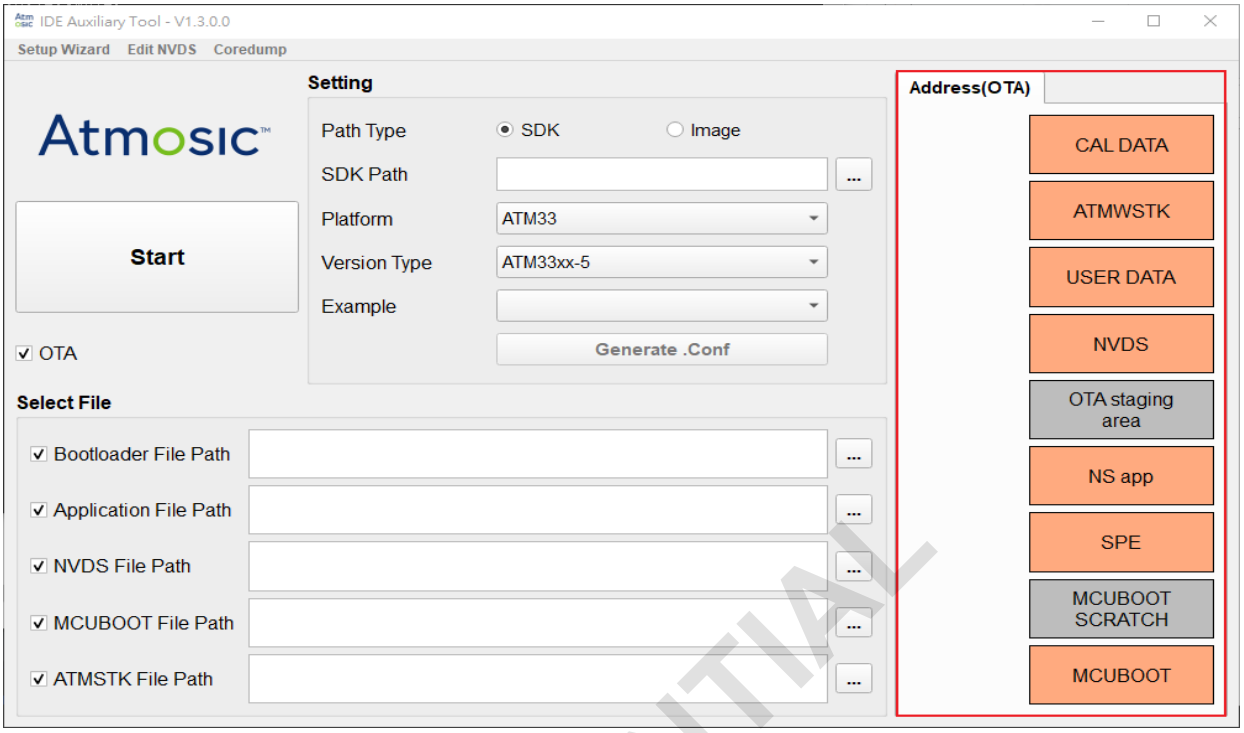


Figure 5-4 Support OTA Flash Address Mapping in Main GUI

5.1.5 Main GUI - Image File Path (ATM2/ATM3)

If the user does not want to write a certain file, they can uncheck the checkbox before the file path.

This file path is only allowed to be selected when the Path Type is SDK, otherwise, it will be set to the default path. See Figure 5-5.

CONFIDENTIAL

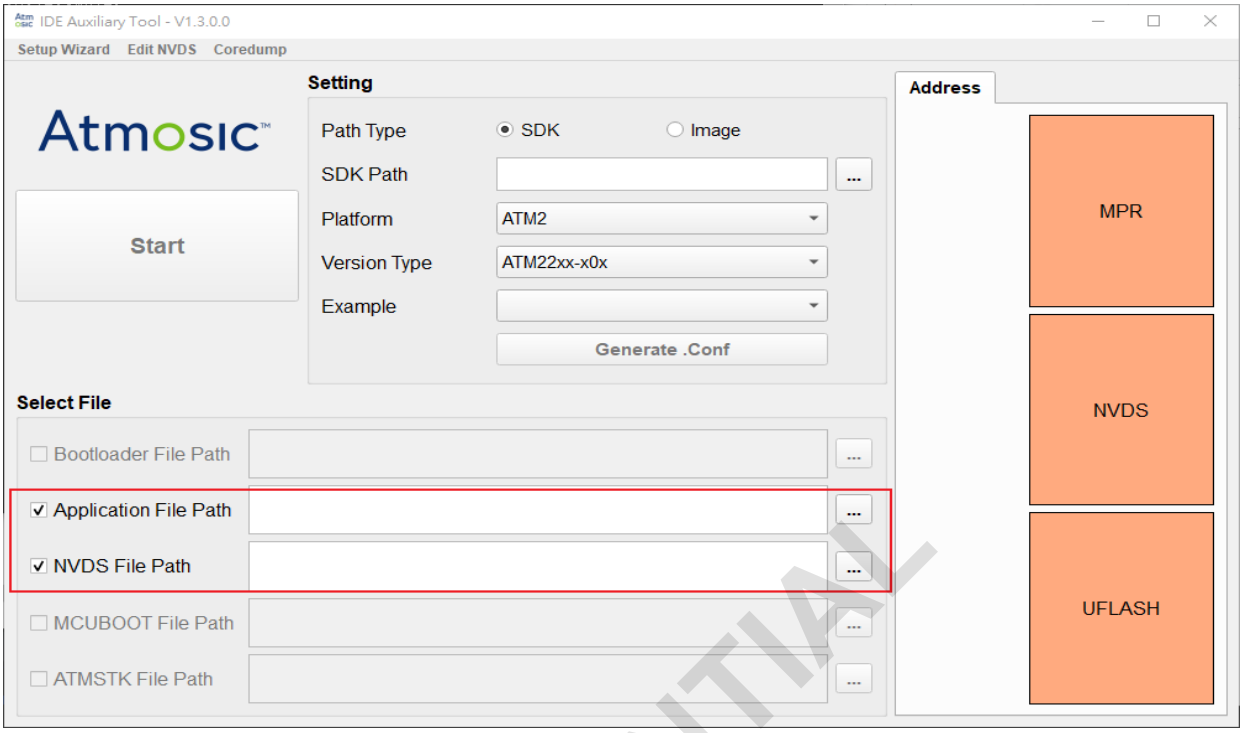


Figure 5-5 ATM2/ATM3 Image File Path in Main GUI

5.1.6 Main GUI - Image File Path (ATM33/e Unsupported OTA)

If the user does not want to write a certain file, they can uncheck the checkbox before the file path.

This file path is only allowed to be selected when the Path Type is SDK , otherwise, it will be set to the default path. See Figure 5-6.

CONFIDENTIAL

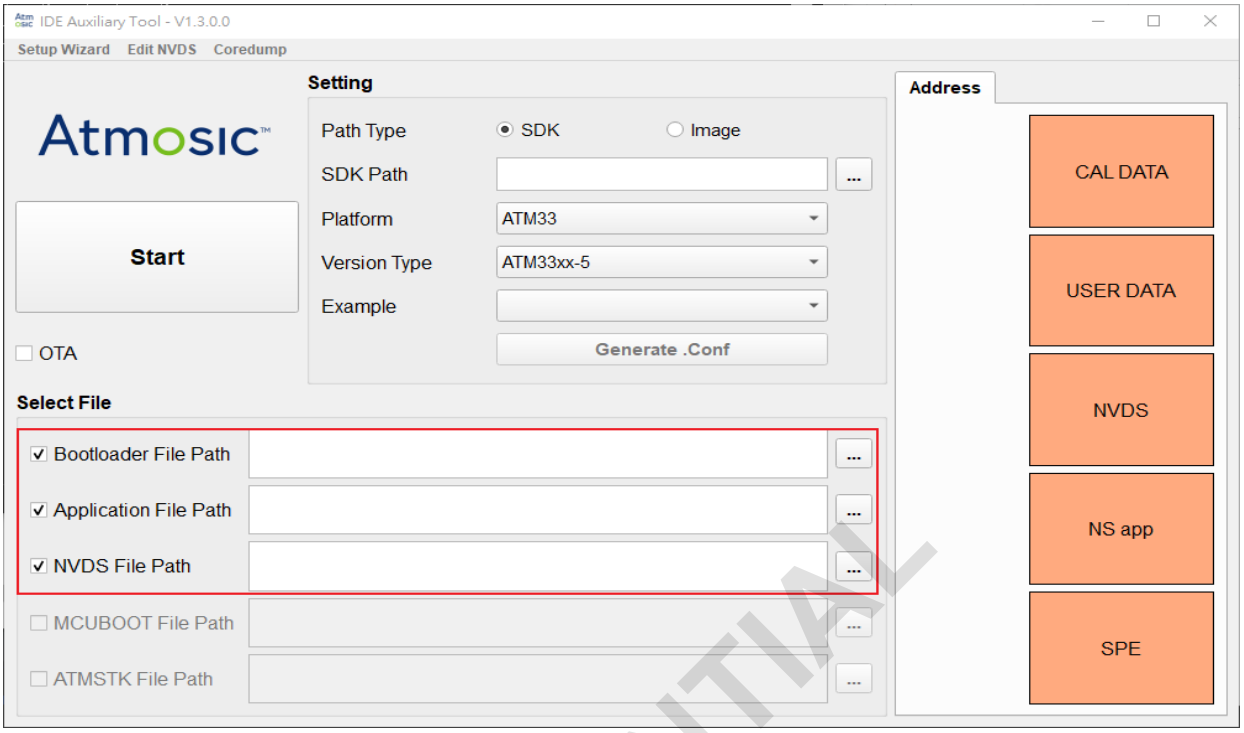


Figure 5-6 ATM33/e `Unsupported OTA` Image File Path in Main GUI

5.1.7 Main GUI - Image File Path (ATM33/e Supported OTA)

If the user does not want to write a certain file, they can uncheck the checkbox before the file path.

This file path is only allowed to be selected when the Path Type is SDK, otherwise, it will be set to the default path. See Figure 5-7.

CONFIDENTIAL

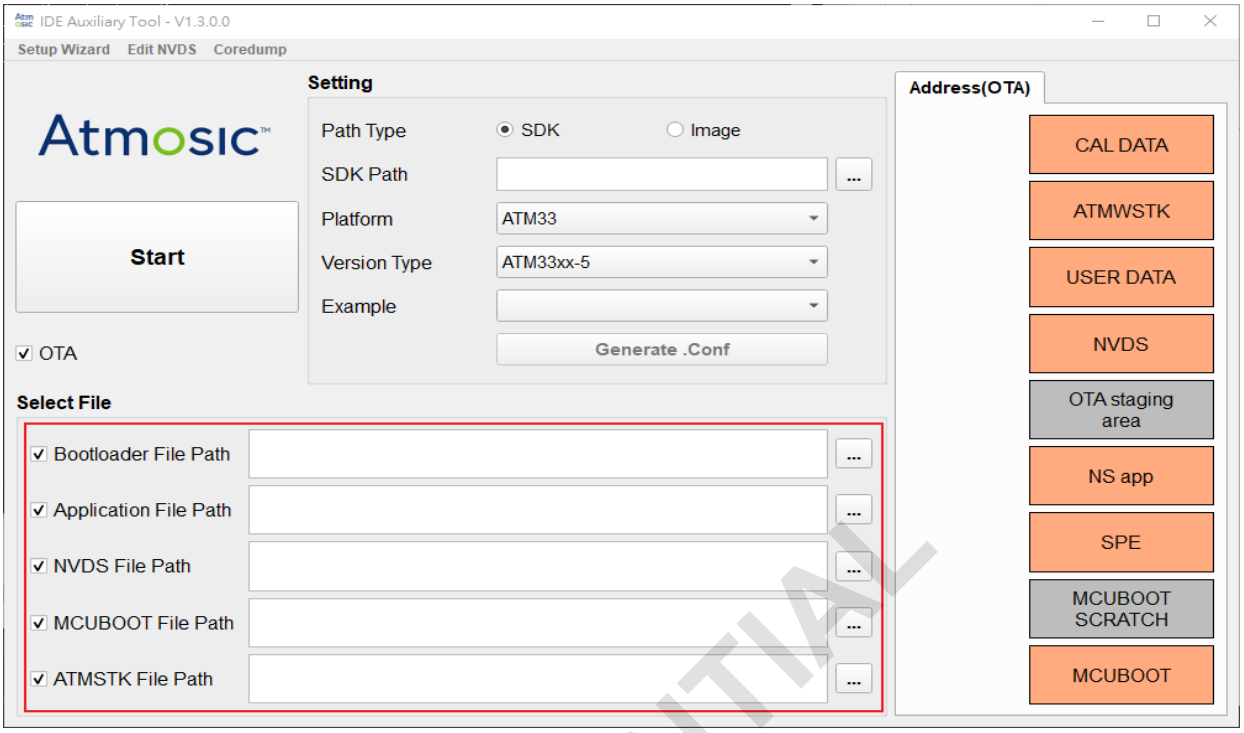


Figure 5-7 ATM33/e Support OTA Image File Path in Main GUI

5.1.8 Main GUI - OTA Checkbox (Only Supports ATM33/e)

If the image file supports OTA then check this item.
(When Path Type is Image, this item will display the OTA option of the example configuration file and cannot be modified.) See Figure 5-8.

CONFIDENTIAL

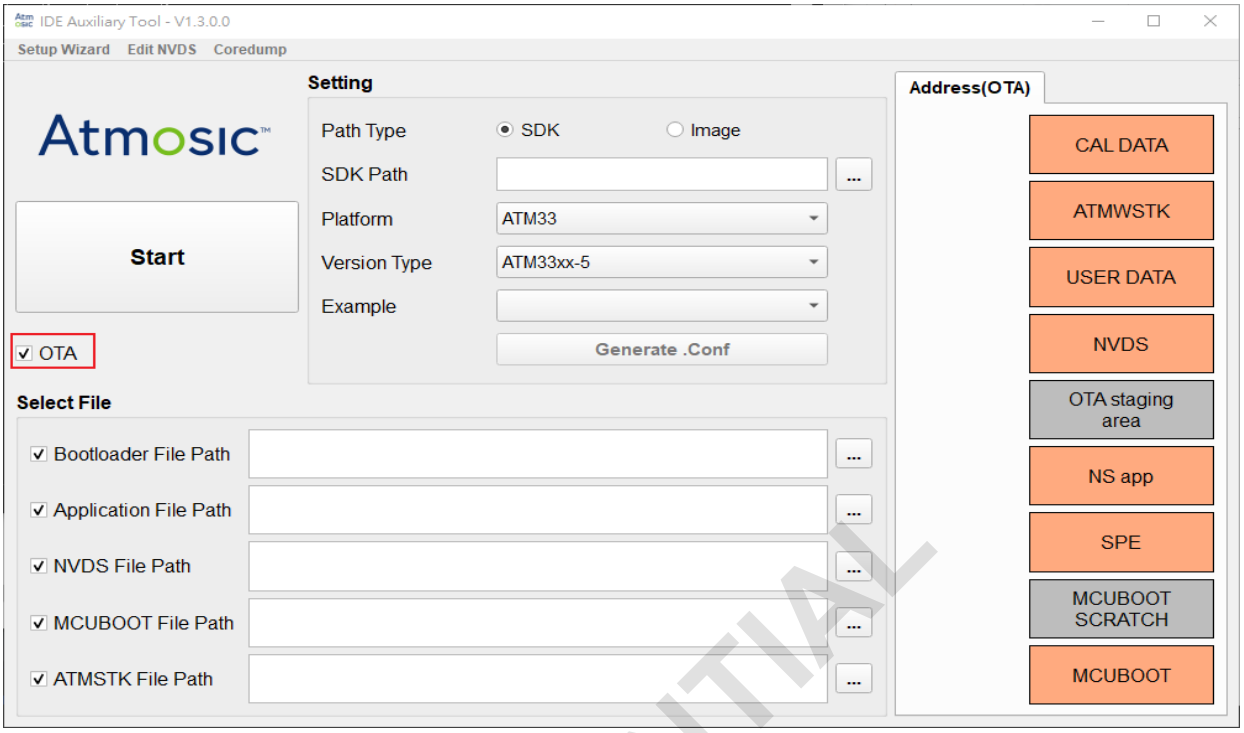


Figure 5- 8 OTA Checkbox in Main GUI

5.1.9 Main GUI - Start Button

Click the Start button to execute write flash data flow. See Figure 5-9.

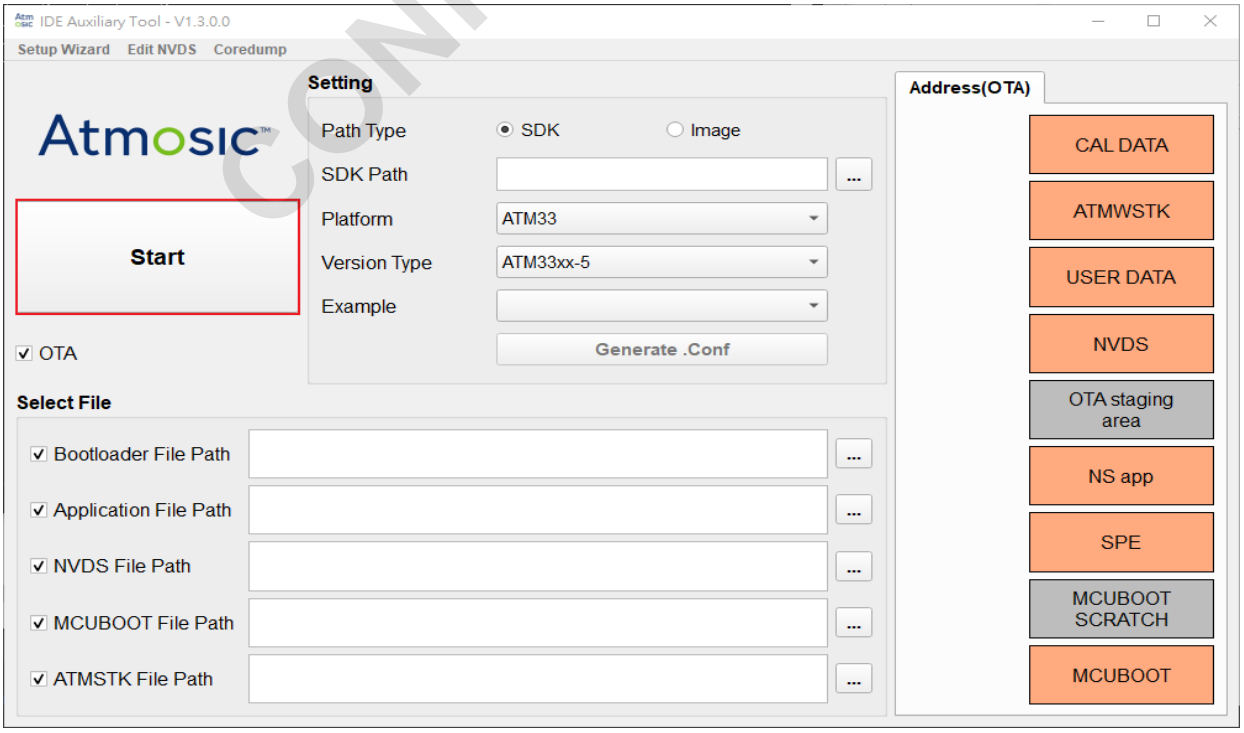


Figure 5-9 Start Button in Main GUI

CONFIDENTIAL

5.1.10 Main GUI - Setup Wizard Menu

Click on the Setup Wizard to switch to the IDE project setup wizard GUI. There is a sub-menu(Generate IDE project) that can be selected in this menu. See Figure 5-10.

To return to the Main GUI, close the setup wizard GUI.

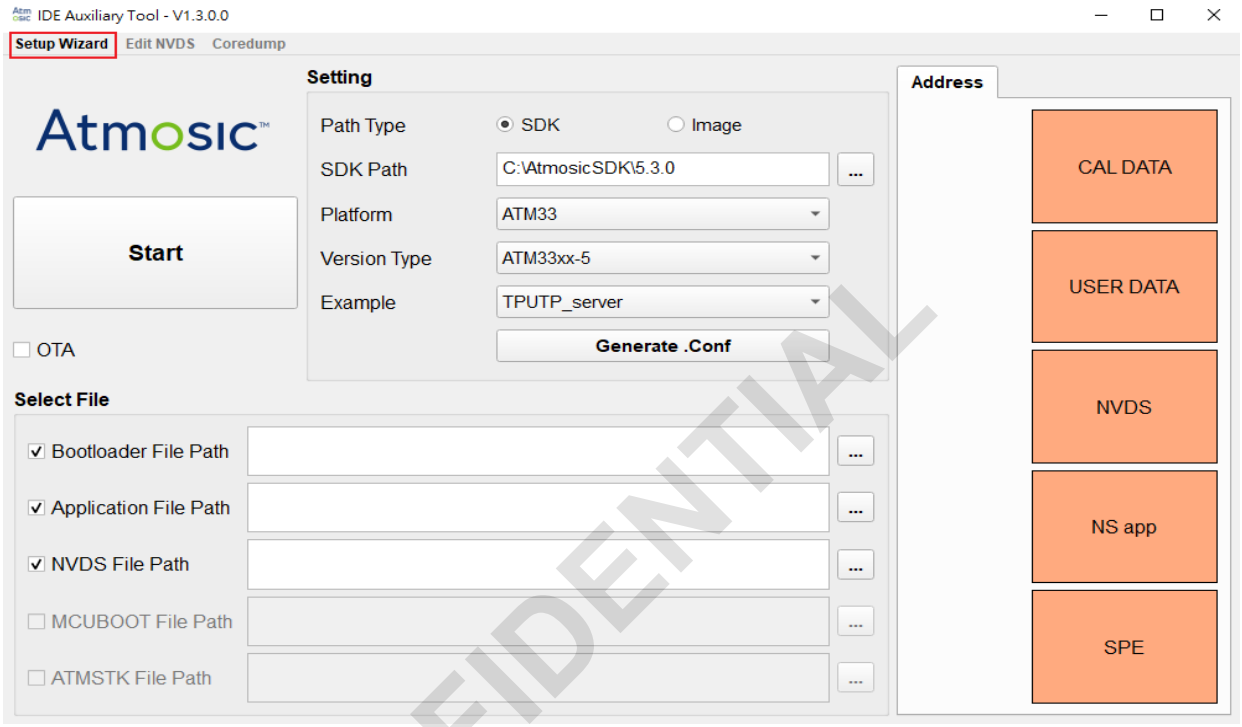


Figure 5-10 Setup Wizard Menu in Main GUI

CONFIDENTIAL

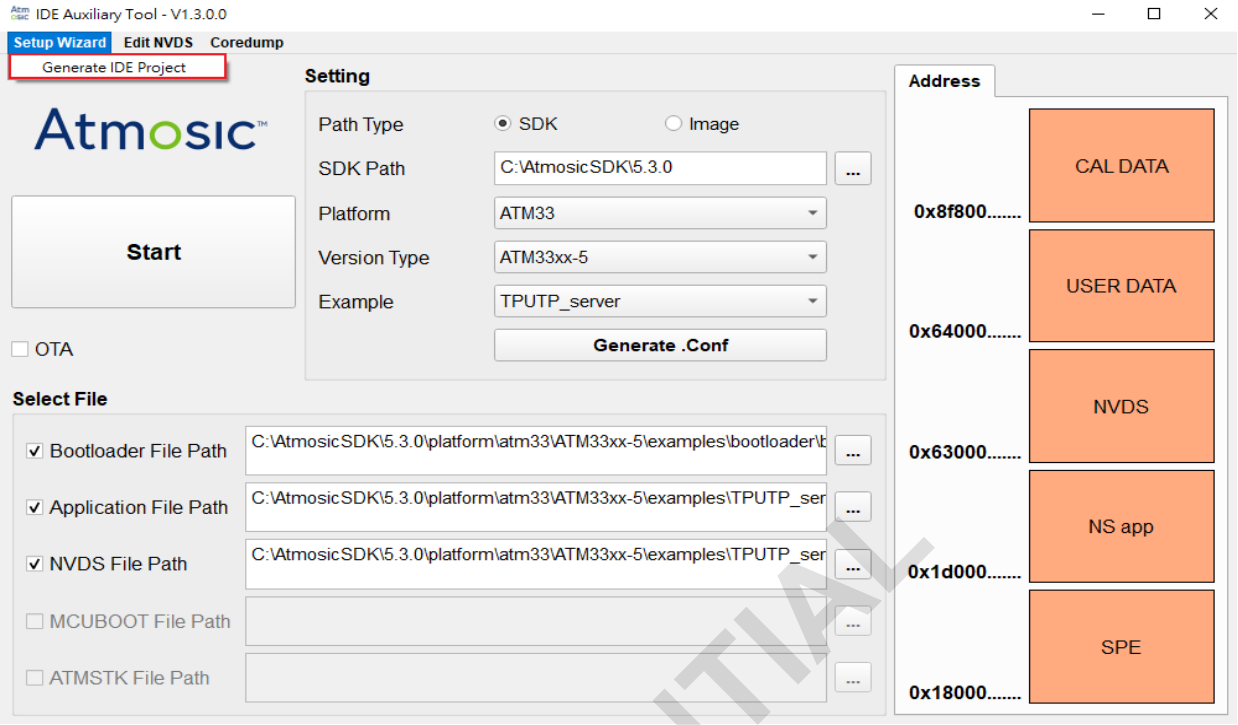


Figure 5-11 - Setup Wizard Sub Menu in Main GUI

5.1.11 Main GUI - Edit NVDS Menu

To Edit NVDS file content, click on the Edit NVDS from the EVK or the SDK menu to switch to the NVDS GUI. There are two sub-menus that can be selected in this menu:

- From EVK - The NVDS content will be read from EVK.
- From SDK - The NVDS content will be read from the SDK directory.

See Figure 5-12.

To return to the Main GUI, close the NVDS GUI.

CONFIDENTIAL

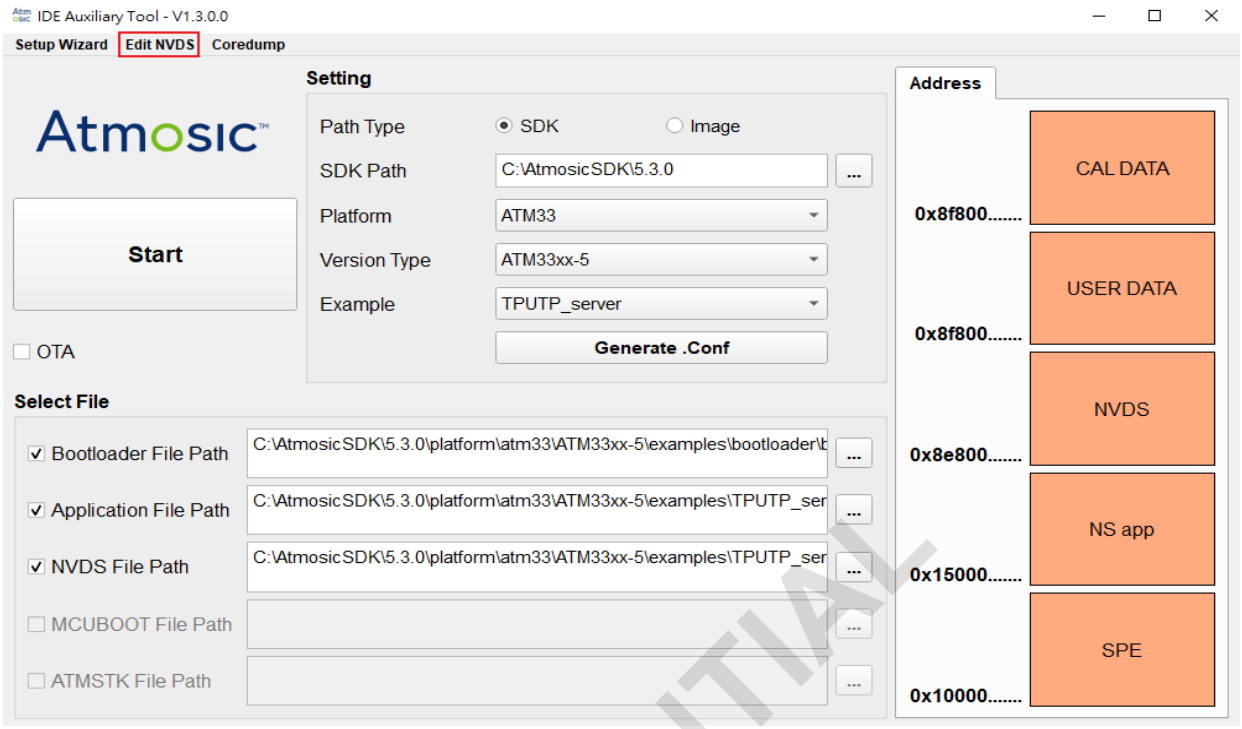


Figure 5-12 Edit NVDS Menu in Main GUI

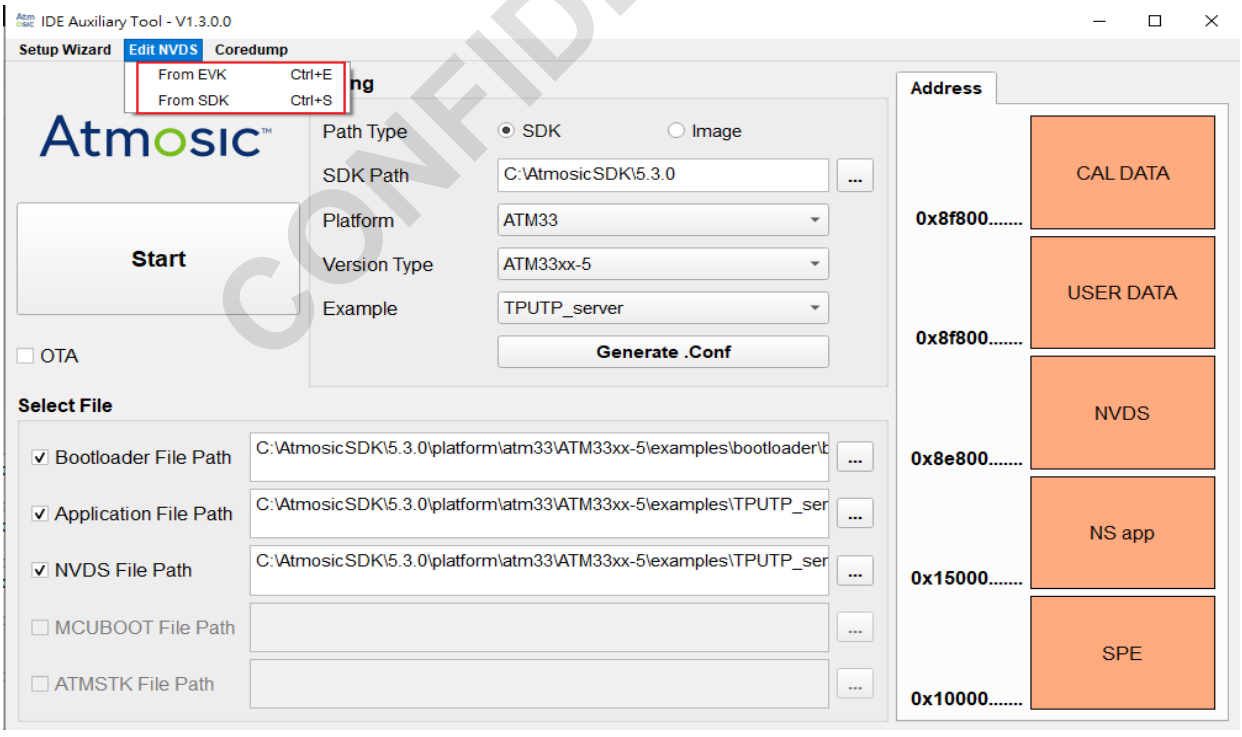


Figure 5-13 Edit NVDS Sub Menu in Main GUI

CONFIDENTIAL

5.1.12 Main GUI - Coredump Menu

Click on the Coredump to get the core dump information from EVK. There is a sub-menu(Get coredump) that can be selected in this menu. See Figure 14.

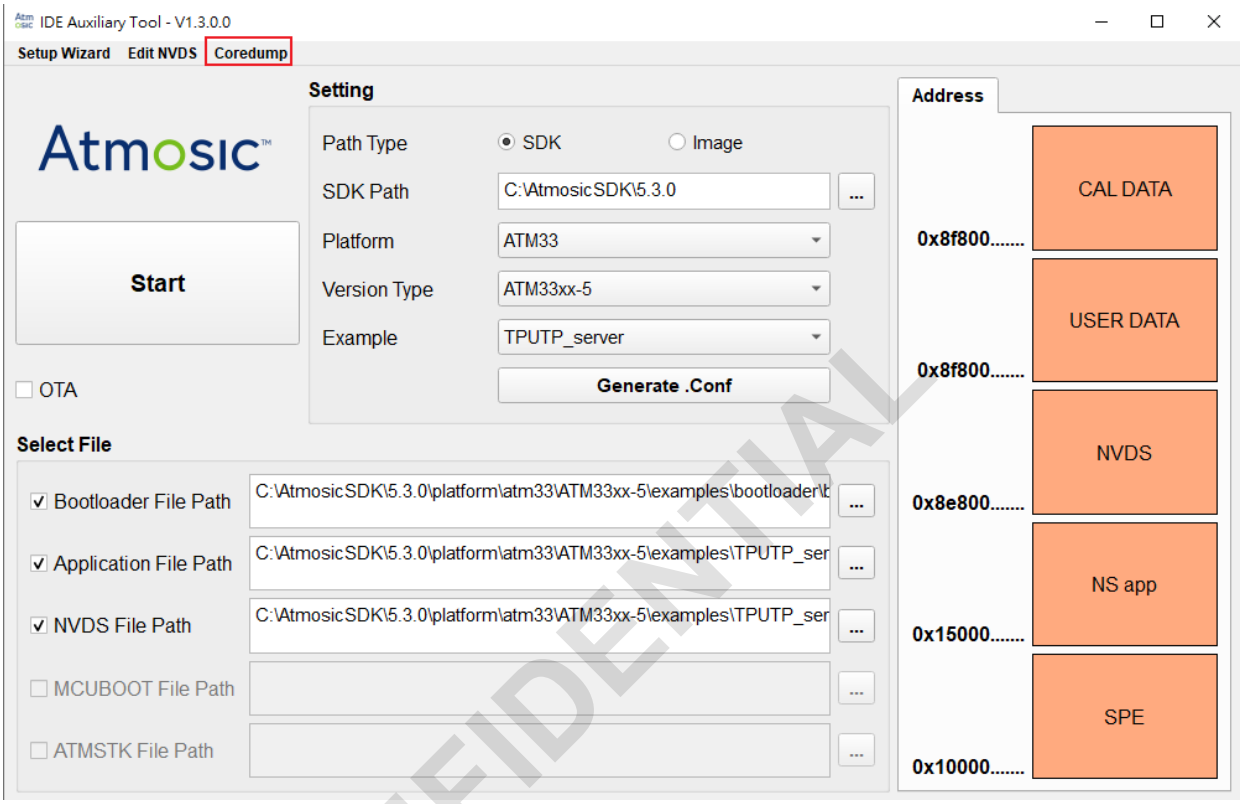


Figure 5-14 Coredump Menu in Main GUI

CONFIDENTIAL

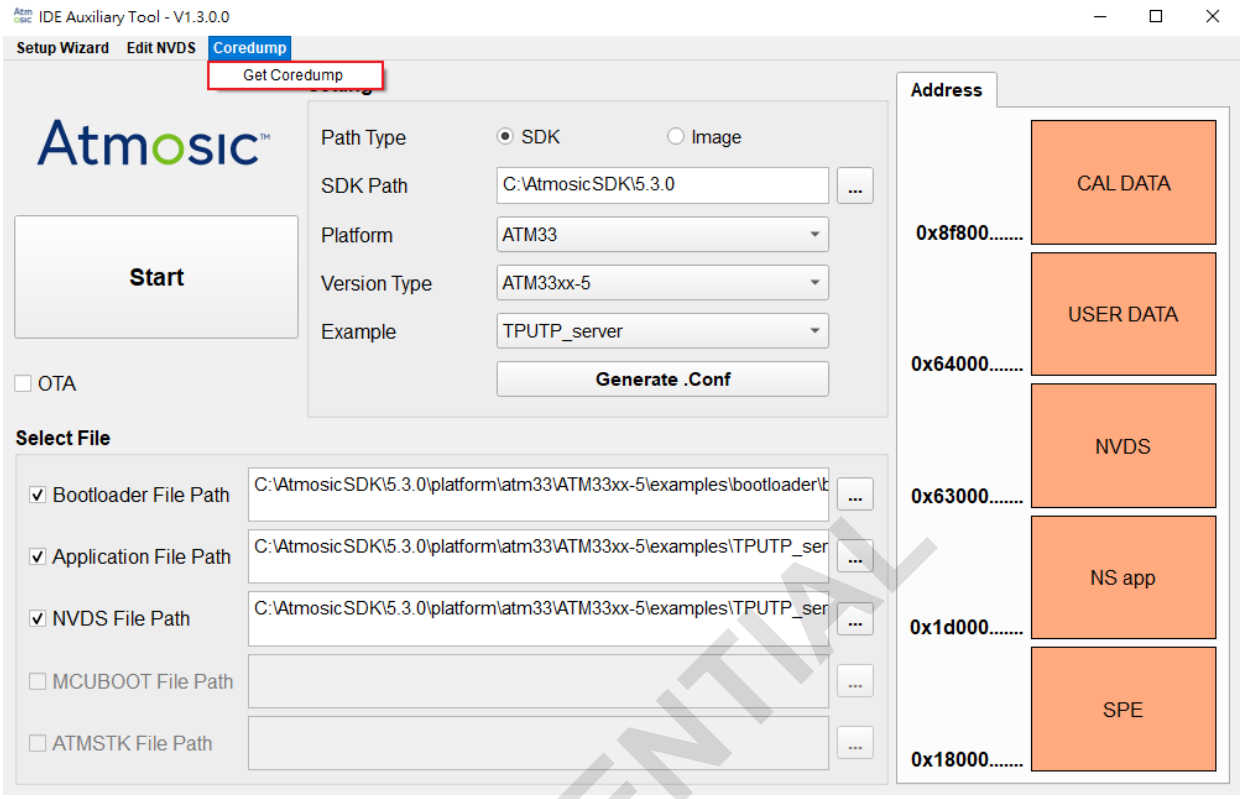


Figure 5-15 Coredump Sub Menu in Main GUI

5.2 IDE Project Setup Wizard GUI

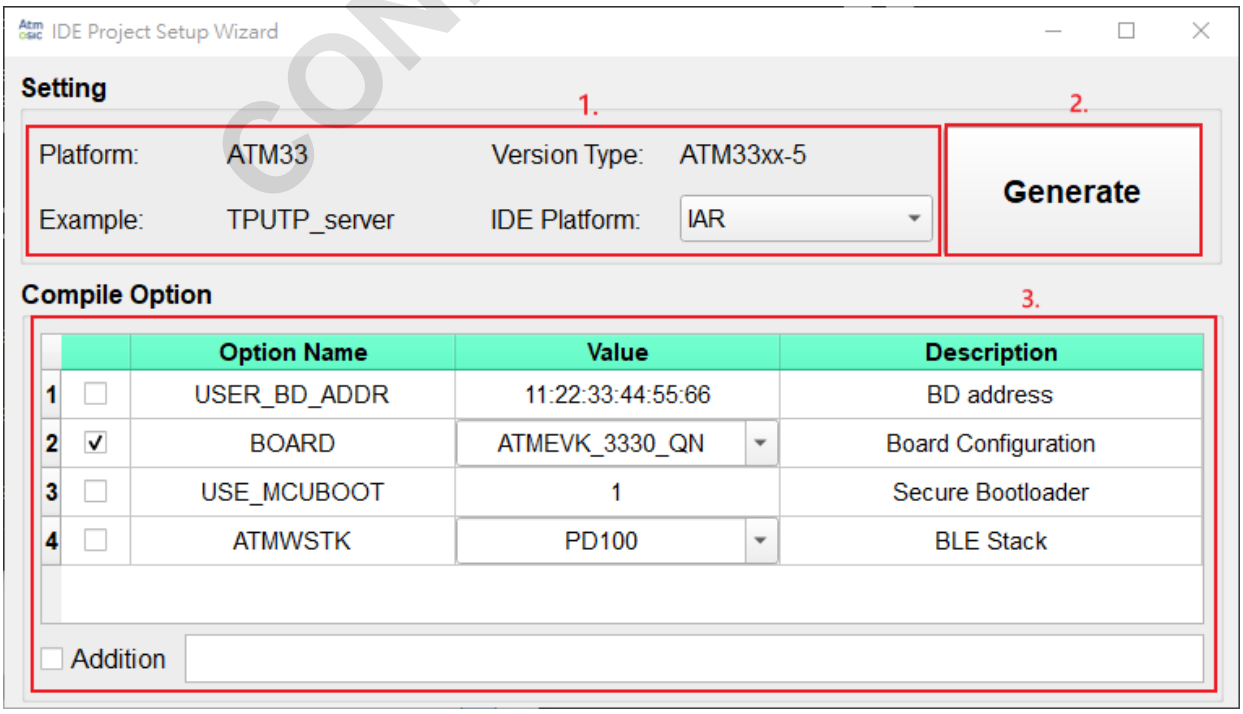


Figure 5-16 IDE Project Setup Wizard GUI

CONFIDENTIAL

1) Setting
    a) Platform: Current platform read from Main GUI.
    (This setting is read only.)
    b) Version Type: Current version type read from Main GUI.
    (This setting is read only.)
    c) Example: Current example read from Main GUI.
    (This setting is read only.)
    d) IDE Platform: List of supported IDE platforms. According to the selected platform, the generate command will be changed.

2) Generate

    Generate IDE project directory in example directory. This function will generate a different directory depending on the setting of the IDE platform, such as iar, ses, keil_gcc and keil_arm.

3) Compile Option
    a) Compile option table: Displays the default compile options supported by the tool. The content is different depending on the setting of the platform. Check the checkbox before the option name if the user wants to add the compile option.
    b) Addition: The user can input their own compile option setting here. Check the checkbox before the option name if the user wants to add the compile option. See Figure 16.

CONFIDENTIAL

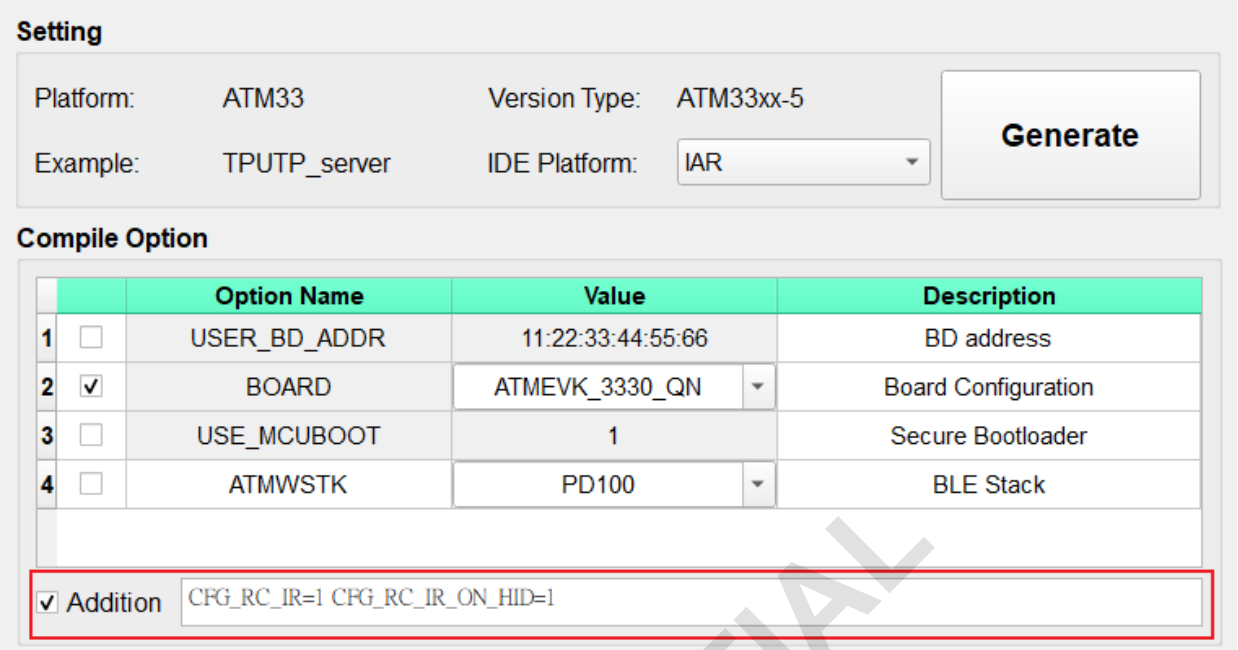


Figure 5-17 Addition Input Format in IDE Project Setup Wizard GUI

5.3 NVDS GUI

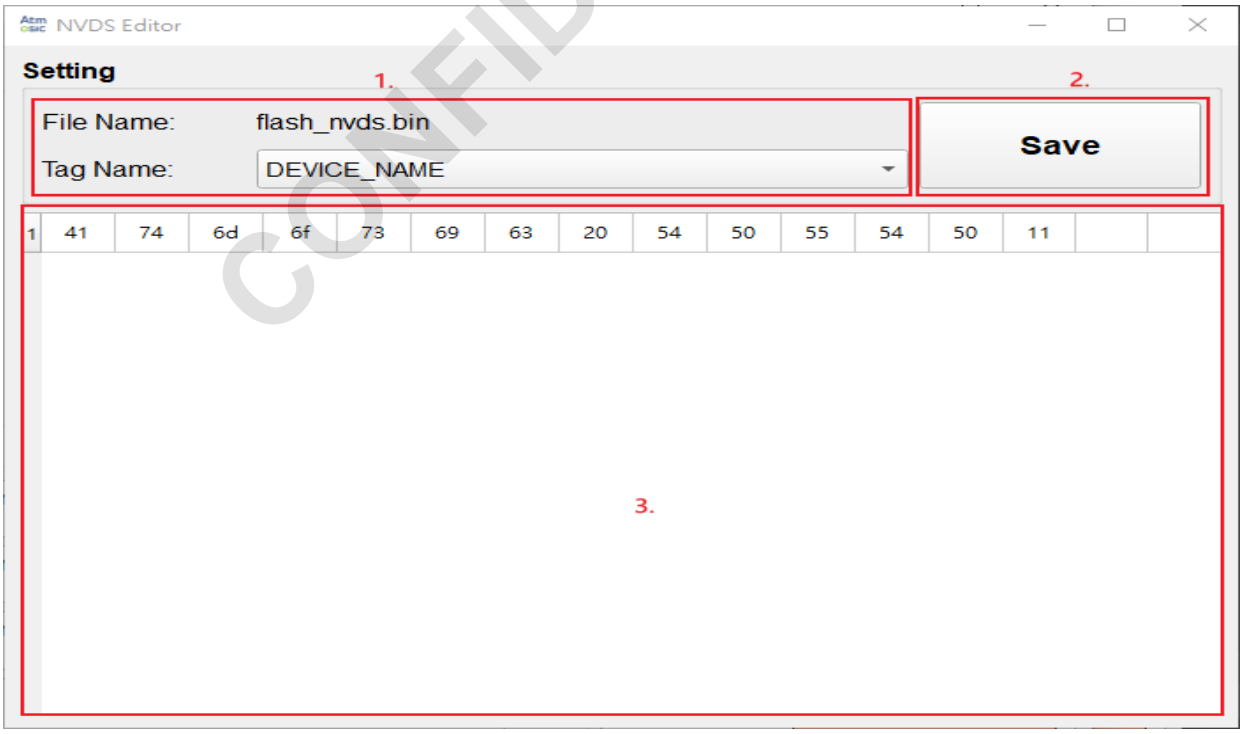


Figure 5-18 NVDS GUI

CONFIDENTIAL

1) Setting
    a) File Name: Current NVDS file name read from Main GUI. (This setting is read only.)
    b) Tag Name: List of tags parsed from NVDS file. According to the selected tag name, the tag value below will be changed.

2) Save

    Save modified values to the EVK. This function will replace the contents of the NVDS bin file in the SDK and write to EVK.

3) NVDS Tag Value
    a) Display the selected NVDS tag value in bytes. Users can only modify the data within the length of the byte read out.

5.4 Coredump

There is no GUI for this function. When the user clicks on the function, the tool will get core dump information from EVK and generate a Coredump file in the example output directory.

6. How to Write Flash File to EVK

For writing to flash partition, there are divided into three types according to different platforms,

- ATM2/ATM3
    - Write Application and NVDS partition, see Figure 5-2.

    ***Note**: Currently, the tool only supports ATM2/ATM3 generation of configuration files, but cannot write to flash.*

- ATM33/e
    - Write to Bootloader and Application partition, referred to as Unsupported OTA, see Figure 5-3.
    - Write to MCUBoot, Bootloader and Application partition, referred to as Supported OTA, see Figure 5-4.

Whether users choose Support OTA or Unsupported OTA, please prepare the image file before using the tool.

CONFIDENTIAL

6.1 Write Unsupported OTA Image

Step 1 - Select the SDK option in Setting.

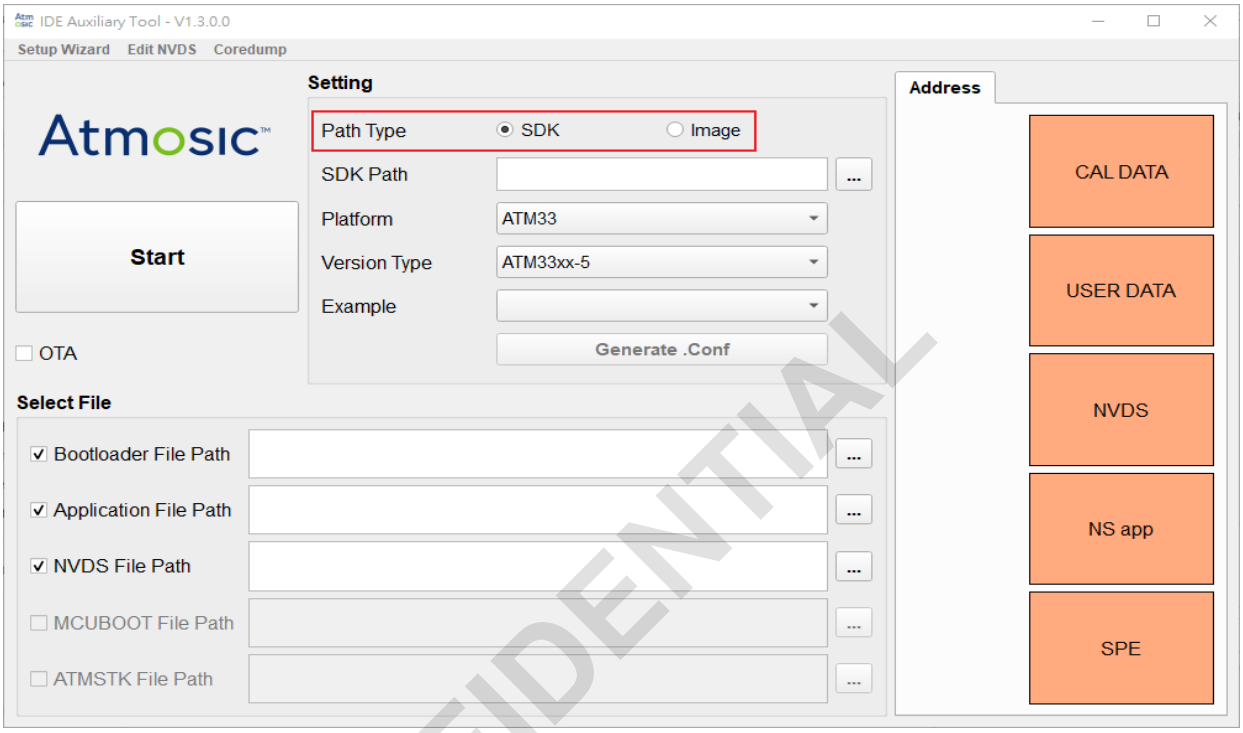


Figure 6-1 Set Path Type to SDK

CONFIDENTIAL

Step 2 - Make sure the OTA checkbox is not checked.

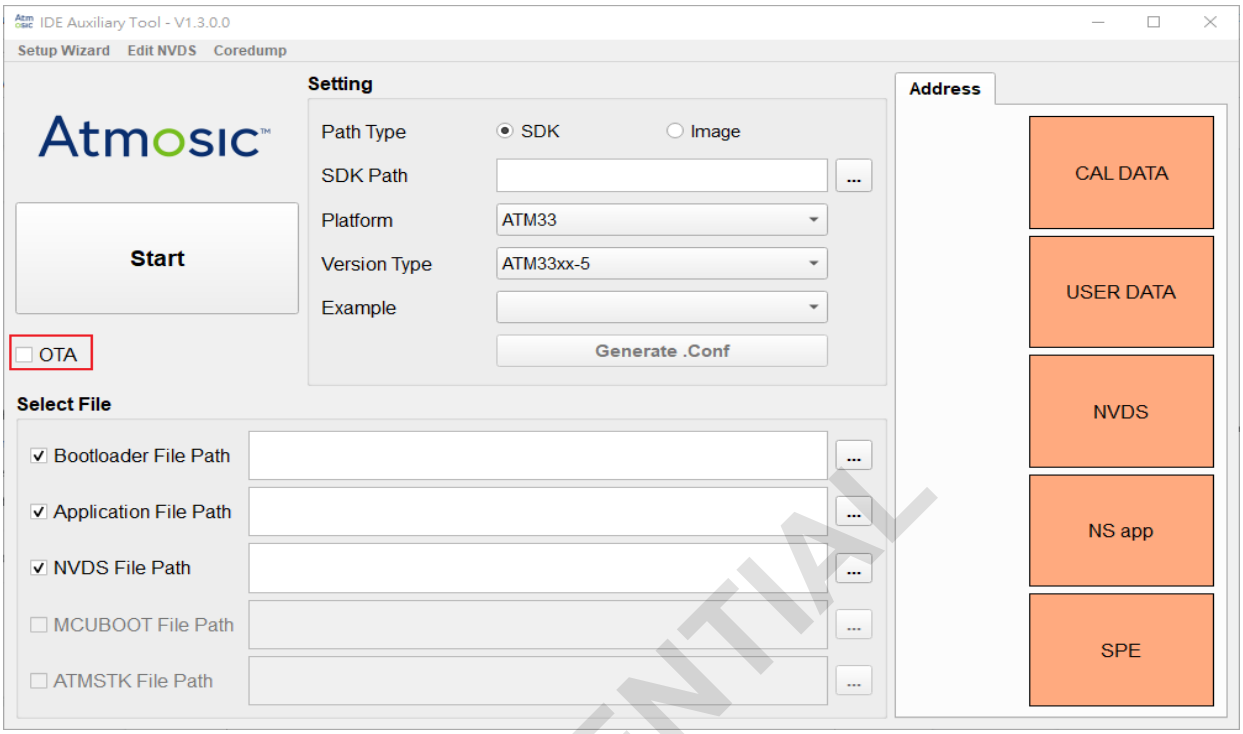


Figure 6-2 OTA Checkbox is not checked

Step 3 - Click the ... button to select the SDK root directory.

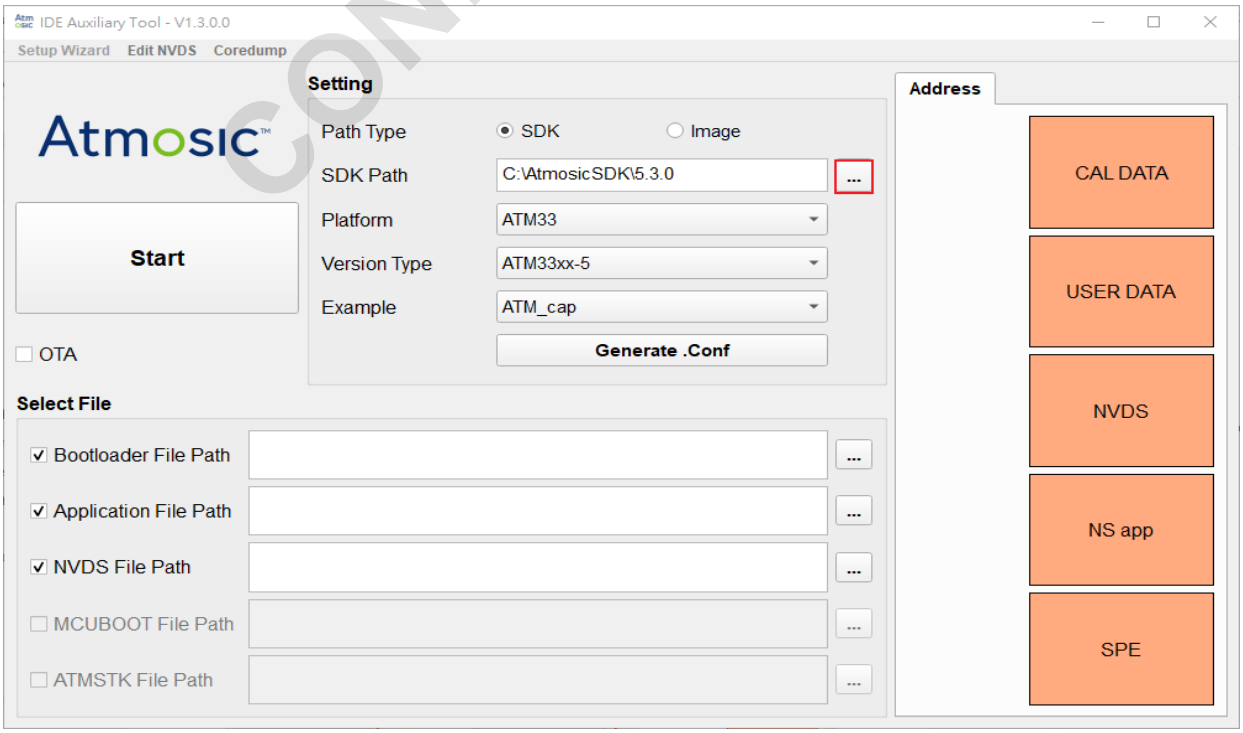


Figure 6-3 Select SDK Root Directory

CONFIDENTIAL

Step 4 - Select Platform and Version Type combobox.

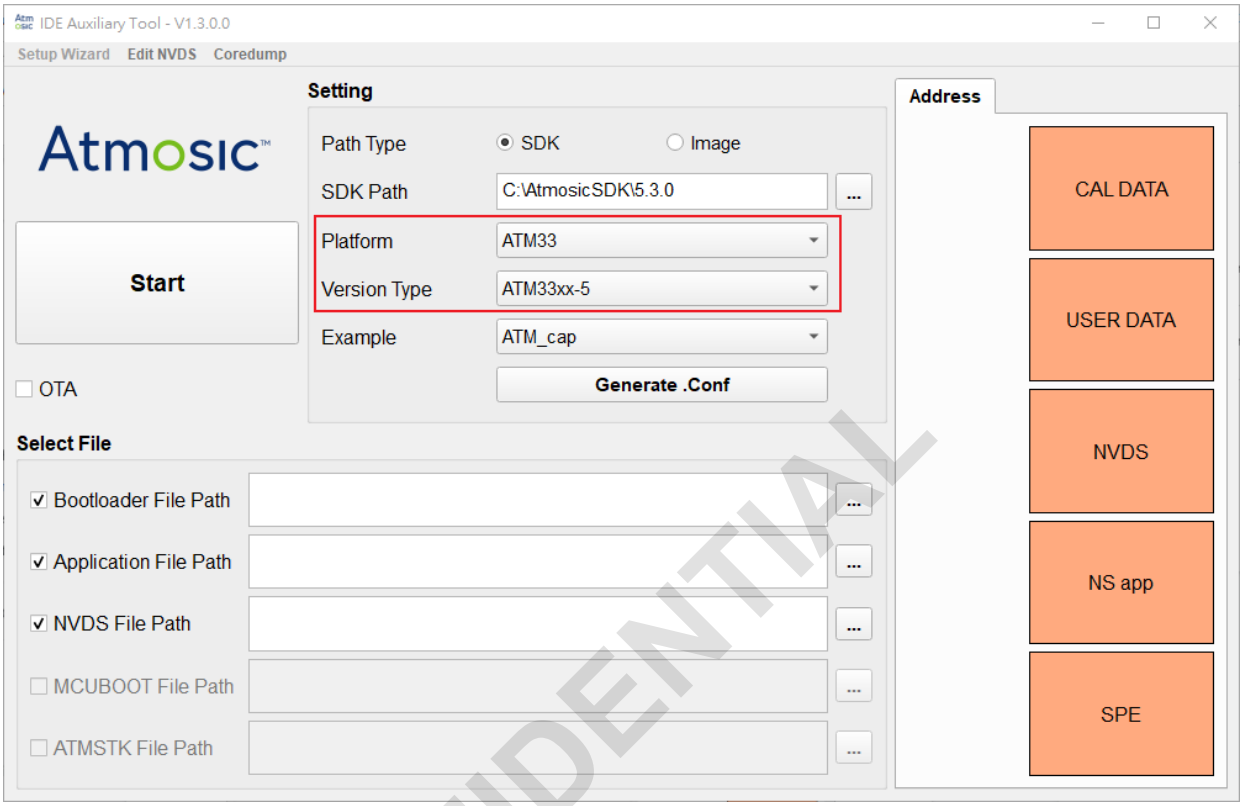


Figure 6-4 Select Platform and Version Type

Step 5 - Select Example combobox.

CONFIDENTIAL

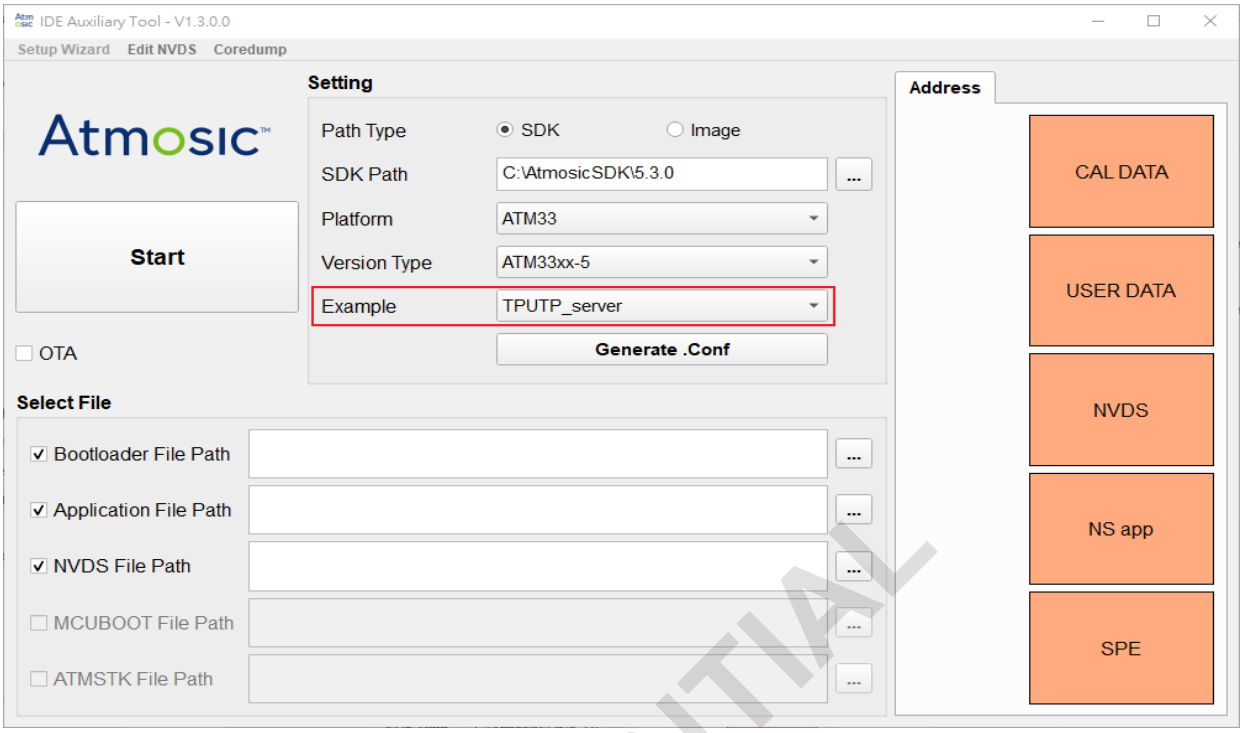


Figure 6-5 Select Example

Step 6 - Click the ... button to select each image file in the SDK directory. The image files must be pre-compiled before using the tool.

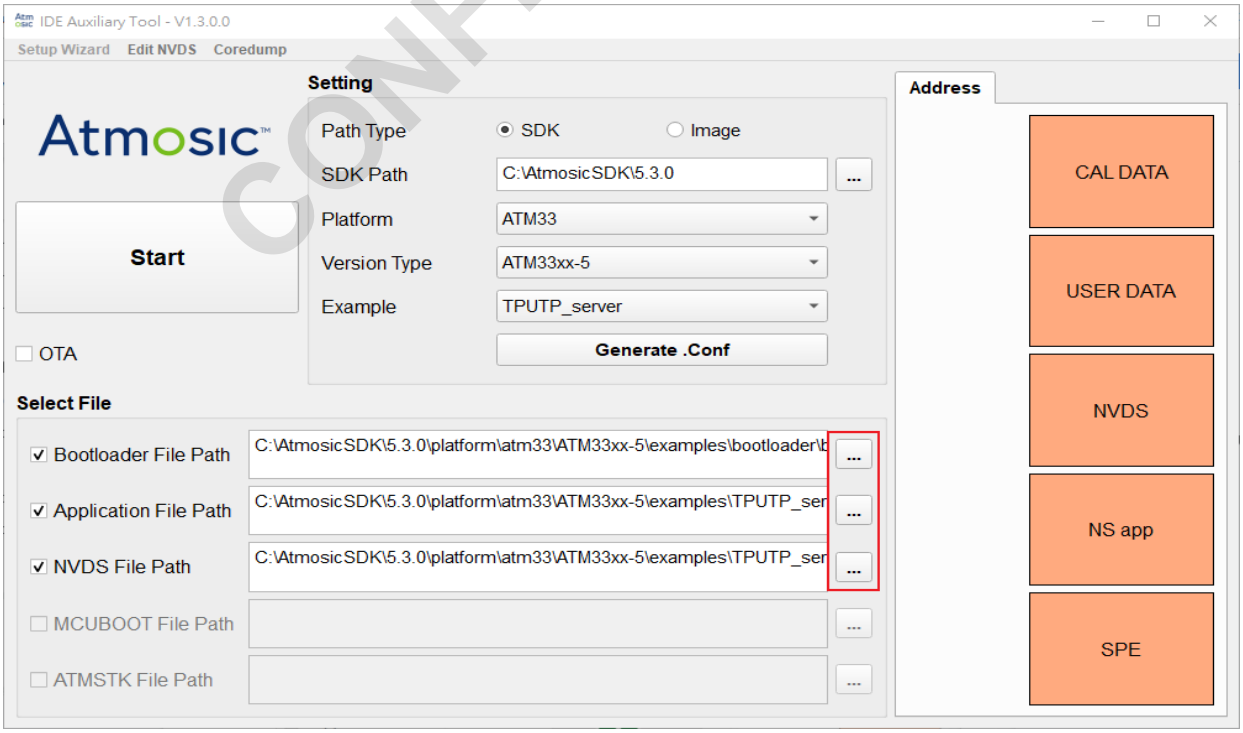


Figure 6-6 Select Flash Data Files

CONFIDENTIAL

Step 7 - Set the file to be written.

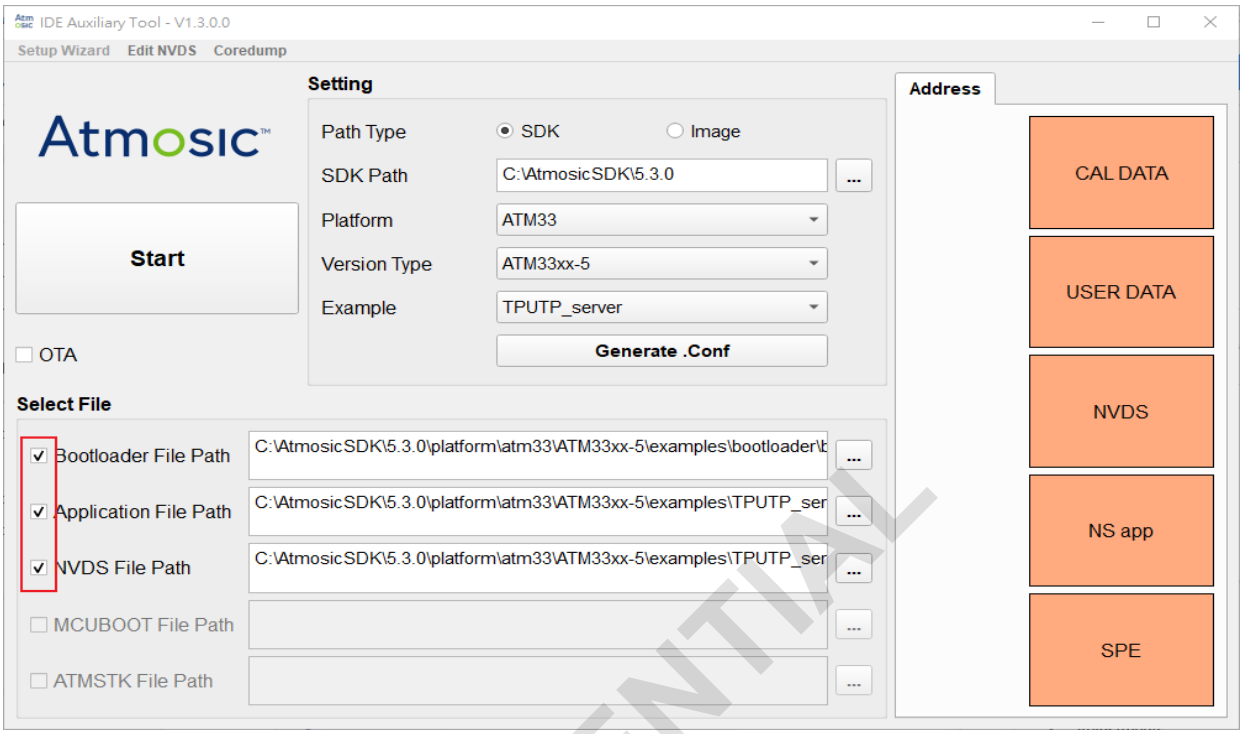


Figure 6-7 Set the File to be Written

Step 8 - Click the Generate .conf button to create an example output directory. The user can check the flash address mapping in image files is correct.

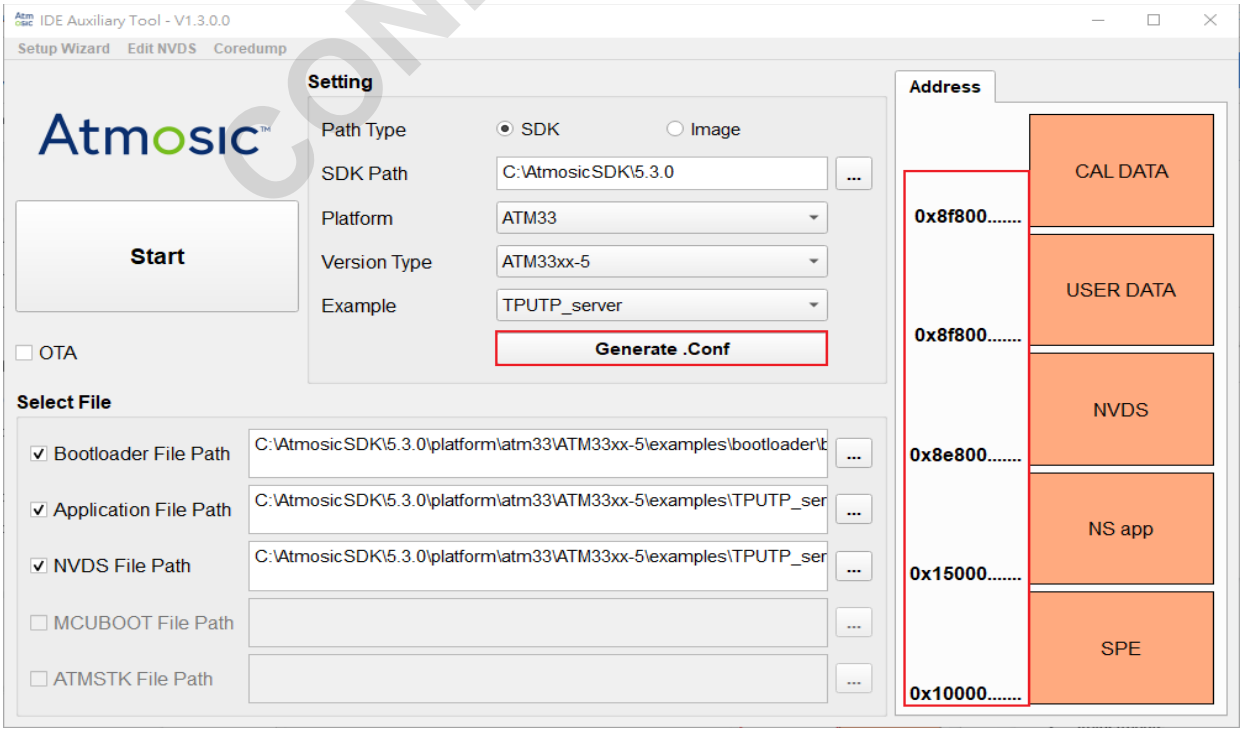


Figure 6-8 Generate Config and Show Flash Address Mapping

CONFIDENTIAL

Step 9 - Click the Start button to write image files to EVK. After the write operation completes, a popup screen will indicate Execute Complete!!.

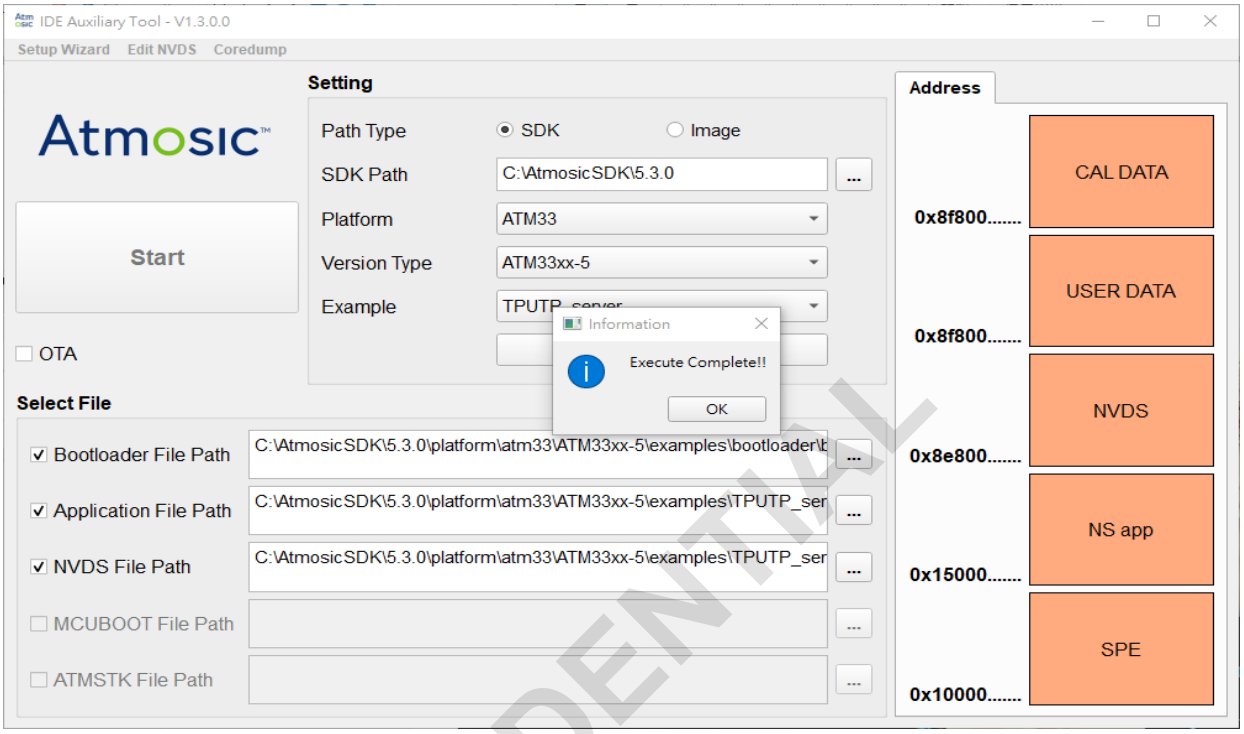


Figure 6-9 Write Flash Data Complete Dialog

CONFIDENTIAL

6.2 Write Supported OTA Image

Step 1 - Select the SDK option in Setting.

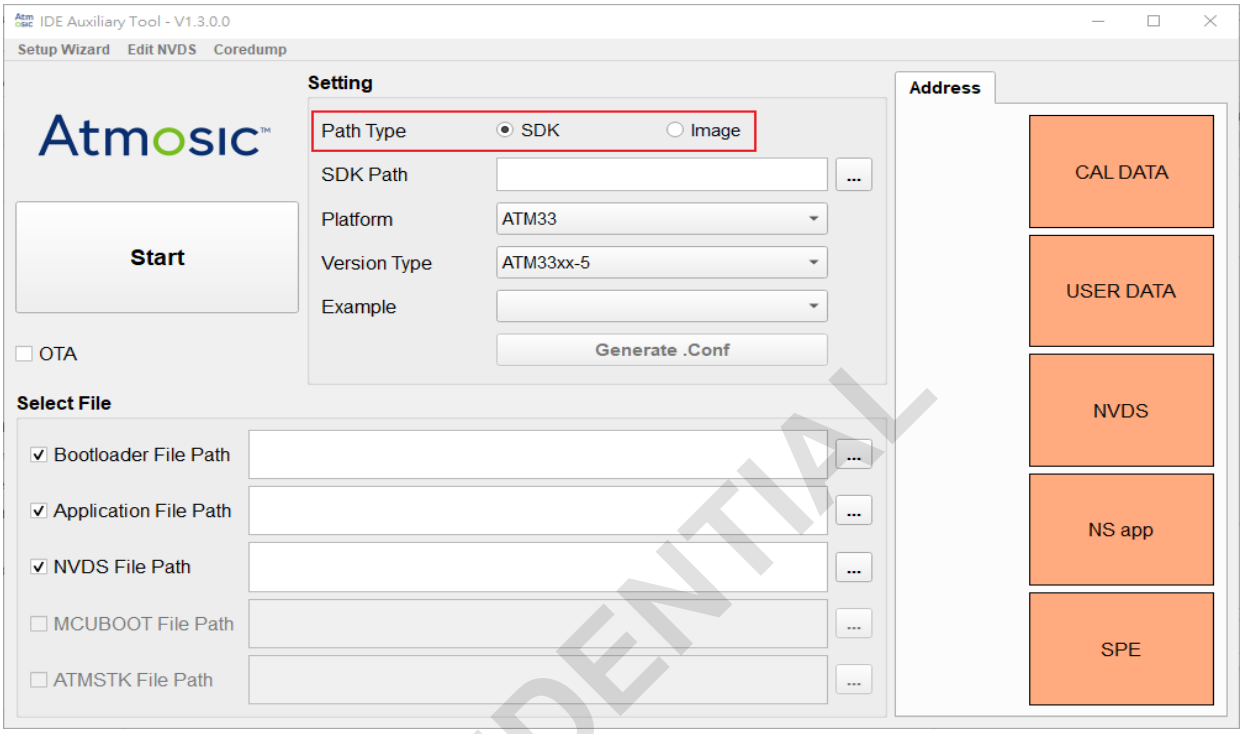


Figure 6-10 Select Path Type to SDK

Step 2 - Set the OTA checkbox.

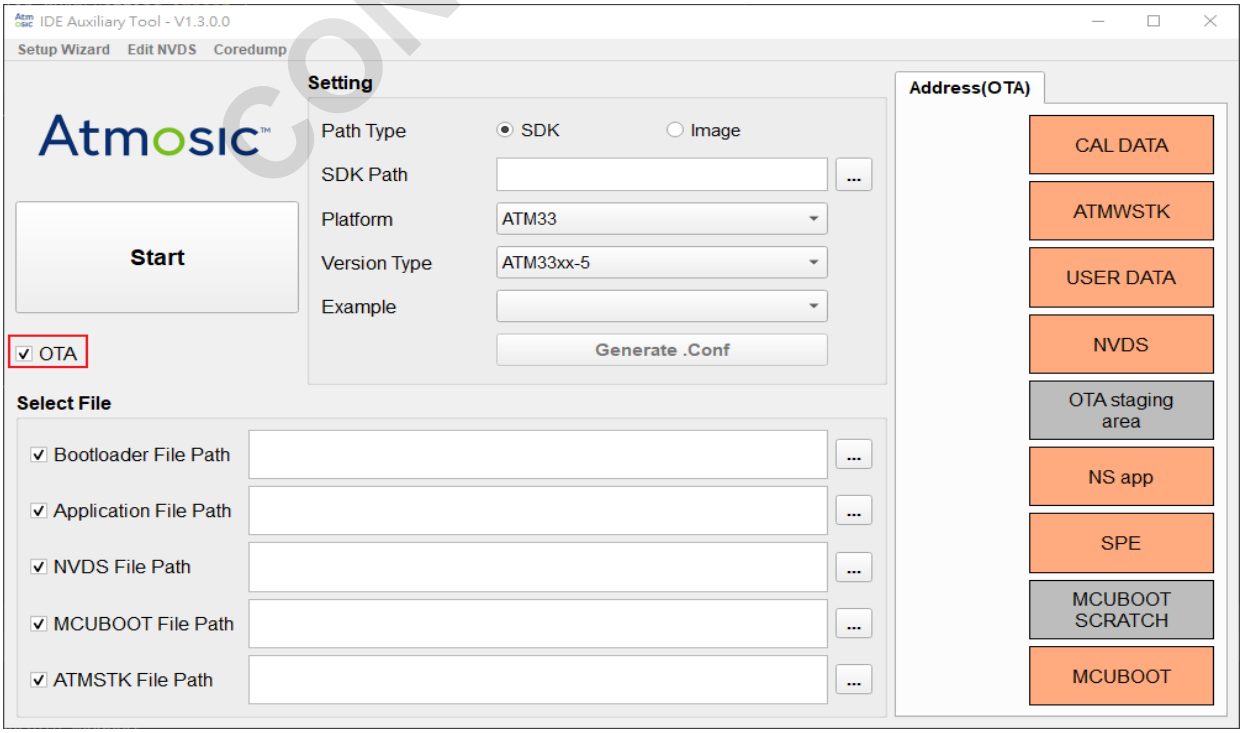


Figure 6-11 Set OTA Checkbox

CONFIDENTIAL

Step 3 - Click the . . . button to select the SDK root directory. After selecting the SDK path, the MCUBOOT file path will be created automatically.

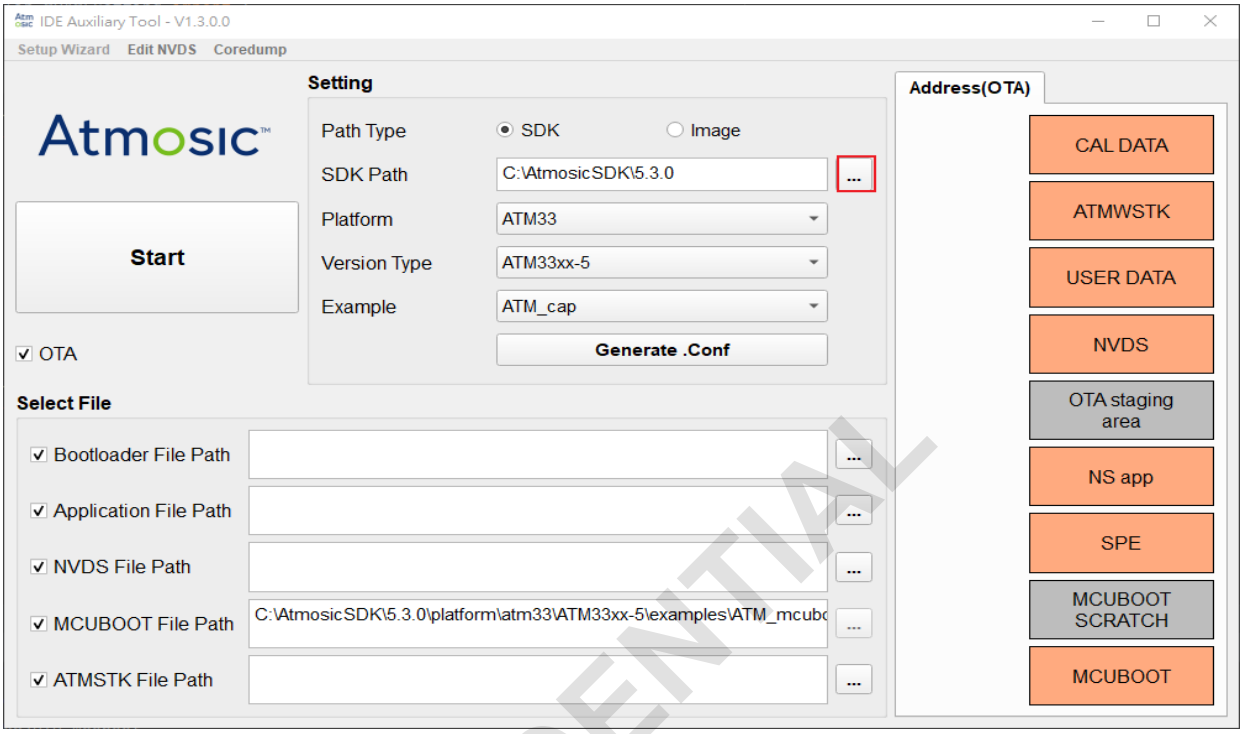


Figure 6-12 Select SDK Path

Step 4 - Select Platform and Version Type combobox.

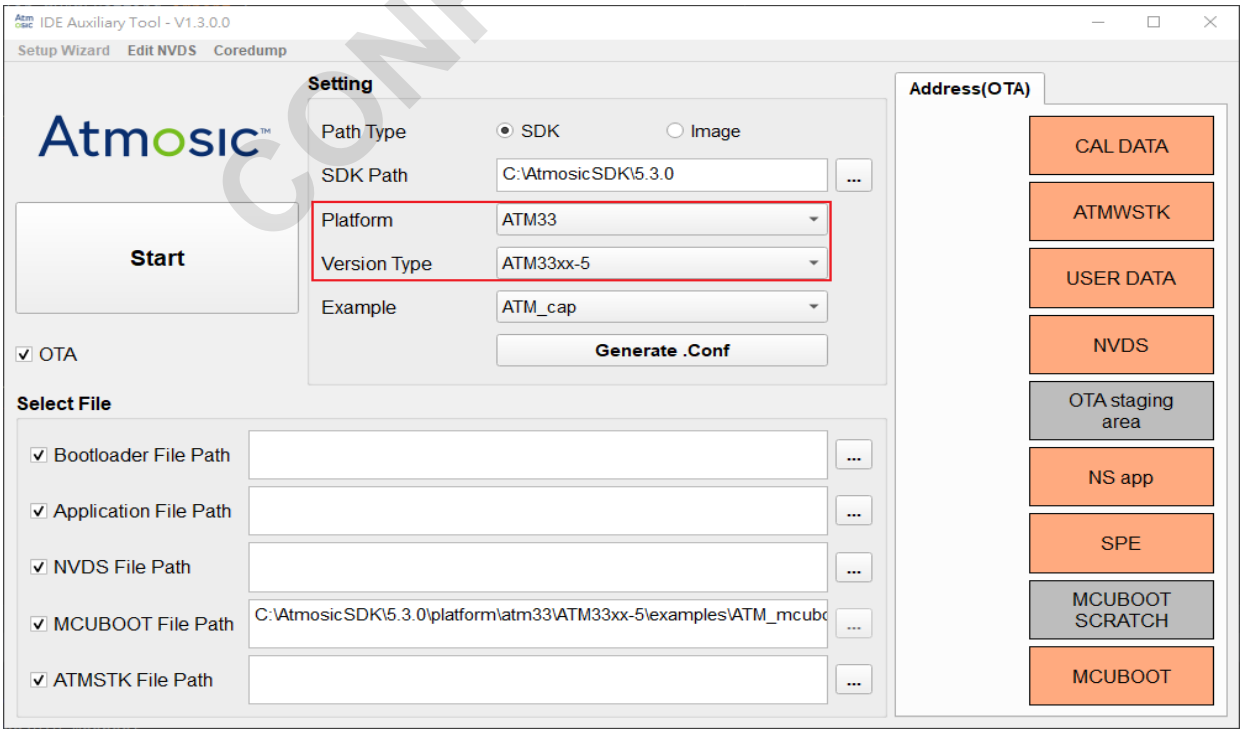


Figure 6-13 Select Platform and Version Type

CONFIDENTIAL

Step 5 - Select Example combobox.

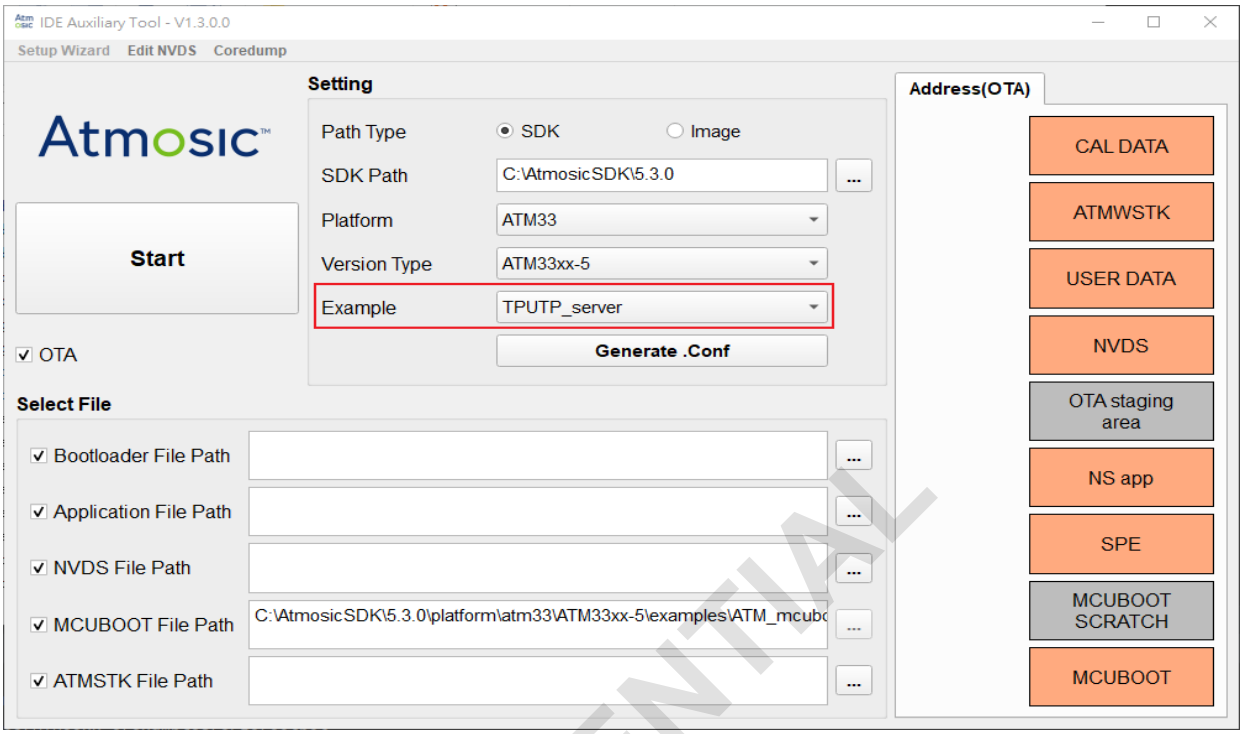


Figure 6-14 Select Example

Step 6 - Click the ... button to select each image file in the SDK directory. Except for the MCUBoot image file that can be automatically created by the tool, other image files must be pre-compiled before using the tool.

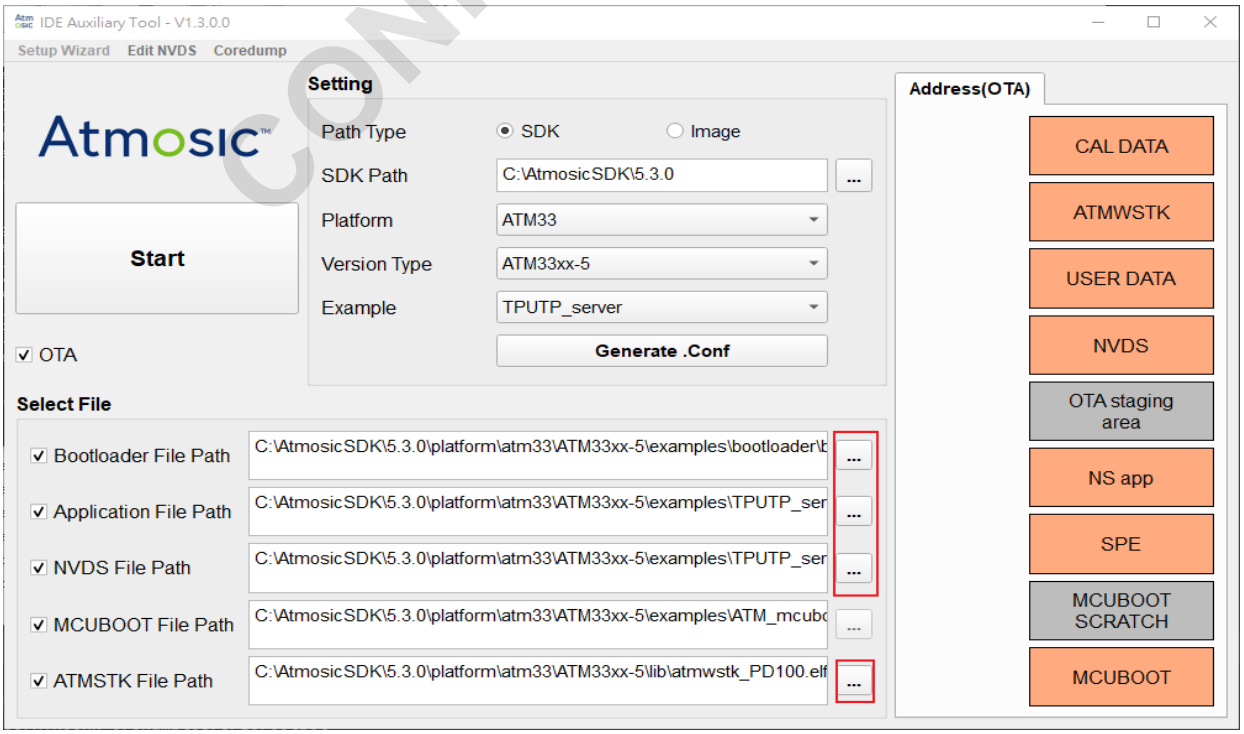


Figure 6-15 Select Flash Data Files

CONFIDENTIAL

Step 7 - Set the file to be written.

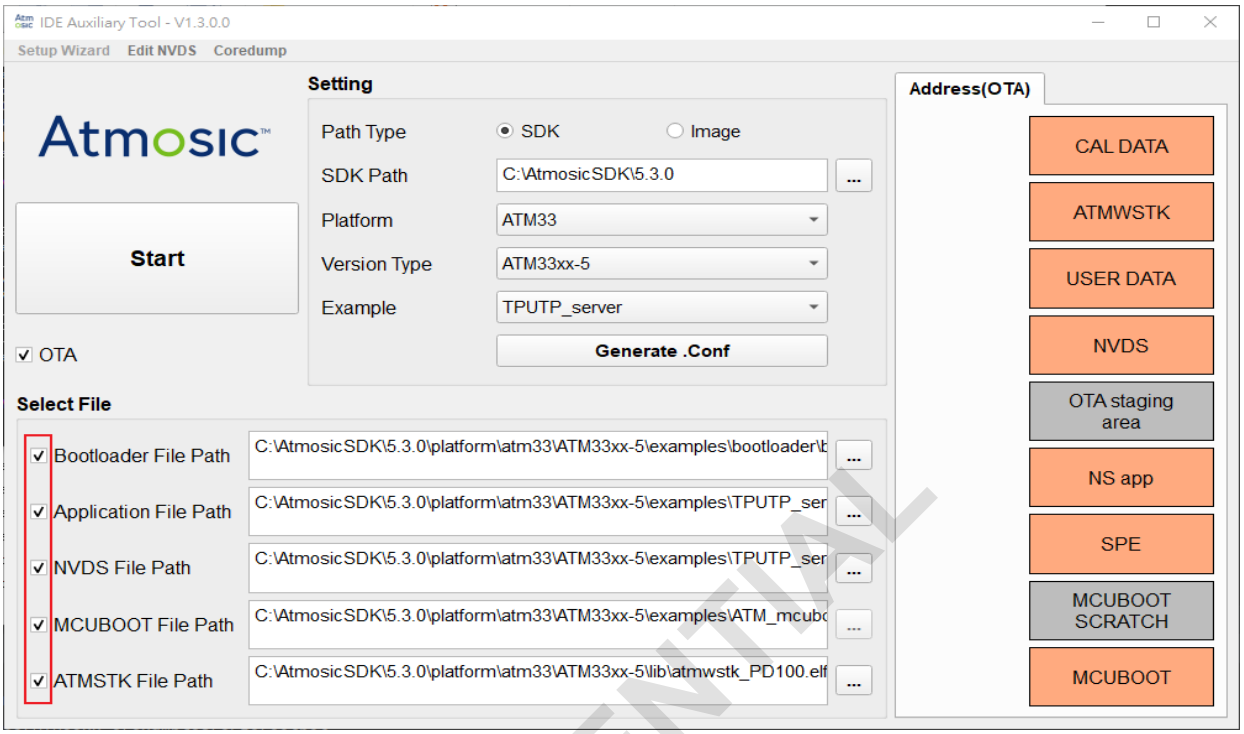


Figure 6-16 Set the File to be Written

Step 8 - Click the Generate .conf button to create an example output directory. The user can check the flash address mapping in image files is correct.

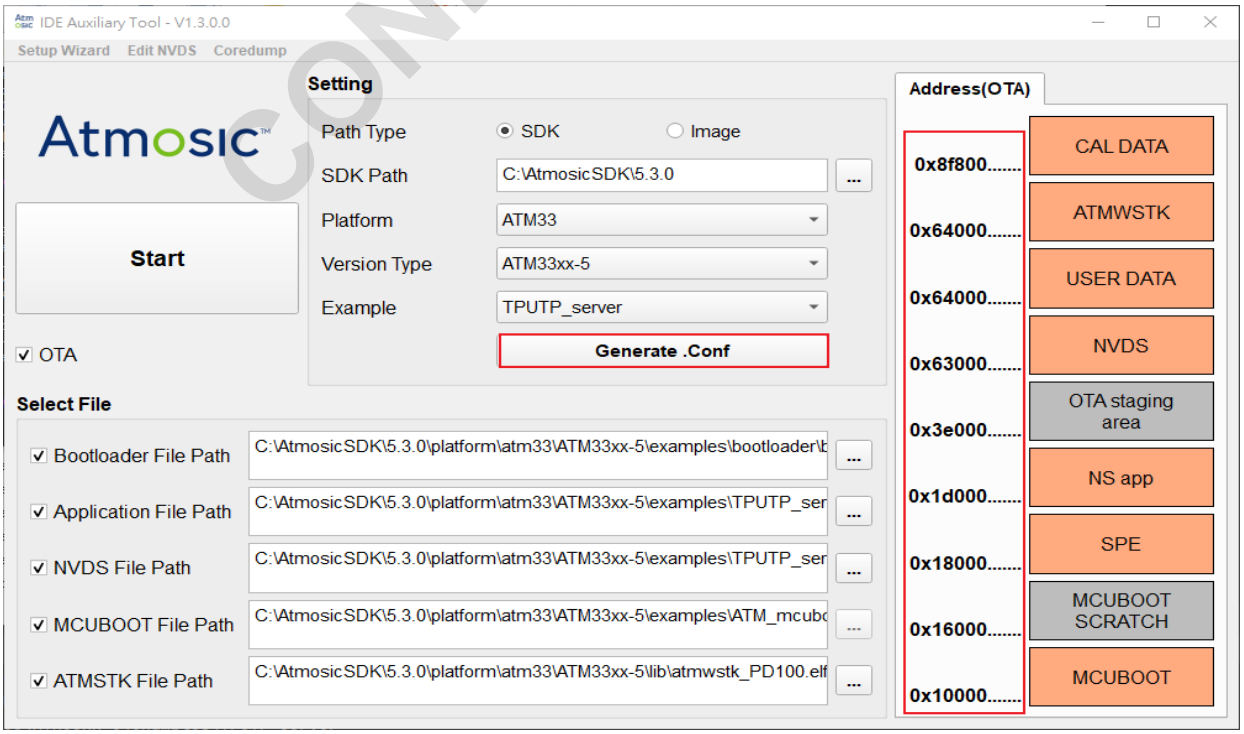


Figure 6-17 Generate Config and Show Flash Address Mapping

CONFIDENTIAL

Step 9 - Click the Start button to write image files to EVK. After the write operation completes, a popup screen will indicate Execute Complete!!.

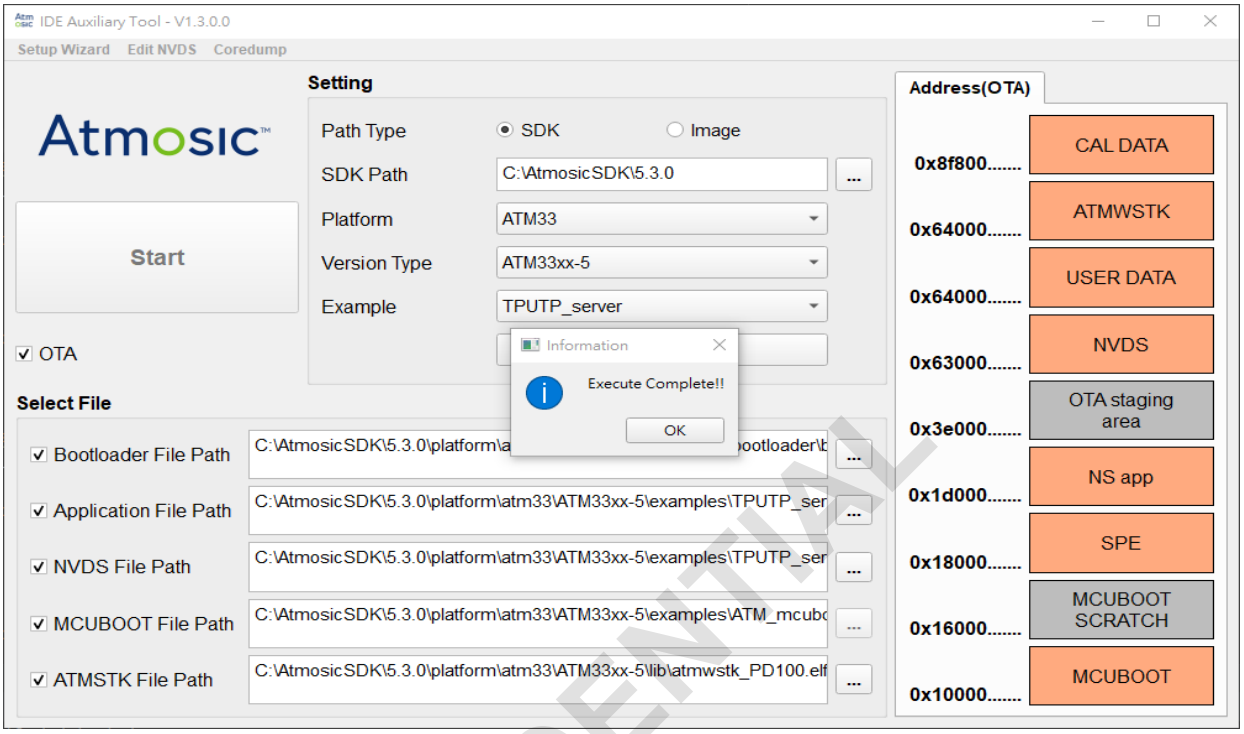


Figure 6-18 Write Flash Data Complete Dialog

CONFIDENTIAL

7. Write the Files in the Output Directory to EVK

If the user has used this tool to create the example output directory before, set Path Type to Image then execute write flash action directly.

7.1 Write Unsupported OTA Image

7.2 Write Support OTA Image

If the example output directory was generated with Support OTA, the Support OTA checkbox is checked.
***Note**: The Support OTA checkbox cannot be changed manually in Image type.*

Step 1 - Select the Image option in Setting.

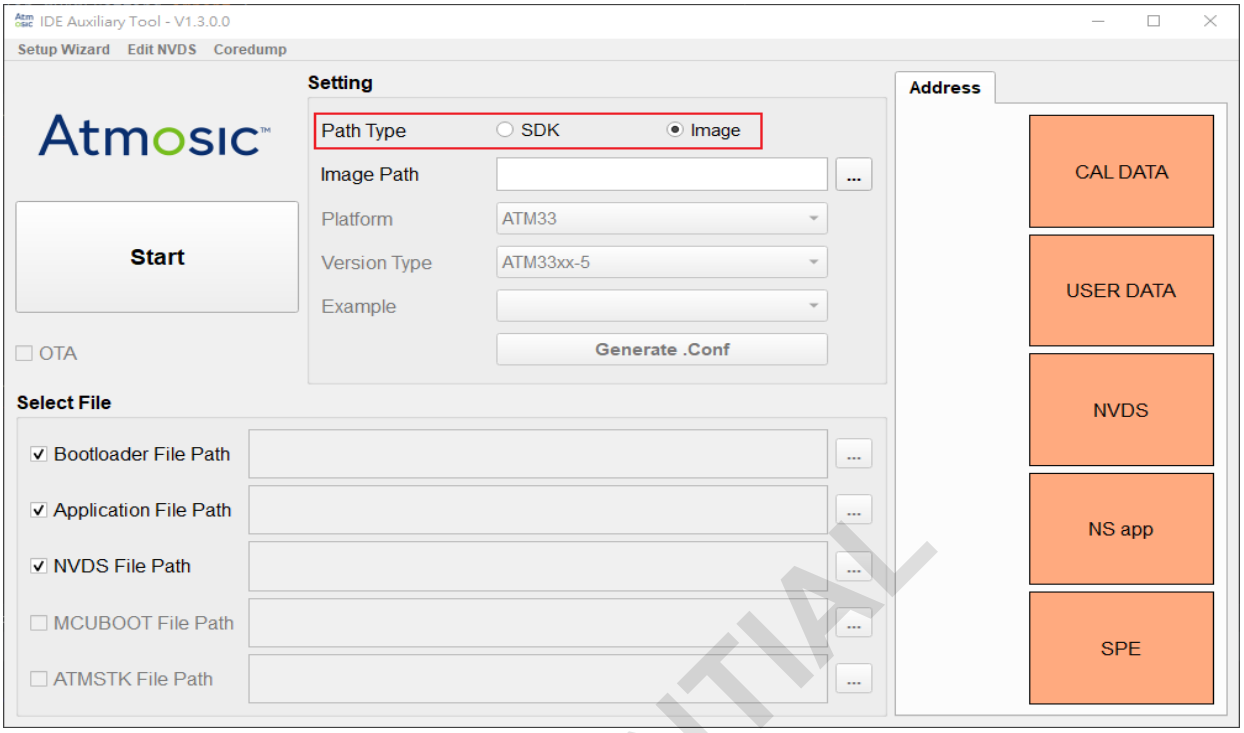


Figure 7-5 Set Path Type to Image

CONFIDENTIAL

Step 2 - Select the example output directory previously created with IDE Tool.

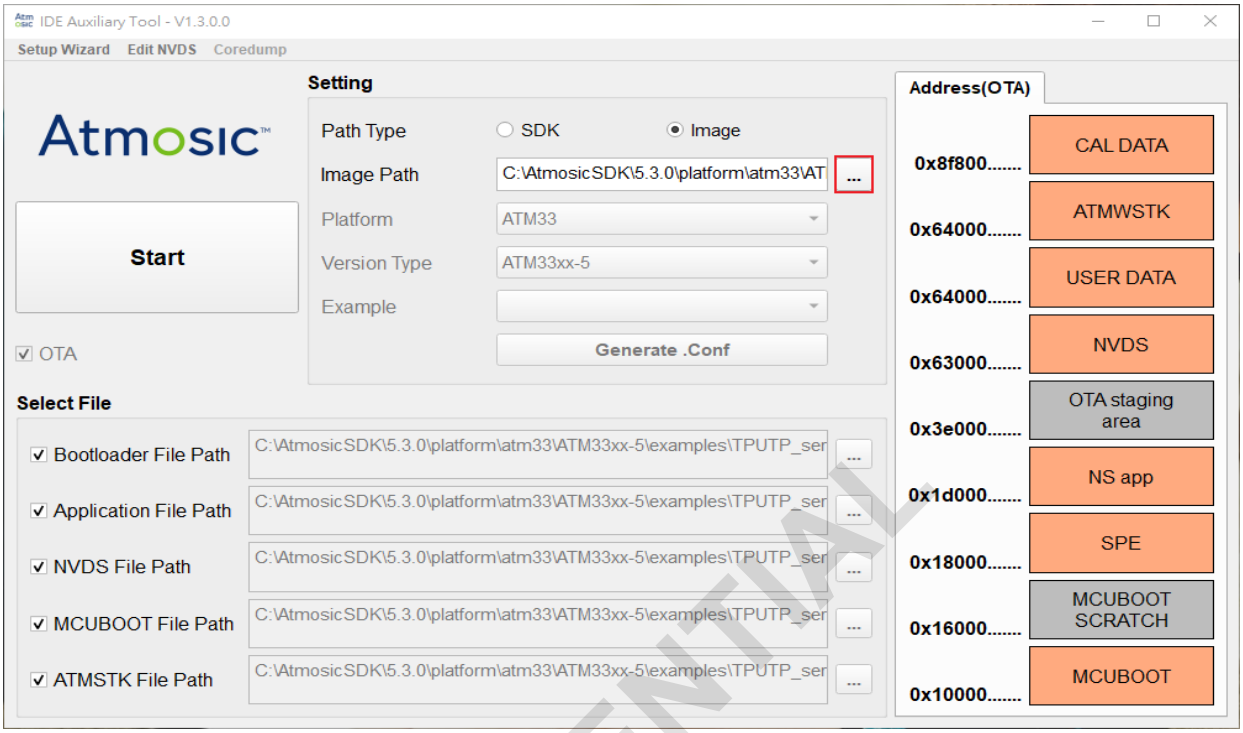


Figure 7-6 Set Image Path

Step 3 - Set the file to be written.

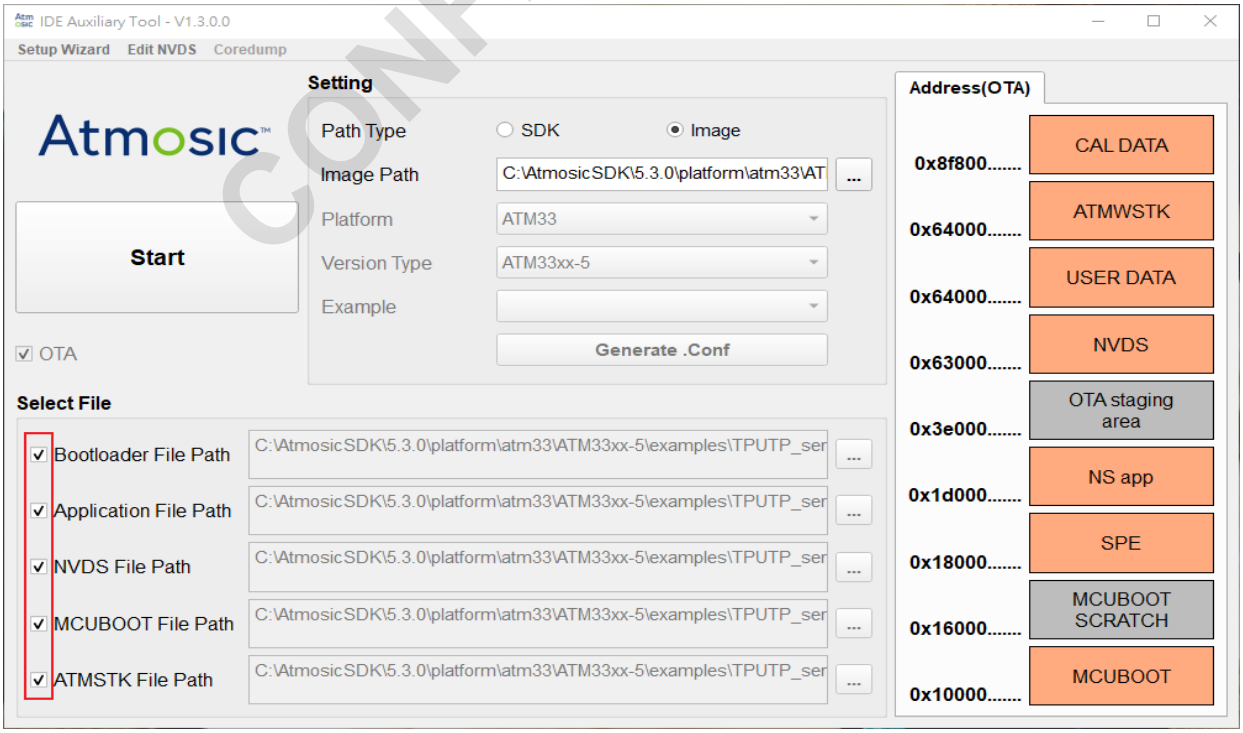


Figure 7-7 Set the File to be Written

CONFIDENTIAL

Step 4 - Click the Start button to write those files to EVK. After writing complete, it will popup the Execute Complete!! dialog.

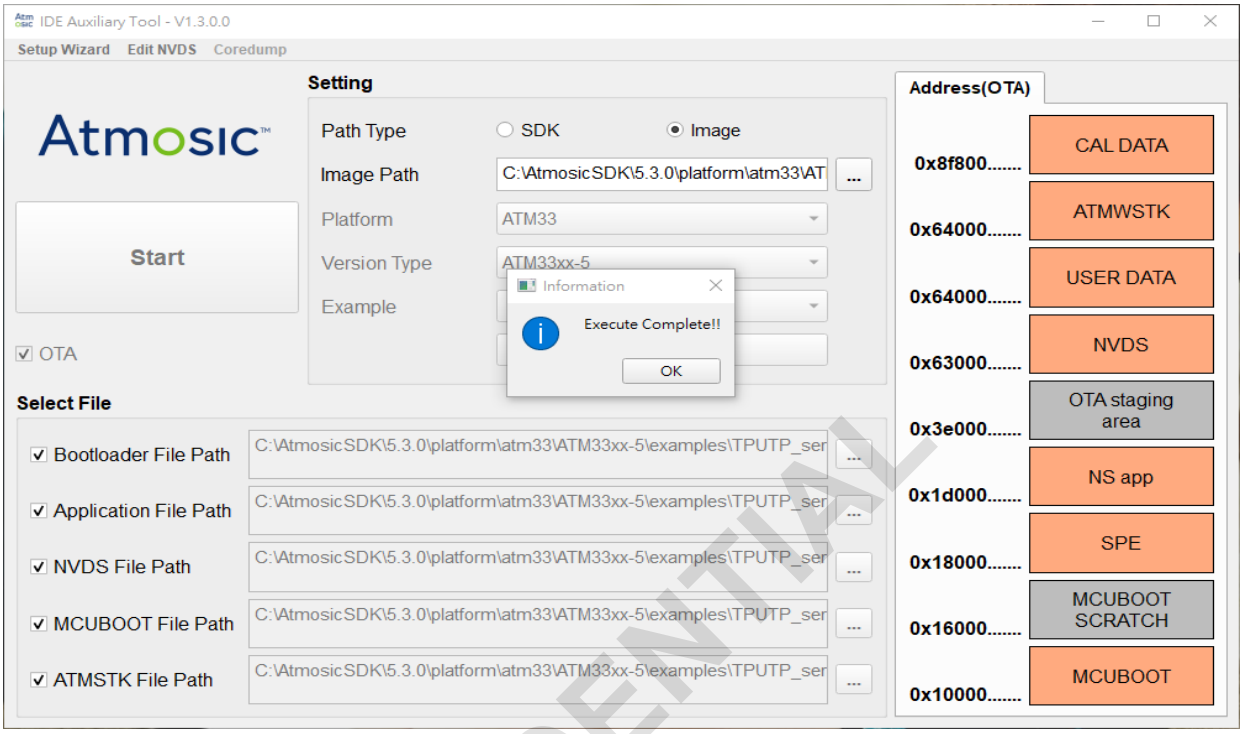


Figure 7-8 Write Flash Data Complete Dialog

CONFIDENTIAL

8. How to Generate IDE Project

This function will help users to quickly generate the IDE project directory. There are currently four IDEA projects supported.

- IAR
- SES
- Keil_gcc
- Keil_arm

If the IDE project directory already exists, the tool will pop up a warning message telling the user that the IDE project directory already exists, and the user needs to delete the old IDE project directory to continue execution. After the IDE project directory is successfully generated, the NVDS file path in Main GUI will be set into the IDE project directory.

Step 1 - Select the SDK option in Setting.

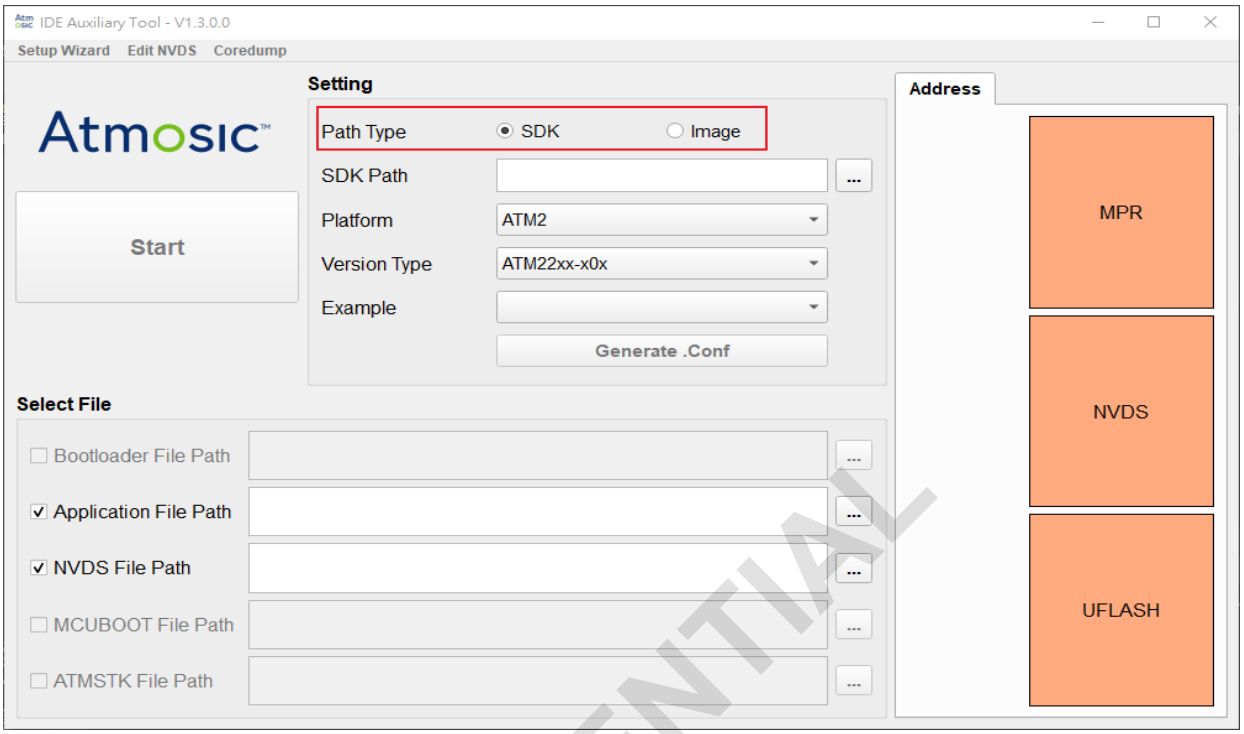


Figure 8-1 Set Path Type to SDK

Step 2 - Click the ... button to select the SDK root directory.

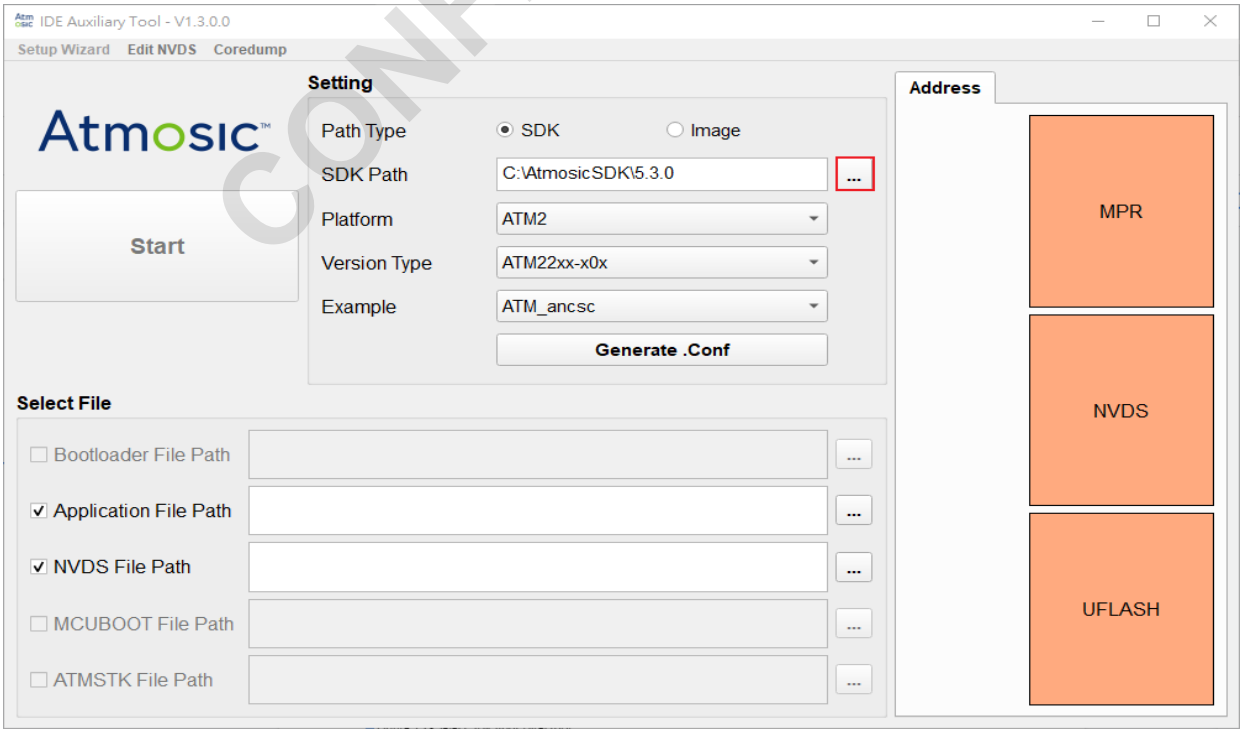


Figure 8-2 Select SDK Root Directory

CONFIDENTIAL

Step 3 - Select Platform and Version Type combobox.

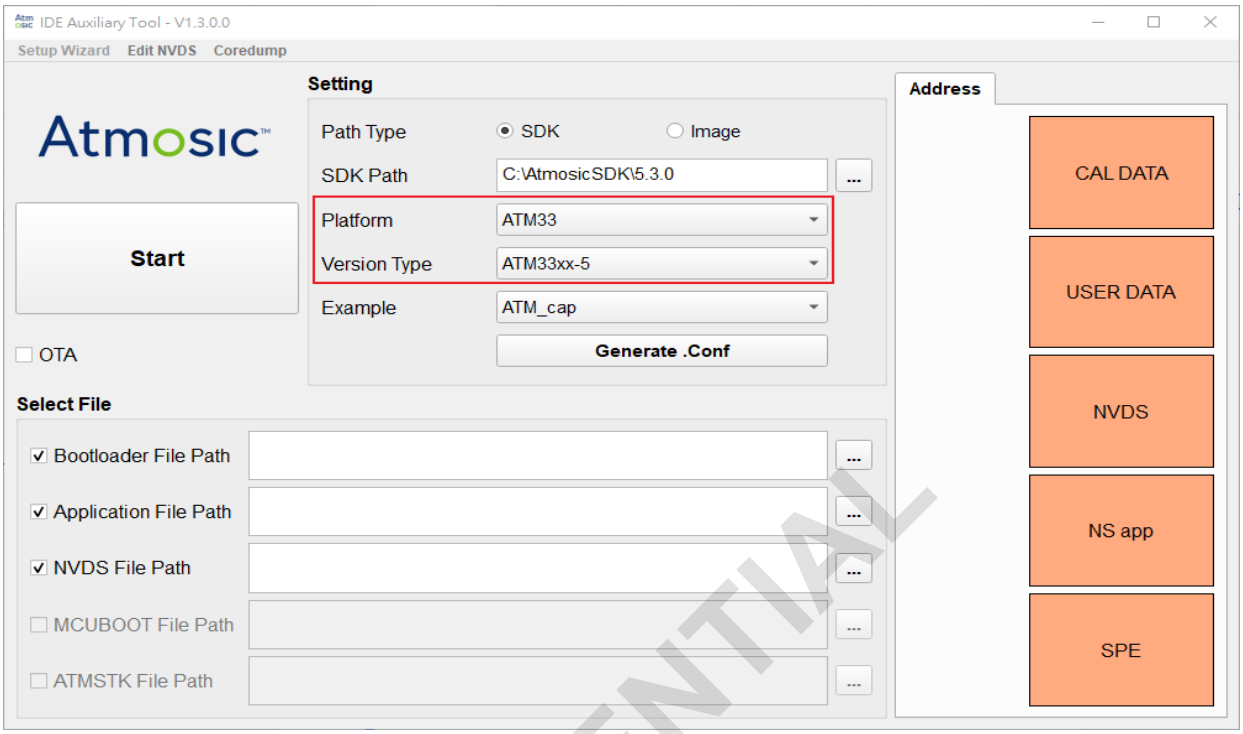


Figure 8-3 Select Platform and Version Type

Step 4 - Select Example combobox.

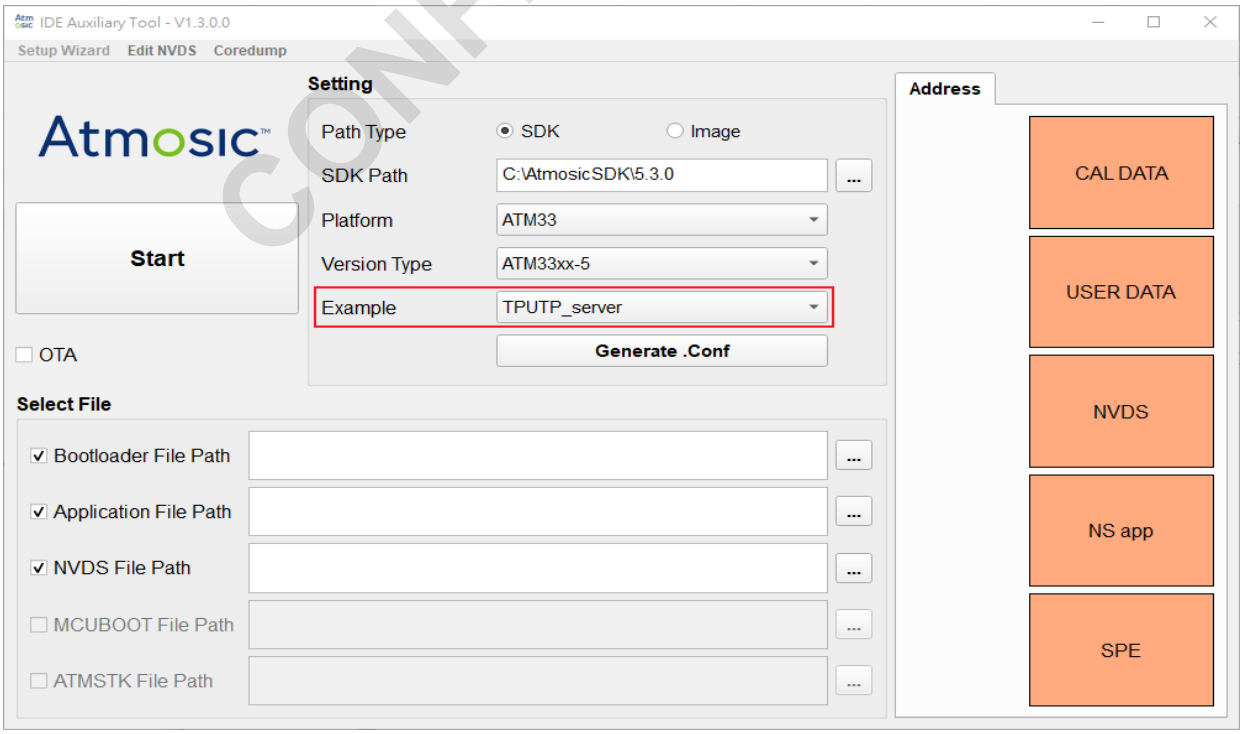


Figure 8-4 Select Example

CONFIDENTIAL

Step 5 - Click Setup Wizard/Generate IDE Project.

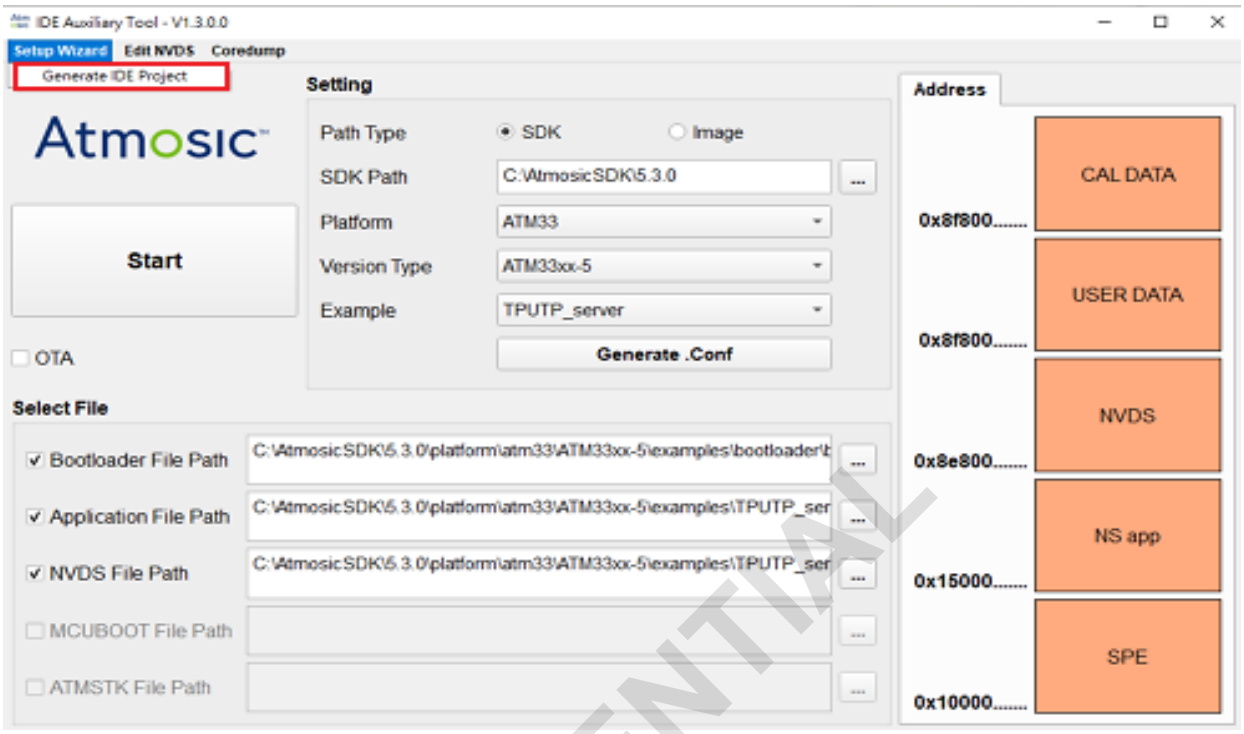


Figure 8-5 Select Generate IDE Project Sub-menu

Step 6 - Select IDE Platform combobox.

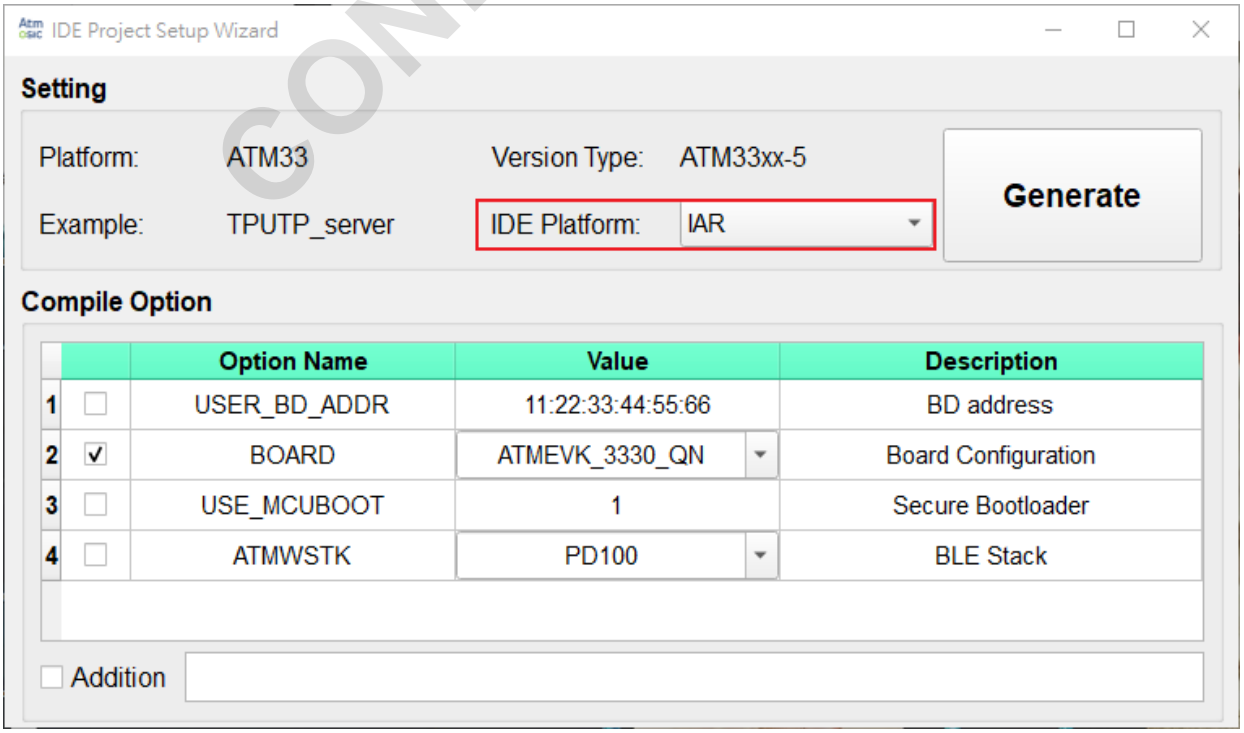


Figure 8-6 Select IDE Platform

CONFIDENTIAL

Step 7 - Select compile options and modify settings to meet the demand.

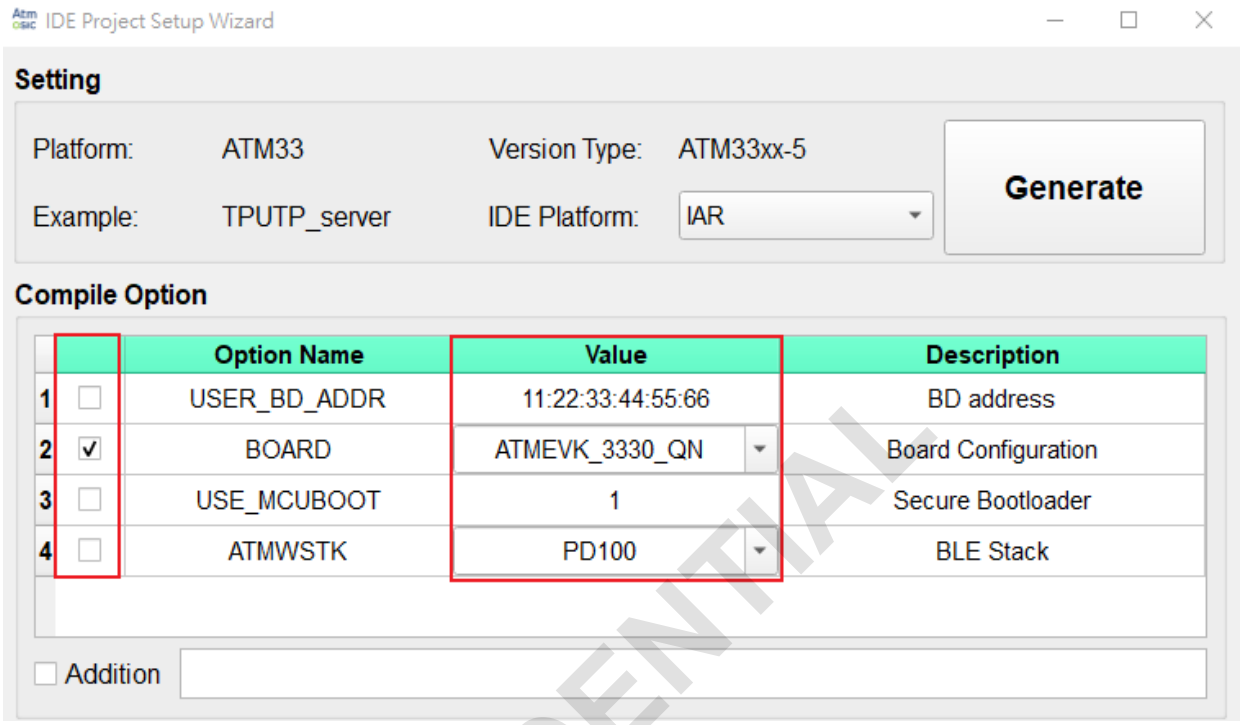


Figure 8-7 Select Compile Option

Step 8 - If cannot find the required compile option, set the Addition content as desired.

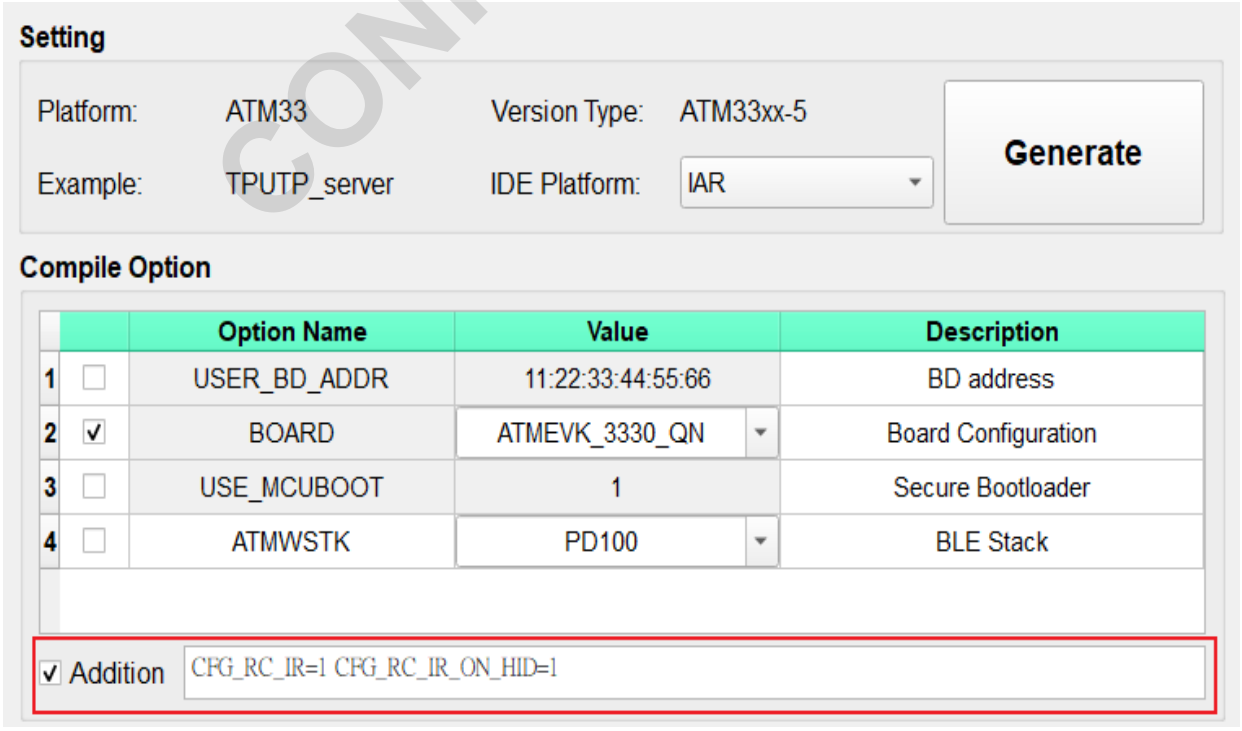


Figure 8-8 Select Addition Option

CONFIDENTIAL

Step 9 - Click the Generate button.

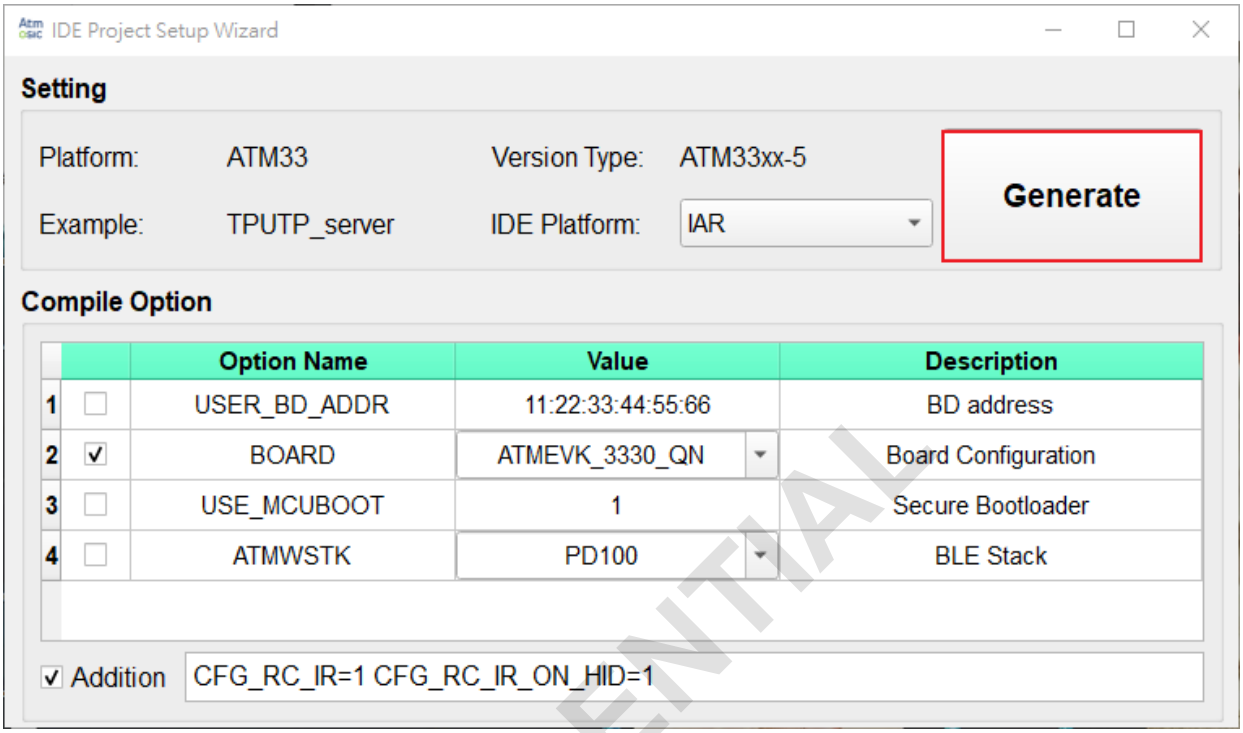


Figure 8-9 Click Generate Button

Step 10 - After the generation is completed, the IDE project directory will be generated in the example directory, and the Generate image complete!! message box will pop up. The Generate .conf button needs to be re-executed.

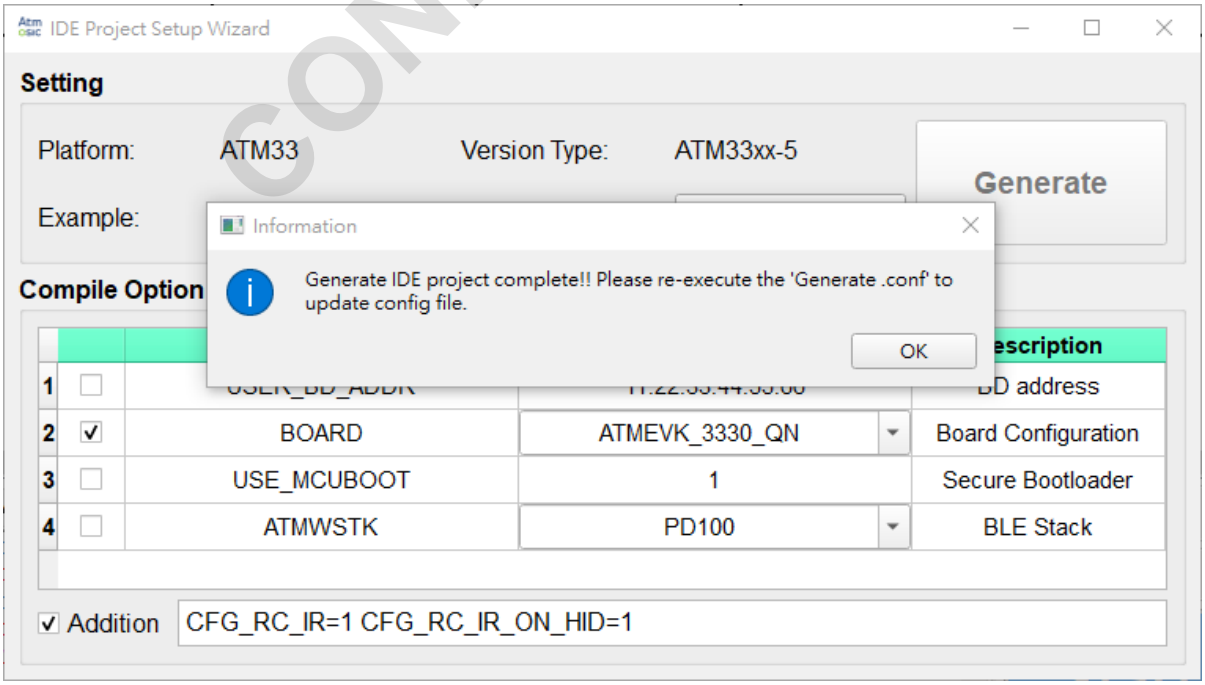


Figure 8-10 Generate IDE project complete

CONFIDENTIAL

Step 11 - Click windows close button to close IDE Project Setup Wizard GUI and go back to Main GUI.

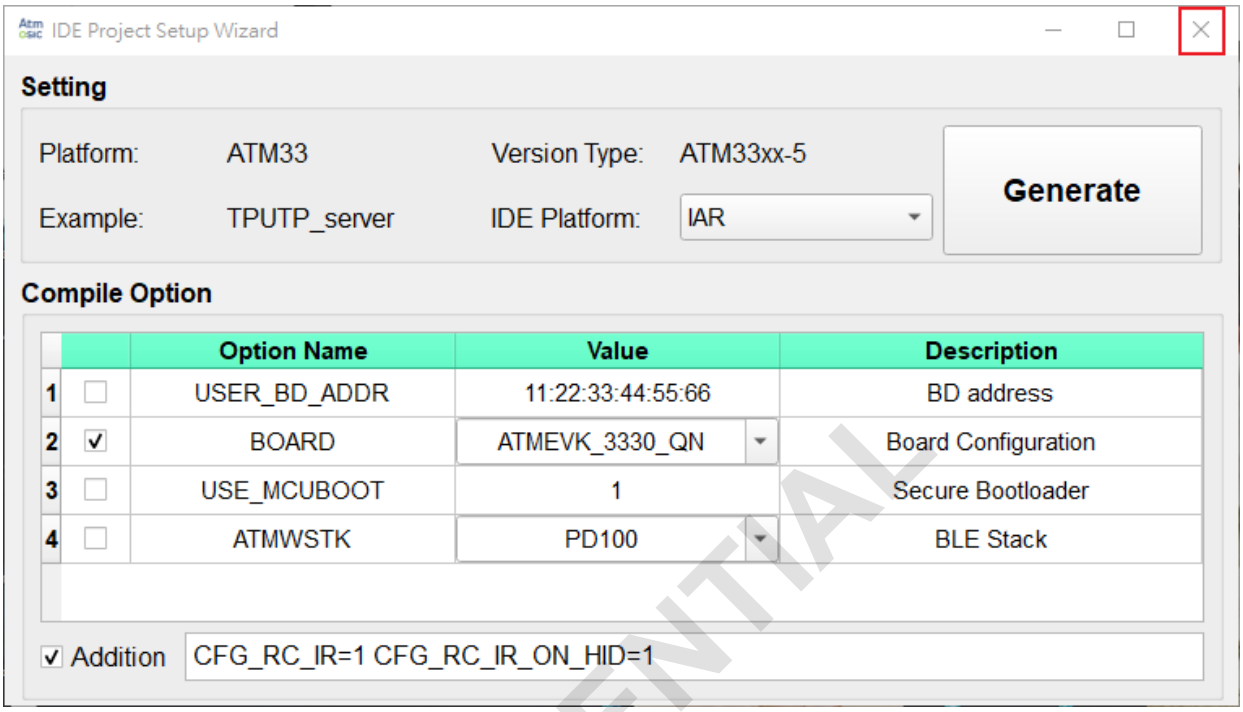


Figure 8-11 Click Windows Close Button to Go Back to Main GUI

CONFIDENTIAL

9. How to Modify NVDS Setting

This feature accesses EVK information through the SDK so it is only available when Path Type is SDK and there is an example configuration file in the SDK example output directory. Also, if the EVK has been written to a supported OTA image, the tool must have the same settings as the EVK (checked the OTA checkbox). Otherwise the user will get the wrong NVDS content due to parsing the wrong partition mapping.

Step 1 - Click Edit NVDS/From EVK.

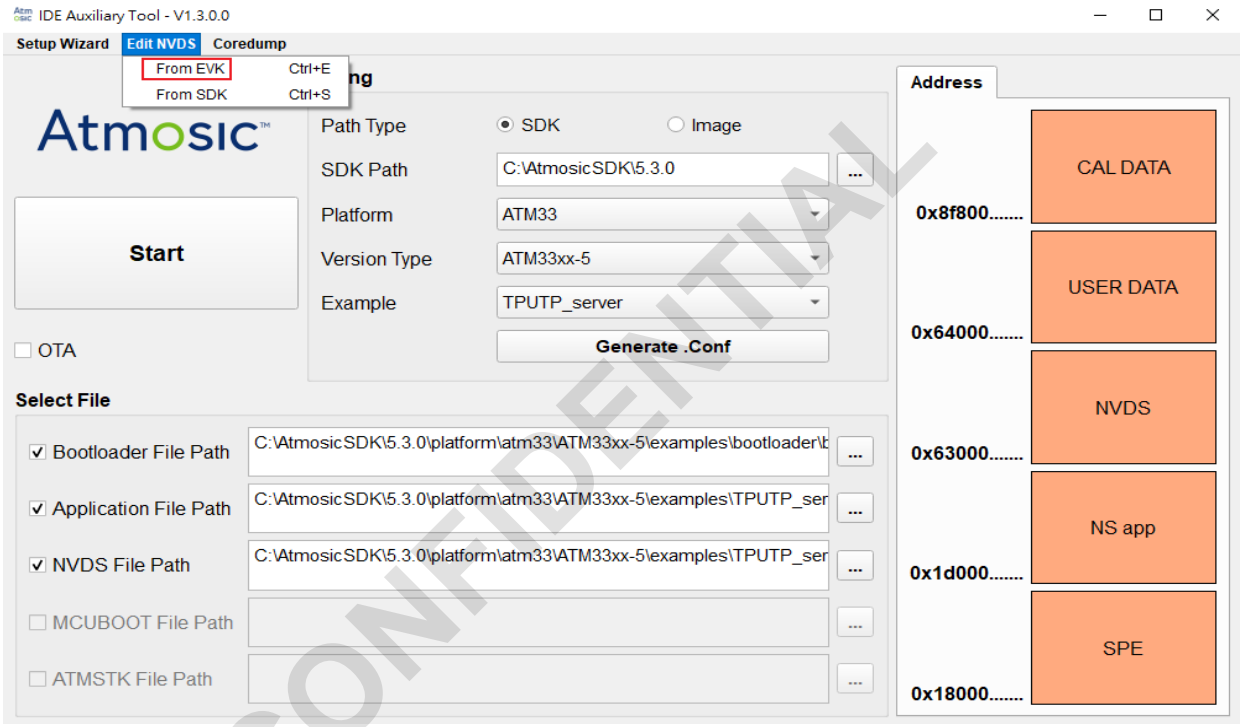


Figure 9-1 Select From EVK Sub-menu

Step 2 - The IDE Tool will read NVDS value from EVK and replace content in the current flash_NVDS.bin file.

The NVDS file path is read from the Main GUI settings.

Step 3 - Parse the NVDS file and display the content in the NVDS GUI.

CONFIDENTIAL



Figure 9-2 Display NVDS information from EVK

Step 4 - Select tag name then starts modifying tag value. Users can only edit fields that have content and the tag value must be in bytes.

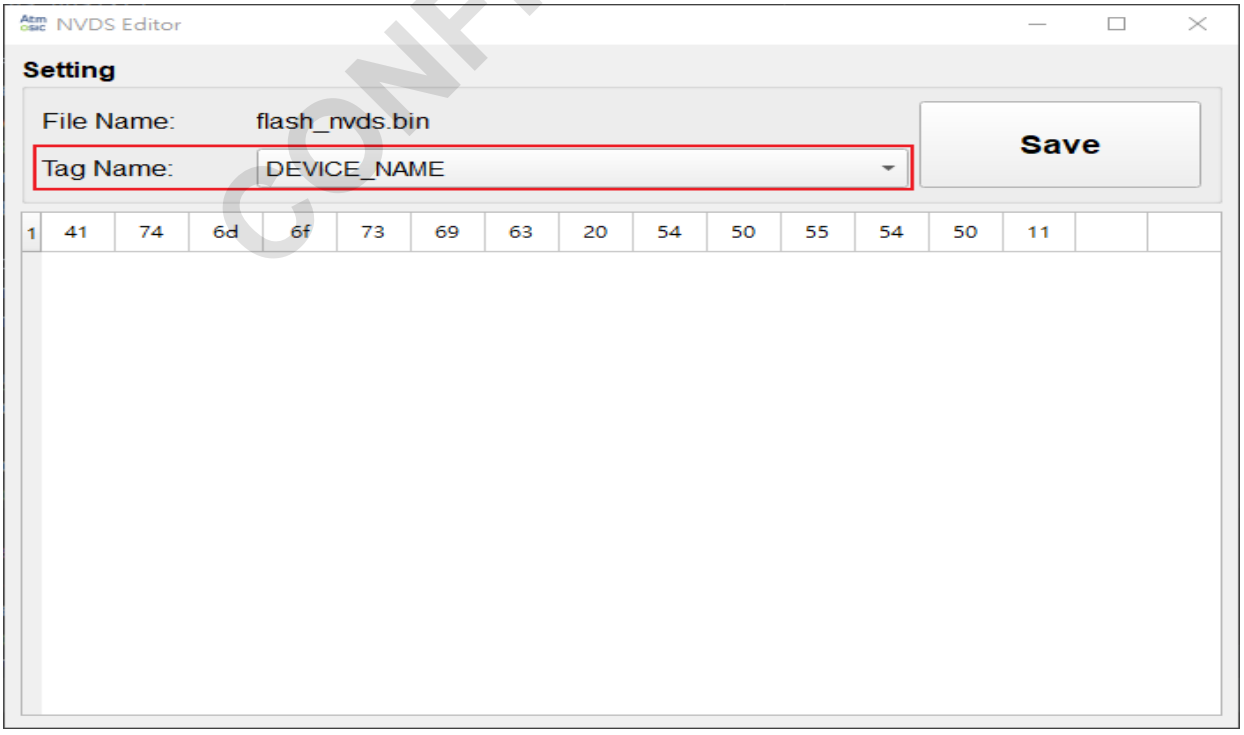


Figure 9-3 Select NVDS Tag Name from EVK

CONFIDENTIAL

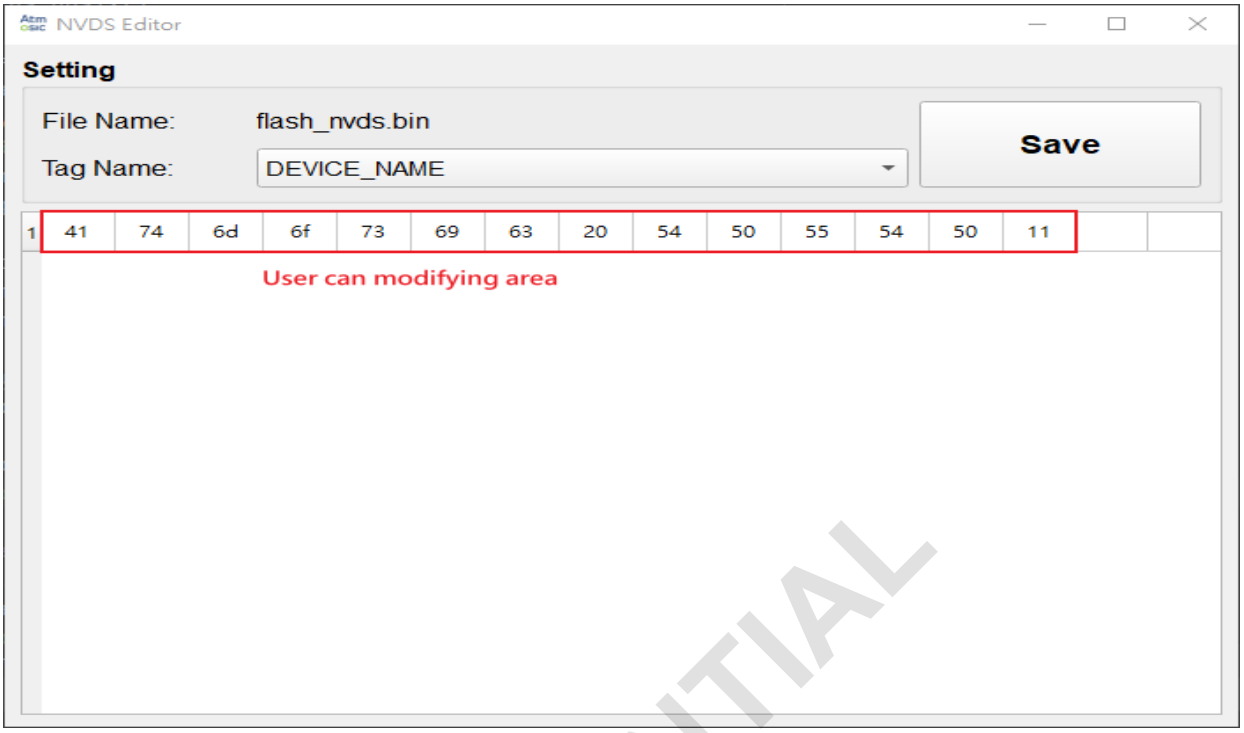


Figure 9-4 Modify Tag Name Content from EVK

Step 5 - After the modification is completed, click the Save button and the tool will save modification content to EVK.



Figure 9-5 Click Save Button to Save Modification from EVK

Step 6 - After the save is complete, the tool will pop up the Save NVDS settings completed!! message box.

CONFIDENTIAL

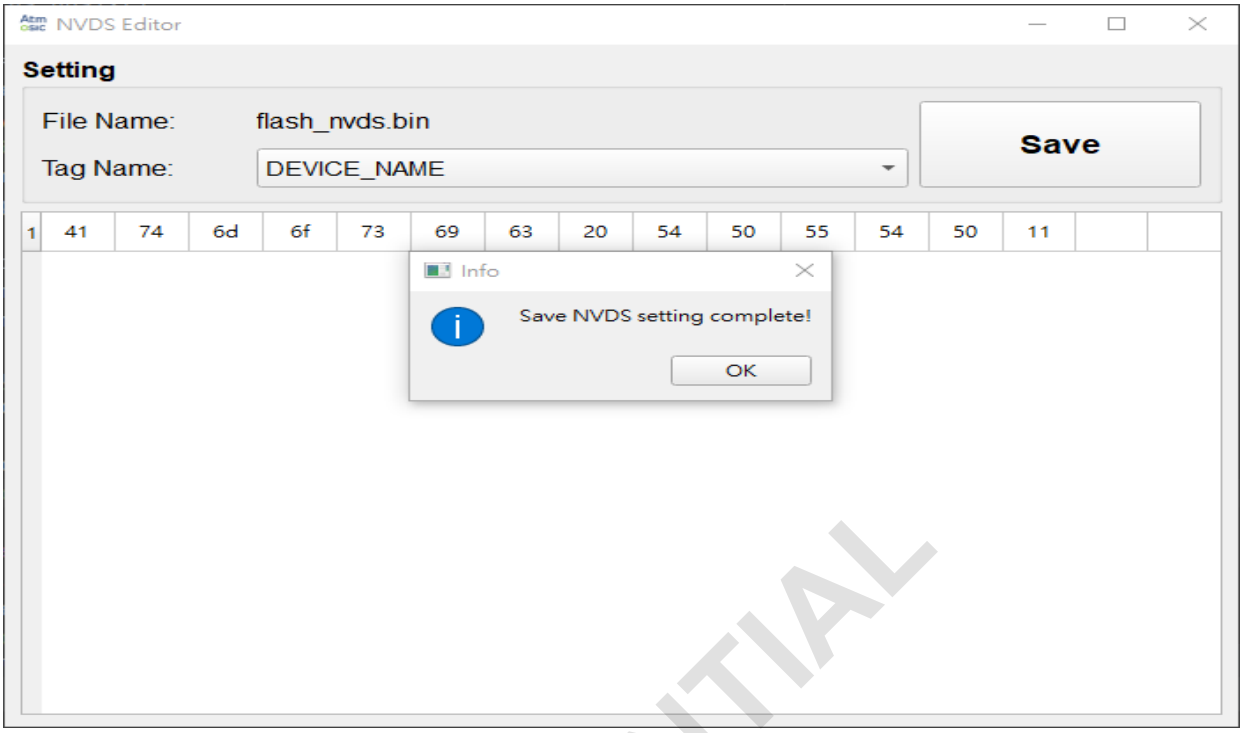


Figure 9-6 Save NVDS Setting Complete

Step 7 - Click windows close button to close NVDS GUI and go back to Main GUI.

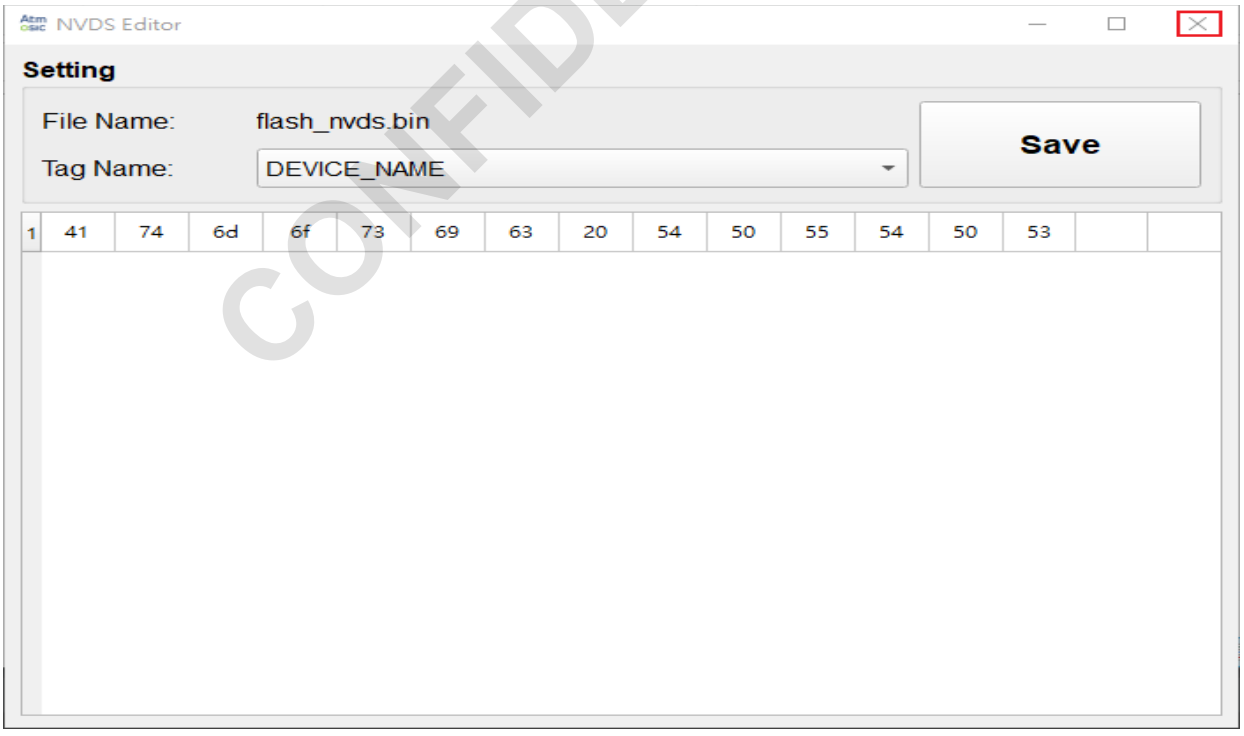


Figure 9-7 Click Windows Close Button to Go Back to Main GUI

***Note**: Edit NVDS/from SDK feature is the same process as [Step 1 - Click Edit NVDS/From EVK]( ).*

CONFIDENTIAL

10. How to Get Core Dump Information

This feature is to get EVK core dump information and save it in the example output directory.

Step 1 - Click Coredump/Get Coredump.

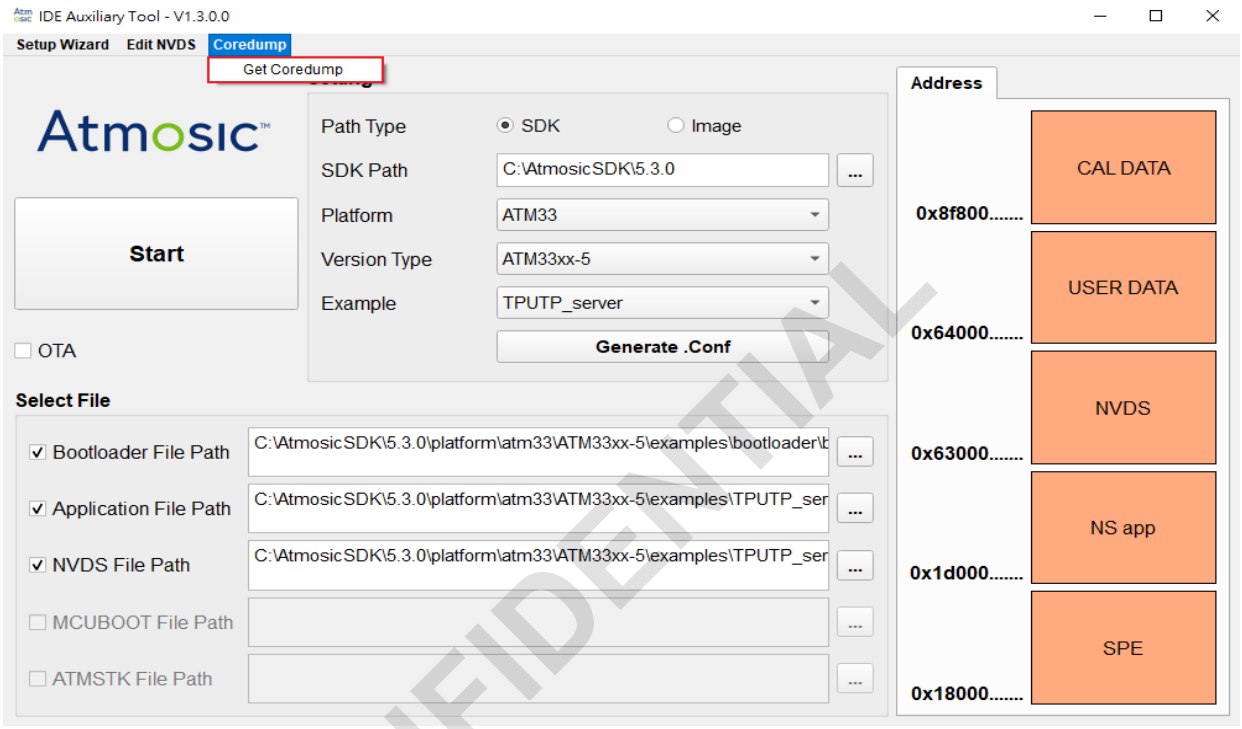


Figure 10-1 Select Get Coredump Sub-menu

Step 2 - After getting core dump information from EVK complete, the tool will pop up the Get coredump success!! message box and generate a Coredump file in the example output directory.

CONFIDENTIAL

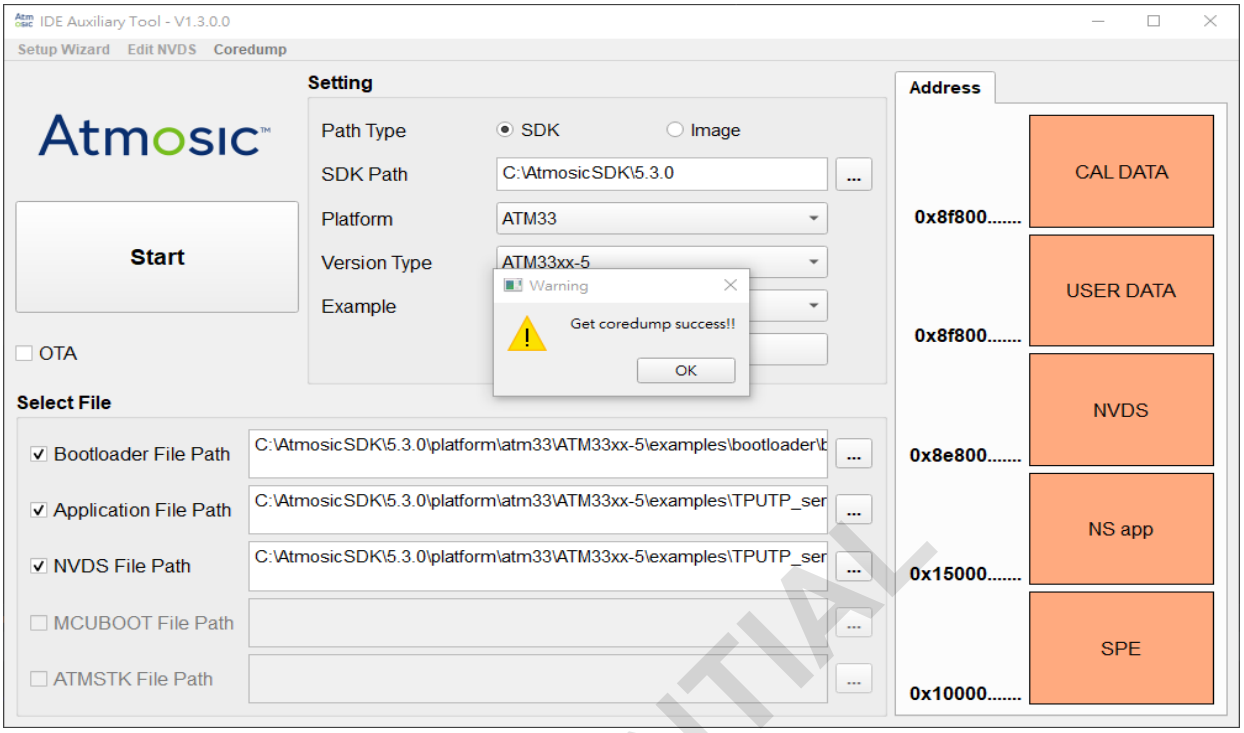


Figure 10-2 Generate Coredump File Complete

CONFIDENTIAL

11. Troubleshooting

If there is a popup error message during execution, the user can troubleshoot the problem by referring to the error messages in Table 1.

Index	Error message	Troubleshoot
1	Setting.xml not found	The setting.xml in the executable file root directory doesn't exist.
2	NVDS file not found	NVDS file path does not exist. Please select NVDS file first.
3	Get coredump fail	Read core dump information fail.
4	Example config file has problem	The content starting with the example name in the example output directory is not correct.
5	No OTA option in config file	The content starting with the example name in the example output directory doesn't have an OTA option. This option is used to identify whether to check the Support OTA item when the Path Type is Image .
6	No SDK_PLAT option in config file	The content starting with the example name in the example output directory doesn't have the SDK_PLAT option. This option identifies which Platform to choose when the Path Type is Image.
7	Parser example name fail	Parser example name from the example output directory failed. Please check there has a *.jlink file in the example output folder.
8	file path not found	The image file path does not exist. Please select each image file path before clicking the Generate .conf button.
9	Example path not found	The example file path is not complete. Please check that the SDK path and example name are not empty.
10	Jlink file not found	The J-Link file and run J-Link script file doesn't exist. Please check two part as below: 1) The file name is called example name + _write.jlink is exist. 2) Is there a scripts directory above the executable file?
11	Image path not found	The example output directory doesn't exist.

CONFIDENTIAL

Index	Error message	Troubleshoot
12	Address has some problem	Flash address mapping has conflicted.
13	NVDS config file not found	The NVDS file path in the Main GUI doesn't exist.
14	NVDS config file load error	The content in nvds_info.conf doesn't have an NVDS option. nvds_info.conf is in the same directory as flash_nvds.bin
15	Please install J-Link to your system	Not installed J-Link driver.
16	Cannot find $ <JLINKEXE > in your system	Not installed J-Link commander.
17	Cannot find dump NVDS file	Load NVDS from EVK failed so that the expected dump nvds file was not found.
18	Don't select signed image	The application image file must be an unsigned archive.
19	Setting_compiler_option.xml not found	The setting_compiler_option.xml in the executable file root directory doesn't exist.
20	The $ <IDE_Platform > folder already exist	The IDE project directory already exists in the example directory. Please delete or rename the old IDE project directory then try again.
21	Option value can't be empty	The compile option value cannot be empty in the selected state
22	BD address format error	There is a format problem with the BD address in the compile options table.
23	Addition value can't be empty	The addition value cannot be empty in the selected state.
24	Generate IDE project fail	Can't not create an IDE project directory.
25	Example output path not found	The example output directory does not exist.

Table 1 - Error Message Description

CONFIDENTIAL

References

Title	Description	Link
Install J-Link	Software and Documentation pack	https://www.segger.com/downloads/jlink

Revision History

Date	Version	Description
November 12, 2022	0.51	Updated for support of ATM2/ATM3 SDK5.3.0, and ATM33/e from SDK5.2.0 or later. Changed title to IDE Auxiliary Flash Programming Tool User Guide
October 14, 2022	0.50	Initial version created.

CONFIDENTIAL

ATMOSIC TECHNOLOGIES – DISCLAIMER

This product document is intended to be a general informational aid and not a substitute for any literature or labeling accompanying your purchase of the Atmosic product. Atmosic reserves the right to amend its product literature at any time without notice and for any reason, including to improve product design or function. While Atmosic strives to make its documents accurate and current, Atmosic makes no warranty or representation that the information contained in this document is completely accurate, and Atmosic hereby disclaims (i) any and all liability for any errors or inaccuracies contained in any document or in any other product literature and any damages or lost profits resulting therefrom; (ii) any and all liability and responsibility for any action you take or fail to take based on the information contained in this document; and (iii) any and all implied warranties which may attach to this document, including warranties of fitness for particular purpose, non-infringement and merchantability. Consequently, you assume all risk in your use of this document, the Atmosic product, and in any action you take or fail to take based upon the information in this document. Any statements in this document in regard to the suitability of an Atmosic product for certain types of applications are based on Atmosic's general knowledge of typical requirements in generic applications and are not binding statements about the suitability of Atmosic products for any particular application. It is your responsibility as the customer to validate that a particular Atmosic product is suitable for use in a particular application. All content in this document is proprietary, copyrighted, and owned or licensed by Atmosic, and any unauthorized use of content or trademarks contained herein is strictly prohibited.

Copyright ©2022 by Atmosic Technologies. All rights reserved. Atmosic logo is a registered trademark of Atmosic Technologies Inc. All other trademarks are the properties of their respective holders.

CONFIDENTIAL

Atmosic™

Atmosic Technologies | 2105 S. Bascom Ave. | Campbell CA, 95008
www.atmosic.com