Interface Board User Guide

Revision History

Date	Version	Description
July 24, 2020	0.50	Initial version created.
April 14, 2021	0.51	Updated format, no content change.

CONFIDENTIAL

©2020-2021, Atmosic Technologies Inc. All rights reserved. Atmosic logo is a registered trademark of Atmosic Technologies Inc. All other trademarks are the properties of their respective holders. This document is subject to change without notice.

Table of Contents

Overview 3

Interface Board Description 3

FAQs 7

How to supply power to the Interface Board 7

Extra currents are seen during power measurements when the Interface Board is connected 7

Debug UART lines show garbage characters 7

List of Figures

Figure 1 - Interface Board Version 011-01 (V2)
Figure 2 - Interface Board Version 011-02 (V3)
Figure 3 - **V2** 2x10 20-pin Connector Definition
Figure 4 - **V3** 2x10 20-pin Connector Definition
Figure 5 - J-Link Connector Definition

CONFIDENTIAL

Overview

The Atmosic Reference Design Interface Board (RDIB) provides a host computer access to some commonly needed interfaces on an Atmosic chip based DUT, such as

- Serial Wire Debug (SWD)
- Debug UART
- 4-wire HCI UART or 2-wire for Direct Test Mode (DTM)
- Reset/Powerdown (PWD) and Boot Mode signals

Interface Board Description

Figures 1 and 2 show the main components on version 011-01 (**V2**) and 011-02 (**V3**), respectively, of the Interface Board.

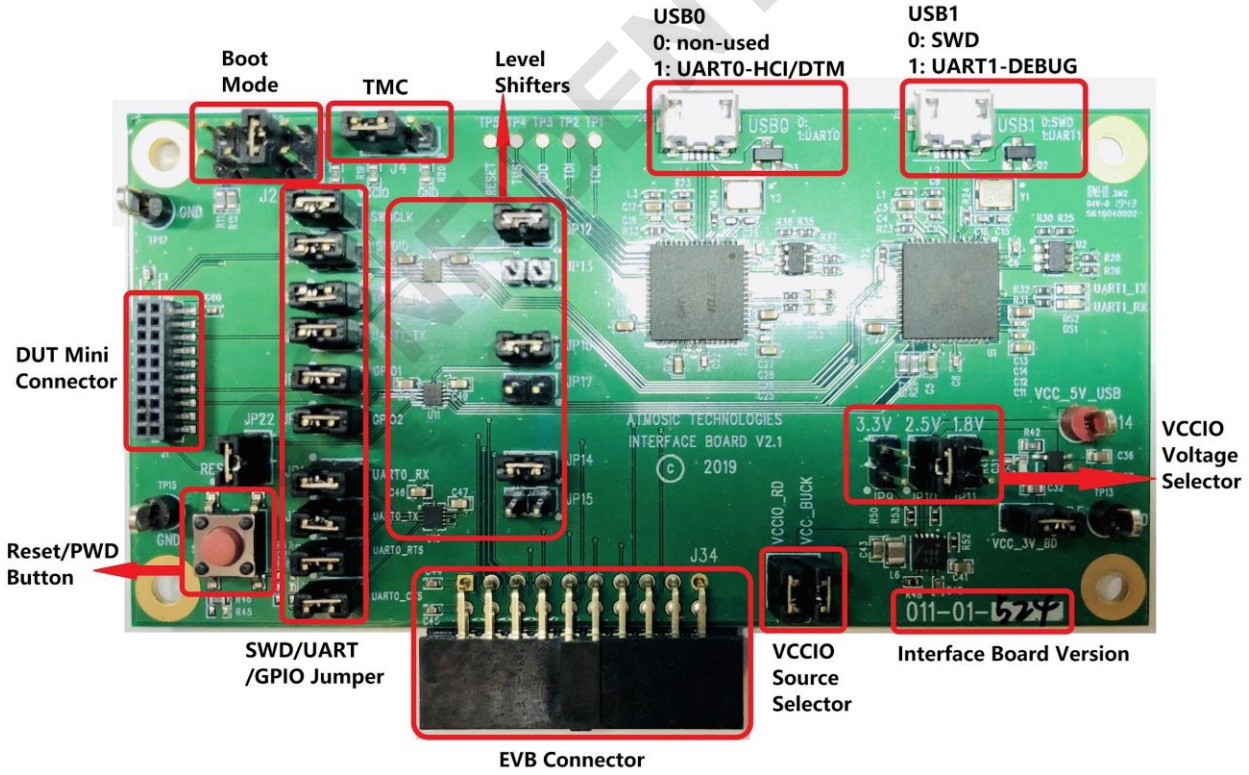


Figure 1 - Interface Board Version 011-01 (**V2**)

CONFIDENTIAL

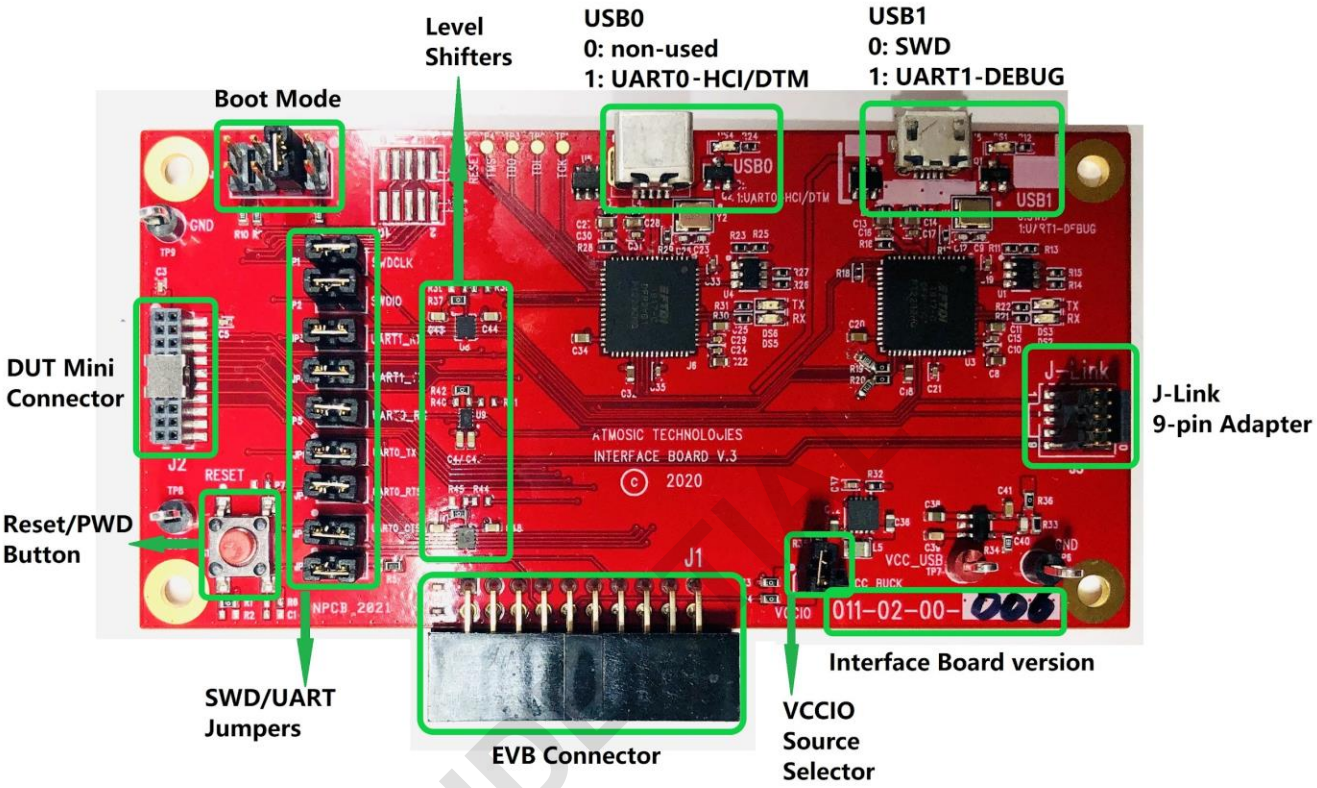


Figure 2 - Interface Board Version 011-02 (**V3**)

- **Interface Board Version**: The bottom right corner shows the version of the Interface Board. Figure 1 is an example of 011-01 (**V2**), and Figure 2 is an example of 011-02 (**V3**).

- **USB0**: This is a micro-USB port on **V2** (mini-USB port on **V3**) that is connected to an FTDI FT2232H, which provides two serial ports. This should show up as "Atmosic RDI USB0" in Windows Device Manager, and /dev/ttyUSBxxx in Linux.
    - Port 0: Reserved for internal use
    - Port 1: 4-wire HCI UART or 2-wire DTM to the Atmosic chip
    - On **V3**, an LED (DS4) will be solid blue when USB0 is connected to power

- **USB1**: This is a micro-USB port that is connected to an FTDI FT2232H, which provides two serial ports. This should show up as "Atmosic RDI USB1" port in Windows Device Manager, and /dev/ttyUSBxxx in Linux.
    - Port 0: SWD
    - Port 1: Debug UART
    - On **V3**, an LED (DS1) will be solid blue when USB1 is connected to power

- **Boot Mode** - Benign Boot, pull high to keep CPU in an idle state during boot.
    - Pins 1-2: Benign Boot

CONFIDENTIAL

- Pins 3-4: USB1 FTDI control for use with SDK (Default)
- Pins 5-6: Reserved for internal use
- Pins 7-8: Normal Boot

- **Board Connectors**: There are two options to connect the Interface Board to an Atmosic board:
  - **Mini Connector**: This is a 1.27 mm pitch 2x10 20-pin Female interface.
  - **EVB Connector**: This is a 2.54 mm pitch 2x20 20-pin Female interface, side launch designed to connect directly to an Evaluation Board (EVB). See Figure 3 and 4 for pin definition.
    - **V2** Pin Definition:


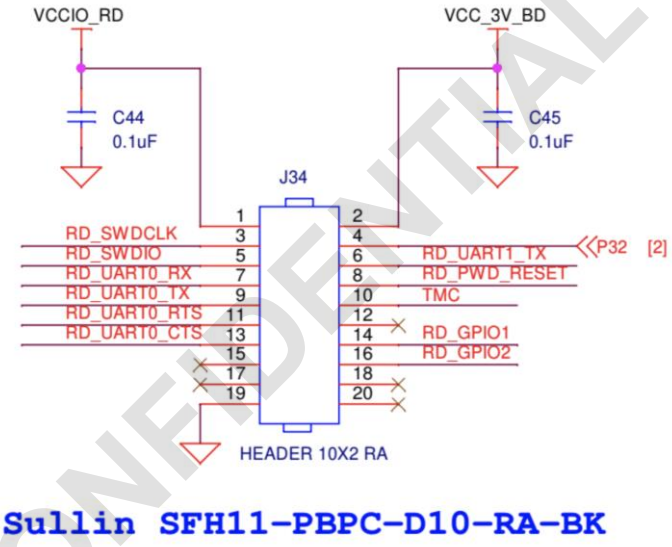


Figure 3 - **V2** 2x10 20-pin Connector Definition

    - **V3** Pin Definition:

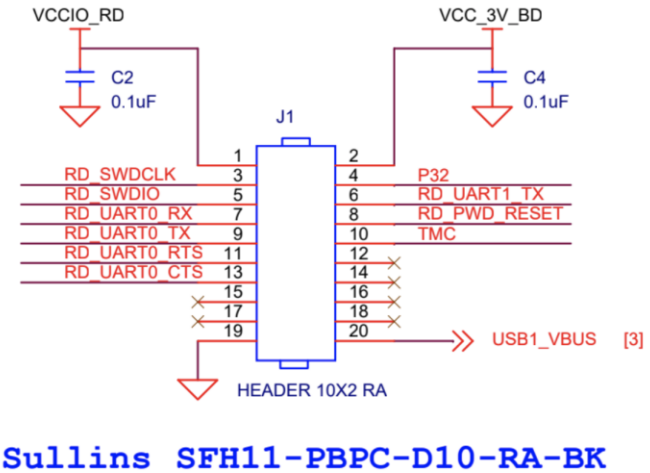

CONFIDENTIAL

Figure 4 - **V3** 2x10 20-pin Connector Definition

- **VCCIO Source Selector**: These jumpers allow the user to either drive or use the IO supply on the Atmosic board. There are 2 valid modes determined by J7 pins 1-3 on **V2** and J10 on **V3**:
  - Shorted: VCCIO is supplied by the Interface board to the Atmosic board (Default)
  - Open: VCCIO is supplied by the Atmosic board

  J7 pins 2-4 should always be shorted on **V2** and have been replaced with a 0 Ω resistor on **V3.**

- **Level Shifters**: These are level shifters to provide voltage isolation between the FTDI FT2232H and the Atmosic chip. There are a total of 3 level shifters, each with its own output enable and disable jumpers.
  - Level Shifter 1 is for SWD and Debug UART
  - Level Shifter 2 is for other signals from the USB1 FTDI chip
  - Level Shifter 3 is for HCI UART/DTM

- **SWD/UART/GPIO Jumpers**: These jumpers allow the user to disconnect individual signals between the level shifters and the board connectors.

- **Reset/PWD Button & Jumper**: Used to Reset/PWD the Atmosic chip. The jumper is loaded by default for SDK use as it allows control from the USB1 FTDI chip. On **V2**, JP22 must be open to use the button.

- **J-Link 9-pin Adapter (only on V3)**: This is a 1.27 mm 9-pin male Samtec FTSH connector that works with the J-Link 9-pin Cortex-M Adapter.
  Figure 5 shows the pin definition:

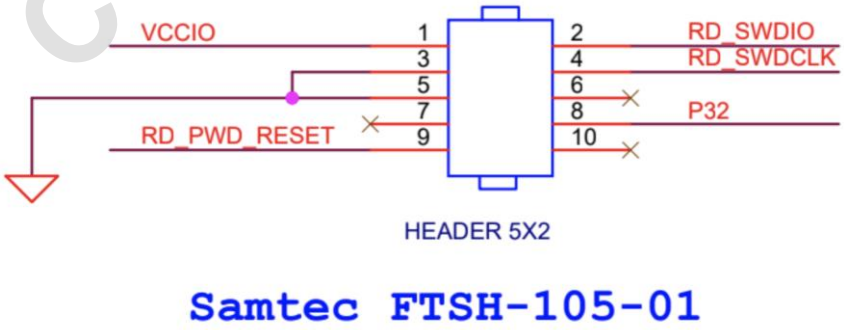


Figure 5 - J-Link Connector Definition

CONFIDENTIAL

FAQs

How to supply power to the Interface Board

There are a few options to power the RDIB. Either option will provide power to both Bucks and the two FTDI chips.

1) Connect a USB cable to a host computer (default and recommended method). Connecting either USB0 or USB1 will supply the necessary power.
2) Connect a 5 V supply at the red loop and ground to any black loop
3) Connect a USB cable to a USB power adapter.

Extra currents are seen during power measurements when the Interface Board is connected

When doing power consumption measurements, sometimes unexpected VCCIO current may be seen. This is due to the weak drive of the bi-directional level shifters used on the board, which have an effective 4 kΩ output resistance.

Disconnecting the various jumpers (SWD/UART) can help isolate which specific line is causing the issue.

Debug UART lines show garbage characters

Sometimes the UART lines may not be pulled correctly, due to the level shifter's bi-directional nature, which have a 4 kΩ output resistance. This may sometimes cause the initial set of characters to be shown as corrupted.

CONFIDENTIAL



CONFIDENTIAL

ATMOSIC TECHNOLOGIES - DISCLAIMER

This product document is intended to be a general informational aid and not a substitute for any literature or labeling accompanying your purchase of the Atmosic product. Atmosic reserves the right to amend its product literature at any time without notice and for any reason, including to improve product design or function. While Atmosic strives to make its documents accurate and current, Atmosic makes no warranty or representation that the information contained in this document is completely accurate, and Atmosic hereby disclaims (i) any and all liability for any errors or inaccuracies contained in any document or in any other product literature and any damages or lost profits resulting therefrom; (ii) any and all liability and responsibility for any action you take or fail to take based on the information contained in this document; and (iii) any and all implied warranties which may attach to this document, including warranties of fitness for particular purpose, non-infringement and merchantability. Consequently, you assume all risk in your use of this document, the Atmosic product, and in any action you take or fail to take based upon the information in this document. Any statements in this document in regard to the suitability of an Atmosic product for certain types of applications are based on Atmosic's general knowledge of typical requirements in generic applications and are not binding statements about the suitability of Atmosic products for any particular application. It is your responsibility as the customer to validate that a particular Atmosic product is suitable for use in a particular application. All content in this document is proprietary, copyrighted, and owned or licensed by Atmosic, and any unauthorized use of content or trademarks contained herein is strictly prohibited.

Copyright ©2020-2021 by Atmosic Technologies. All rights reserved.

www.atmosic.com