Contents

1. Summary 8
2. Prerequisite condition....8
3. How to use driver 8
4. Direction for driver use 8
4. 1 Kind of VI 8
4. 2 The common input and common output of drivers....8
4. 3 Details of VI....8
4. 3. 1 Custom Request.vi 8
4. 3. 2 HIOKE 3570 AVERaging.vi 8
4. 3. 3 HIOKE 3570 BEEPer JUDGment.vi 9
4. 3. 4 HIOKE 3570 BEEPer KEY.vi 9
4. 3. 5 HIOKE 3570 BIN FLIMit ABSolute.vi....9
4. 3. 6 HIOKE 3570 BIN FLIMit DEViation.vi 9
4. 3. 7 HIOKE 3570 BIN FLIMit MODE.vi....10
4. 3. 8 HIOKE 3570 BIN FLIMit PERcent.vi 10
4. 3. 9 HIOKE 3570 BIN FLIMit REFerence.vi 10
4. 3. 10 HIOKE 3570 BIN SLIMit ABSolute.vi....11
4. 3. 11 HIOKE 3570 BIN SLIMit DEViation.vi 11
4. 3. 12 HIOKE 3570 BIN SLIMit MODE.vi....11
4. 3. 13 HIOKE 3570 BIN SLIMit PERcent.vi 11
4. 3. 14 HIOKE 3570 BIN SLIMit REFerence.vi 12
4. 3. 15 HIOKE 3570 BIN.vi 12
4. 3. 16 HIOKE 3570 COMParator ANALyzer.vi 12
4. 3. 17 HIOKE 3570 COMParator AREA FIX.vi....13
4. 3. 18 HIOKE 3570 COMParator AREA LIMit.vi 13
4. 3. 19 HIOKE 3570 COMParator AREA MEAS.vi 13
4. 3. 20 HIOKE 3570 COMParator AREA.vi 13
4. 3. 21 HIOKE 3570 COMParator FLIMit ABSolute.vi....14
4. 3. 22 HIOKE 3570 COMParator FLIMit DEViation.vi....14
4. 3. 23 HIOKE 3570 COMParator FLIMit PERcent.vi 14
4. 3. 24 HIOKE 3570 COMParator FLIMit MODE.vi....15
4. 3. 25 HIOKE 3570 COMParator PARAmeter.vi 15

4. 3. 26 HIOKE 3570 COMParator PEAK FILTer.vi 15
4. 3. 27 HIOKE 3570 COMParator PEAK NO.vi 15
4. 3. 28 HIOKE 3570 COMParator PEAK.vi 16
4. 3. 29 HIOKE 3570 COMParator SLIMit ABSolute.vi 16
4. 3. 30 HIOKE 3570 COMParator SLIMit DEViation.vi 16
4. 3. 31 HIOKE 3570 COMParator SLIMit PERcent.vi 17
4. 3. 32 HIOKE 3570 COMParator SLIMit MODE.vi 17
4. 3. 33 HIOKE 3570 COMParator.vi 17
4. 3. 34 HIOKE 3570 CORRection CABLe.vi 18
4. 3. 35 HIOKE 3570 CORRection LOAD REFerence.vi 18
4. 3. 36 HIOKE 3570 CORRection LOAD CONDition.vi 18
4. 3. 37 HIOKE 3570 CORRection LOAD DCResistance CONDition.vi 19
4. 3. 38 HIOKE 3570 CORRection LOAD DCResistance REFerence.vi 19
4. 3. 39 HIOKE 3570 CORRection LOAD ERRor.vi 19
4. 3. 40 HIOKE 3570 CORRection LOAD RESet.vi 19
4. 3. 41 HIOKE 3570 CORRection LOAD RETurn.vi 20
4. 3. 42 HIOKE 3570 CORRection LOAD.vi 20
4. 3. 43 HIOKE 3570 CORRection OPEN ERRor.vi 20
4. 3. 44 HIOKE 3570 CORRection OPEN FREQuency.vi 20
4. 3. 45 HIOKE 3570 CORRection OPEN RETurn.vi 21
4. 3. 46 HIOKE 3570 CORRection OPEN.vi 21
4. 3. 47 HIOKE 3570 CORRection SCALe DATA.vi 21
4. 3. 48 HIOKE 3570 CORRection SCALe.vi 22
4. 3. 49 HIOKE 3570 CORRection SHORt Error.vi 22
4. 3. 50 HIOKE 3570 CORRection SHORt FREQuency.vi 22
4. 3. 51 HIOKE 3570 CORRection SHORt RETurn.vi 22
4. 3. 52 HIOKE 3570 CORRection SHORt.vi 23
4. 3. 53 HIOKE 3570 CURSor MOVe.vi 23
4. 3. 54 HIOKE 3570 CURSor SEARch TARGet.vi 23
4. 3. 55 HIOKE 3570 CURSor SEARch.vi 23
4. 3. 56 HIOKE 3570 CURSor.vi 24
4. 3. 57 HIOKE 3570 DCBias LEVel.vi 24
4. 3. 58 HIOKE 3570 DCBias.vi 24
4. 3. 59 HIOKE 3570 DCResistance ADJust DEMand.vi 24

4. 3. 60 HIOKE 3570 DCResistance ADJust.vi 25
4. 3. 61 HIOKE 3570 DCResistance AVERaging.vi 25
4. 3. 62 HIOKE 3570 DCResistance DELay.vi 25
4. 3. 63 HIOKE 3570 DCResistance LEVel CCURRent.vi 25
4. 3. 64 HIOKE 3570 DCResistance LEVel CVOLTage.vi 26
4. 3. 65 HIOKE 3570 DCResistance LEVel VOLTage.vi 26
4. 3. 66 HIOKE 3570 DCResistance LEVel.vi 26
4. 3. 67 HIOKE 3570 DCResistance LIMiter VOLTage.vi 26
4. 3. 68 HIOKE 3570 DCResistance LIMiter CURRent.vi 27
4. 3. 69 HIOKE 3570 DCResistance LIMiter.vi 27
4. 3. 70 HIOKE 3570 DCResistance RANGe AUTO.vi 27
4. 3. 71 HIOKE 3570 DCResistance RANGe LOWZ.vi 28
4. 3. 72 HIOKE 3570 DCResistance RANGe.vi 28
4. 3. 73 HIOKE 3570 DCResistance SPEEd.vi 28
4. 3. 74 HIOKE 3570 DISPlay.vi 28
4. 3. 75 HIOKE 3570 ESE.vi 29
4. 3. 76 HIOKE 3570 ESE0.vi 29
4. 3. 77 HIOKE 3570 ESE1.vi 29
4. 3. 78 HIOKE 3570 ESE2.vi 29
4. 3. 79 HIOKE 3570 ESE3.vi 30
4. 3. 80 HIOKE 3570 ESR.vi 30
4. 3. 81 HIOKE 3570 ESR0.vi 30
4. 3. 82 HIOKE 3570 ESR1.vi 30
4. 3. 83 HIOKE 3570 ESR2.vi 30
4. 3. 84 HIOKE 3570 ESR3.vi 31
4. 3. 85 HIOKE 3570 FILE DATE.vi 31
4. 3. 86 HIOKE 3570 FILE DELIMiter.vi 31
4. 3. 87 HIOKE 3570 FILE FOLDer.vi 31
4. 3. 88 HIOKE 3570 FILE Information.vi 32
4. 3. 89 HIOKE 3570 FILE MODE.vi 32
4. 3. 90 HIOKE 3570 FILE PARAmeter.vi 32
4. 3. 91 HIOKE 3570 FILE QUOTe.vi 32
4. 3. 92 HIOKE 3570 FILE SAVE.vi 33
4. 3. 93 HIOKE 3570 FILE SET.vi 33

4. 3. 94 HIOKE 3570 FILE TYPE.vi 33
4. 3. 95 HIOKE 3570 FORMat DATA.vi 33
4. 3. 96 HIOKE 3570 FORMat LONG.vi 34
4. 3. 97 HIOKE 3570 FREQuency.vi 34
4. 3. 98 HIOKE 3570 GRAPh AUTOscale.vi 34
4. 3. 99 HIOKE 3570 GRAPh COLor RESet.vi 34
4. 3. 100 HIOKE 3570 GRAPh COLor SEG1.vi 35
4. 3. 101 HIOKE 3570 GRAPh COLor.vi 35
4. 3. 102 HIOKE 3570 GRAPh OVERwrite.vi 35
4. 3. 103 HIOKE 3570 GRAPh SCALe.vi 35
4. 3. 104 HIOKE 3570 GRAPh SPAN.vi 36
4. 3. 105 HIOKE 3570 GRAPh VERTical CENTerdiv.vi 36
4. 3. 106 HIOKE 3570 GRAPh VERTical GRID.vi 36
4. 3. 107 HIOKE 3570 GRAPh VERTical METHod.vi 37
4. 3. 108 HIOKE 3570 GRAPh VERTical MODE.vi 37
4. 3. 109 HIOKE 3570 GRAPh VERTical SCALe.vi 37
4. 3. 110 HIOKE 3570 GRAPh VERTical UPPerlower.vi 37
4. 3. 111 HIOKE 3570 HANDshake.vi 38
4. 3. 112 HIOKE 3570 HEADer.vi 38
4. 3. 113 HIOKE 3570 HIZ LIMit.vi 38
4. 3. 114 HIOKE 3570 HIZ.vi 38
4. 3. 115 HIOKE 3570 IDN.vi 39
4. 3. 116 HIOKE 3570 IO OUTPut DELay.vi 39
4. 3. 117 HIOKE 3570 IO RESult RESet.vi 39
4. 3. 118 HIOKE 3570 IO TRIGger EDGe.vi 39
4. 3. 119 HIOKE 3570 IO TRIGger ENABle.vi 40
4. 3. 120 HIOKE 3570 KEYLock PASScode.vi 40
4. 3. 121 HIOKE 3570 KEYLock UNLock.vi 40
4. 3. 122 HIOKE 3570 KEYLock.vi 40
4. 3. 123 HIOKE 3570 LEVel CCURRent.vi 41
4. 3. 124 HIOKE 3570 LEVel CVOLTage.vi 41
4. 3. 125 HIOKE 3570 LEVel VOLTage.vi 41
4. 3. 126 HIOKE 3570 LEVel.vi 41
4. 3. 127 HIOKE 3570 LIMiter CURRent.vi 42

4. 3. 128 HIOKE 3570 LIMiter VOLTage.vi 42
4. 3. 129 HIOKE 3570 LIMiter.vi 42
4. 3. 130 HIOKE 3570 LIST CENTerspan.vi 42
4. 3. 131 HIOKE 3570 LIST INTerval.vi 43
4. 3. 132 HIOKE 3570 LIST STARt STEP.vi 43
4. 3. 133 HIOKE 3570 LIST STARt STOP.vi 43
4. 3. 134 HIOKE 3570 LOAD.vi 44
4. 3. 135 HIOKE 3570 MEASure COMParator PEAK LMAX.vi 44
4. 3. 136 HIOKE 3570 MEASure COMParator PEAK LMIN.vi 44
4. 3. 137 HIOKE 3570 MEASure COMParator PEAK.vi 45
4. 3. 138 HIOKE 3570 MEASure CURSor.vi 45
4. 3. 139 HIOKE 3570 MEASure ITEM.vi 45
4. 3. 140 HIOKE 3570 MEASure OUTPut AUTO.vi 45
4. 3. 141 HIOKE 3570 MEASure POINt.vi 45
4. 3. 142 HIOKE 3570 MEASure VALid.vi 46
4. 3. 143 HIOKE 3570 MEASure.vi 46
4. 3. 144 HIOKE 3570 MEMory CLEar.vi 46
4. 3. 145 HIOKE 3570 MEMory CONTrol.vi 46
4. 3. 146 HIOKE 3570 MEMory COUNt.vi 47
4. 3. 147 HIOKE 3570 MEMory POINts.vi 47
4. 3. 148 HIOKE 3570 MEMory.vi 47
4. 3. 149 HIOKE 3570 MODE.vi 47
4. 3. 150 HIOKE 3570 MONItor.vi 48
4. 3. 151 HIOKE 3570 OPC.vi 48
4. 3. 152 HIOKE 3570 PARameter# DIGit.vi 48
4. 3. 153 HIOKE 3570 PARameter#.vi 48
4. 3. 154 HIOKE 3570 POINt.vi 49
4. 3. 155 HIOKE 3570 PRESet.vi 49
4. 3. 156 HIOKE 3570 RANGe AUTO.vi 49
4. 3. 157 HIOKE 3570 RANGe LOWZ.vi 49
4. 3. 158 HIOKE 3570 RANGe.vi 50
4. 3. 159 HIOKE 3570 RST.vi 50
4. 3. 160 HIOKE 3570 SAVE CLEar.vi 50
4. 3. 161 HIOKE 3570 SAVE NAME.vi 50

4. 3. 162 HIOKE 3570 SAVE REName.vi 51
4. 3. 163 HIOKE 3570 SAVE TYPE.vi 51
4. 3. 164 HIOKE 3570 SAVE.vi 51
4. 3. 165 HIOKE 3570 SEARch.vi 51
4. 3. 166 HIOKE 3570 SEGMent ADD.vi 51
4. 3. 167 HIOKE 3570 SEGMent AVERaging.vi 52
4. 3. 168 HIOKE 3570 SEGMent DELete.vi 52
4. 3. 169 HIOKE 3570 SEGMent NUM.vi 52
4. 3. 170 HIOKE 3570 SEGMent PDELay.vi 52
4. 3. 171 HIOKE 3570 SEGMent SPEEd.vi 53
4. 3. 172 HIOKE 3570 SEGMent STARt STOP.vi 53
4. 3. 173 HIOKE 3570 SEGMent SUB SOURce VALue.vi 53
4. 3. 174 HIOKE 3570 SEGMent SUB SOURce.vi 54
4. 3. 175 HIOKE 3570 SEGMent.vi 54
4. 3. 176 HIOKE 3570 SPEEd.vi 54
4. 3. 177 HIOKE 3570 SRE.vi 54
4. 3. 178 HIOKE 3570 SSOurce WAIT.vi 55
4. 3. 179 HIOKE 3570 SSOurce.vi 55
4. 3. 180 HIOKE 3570 STB.vi 55
4. 3. 181 HIOKE 3570 SWEep DISPlay.vi 55
4. 3. 182 HIOKE 3570 SWEep DRAW.vi 55
4. 3. 183 HIOKE 3570 SWEep MAIN SOURce.vi 56
4. 3. 184 HIOKE 3570 SWEep PDELay.vi 56
4. 3. 185 HIOKE 3570 SWEep TRIGger.vi 56
4. 3. 186 HIOKE 3570 SYSTem DATE.vi 56
4. 3. 187 HIOKE 3570 SYSTem MACAddress.vi 57
4. 3. 188 HIOKE 3570 SYSTem SERIAlno.vi 57
4. 3. 189 HIOKE 3570 SYSTem TIME.vi 57
4. 3. 190 HIOKE 3570 SYSTem USBId.vi 57
4. 3. 191 HIOKE 3570 TRANsmit TERMinator.vi 58
4. 3. 192 HIOKE 3570 TRG.vi 58
4. 3. 193 HIOKE 3570 TRIGger DELAy.vi 58
4. 3. 194 HIOKE 3570 TRIGger.vi 58
4. 3. 195 HIOKE 3570 TST.vi 59

4. 3. 196 HIOKE 3570 WAI.vi 59

4. 3. 197 HIOKI3570 CLS.vi 59

1. Summary

These drivers can change the setting of 3570 LCR IMPEDENCE Analyzer and read from of 3570 LCR IMPEDENCE Analyzer through Ethernet, USB or RS232. In this version, the program can deal with all control commands of 3570 LCR IMPEDENCE Analyzer.

2. Prerequisite condition

The following is the prerequisite condition of using these programs

- Has LabVIEW knowledge
- It is necessary to set communication set-up in of 3570 LCR IMPEDENCE Analyzer.

3. How to use driver

Search for the VI (driver) which deals with the control command of 3570 LCR IMPEDENCE Analyzer from program library and connect the VISA session opened and set the Set /query. It is necessary to select the right parameters when performing setting. It is necessary to set header to OFF when performing querying. All of the drivers have 3 common inputs and 3 common outputs as the following. The details of common input and common output are described in the chapter 4-2.

4. Direction for driver use

4. 1 Kind of VI

The following is about drivers which are in program library.


4. 2 The common input and common output of drivers

All of the drivers have common inputs and outputs. The following is the explanation.

4. 3 Details of VI

4. 3. 1 Custom Request.vi


This VI does setting and querying any command the device supports.

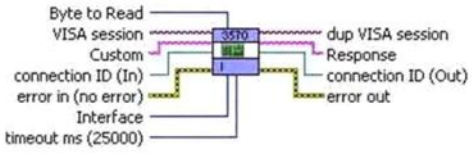

CUSTOM REQUEST.VI

4. 3. 2 HIOKE 3570 AVERaging.vi


This VI does setting and querying measurement averaging.

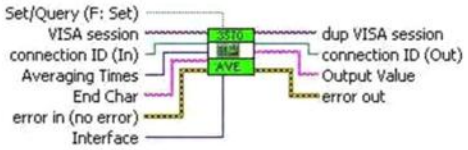

HIOKE 3570 AVERAGING.VI

4. 3. 3 HIOKE 3570 BEEPer JUDGment.vi


This VI does setting and querying beep sound for the judgment results of measurement values.

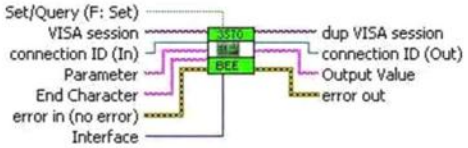

HIOKE 3570 BEEPER JUDGMENT.VI

4. 3. 4 HIOKE 3570 BEEPer KEY.vi


This VI does Setting and querying beep sound for key inputs.

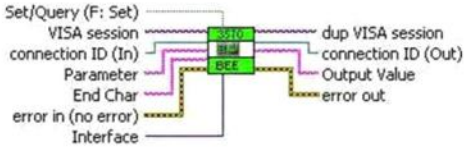

HIOKE 3570 BEEPER KEY.VI

4. 3. 5 HIOKE 3570 BIN FLIMit ABSolute.vi


This VI does setting and querying the upper and lower limit values of the first parameter of the BIN function (absolute value mode).

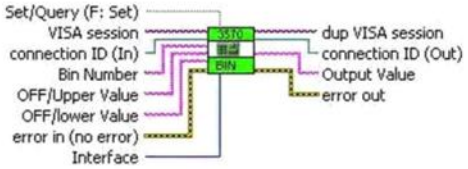

HIOKE 3570 BIN FLIMIT ABSOLUTE.VI

4. 3. 6 HIOKE 3570 BIN FLIMit DEViation.vi


This VI does setting and querying the upper and lower limit values of the first parameter of the BIN function (deviation percentage (Ä%) mode).

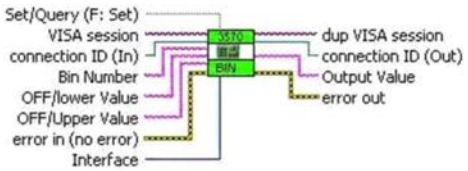

HIOKE 3570 BIN FLIMIT DEVIATION.VI

4. 3. 7 HIOKE 3570 BIN FLIMit MODE.vi


This VI does selecting and querying the mode of the first parameter of the BIN function.

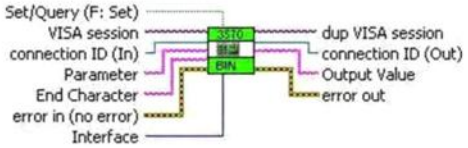

HIOKE 3570 BIN FLIMIT MODE.VI

4. 3. 8 HIOKE 3570 BIN FLIMit PERcent.vi


This VI does setting and querying the upper and lower limit values of the first parameter of the BIN function (percentage (%) mode).

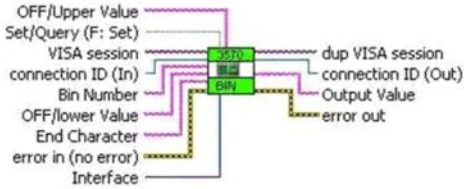

HIOKE 3570 BIN FLIMIT PERCENT.VI

4. 3. 9 HIOKE 3570 BIN FLIMit REFerence.vi


This VI does setting and querying the reference value of the first parameter of the BIN function (percentage (%) mode and deviation percentage (Ä%) mode).

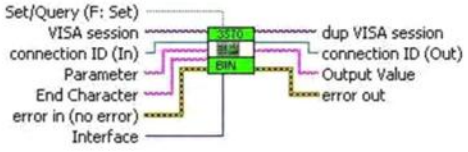

HIOKE 3570 BIN FLIMIT REFERENCE.VI

4. 3. 10 HIOKE 3570 BIN SLIMit ABSolute.vi


This VI does setting and querying the upper and lower limit values of the third parameter of the BIN function (absolute value mode).

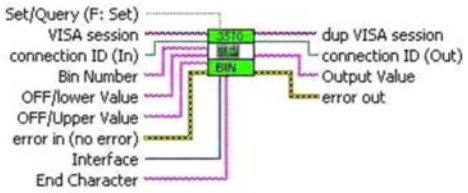

HIOKE 3570 BIN SLIMIT ABSOLUTE.VI

4. 3. 11 HIOKE 3570 BIN SLIMit DEViation.vi


This VI does Setting and querying the upper and lower limit values of the third parameter of the BIN function (deviation percentage (Ä%) mode).

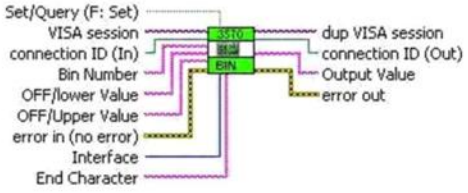

HIOKE 3570 BIN SLIMIT DEVIATION.VI

4. 3. 12 HIOKE 3570 BIN SLIMit MODE.vi


This VI does selecting and querying the mode of the third parameter of the BIN function.

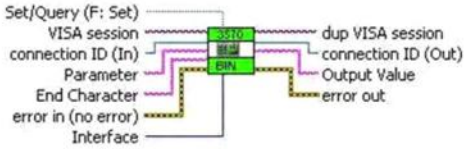

HIOKE 3570 BIN SLIMIT MODE.VI

4. 3. 13 HIOKE 3570 BIN SLIMit PERcent.vi


This VI does setting and querying the upper and lower limit values of the third parameter of the BIN function (percentage (%) mode).

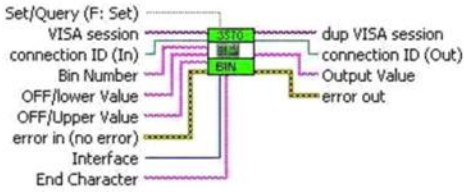

HIOKE 3570 BIN SLIMIT PERCENT.VI

4. 3. 14 HIOKE 3570 BIN SLIMit REFerence.vi


This VI does setting and querying the reference value of the third parameter of the BIN function (percentage (%) mode and deviation percentage (Ä%) mode).

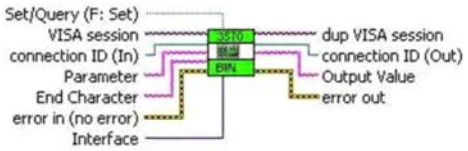

HIOKE 3570 BIN SLIMIT REFERENCE.VI

4. 3. 15 HIOKE 3570 BIN.vi


This VI does setting and querying ON/ OFF of BIN function.

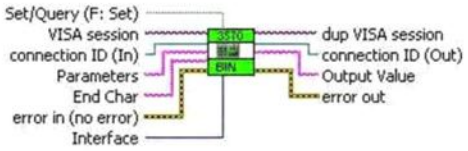

HIOKE 3570 BIN.VI

4. 3. 16 HIOKE 3570 COMParator ANALyzer.vi


This VI does setting and querying comparator judgment mode.

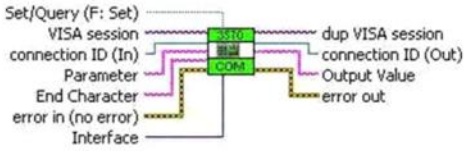

HIOKE 3570 COMPARATOR ANALYZER.VI

4. 3. 17 HIOKE 3570 COMParator AREA FIX.vi


This VI does setting and querying area judgment (reference value manual setting).

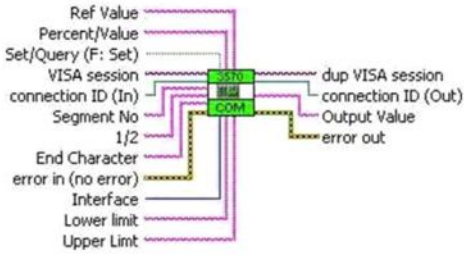

HIOKE 3570 COMPARATOR AREA FIX.VI

4. 3. 18 HIOKE 3570 COMParator AREA LIMit.vi


This VI does setting and querying the upper and lower limit values for area judgment.

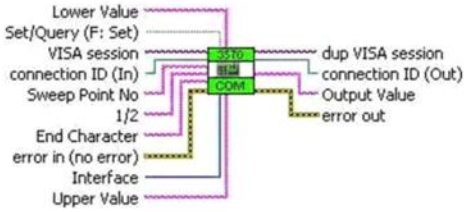

HIOKE 3570 COMPARATOR AREA LIMIT.VI

4. 3. 19 HIOKE 3570 COMParator AREA MEAS.vi


This VI does setting and querying area judgment (reference value automatic setting).

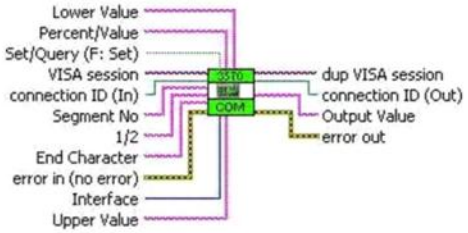

HIOKE 3570 COMPARATOR AREA MEAS.VI

4. 3. 20 HIOKE 3570 COMParator AREA.vi


This VI does setting and querying drawing of judgment area.

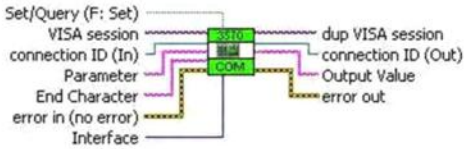

HIOKE 3570 COMPARATOR AREA.VI

4. 3. 21 HIOKE 3570 COMParator FLIMit ABSolute.vi


This VI does setting and querying the upper and lower limit values of the first parameter of the comparator function (absolute value mode).

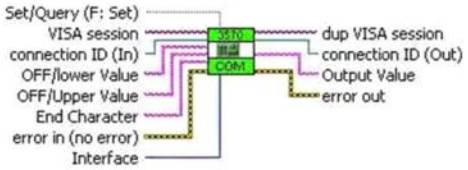

HIOKE 3570 COMPARATOR FLIMIT ABSOLUTE.VI

4. 3. 22 HIOKE 3570 COMParator FLIMit DEViation.vi


This VI does setting and querying the reference value and the upper and lower limit values of the first parameter of the comparator function (deviation percentage (Ä%) mode).

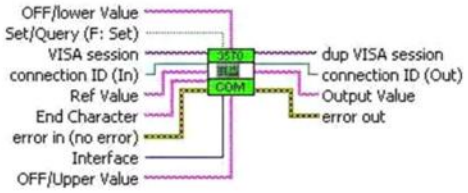

HIOKE 3570 COMPARATOR FLIMIT DEVIATION.VI

4. 3. 23 HIOKE 3570 COMParator FLIMit PERcent.vi


This VI does setting and querying the reference value and the upper and lower limit values of the first parameter of the comparator function (percentage (%) mode).

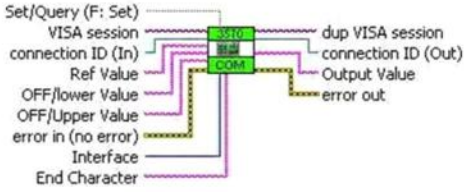

HIOKE 3570 COMPARATOR FLIMIT PERCENT.VI

4. 3. 24 HIOKE 3570 COMParator FLIMit MODE.vi


This VI does Setting and querying the judgment mode of the first parameter of the comparator function.

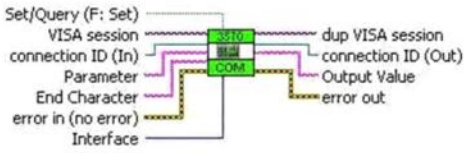

HIOKE 3570 COMPARATOR FLIMIT MODE.VI

4. 3. 25 HIOKE 3570 COMParator PARAmeter.vi


This VI does setting and querying judgment parameter.

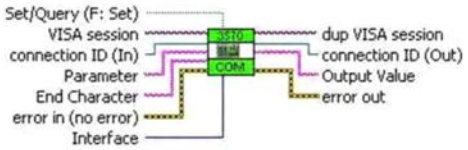

HIOKE 3570 COMPARATOR PARAMETER.VI

4. 3. 26 HIOKE 3570 COMParator PEAK FILTer.vi


This VI does setting and querying the filter value.

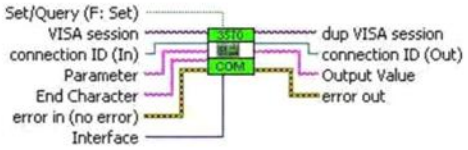

HIOKE 3570 COMPARATOR PEAK FILTER.VI

4. 3. 27 HIOKE 3570 COMParator PEAK NO.vi


This VI does setting and querying the local maximum number and local minimum number.

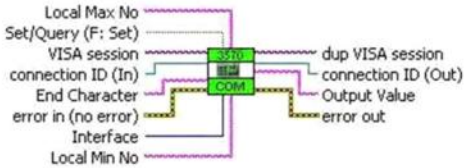

HIOKE 3570 COMPARATOR PEAK NO.VI

4. 3. 28 HIOKE 3570 COMParator PEAK.vi


This VI does setting and querying peak judgment.

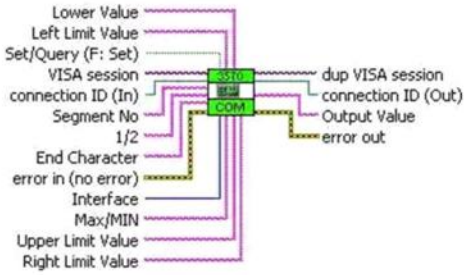

HIOKE 3570 COMPARATOR PEAK.VI

4. 3. 29 HIOKE 3570 COMParator SLIMit ABSolute.vi


This VI does setting and querying the upper and lower limit values of the third parameter of the comparator function (absolute value mode).

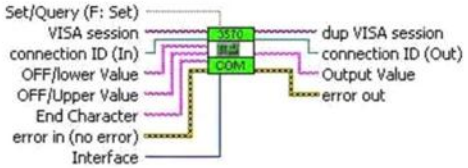

HIOKE 3570 COMPARATOR SLIMIT ABSOLUTE.VI

4. 3. 30 HIOKE 3570 COMParator SLIMit DEViation.vi


This VI does setting and querying the reference value and the upper and lower limit values of the third parameter of the comparator function (deviation percentage (Ä%) mode).

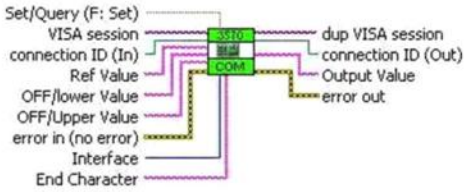

HIOKE 3570 COMPARATOR SLIMIT DEVIATION.VI

4. 3. 31 HIOKE 3570 COMParator SLIMit PERcent.vi


This VI does setting and querying the reference value and the upper and lower limit values of the third parameter of the comparator function (percentage mode).

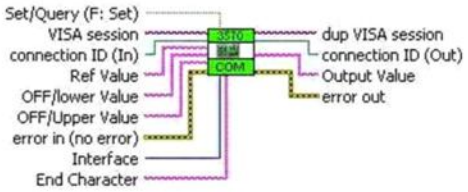

HIOKE 3570 COMPARATOR SLIMIT PERCENT.VI

4. 3. 32 HIOKE 3570 COMParator SLIMit MODE.vi


This VI does setting and querying the judgment mode of the third parameter of the comparator function.

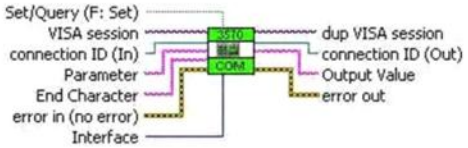

HIOKE 3570 COMPARATOR SLIMIT MODE.VI

4. 3. 33 HIOKE 3570 COMParator.vi


This VI does setting and querying ON/ OFF of comparator function.

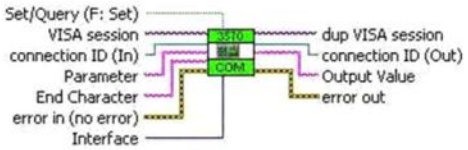

HIOKE 3570 COMPARATOR.VI

4. 3. 34 HIOKE 3570 CORRection CABLe.vi


This VI does setting and querying the cable length compensation function.

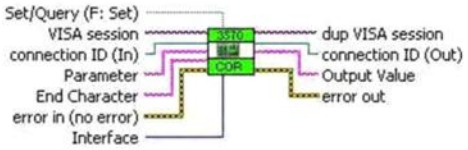

HIOKE 3570 CORRECTION CABLE.VI

4. 3. 35 HIOKE 3570 CORRection LOAD REFerence.vi


This VI does setting and querying the reference values of load compensation.

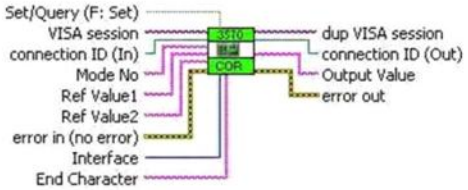

HIOKE 3570 CORRECTION LOAD REFERENCE.VI

4. 3. 36 HIOKE 3570 CORRection LOAD CONDition.vi


This VI does setting and querying the load compensation conditions.

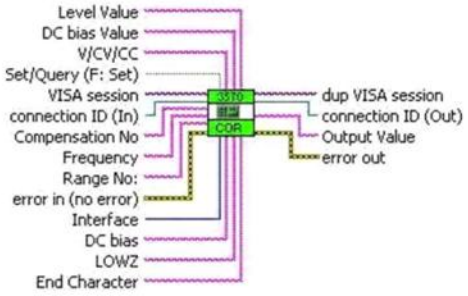

HIOKE 3570 CORRECTION LOAD CONDITION.VI

4. 3. 37 HIOKE 3570 CORRection LOAD DCResistance CONDition.vi


This VI does setting and querying the load compensation conditions for when DC resistance measurement.

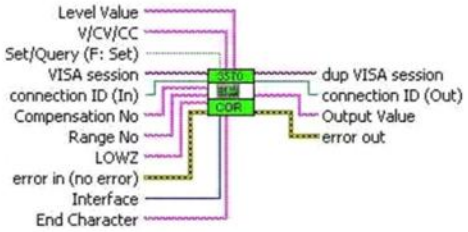

HIOKE 3570 CORRECTION LOAD DCRESISTANCE CONDITION.VI

4. 3. 38 HIOKE 3570 CORRection LOAD DCResistance REFerence.vi


This VI does setting and querying the reference value of load compensation for when DC resistance measurement.

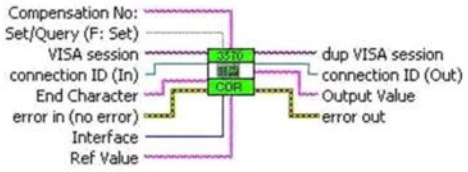

HIOKE 3570 CORRECTION LOAD DCRESISTANCE REFERENCE.VI

4. 3. 39 HIOKE 3570 CORRection LOAD ERRor.vi


This VI does querying load compensation failure flag.

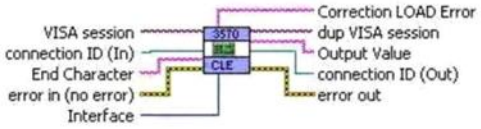

HIOKE 3570 CORRECTION LOAD ERROR.VI

4. 3. 40 HIOKE 3570 CORRection LOAD RESet.vi


This VI does resetting the load compensation conditions.

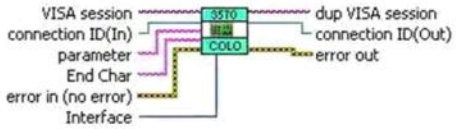

HIOKE 3570 CORRECTION LOAD RESET.VI

4. 3. 41 HIOKE 3570 CORRection LOAD RETurn.vi


This VI does setting and querying the load compensation function.

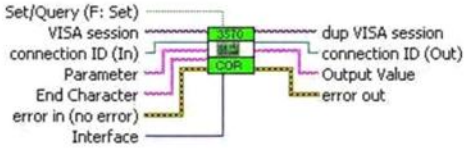

HIOKE 3570 CORRECTION LOAD RETURN.VI

4. 3. 42 HIOKE 3570 CORRection LOAD.vi


This VI does executing and querying the load compensation function.

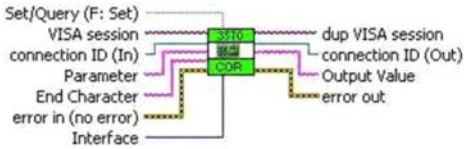

HIOKE 3570 CORRECTION LOAD.VI

4. 3. 43 HIOKE 3570 CORRection OPEN ERRor.vi


This VI does querying open compensation failure flag.



HIOKE 3570 CORRECTION OPEN ERROR.VI

4. 3. 44 HIOKE 3570 CORRection OPEN FREQuency.vi


This VI does setting and querying frequency for acquiring open compensation value.

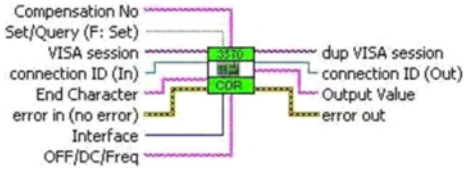

HIOKE 3570 CORRECTION OPEN FREQUENCY.VI

4. 3. 45 HIOKE 3570 CORRection OPEN RETurn.vi


This VI does setting and querying the open compensation function.

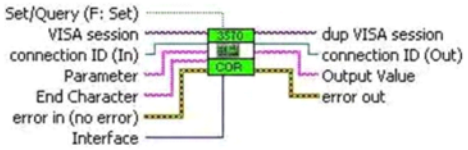

HIOKE 3570 CORRECTION OPEN RETURN.VI

4. 3. 46 HIOKE 3570 CORRection OPEN.vi


This VI does executing and querying the open compensation function.

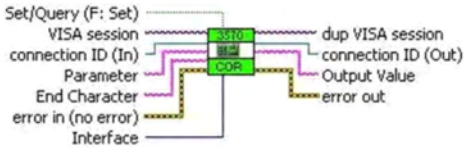

HIOKE 3570 CORRECTION OPEN.VI

4. 3. 47 HIOKE 3570 CORRection SCALe DATA.vi


This VI does setting and querying the scaling compensation value.

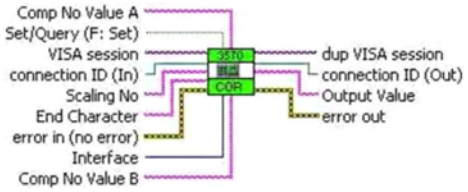

HIOKE 3570 CORRECTION SCALE DATA.VI

4. 3. 48 HIOKE 3570 CORRection SCALe.vi


This VI does setting and querying the scaling compensation function.

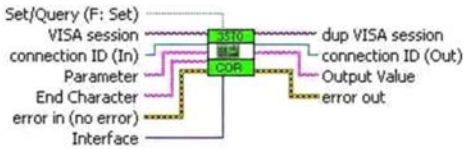

HIOKE 3570 CORRECTION SCALE.VI

4. 3. 49 HIOKE 3570 CORRection SHORt Error.vi


This VI does querying short compensation failure flag.

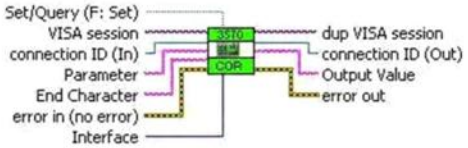

HIOKE 3570 CORRECTION SHORT ERROR.VI

4. 3. 50 HIOKE 3570 CORRection SHORt FREQuency.vi


This VI does setting and querying frequency for acquiring short compensation value.

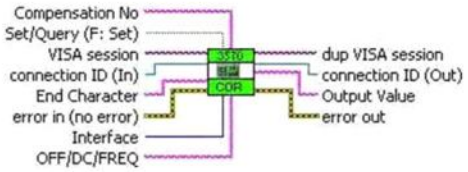

HIOKE 3570 CORRECTION SHORT FREQUENCY.VI

4. 3. 51 HIOKE 3570 CORRection SHORt RETurn.vi


This VI does setting and querying the short compensation function.

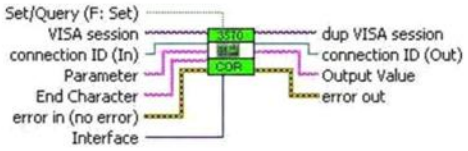

HIOKE 3570 CORRECTION SHORT RETURN.VI

4. 3. 52 HIOKE 3570 CORRection SHORt.vi


This VI does executing and querying the short compensation function.

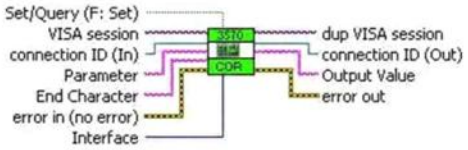

HIOKE 3570 CORRECTION SHORT.VI

4. 3. 53 HIOKE 3570 CURSor MOVe.vi


This VI does setting and querying the cursor to move or perform searches.

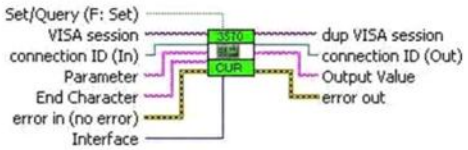

HIOKE 3570 CURSOR MOVE.VI

4. 3. 54 HIOKE 3570 CURSor SEARch TARGet.vi


This VI does setting and querying the target value.

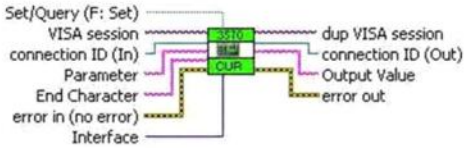

HIOKE 3570 CURSOR SEARCH TARGET.VI

4. 3. 55 HIOKE 3570 CURSor SEARch.vi


This VI does setting and querying the cursor to move or perform searches.

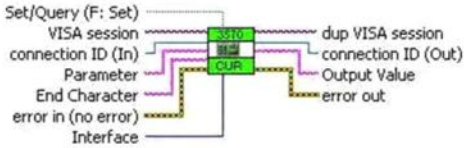

HIOKE 3570 CURSOR SEARCH.VI

4. 3. 56 HIOKE 3570 CURSor.vi


This VI does setting and querying the display cursor setting.

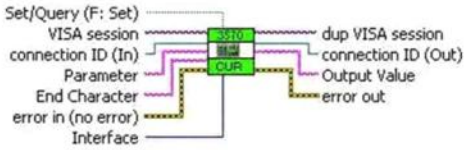

HIOKE 3570 CURSOR.VI

4. 3. 57 HIOKE 3570 DCBias LEVel.vi


This VI does setting and querying the DC bias level.

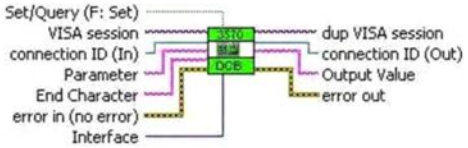

HIOKE 3570 DCBIAS LEVEL.VI

4. 3. 58 HIOKE 3570 DCBias.vi


This VI does setting and querying ON/ OFF of DC bias function.

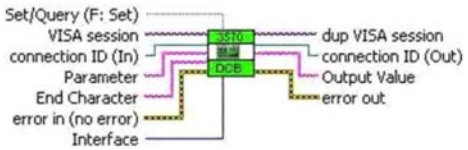

HIOKE 3570 DCBIAS.VI

4. 3. 59 HIOKE 3570 DCResistance ADJust DEMand.vi


This VI does acquiring DC offset for when DC resistance measurement.



HIOKE 3570 DCRESISTANCE ADJUST DEMAND.VI

4. 3. 60 HIOKE 3570 DCResistance ADJust.vi


This VI does setting and querying the DC offset for when DC resistance measurement.

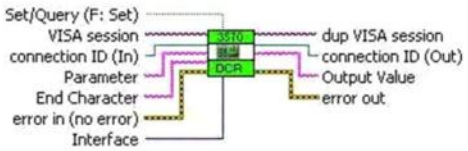

HIOKE 3570 DCRESISTANCE ADJUST.VI

4. 3. 61 HIOKE 3570 DCResistance AVERaging.vi


This VI does setting and querying averaging for when DC resistance measurement.

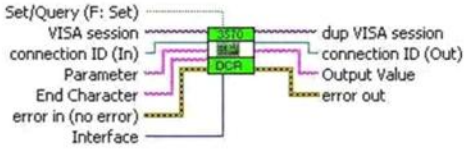

HIOKE 3570 DCRESISTANCE AVERAGING.VI

4. 3. 62 HIOKE 3570 DCResistance DELay.vi


This VI does setting and querying the transition delay time for when DC resistance measurement.

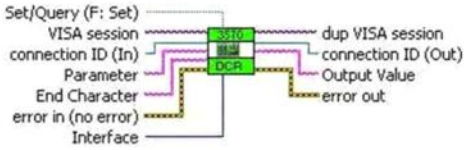

HIOKE 3570 DCRESISTANCE DELAY.VI

4. 3. 63 HIOKE 3570 DCResistance LEVel CCURRent.vi


This VI does setting and querying the constant current level value for when DC resistance measurement.

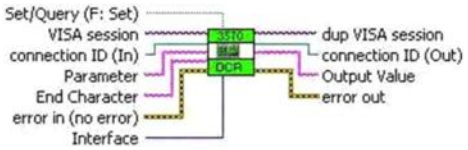

HIOKE 3570 DCRESISTANCE LEVEL CCURRENT.VI

4. 3. 64 HIOKE 3570 DCResistance LEVel CVOLTage.vi


This VI does setting and querying the constant voltage level value for when DC resistance measurement.

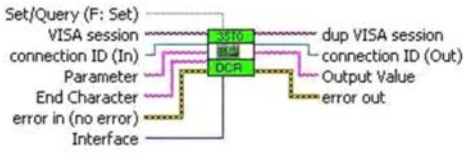

HIOKE 3570 DCRESISTANCE LEVEL CVOLTAGE.VI

4. 3. 65 HIOKE 3570 DCResistance LEVel VOLTage.vi


This VI does setting and querying the open-circuit voltage level value for when DC resistance measurement.

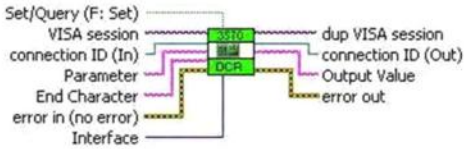

HIOKE 3570 DCRESISTANCE LEVEL VOLTAGE.VI

4. 3. 66 HIOKE 3570 DCResistance LEVel.vi


This VI does setting and querying the measurement signal level for when DC resistance measurement.

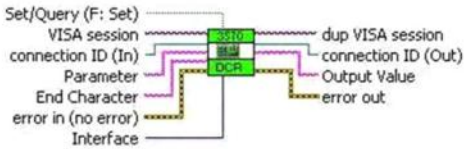

HIOKE 3570 DCRESISTANCE LEVEL.VI

4. 3. 67 HIOKE 3570 DCResistance LIMiter VOLTage.vi


This VI does setting and querying the voltage limit value for when DC resistance measurement.

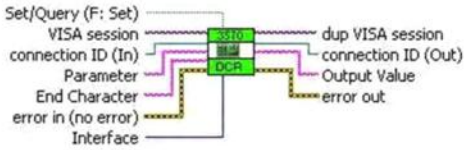

HIOKE 3570 DCRESISTANCE LIMITER VOLTAGE.VI

4. 3. 68 HIOKE 3570 DCResistance LIMiter CURRent.vi


This VI does setting and querying the current limit value for when DC resistance measurement.

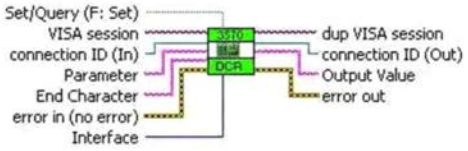

HIOKE 3570 DCRESISTANCE LIMITER CURRENT.VI

4. 3. 69 HIOKE 3570 DCResistance LIMiter.vi


This VI does setting and querying ON/ OFF of limit for when DC resistance measurement.

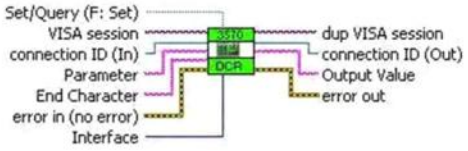

HIOKE 3570 DCRESISTANCE LIMITER.VI

4. 3. 70 HIOKE 3570 DCResistance RANGe AUTO.vi


This VI does automatically setting and querying the measurement range for when DC resistance measurement.

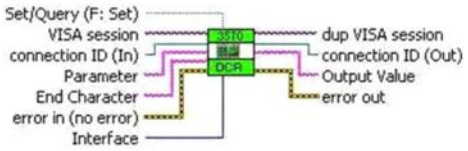

HIOKE 3570 DCRESISTANCE RANGE AUTO.VI

4. 3. 71 HIOKE 3570 DCResistance RANGe LOWZ.vi


This VI does setting and querying low Z high accuracy mode for when DC resistance measurement.

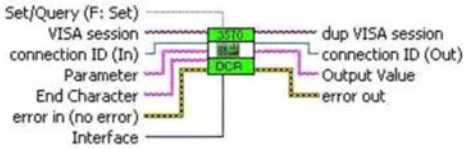

HIOKE 3570 DCRESISTANCE RANGE LOWZ.VI

4. 3. 72 HIOKE 3570 DCResistance RANGe.vi


This VI does setting and querying the measurement range for when DC resistance measurement.

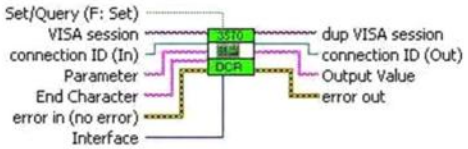

HIOKE 3570 DCRESISTANCE RANGE.VI

4. 3. 73 HIOKE 3570 DCResistance SPEEd.vi


This VI does setting and querying the measurement speed for when DC resistance measurement.

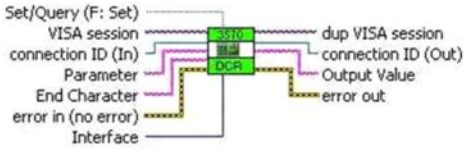

HIOKE 3570 DCRESISTANCE SPEED.VI

4. 3. 74 HIOKE 3570 DISPlay.vi


This VI does setting and querying LCD display.

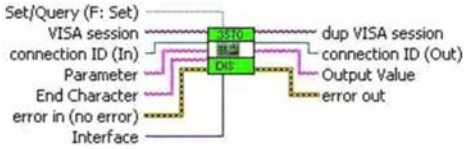

HIOKE 3570 DISPLAY.VI

4. 3. 75 HIOKE 3570 ESE.vi


This VI does reading and writing the standard event status enable register (SESER).

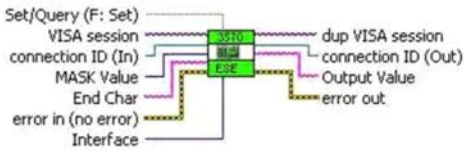

HIOKE 3570 ESE.VI

4. 3. 76 HIOKE 3570 ESE0.vi


This VI does writing and reading event status enable register 0.

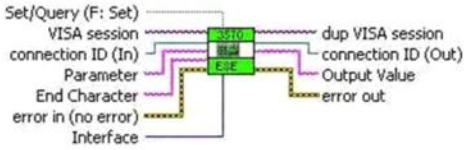

HIOKE 3570 ESE0.VI

4. 3. 77 HIOKE 3570 ESE1.vi


This VI does writing and reading event status enable register 1.

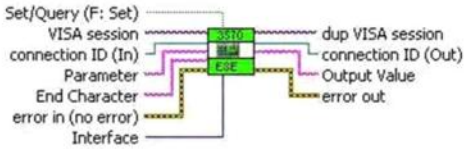

HIOKE 3570 ESE1.VI

4. 3. 78 HIOKE 3570 ESE2.vi


This VI does writing and reading event status enable register 2.

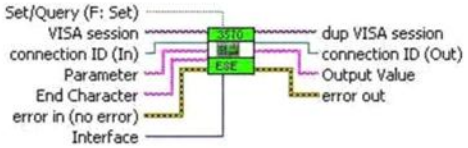

HIOKE 3570 ESE2.VI

4. 3. 79 HIOKE 3570 ESE3.vi


This VI does writing and reading event status enable register 2.

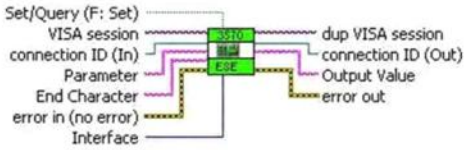

HIOKE 3570 ESE3.VI

4. 3. 80 HIOKE 3570 ESR.vi


This VI does reading and clearing the standard event status register (SESR).



HIOKE 3570 ESR.VI

4. 3. 81 HIOKE 3570 ESR0.vi


This VI does reading event status register 0.



HIOKE 3570 ESR0.VI

4. 3. 82 HIOKE 3570 ESR1.vi


This VI does reading event status register 1.



HIOKE 3570 ESR1.VI

4. 3. 83 HIOKE 3570 ESR2.vi


This VI does reading event status register 2.



HIOKE 3570 ESR2.VI

4. 3. 84 HIOKE 3570 ESR3.vi


This VI does reading event status register 3.



HIOKE 3570 ESR3.VI

4. 3. 85 HIOKE 3570 FILE DATE.vi


This VI does setting and querying the date and time for when saving text.

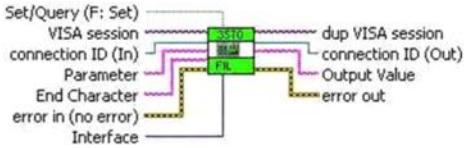

HIOKE 3570 FILE DATE.VI

4. 3. 86 HIOKE 3570 FILE DELIMiter.vi


This VI does setting and querying the delimiter for when saving text.

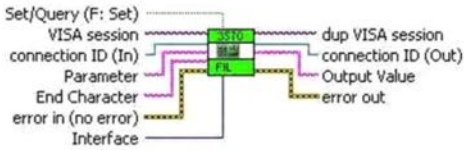

HIOKE 3570 FILE DELIMITER.VI

4. 3. 87 HIOKE 3570 FILE FOLDer.vi


This VI does setting and querying the save folder.

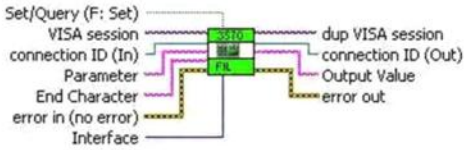

HIOKE 3570 FILE FOLDER.VI

4. 3. 88 HIOKE 3570 FILE Information.vi


This VI does querying USB flash drive information.



HIOKE 3570 FILE INFORMATION.VI

4. 3. 89 HIOKE 3570 FILE MODE.vi


This VI does setting and querying the mode of the save folder.

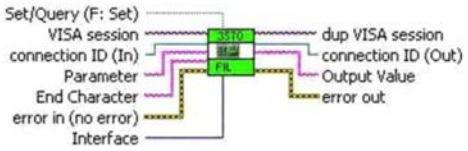

HIOKE 3570 FILE MODE.VI

4. 3. 90 HIOKE 3570 FILE PARAmeter.vi


This VI does setting and querying the measurement parameter setting for when saving text.

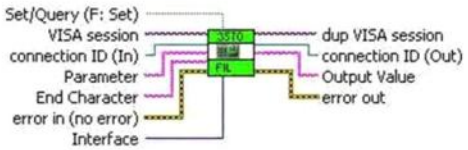

HIOKE 3570 FILE PARAMETER.VI

4. 3. 91 HIOKE 3570 FILE QUOTe.vi


This VI does setting and querying the quotation mark setting for when saving text.

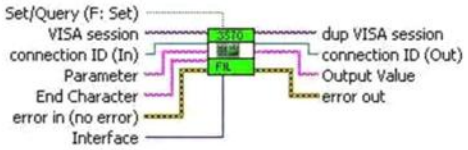

HIOKE 3570 FILE QUOTE.VI

4. 3. 92 HIOKE 3570 FILE SAVE.vi


This VI does executing file saving.



HIOKE 3570 FILE SAVE.VI

4. 3. 93 HIOKE 3570 FILE SET.vi


This VI does setting and querying the measurement condition setting for when saving text.

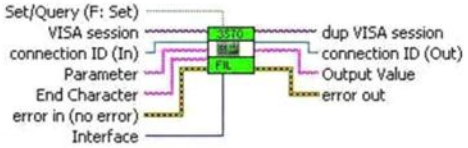

HIOKE 3570 FILE SET.VI

4. 3. 94 HIOKE 3570 FILE TYPE.vi


This VI does setting and querying the save type.

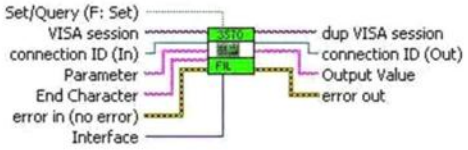

HIOKE 3570 FILE TYPE.VI

4. 3. 95 HIOKE 3570 FORMat DATA.vi


This VI does setting and querying the data transfer format.

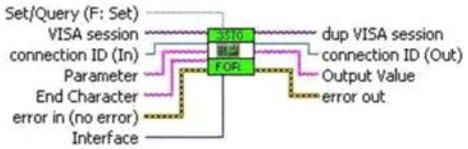

HIOKE 3570 FORMAT DATA.VI

4. 3. 96 HIOKE 3570 FORMat LONG.vi


This VI does setting and querying long format for when data transfer.

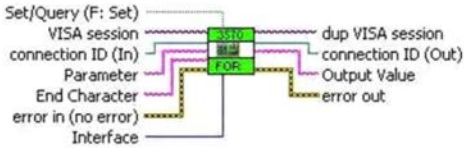

HIOKE 3570 FORMAT LONG.VI

4. 3. 97 HIOKE 3570 FREQuency.vi


This VI does setting and querying the measurement frequency.

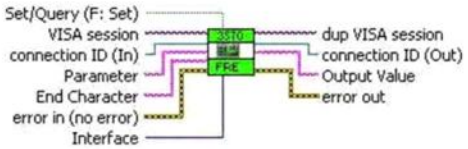

HIOKE 3570 FREQUENCY.VI

4. 3. 98 HIOKE 3570 GRAPh AUTOscale.vi


This VI does executing auto scaling.



HIOKE 3570 GRAPH AUTOSCALE.VI

4. 3. 99 HIOKE 3570 GRAPh COLor RESet.vi


This VI does executing reset of the graph display colors of all segments.

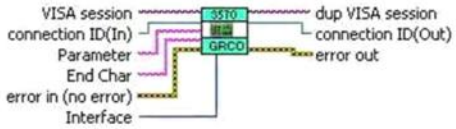

HIOKE 3570 GRAPH COLOR RESET.VI

4. 3. 100 HIOKE 3570 GRAPh COLor SEG1.vi


This VI does reflecting the display color of segment 1 to all segments.

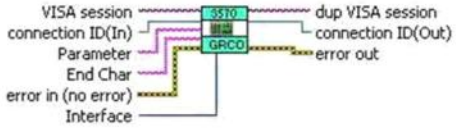

HIOKE 3570 GRAPH COLOR SEG1.VI

4. 3. 101 HIOKE 3570 GRAPh COLor.vi


This VI does querying load compensation failure flag.

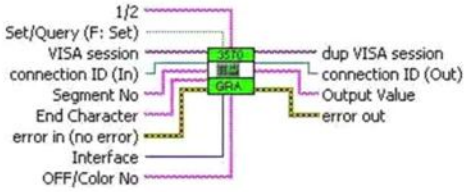

HIOKE 3570 GRAPH COLOR.VI

4. 3. 102 HIOKE 3570 GRAPh OVERwrite.vi


This VI does setting and querying the overwrite function.

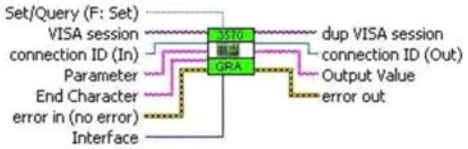

HIOKE 3570 GRAPH OVERWRITE.VI

4. 3. 103 HIOKE 3570 GRAPh SCALe.vi


This VI does setting and querying the horizontal axis display scale.

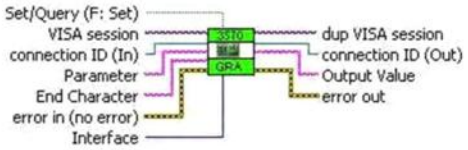

HIOKE 3570 GRAPH SCALE.VI

4. 3. 104 HIOKE 3570 GRAPh SPAN.vi


This VI does setting and querying the horizontal axis span format.

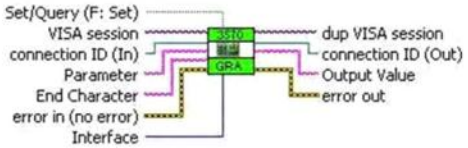

HIOKE 3570 GRAPH SPAN.VI

4. 3. 105 HIOKE 3570 GRAPh VERTical CENTerdiv.vi


This VI does setting and querying the reference value and graduation width of the vertical axis display scale.

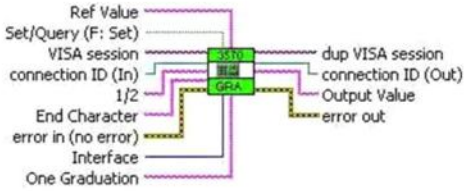

HIOKE 3570 GRAPH VERTICAL CENTERDIV.VI

4. 3. 106 HIOKE 3570 GRAPh VERTical GRID.vi


This VI does setting and querying the parameters to display grid.

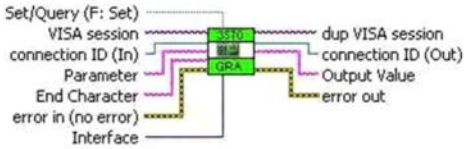

HIOKE 3570 GRAPH VERTICAL GRID.VI

4. 3. 107 HIOKE 3570 GRAPh VERTical METHod.vi


This VI does setting and querying the setting method for the vertical axis display scale.

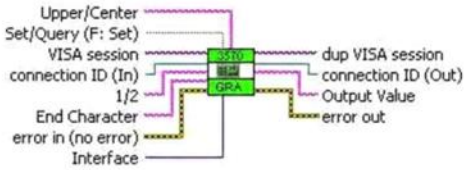

HIOKE 3570 GRAPH VERTICAL METHOD.VI

4. 3. 108 HIOKE 3570 GRAPh VERTical MODE.vi


This VI does setting and querying the vertical axis display scale method.

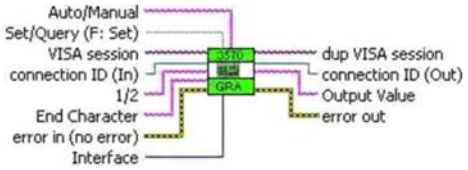

HIOKE 3570 GRAPH VERTICAL MODE.VI

4. 3. 109 HIOKE 3570 GRAPh VERTical SCALe.vi


This VI does setting and querying the vertical axis display scale.

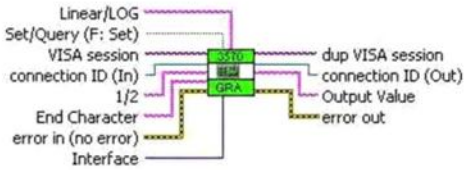

HIOKE 3570 GRAPH VERTICAL SCALE.VI

4. 3. 110 HIOKE 3570 GRAPh VERTical UPPerlower.vi


This VI does setting and querying the upper and lower limit values of the vertical axis display scale.

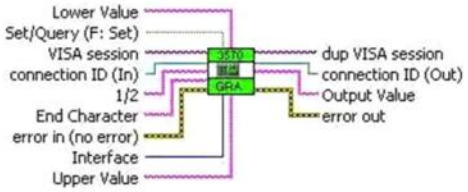

HIOKE 3570 GRAPH VERTICAL UPPERLOWER.VI

4. 3. 111 HIOKE 3570 HANDshake.vi


This VI does setting and querying the RS-232C communication handshake.

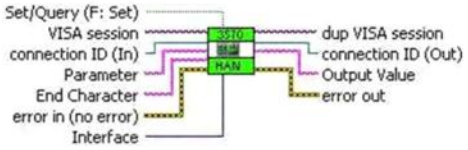

HIOKE 3570 HANDSHAKE.VI

4. 3. 112 HIOKE 3570 HEADer.vi


This VI does setting and querying existence of header in response message.

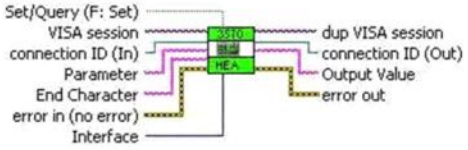

HIOKE 3570 HEADER.VI

4. 3. 113 HIOKE 3570 HIZ LIMit.vi


This VI does setting and querying the limit value of the HIGH-Z reject function.

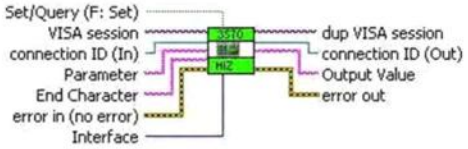

HIOKE 3570 HIZ LIMIT.VI

4. 3. 114 HIOKE 3570 HIZ.vi


This VI does setting and querying the HIGH-Z reject function.

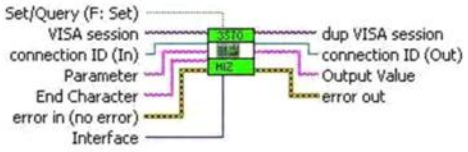

HIOKE 3570 HIZ.VI

4. 3. 115 HIOKE 3570 IDN.vi


This VI does setting and querying main sweep measurement signal mode.



HIOKE 3570 IDN.VI

4. 3. 116 HIOKE 3570 IO OUTPut DELay.vi


This VI does setting and querying the delay time between judgment result output and EOM output.

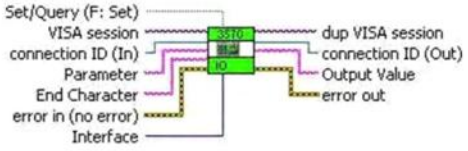

HIOKE 3570 IO OUTPUT DELAY.VI

4. 3. 117 HIOKE 3570 IO RESult RESet.vi


This VI does setting and querying output of the judgment result signal line.

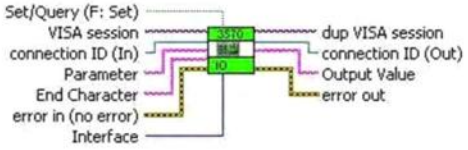

HIOKE 3570 IO RESULT RESET.VI

4. 3. 118 HIOKE 3570 IO TRIGger EDGe.vi


This VI does setting and querying the trigger edge.

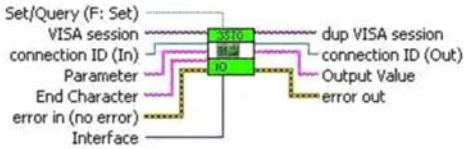

HIOKE 3570 IO TRIGGER EDGE.VI

4. 3. 119 HIOKE 3570 IO TRIGger ENABle.vi


This VI does setting and querying permit/prohibit of trigger input during measurement.

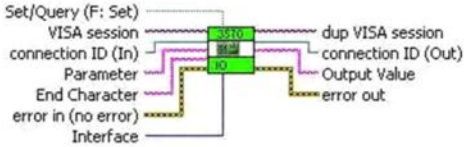

HIOKE 3570 IO TRIGGER ENABLE.VI

4. 3. 120 HIOKE 3570 KEYLock PASScode.vi


This VI does setting the key lock pass code.

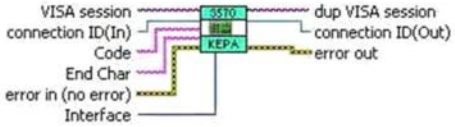

HIOKE 3570 KEYLOCK PASSCODE.VI

4. 3. 121 HIOKE 3570 KEYLock UNLock.vi


This VI does disabling the key lock.

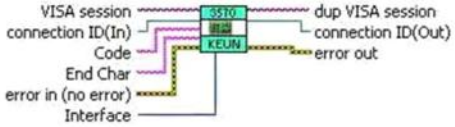

HIOKE 3570 KEYLOCK UNLOCK.VI

4. 3. 122 HIOKE 3570 KEYLock.vi


This VI does executing and querying the key lock.

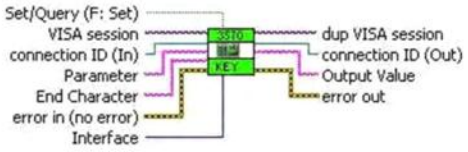

HIOKE 3570 KEYLOCK.VI

4. 3. 123 HIOKE 3570 LEVel CCURRent.vi


This VI does setting and querying the constant current level value.

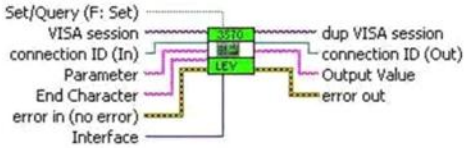

HIOKE 3570 LEVEL CCURRENT.VI

4. 3. 124 HIOKE 3570 LEVel CVOLTage.vi


This VI does setting and querying the constant voltage level.

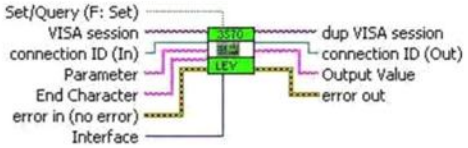

HIOKE 3570 LEVEL CVOLTAGE.VI

4. 3. 125 HIOKE 3570 LEVel VOLTage.vi


This VI does setting and querying the open-circuit voltage level.

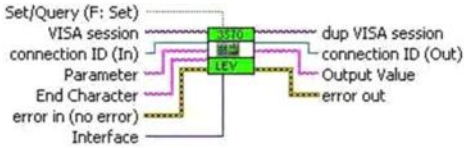

HIOKE 3570 LEVEL VOLTAGE.VI

4. 3. 126 HIOKE 3570 LEVel.vi


This VI does setting and querying the measurement signal level for when DC resistance measurement.

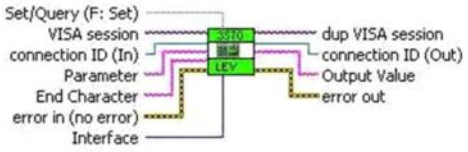

HIOKE 3570 LEVEL.VI

4. 3. 127 HIOKE 3570 LIMiter CURRent.vi


This VI does setting and querying the current limit value for when DC resistance measurement.

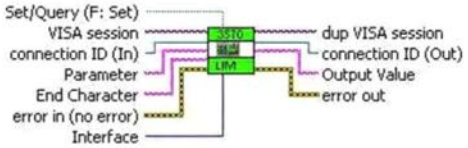

HIOKE 3570 LIMITER CURRENT.VI

4. 3. 128 HIOKE 3570 LIMiter VOLTage.vi


This VI does setting and querying the voltage limit value for when DC resistance measurement.

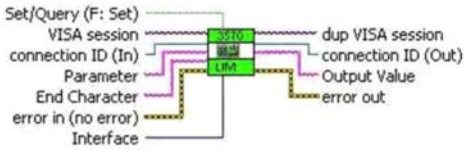

HIOKE 3570 LIMITER VOLTAGE.VI

4. 3. 129 HIOKE 3570 LIMiter.vi


This VI does setting and querying the voltage limit value for when DC resistance measurement.

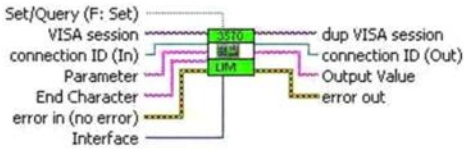

HIOKE 3570 LIMITER.VI

4. 3. 130 HIOKE 3570 LIST CENTerspan.vi


This VI does simultaneously setting and querying sweep point settings of the CENTERSPAN method.

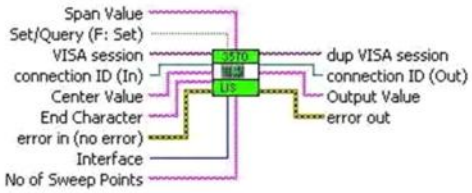

HIOKE 3570 LIST CENTERSPAN.VI

4. 3. 131 HIOKE 3570 LIST INTerval.vi


This VI does setting and querying the sweep point settings of INTERVAL mode.

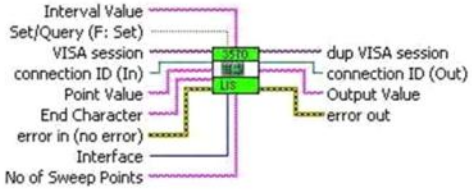

HIOKE 3570 LIST INTERVAL.VI

4. 3. 132 HIOKE 3570 LIST STARt STEP.vi


This VI does setting and querying the sweep point settings of START-STEP mode.

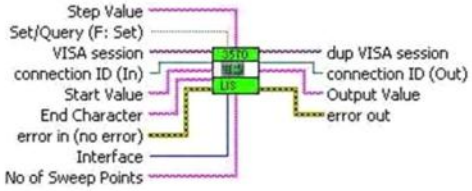

HIOKE 3570 LIST START STEP.VI

4. 3. 133 HIOKE 3570 LIST STARt STOP.vi


This VI does Setting and querying the sweep point settings of START-STOP mode.

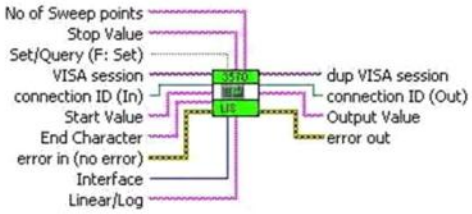

HIOKE 3570 LIST START STOP.VI

4. 3. 134 HIOKE 3570 LOAD.vi


This VI does executing and querying the load compensation function.

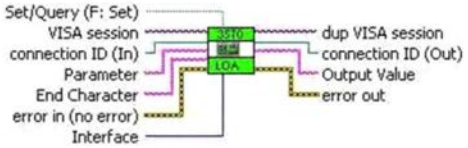

HIOKE 3570 LOAD.VI

4. 3. 135 HIOKE 3570 MEASure COMParator PEAK LMAX.vi


This VI does querying the overall judgment result when peak comparator measurement.

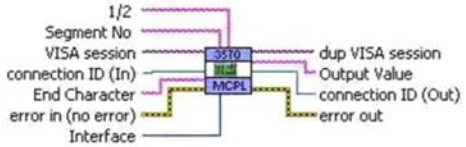

HIOKE 3570 MEASURE COMPARATOR PEAK LMAX.VI

4. 3. 136 HIOKE 3570 MEASure COMParator PEAK LMIN.vi


This VI does querying the judgment result of the local minimum value when peak comparator measurement.

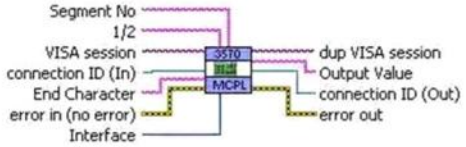

HIOKE 3570 MEASURE COMPARATOR PEAK LMIN.VI

4. 3. 137 HIOKE 3570 MEASure COMParator PEAK.vi


This VI does querying the overall judgment result when peak comparator measurement.



HIOKE 3570 MEASURE COMPARATOR PEAK.VI

4. 3. 138 HIOKE 3570 MEASure CURSor.vi


This VI does querying the measurement data of the cursor position.

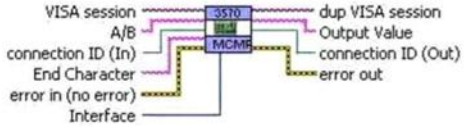

HIOKE 3570 MEASURE CURSOR.VI

4. 3. 139 HIOKE 3570 MEASure ITEM.vi


This VI does setting and querying measurement parameters.

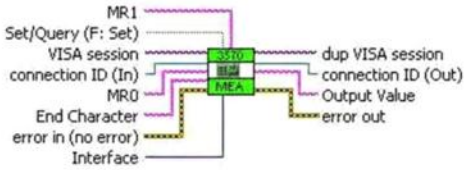

HIOKE 3570 MEASURE ITEM.VI

4. 3. 140 HIOKE 3570 MEASure OUTPut AUTO.vi


This VI does setting and querying the measurement value automatic output function.

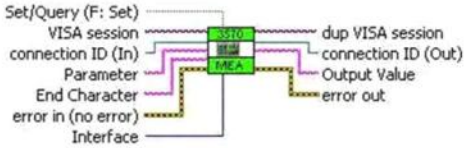

HIOKE 3570 MEASURE OUTPUT AUTO.VI

4. 3. 141 HIOKE 3570 MEASure POINt.vi


This VI does querying the measurement specified sweep point.

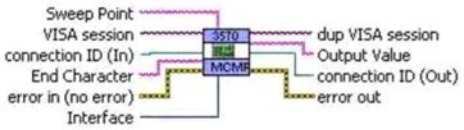

HIOKE 3570 MEASURE POINT.VI

4. 3. 142 HIOKE 3570 MEASure VALid.vi


This VI does setting and querying the response data of the measurement acquisition query.

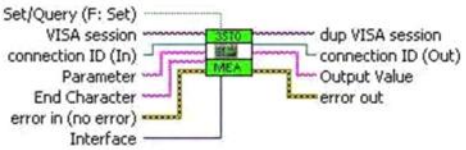

HIOKE 3570 MEASURE VALID.VI

4. 3. 143 HIOKE 3570 MEASure.vi


This VI does querying measurement data.

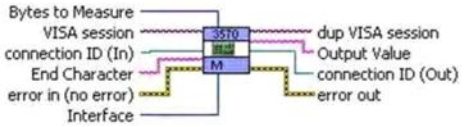

HIOKE 3570 MEASURE.VI

4. 3. 144 HIOKE 3570 MEMory CLEar.vi


This VI does clearing memory of measurement value memory function.



HIOKE 3570 MEMORY CLEAR.VI

4. 3. 145 HIOKE 3570 MEMory CONTrol.vi


This VI does setting and querying the measurement value memory function.

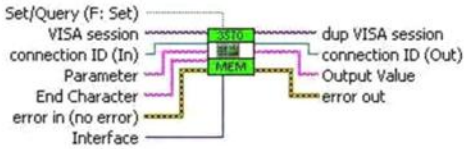

HIOKE 3570 MEMORY CONTROL.VI

4. 3. 146 HIOKE 3570 MEMory COUNt.vi


This VI does querying the number of measurement values saved to memory with the memory function.



HIOKE 3570 MEMORY COUNT.VI

4. 3. 147 HIOKE 3570 MEMory POINts.vi


This VI does setting and querying the measurement value memory size.

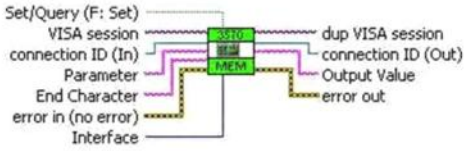

HIOKE 3570 MEMORY POINTS.VI

4. 3. 148 HIOKE 3570 MEMory.vi


This VI does querying the measurement values saved to memory by the measurement value memory function.



HIOKE 3570 MEMORY.VI

4. 3. 149 HIOKE 3570 MODE.vi


This VI does setting and querying measurement mode.

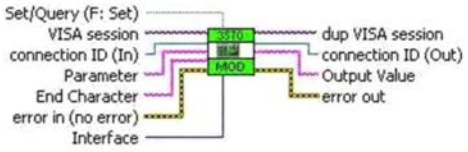

HIOKE 3570 MODE.VI

4. 3. 150 HIOKE 3570 MONItor.vi


This VI does querying the voltage/current monitor value.



HIOKE 3570 MONITOR.VI

4. 3. 151 HIOKE 3570 OPC.vi


This VI performs following operation -
The query response becomes "1" when the operation complete after " *OPC" command is executed.]

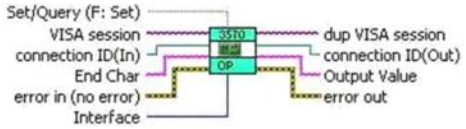

HIOKE 3570 OPC.VI

4. 3. 152 HIOKE 3570 PARameter# DIGit.vi


This VI does setting and querying number of display digits.

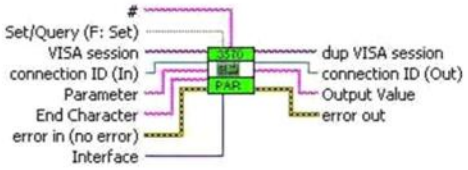

HIOKE 3570 PARAMETER# DIGIT.VI

4. 3. 153 HIOKE 3570 PARameter#.vi


This VI does setting and querying the display parameters.

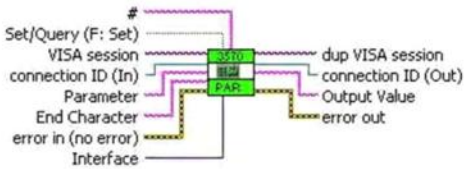

HIOKE 3570 PARAMETER#.VI

4. 3. 154 HIOKE 3570 POINt.vi


This VI does setting and querying the sweep point.

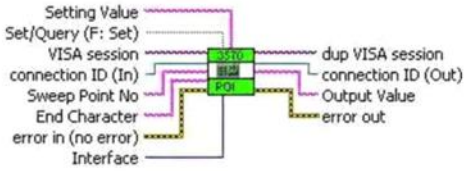

HIOKE 3570 POINT.VI

4. 3. 155 HIOKE 3570 PRESet.vi


This VI does initializing the instrument.



HIOKE 3570 PRESET.VI

4. 3. 156 HIOKE 3570 RANGe AUTO.vi


This VI automatically does setting and querying the measurement range.

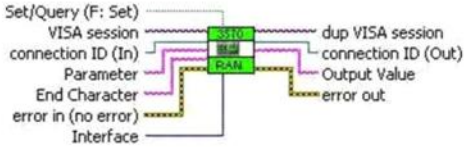

HIOKE 3570 RANGE AUTO.VI

4. 3. 157 HIOKE 3570 RANGe LOWZ.vi


This VI does setting and querying low impedance high accuracy mode.

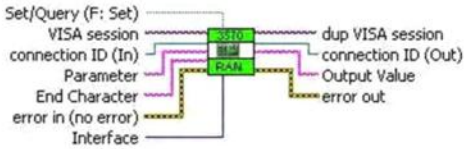

HIOKE 3570 RANGE LOWZ.VI

4. 3. 158 HIOKE 3570 RANGe.vi


This VI does setting and querying the measurement range.

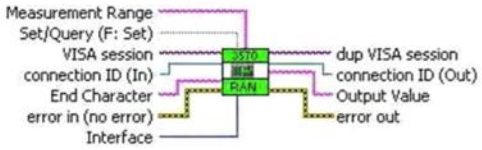

HIOKE 3570 RANGE.VI

4. 3. 159 HIOKE 3570 RST.vi


This VI does initializing the instrument.



HIOKE 3570 RST.VI

4. 3. 160 HIOKE 3570 SAVE CLEar.vi


This VI does clearing data saved for a panel.

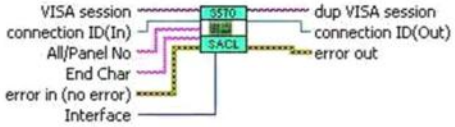

HIOKE 3570 SAVE CLEAR.VI

4. 3. 161 HIOKE 3570 SAVE NAME.vi


This VI does querying a panel name.

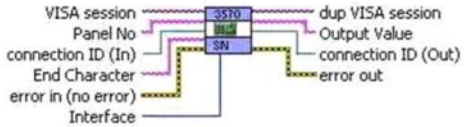

HIOKE 3570 SAVE NAME.VI

4. 3. 162 HIOKE 3570 SAVE REName.vi


This VI does changing a panel name.

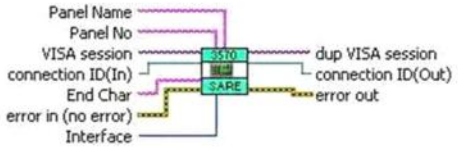

HIOKE 3570 SAVE RENAME.VI

4. 3. 163 HIOKE 3570 SAVE TYPE.vi


This VI does setting and querying the save type.

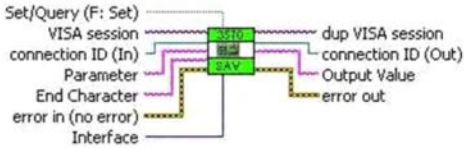

HIOKE 3570 SAVE TYPE.VI

4. 3. 164 HIOKE 3570 SAVE.vi


This VI does executing and querying the panel save function.

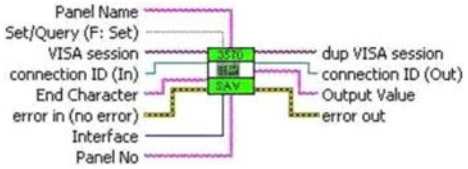

HIOKE 3570 SAVE.VI

4. 3. 165 HIOKE 3570 SEARch.vi


This VI does setting and querying the cursor to move or perform searches.



HIOKE 3570 SEARCH.VI

4. 3. 166 HIOKE 3570 SEGMent ADD.vi


This VI does adding a segment.

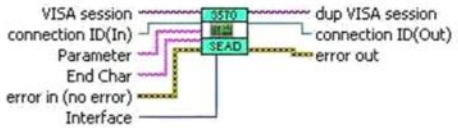

HIOKE 3570 SEGMENT ADD.VI

4. 3. 167 HIOKE 3570 SEGMent AVERaging.vi


This VI does setting and querying measurement averaging of the specified segment.

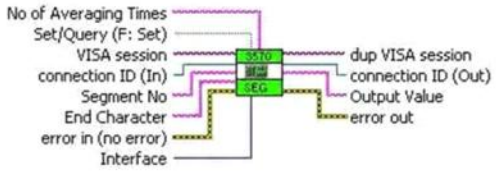

HIOKE 3570 SEGMENT AVERAGING.VI

4. 3. 168 HIOKE 3570 SEGMent DELete.vi


This VI does deleting the specified segment.

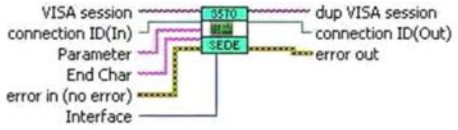

HIOKE 3570 SEGMENT DELETE.VI

4. 3. 169 HIOKE 3570 SEGMent NUM.vi


This VI does querying the number of segments.



HIOKE 3570 SEGMENT NUM.VI

4. 3. 170 HIOKE 3570 SEGMent PDELay.vi


This VI does setting and querying the point delay time of the specified segment.

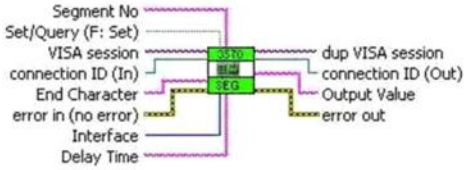

HIOKE 3570 SEGMENT PDELAY.VI

4. 3. 171 HIOKE 3570 SEGMent SPEEd.vi


This VI does setting and querying the measurement speed of the specified segment.

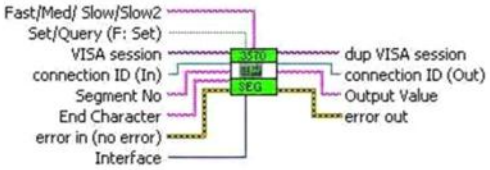

HIOKE 3570 SEGMENT SPEED.VI

4. 3. 172 HIOKE 3570 SEGMent STARt STOP.vi


This VI does simultaneously setting and querying sweep point settings of START-STOP method of specified segment.

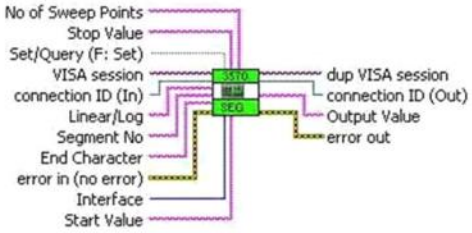

HIOKE 3570 SEGMENT START STOP.VI

4. 3. 173 HIOKE 3570 SEGMent SUB SOURce VALue.vi


This VI does setting and querying measurement signal for when segment sweep.

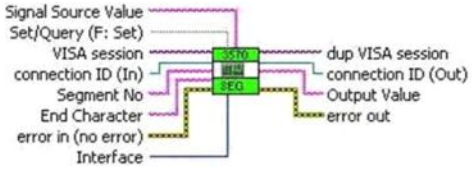

HIOKE 3570 SEGMENT SUB SOURCE VALUE.VI

4. 3. 174 HIOKE 3570 SEGMent SUB SOURce.vi


This VI does setting and querying measurement signal for when segment sweep.

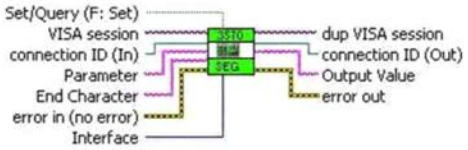

HIOKE 3570 SEGMENT SUB SOURCE.VI

4. 3. 175 HIOKE 3570 SEGMent.vi


This VI does setting and querying the segment sweep function.

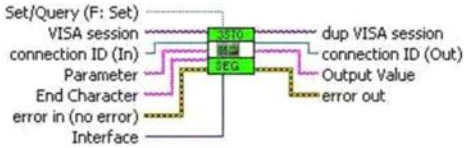

HIOKE 3570 SEGMENT.VI

4. 3. 176 HIOKE 3570 SPEEd.vi


This VI does setting and querying the measurement speed of the specified segment.

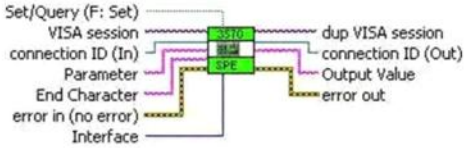

HIOKE 3570 SPEED.VI

4. 3. 177 HIOKE 3570 SRE.vi


This VI does writing and reading the service request enable register (SRER)

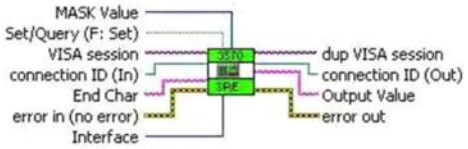

HIOKE 3570 SRE.VI

4. 3. 178 HIOKE 3570 SSOurce WAIT.vi


This VI does setting and querying the wait time of trigger synchronous output.

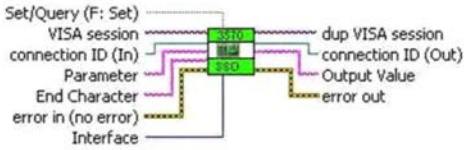

HIOKE 3570 SSOURCE WAIT.VI

4. 3. 179 HIOKE 3570 SSOurce.vi


This VI does setting and querying the trigger synchronous output function.

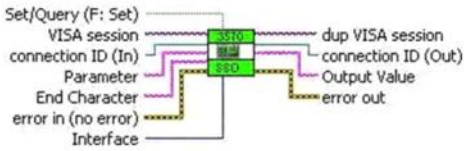

HIOKE 3570 SSOURCE.VI

4. 3. 180 HIOKE 3570 STB.vi


This VI does reading the status byte register.



HIOKE 3570 STB.VI

4. 3. 181 HIOKE 3570 SWEep DISPlay.vi


This VI does setting and querying display for when analyzer mode.

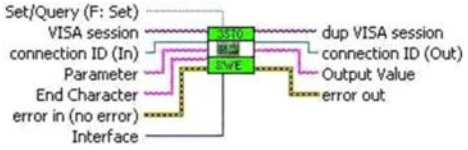

HIOKE 3570 SWEEP DISPLAY.VI

4. 3. 182 HIOKE 3570 SWEep DRAW.vi


This VI does setting and querying the screen display timing.

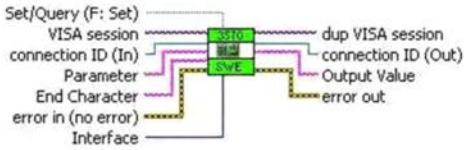

HIOKE 3570 SWEEP DRAW.VI

4. 3. 183 HIOKE 3570 SWEep MAIN SOURce.vi


This VI does setting and querying main sweep measurement signal mode.

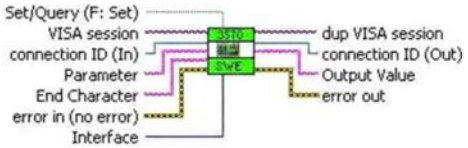

HIOKE 3570 SWEEP MAIN SOURCE.VI

4. 3. 184 HIOKE 3570 SWEep PDELay.vi


This VI does setting and querying point delay.

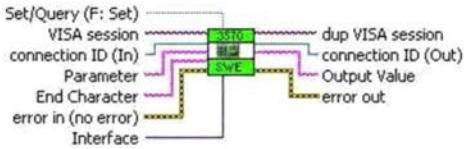

HIOKE 3570 SWEEP PDELAY.VI

4. 3. 185 HIOKE 3570 SWEep TRIGger.vi


This VI does setting and querying trigger mode.

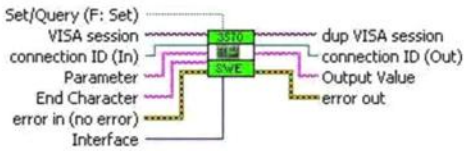

HIOKE 3570 SWEEP TRIGGER.VI

4. 3. 186 HIOKE 3570 SYSTem DATE.vi


This VI does setting and querying the date.

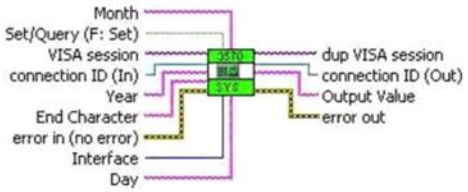

HIOKE 3570 SYSTEM DATE.VI

4. 3. 187 HIOKE 3570 SYSTem MACAddress.vi


This VI does querying the MAC address.



HIOKE 3570 SYSTEM MACADDRESS.VI

4. 3. 188 HIOKE 3570 SYSTem SERIAlno.vi


This VI does querying the serial number.



HIOKE 3570 SYSTEM SERIALNO.VI

4. 3. 189 HIOKE 3570 SYSTem TIME.vi


This VI does setting and querying the time.

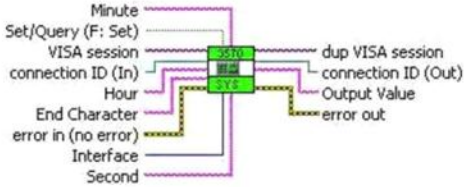

HIOKE 3570 SYSTEM TIME.VI

4. 3. 190 HIOKE 3570 SYSTem USBId.vi


This VI does querying the USB ID.



HIOKE 3570 SYSTEM USBID.VI

4. 3. 191 HIOKE 3570 TRANsmit TERMinator.vi


This VI does setting and querying the terminator of the response message.

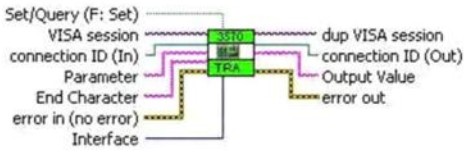

HIOKE 3570 TRANSMIT TERMINATOR.VI

4. 3. 192 HIOKE 3570 TRG.vi


This VI does requesting a sample.



HIOKE 3570 TRG.VI

4. 3. 193 HIOKE 3570 TRIGger DELAy.vi


This VI does setting and querying the trigger delay time.

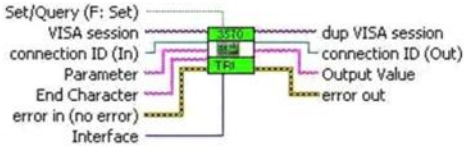

HIOKE 3570 TRIGGER DELAY.VI

4. 3. 194 HIOKE 3570 TRIGger.vi


This VI does setting and querying the trigger mode.

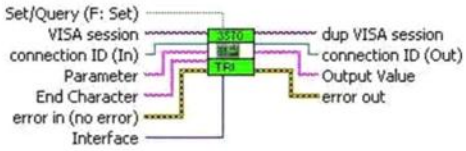

HIOKE 3570 TRIGGER.VI

4. 3. 195 HIOKE 3570 TST.vi


This VI does executing self tests and querying results.



HIOKE 3570 TST.VI

4. 3. 196 HIOKE 3570 WAI.vi

This VI does executing following command after command processing is finished.



HIOKE 3570 WAI.VI

4. 3. 197 HIOKI3570 CLS.vi

This VI Clears the status byte register and the event registers.



HIOKI3570 CLS.VI