
Stainless Steel Drinking Fountain & Water Bubbler with Tap

CHILLED & FILTERED | 20 L/HR

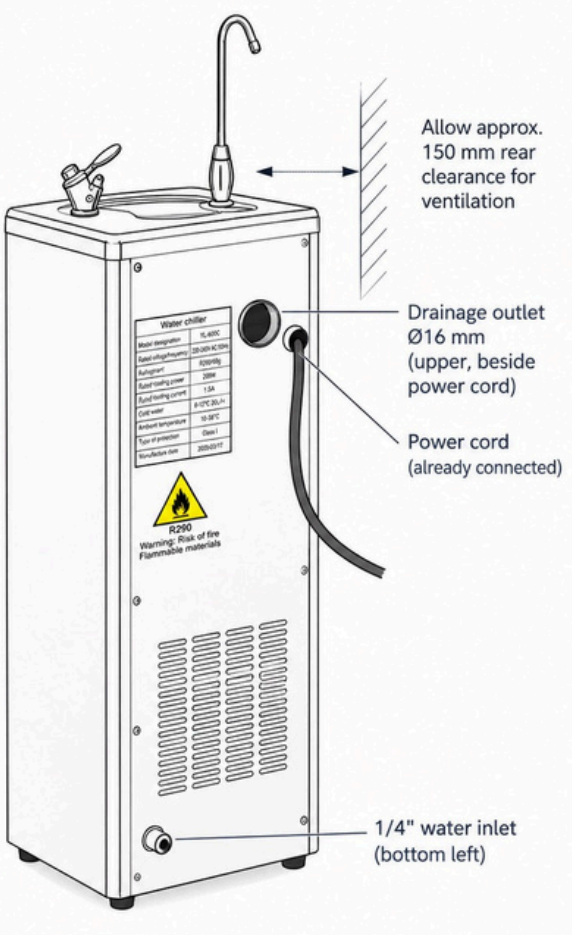

SITE REQUIREMENTS

- Install upright on a level surface.
- Maintain approx. 150 mm clearance behind the unit for ventilation.
- Keep away from direct rain and prolonged sunlight.
- Do not install near flammable or conductive materials.

ELECTRICAL REQUIREMENTS

- 220–240V / 50Hz power supply.
- Rated power: 200W.
- Protection type: Class I.
- Connect only to an earthed power outlet.
- Do not switch on until water supply and drainage are connected and water is flowing correctly.

PLUMBING CONNECTIONS

- Connect to potable mains water only.
- Use an isolation valve on the inlet for servicing.
- Use the pressure limiting valve to protect the unit.
- Connect supplied 1/4" tubing to the water inlet.
- Connect the supplied drainage hose to a suitable waste connection.
- Do not raise the drain line above the outlet level.
- Inlet pressure range: 0.7–5 kgf/cm^2.

INSTALLATION STEPS

1. Install the tap and bubbler fittings.
2. Install the isolation and pressure limiting valves to 1/4" tube.
3. Connect the 1/4" tube to the mains water supply.
4. Connect the drain elbow and drainage hose.
5. Open the water supply and check all connections for leaks.
6. Flush the carbon filter for 5 minutes until water runs clear.
7. Ensure the water tank is filled and water flows correctly before connecting power and checking cooling operation.

WORK CHECKLIST

- [ ] Isolation valve connected
- [ ] Pressure limiting valve connected
- [ ] Water supply connected
- [ ] Drainage hose connected
- [ ] Water flowing clear with no leaks
- [ ] Ventilation clearance maintained
- [ ] Power connected
- [ ] Cooling operating correctly

Installation should be carried out by a licensed plumber and connected to an earthed electrical outlet in accordance with local codes.