

## **ECM NOx, Type F Sensor**


(NH<sub>3</sub> Insensitive, Use with NOxCANf Controller)

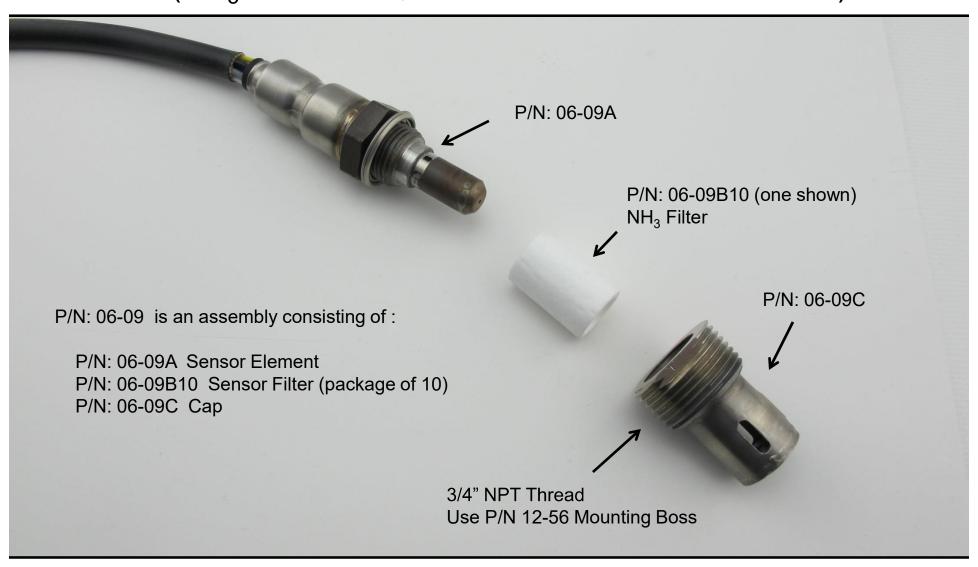

## Using Two NOx Sensors to Measure NH<sub>3</sub> and NOx in Spark Ignition Engines

$$NH_3 = (NOx + NH_3)_{sensor1} - NOx_{sensor2}$$

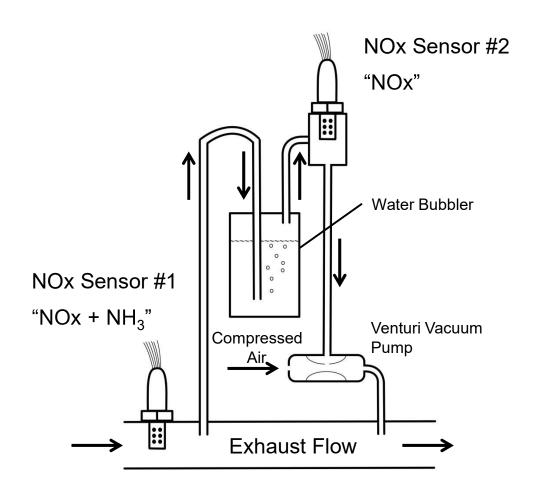

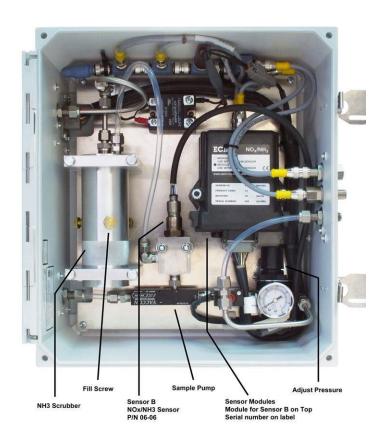

Inside of ECM NOx/NH<sub>3</sub> Model 5240