IBO Lite

IBO Lite Player

App Description (UX Scenario)

How the app works on a Samsung Smart TV: every screen, every key, and what to test.

Tizen app ID	pv1QB2aTAP.LitePlayer
App version	2.0.43
Platform	Samsung Smart TV, Tizen 4.0 (2018) and later · Web app
Package	LitePlayer.wgt · 1920×1080 layout (FHD and UHD TVs)
Remote	Samsung Smart Remote and standard remote
Language	English
Website	ibolite.pro
Date	18 October 2026

OVERVIEW

About the app and how to test it

WHAT THE APP IS

- IBO Lite Player is a **media player**. It contains no channels, films or other content and sells none.
- Users add their **own playlist** (an M3U link or an Xtream Codes login) on the website **ibolite.pro** by scanning the QR code shown on the TV. Nothing has to be typed on the TV.
- A **built-in demo** (free open films from the Blender Foundation under Creative Commons, and public test streams) lets anyone try the player without a playlist.
- Live TV with preview and a full **TV Guide** (reminders), Movies and TV Series, Catch Up (Xtream), **Continue Watching**, search, favourites, subtitles, **profiles with a Kids profile**, **parental control**, sleep timer and picture size.
- **Privacy:** on the first start the app asks for consent before it sends anything (MAC address, device ID); the Privacy Policy can be read in the app at any time.

QUICK TEST PATH

1. Start the app. **Before you start** (first start only): **Agree and continue** has the focus: press **OK**.
2. On the start screen **Watch the 4K demo** has the focus: press **OK**.
3. Home: open **Live TV**, pick a channel (OK = preview, OK again = full screen); **TV Guide** shows the programme grid.
4. Back to Home, open **Movies**, a film, then **Watch now**; stop it half way: it appears in **Continue Watching** on Home.
5. The round **profile button** next to the logo opens **Who's watching?**: add a Kids profile.

> Every screen and key is on the next pages. The test information (purchase, ads, privacy, keyboard, privileges) is on the next page.

OVERVIEW


Test information

Login / test account	Not needed. The app has no sign-in or membership.
In-app purchase	None. A free trial first; after it a licence is bought on the website (card payment there). The TV only shows an activation screen (last page).
In-app advertising	None.
Adult content	None in the app. Kids profiles show only children's categories; parental control locks categories behind a PIN.
Sound	No background music or sound effects; sound comes only from the video being played.
Keyboard	The TV's own on-screen keyboard (search, names, PIN, activation code); number keys type the PIN.
Network	Internet needed (wired or Wi-Fi). Without it Home says "No connection to the server".

Back on the first screen	The app asks “Exit IBO Lite Player?” (Cancel / Exit). Exit closes the app (tizen.application exit), Cancel stays.
Privacy	First start: **Before you start** says what is sent (MAC address, device ID, app version, IP address) and why, and asks for consent; nothing is sent before Agree. Exit closes the app. The Privacy Policy opens there, on the start screen (top right), in Settings (top right) and in Application info.
Data	The MAC address and device ID link the TV to the playlists added on the website and run the trial / licence. Favourites, history, profiles and settings stay on the TV.
Language	English. (Settings › Language offers the main texts in 24 more languages; the app stays in English until one is chosen.)
Privileges	internet · tv.inputdevice (remote keys) · network.public (MAC address, network details in Settings) · productinfo (the TV's unique ID for the licence, the model in Application info).
Video player	Automatic: each stream plays on the TV's player that can play it (Samsung AVPlay or the standard HTML5 player), remembered per kind of stream. Settings › VOD Player can fix one.

NAVIGATION

Screen map

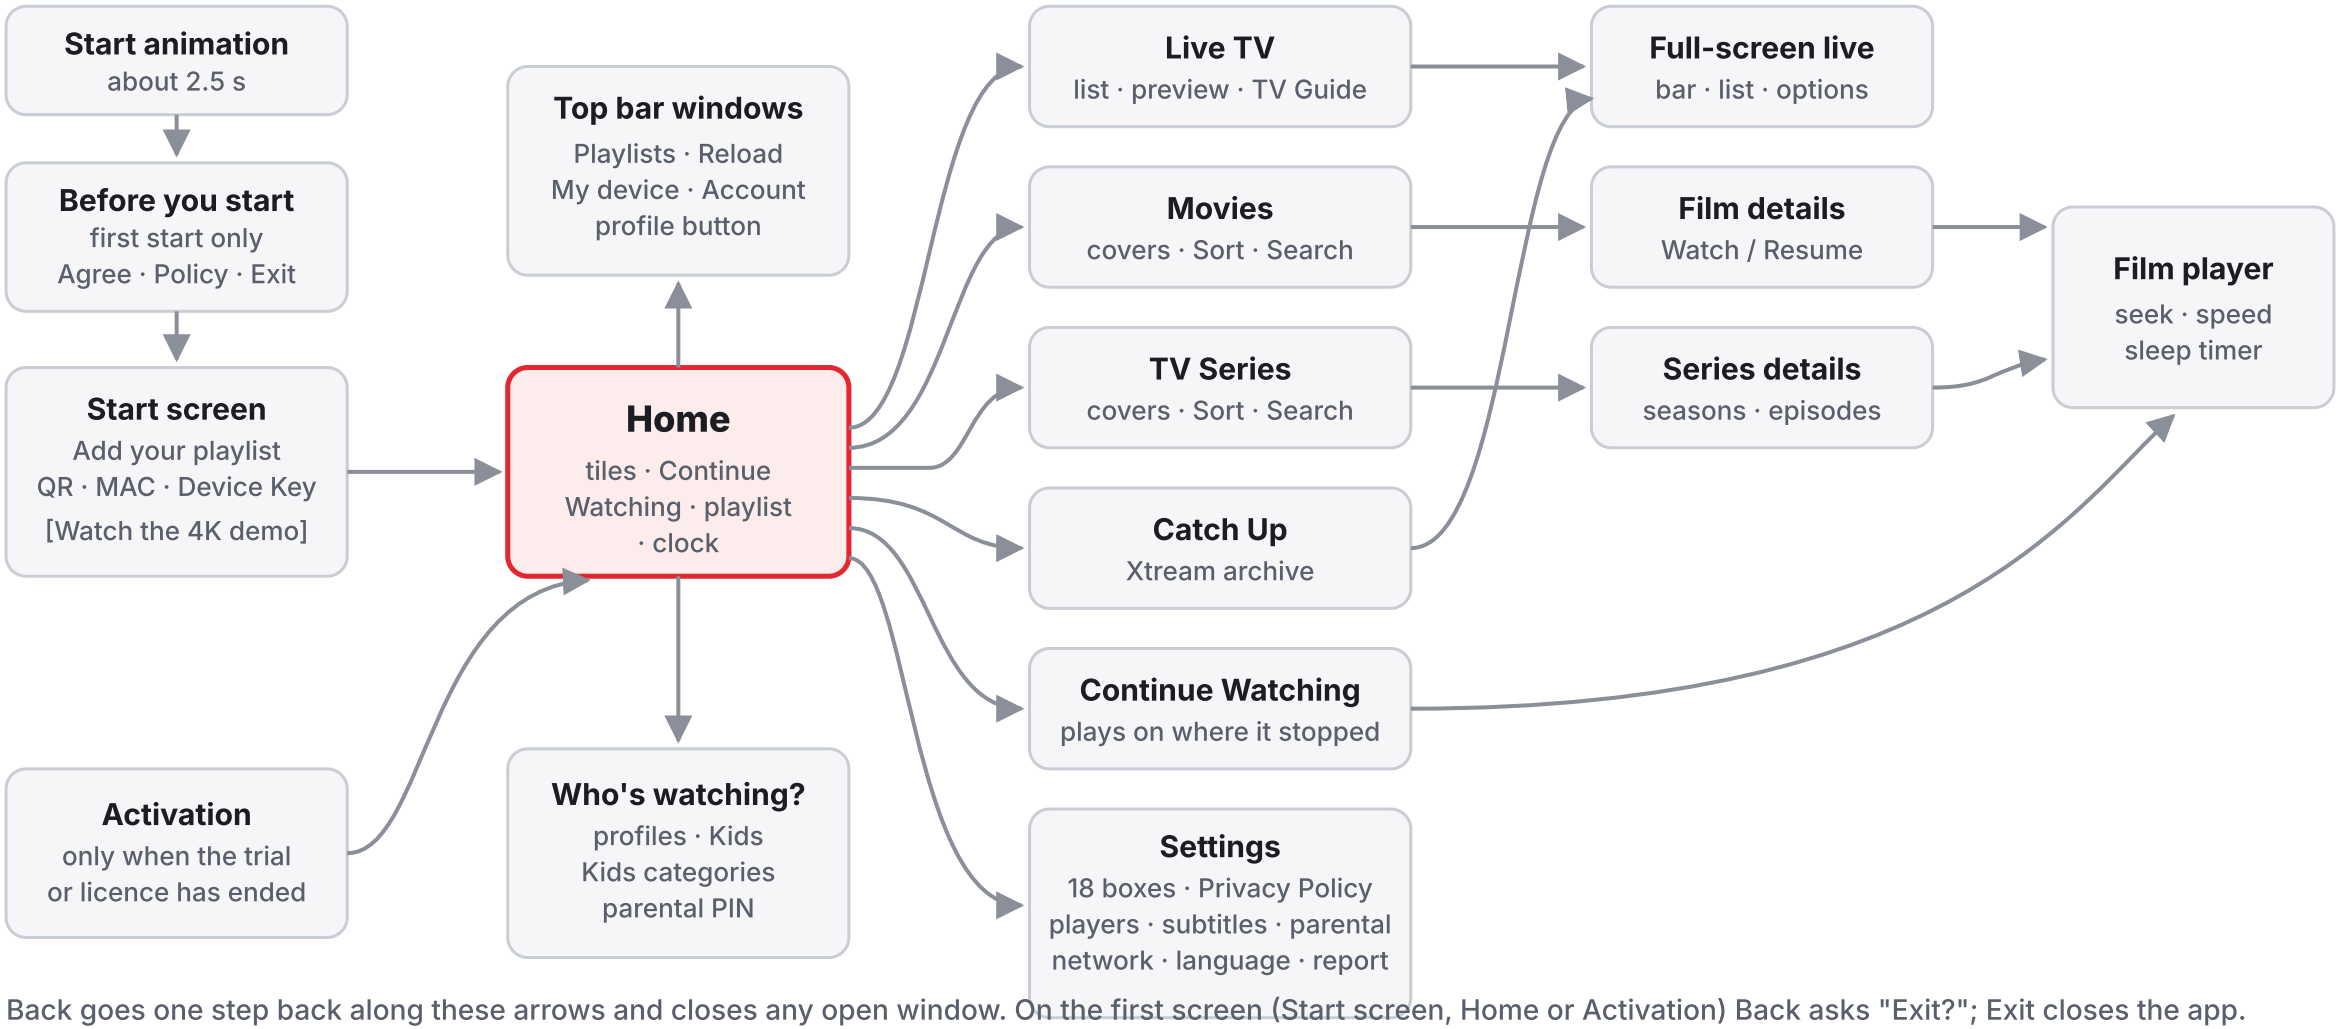

Back goes one step back along these arrows and closes any open window. On the first screen (Start screen, Home or Activation) Back asks "Exit?"; Exit closes the app.

KEYS

Remote control

STANDARD REMOTE

KEY	SCREENS AND LISTS	PLAYER
Arrows	Move the focus	Live: Up / Down next / previous channel, Left channel list, Right options (sound, picture, sleep timer). Film: Left / Right jump back / forward, Down shows the buttons.
OK	Open / select	Shows the information bar and buttons
Hold OK	On a channel or title: Favourites on / off. On a category: move it. On a profile: change / delete it. On a Continue Watching card: play from the start / remove.	–
BACK (Return)	One step back; closes windows. First screen: asks “Exit?”	Hides the bar, then leaves the player
CH + / CH –	Page up / down in long lists	Live: next / previous channel
PRE-CH	–	Live: back to the channel watched before (again = back and forth)
0 – 9	Type the parental PIN	Live: type a channel number
Media keys	FF / REW page through lists	Film: Play, Pause, Stop (leave), FF / REW jump. Live: FF = last channel
GUIDE / INFO	Live TV: the TV Guide	Live: the TV Guide
HOME / EXIT	Handled by the TV (Smart Hub / the app closes)	


SAMSUNG SMART REMOTE


- Same keys as the table: arrows, OK, BACK (Return), CH, numbers, play / pause.
- The app asks the TV for the media keys, CH + / –, PRE-CH, 0–9, GUIDE, INFO and the red key (tvinputdevice).
- **Pointer or mouse** (where the remote has one): pointing focuses an item, click = OK, the wheel scrolls lists.
- No screensaver while a video plays; it comes back when the video stops or pauses.
- When the app goes to the background (HOME key), the video stops; it plays again when the app comes back.

NOT USED

- Colour keys have no function on screen.
  - Support only: pressing the red key five times quickly shows a small technical log; five times again hides it.

Before you start and the Privacy Policy

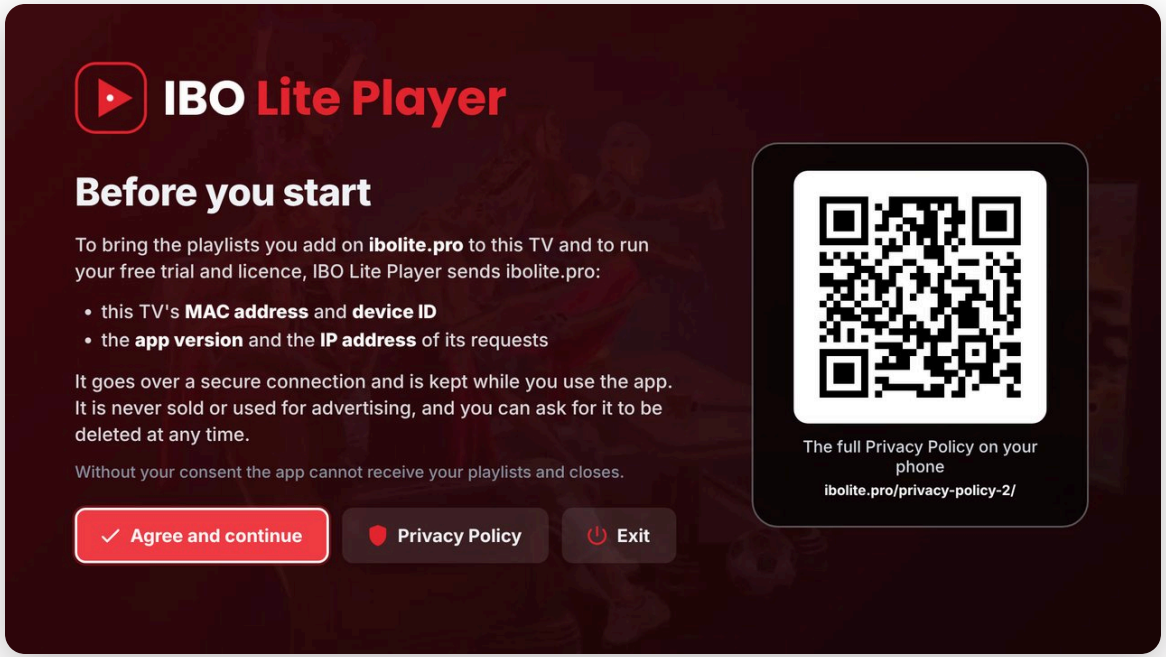

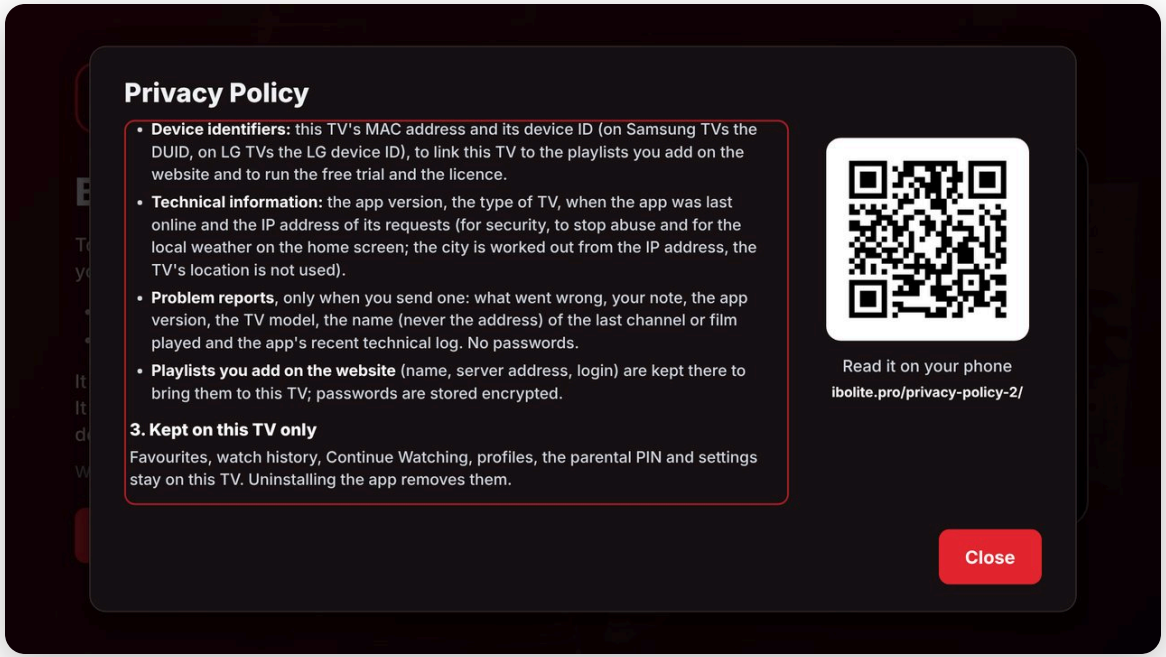


Before you start comes once, after the start animation and before the app sends anything: what is sent (this TV's MAC address and device ID, the app version and the IP address of its requests), why (to bring the playlists added on the website and to run the trial / licence), that it is never sold, and what happens without consent (the app cannot receive playlists). **Agree and continue** (focused) goes on; **Exit** closes the app. BACK asks “Exit?”.

Privacy Policy: the policy for the TV in the app; Up / Down scroll it, at the end the focus goes to Close; a QR code opens the full policy (ibolite.pro/privacy-policy-2) on a phone. It also opens from the start screen (top right), Settings (top right) and Application info.

SCREEN 1

Start screen: Add your playlist

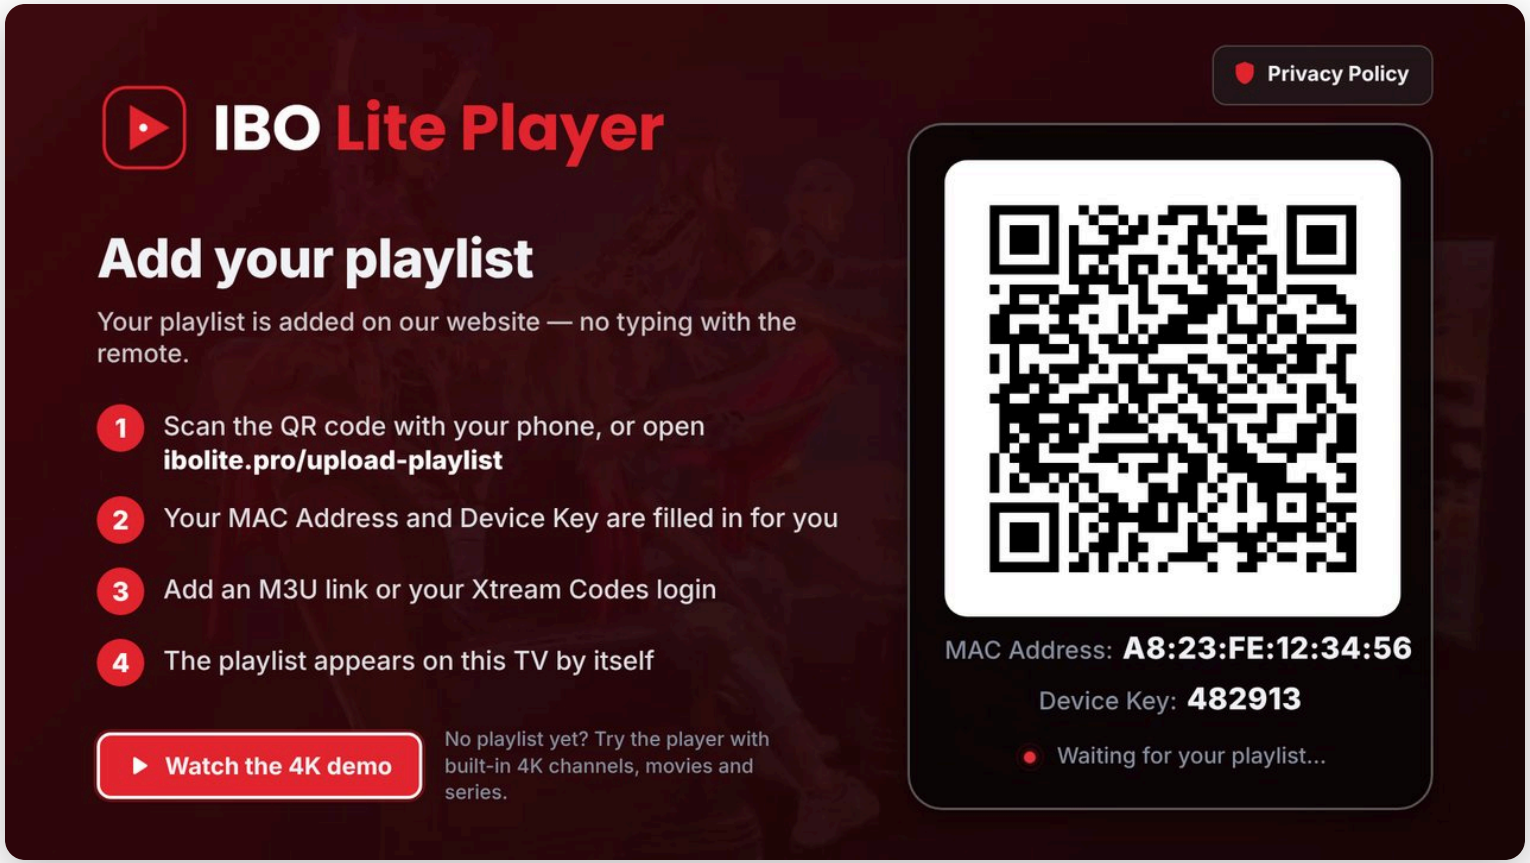

ON THIS SCREEN


- Shown when the TV has no playlist yet, after the start animation (the symbol, then the name written letter by letter).
- QR code, this TV's **MAC Address** and **Device Key**.
- Steps: scan the QR code with a phone (or open ibolite.pro/upload-playlist) and add an M3U link or Xtream Codes login. The playlist appears on the TV by itself ("Waiting for your playlist...").
- **Watch the 4K demo** (focused) opens the built-in demo. **Privacy Policy** at the top right.

KEYS

OK	Watch the 4K demo → Home with the demo
Up / Right	Privacy Policy
BACK	Asks "Exit?" (first screen)

SCREEN 2

Home

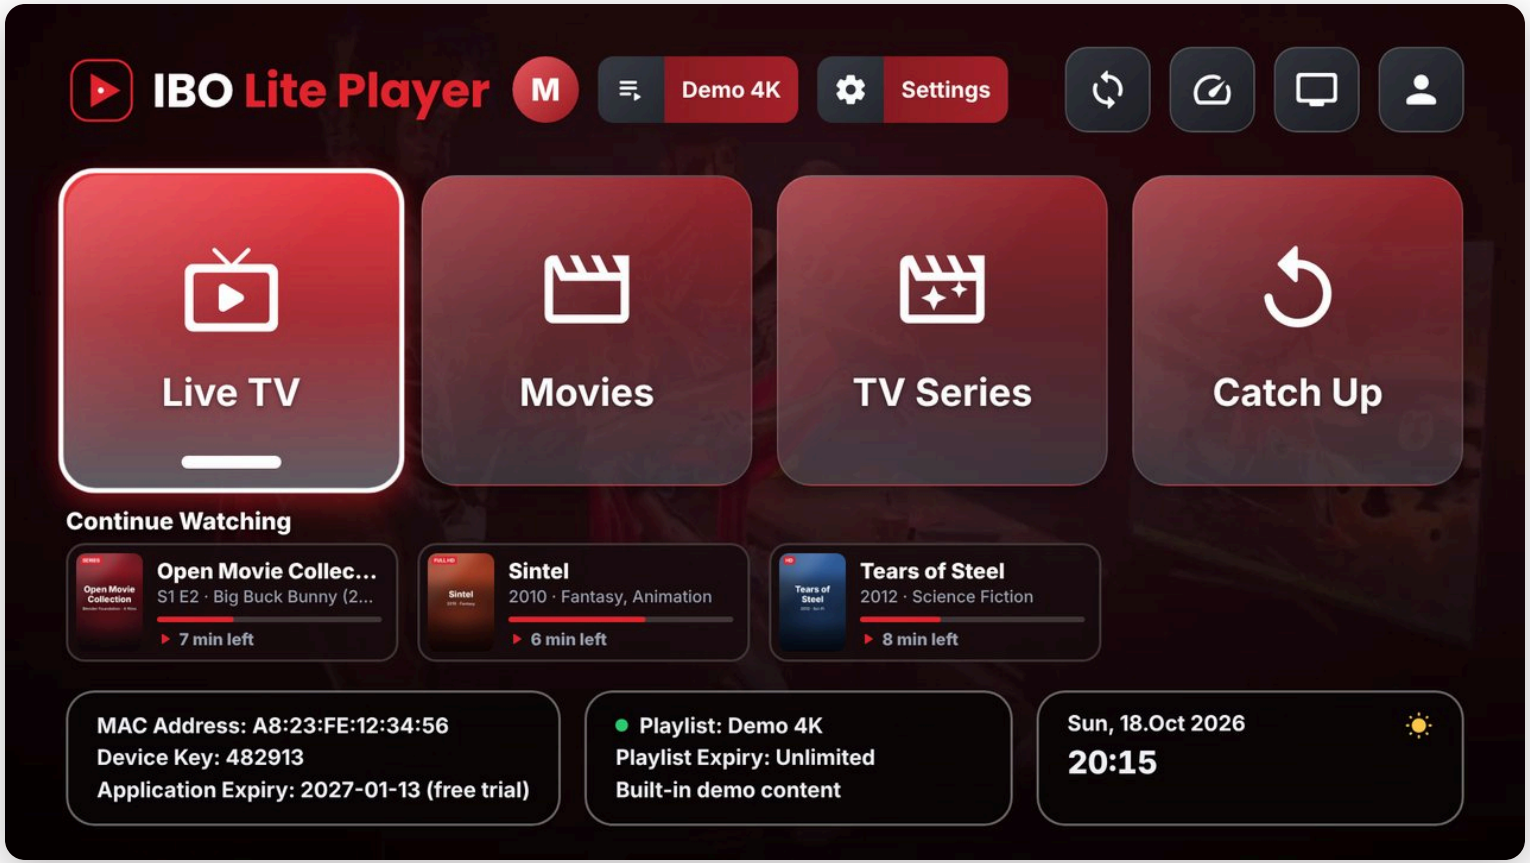

ON THIS SCREEN

- Top bar: the round **profile button** (Who's watching?), the **playlist button** (opens the Playlists window), **Settings**, and four icons: **Reload**, **Internet speed test**, **My device** (MAC, Device Key, QR), **Account** (playlist type, status, expiry).
- Tiles: **Live TV, Movies, TV Series, Catch Up**.
- **Continue Watching**: films and episodes stopped half way, with the time left. OK plays on; holding OK offers Play from the start and Remove from the row.
- Boxes: MAC Address, Device Key and application expiry · the playlist with its expiry and days left · date, time and weather.


KEYS

Arrows / OK	Move / open
Hold OK on a card	Continue · From the start · Remove
BACK	Asks "Exit?" (first screen)

> Catch Up needs an Xtream Codes playlist with recordings; with the demo it shows a short message.

SCREEN 2 · WINDOW

Exit question (BACK on the first screen)

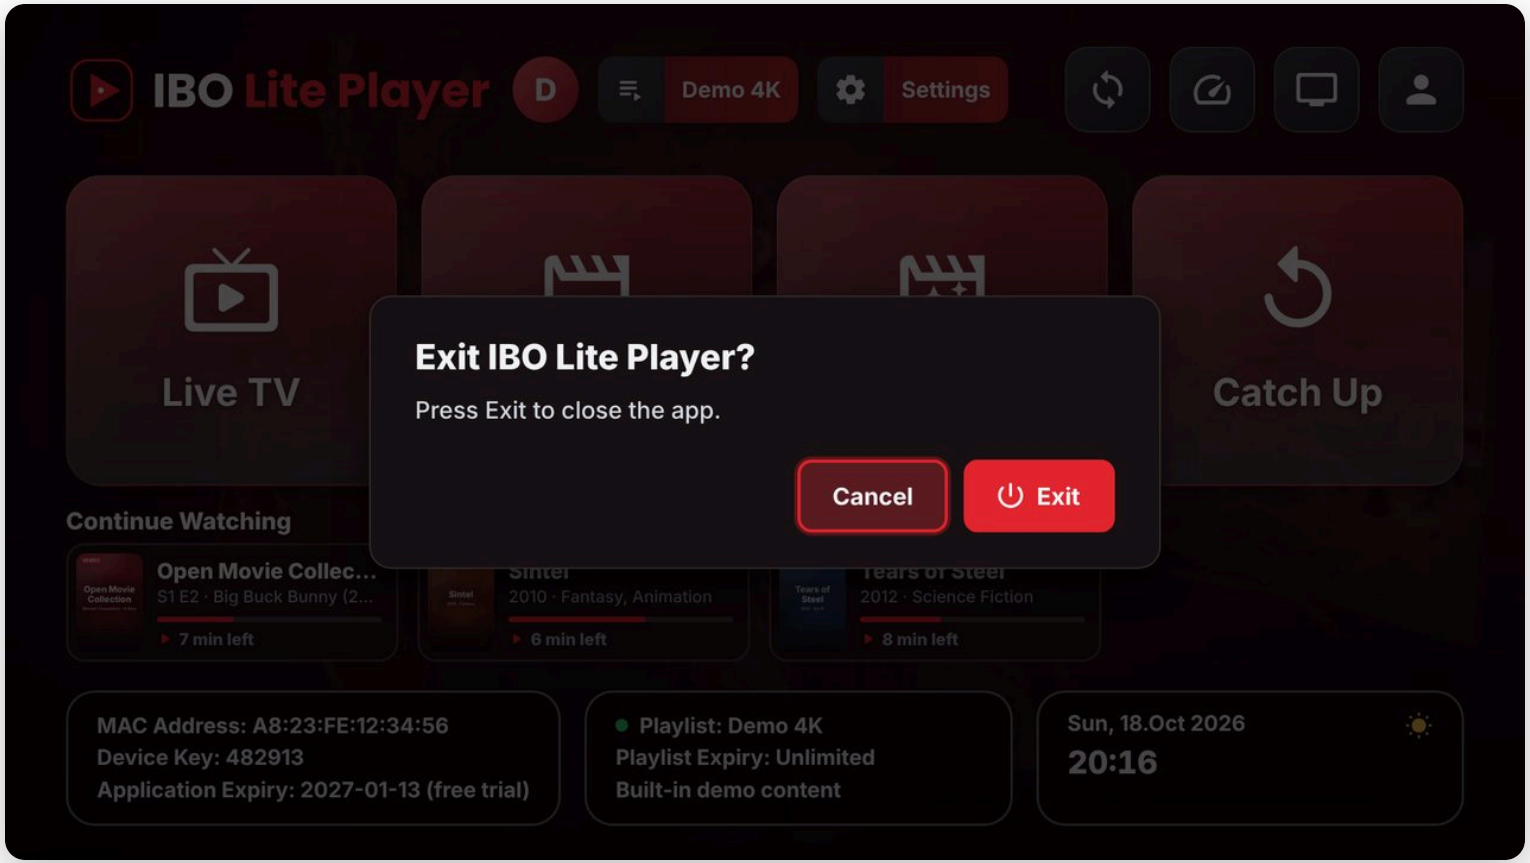

ON THIS SCREEN


- Shown when BACK is pressed on the first screen (Start screen, Home or Activation), as Samsung asks.
- **Cancel** has the focus: OK keeps the app open. **Exit** (Right, then OK) closes the app.

KEYS

OK on Cancel	Stay in the app
Right + OK	Exit: the app closes
BACK	Closes the question

SCREEN 3

Live TV

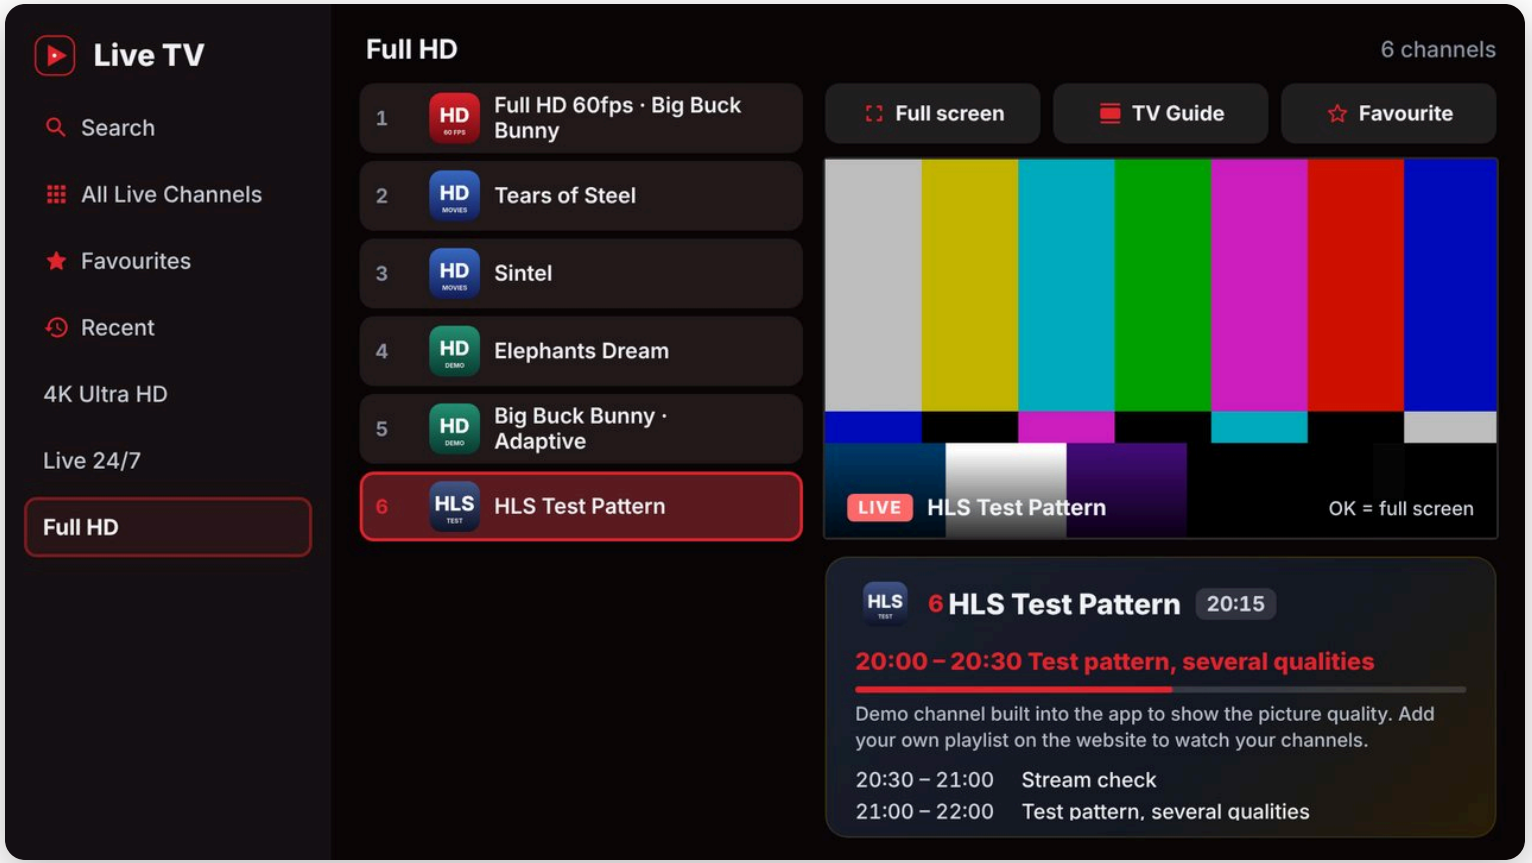

ON THIS SCREEN


- Left: categories (Search, All, Favourites, Recent, then the playlist's categories; a padlock marks a locked category).
- Middle: channels of the category.
- Right: preview window with programme guide (now / next), and buttons **Full screen**, **TV Guide**, **Favourite**.

KEYS

OK	Plays the channel in the preview; OK again → full screen
Hold OK	Favourite on / off (channel), move (category)
CH + / –	Page through the list
GUIDE	TV Guide
BACK	Home

SCREEN 3 · GUIDE

TV Guide

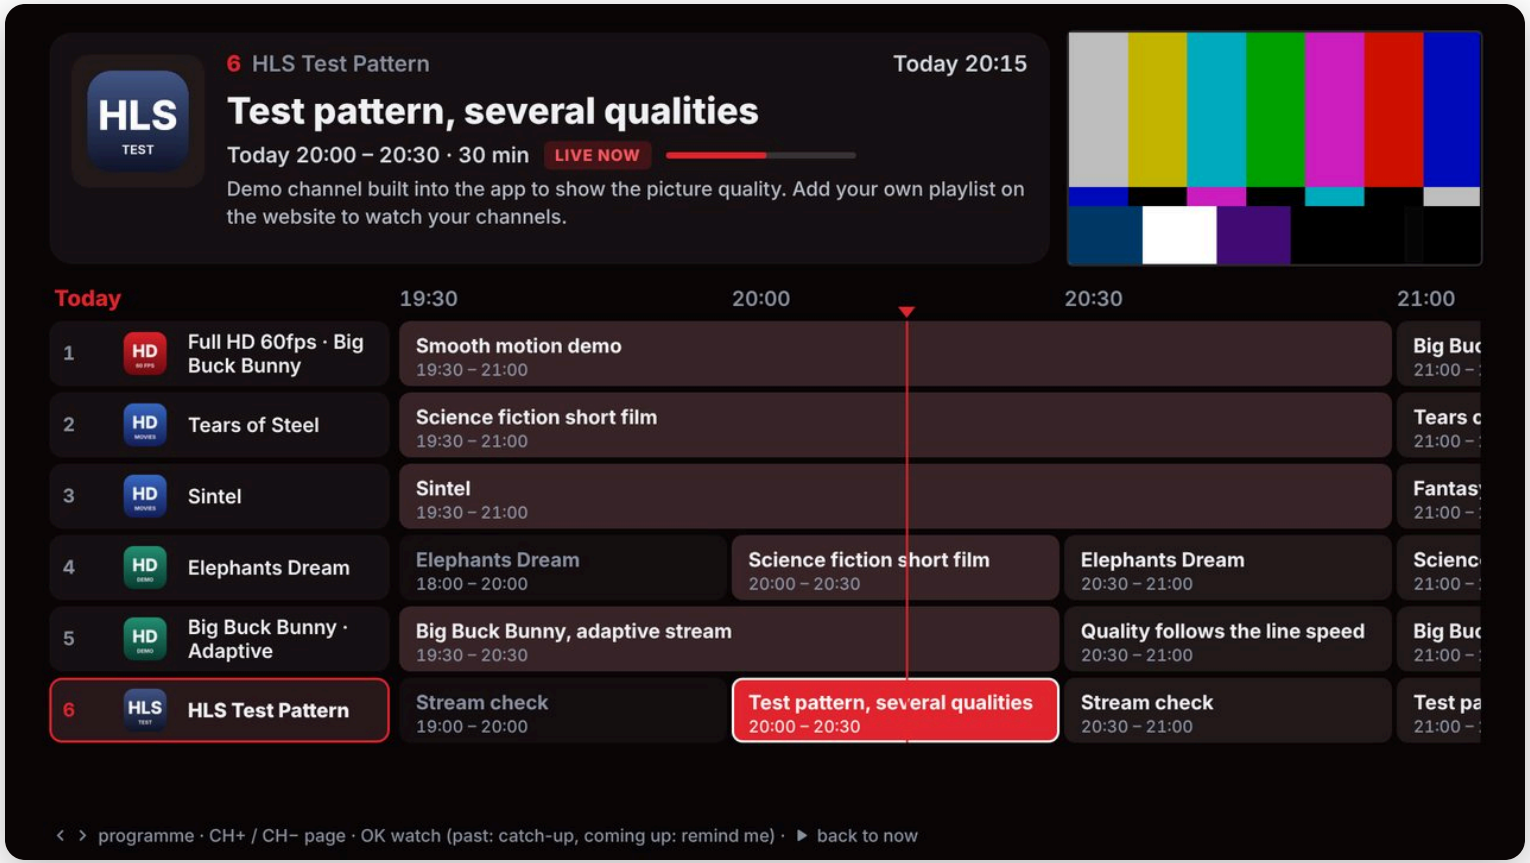

ON THIS SCREEN


- The programme grid of the channels (the playlist's guide: Xtream or XMLTV for M3U; the demo has its own), the selected programme on top and the channel playing in the corner.
- OK on a programme: now → watch the channel; coming up → a **reminder** (at the time: “Starting now” with Watch now); in the past with Catch Up → watch it.

KEYS


Arrows	Channels (Up / Down) and programmes (Left / Right)
CH + / –	Page
PLAY	Back to now
BACK	Closes the guide

SCREEN 4

Live TV: full screen and its options

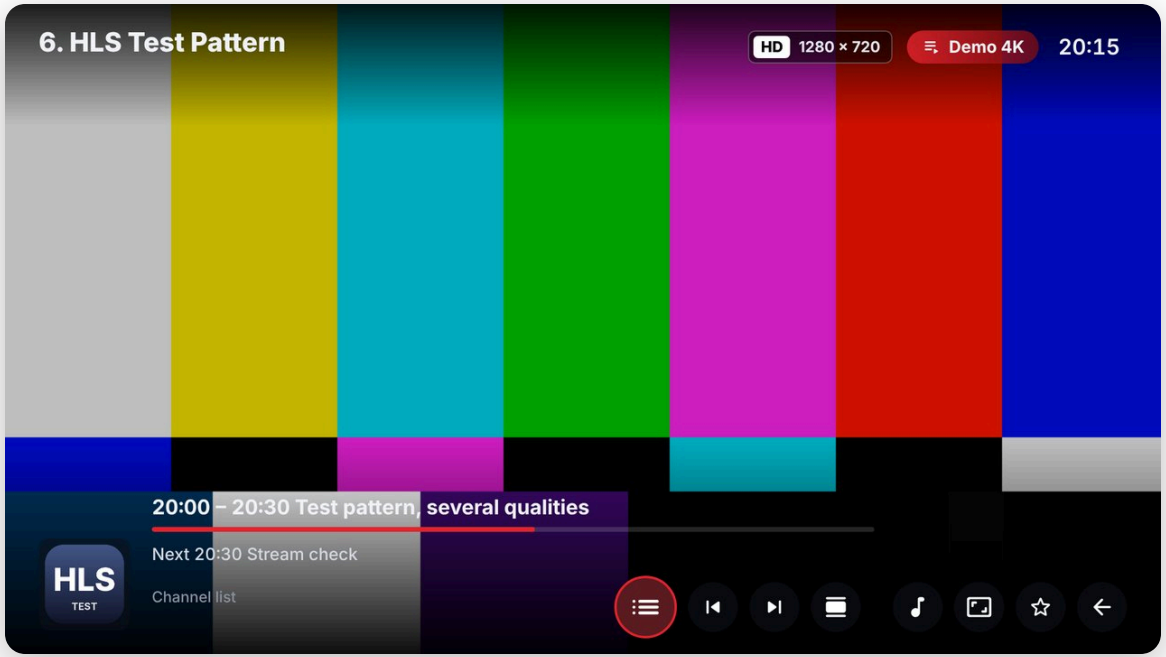


Information bar: channel number and name, picture size, playlist, time, current programme with progress, next programme. Buttons: channel list, previous / next channel, **Last channel**, options, **Picture** (Fit / Fill / Stretch), favourite, back. A stream that stops reconnects by itself.

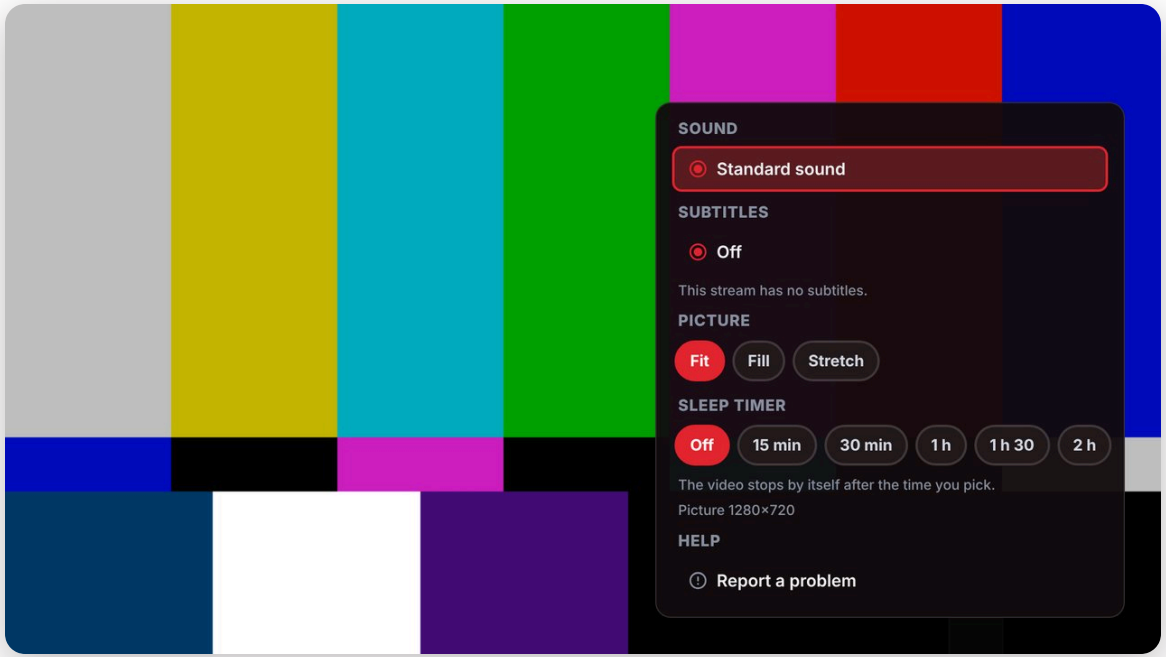

Right (or the options button) opens the panel on the right: **Sound** track, **Subtitles** (tracks of the stream), **Picture**, **Speed** (films), **Sleep timer** (15 min to 2 h; a minute before, "Still watching?") and **Report a problem**. Left or BACK closes it.

SCREEN 5

Movies

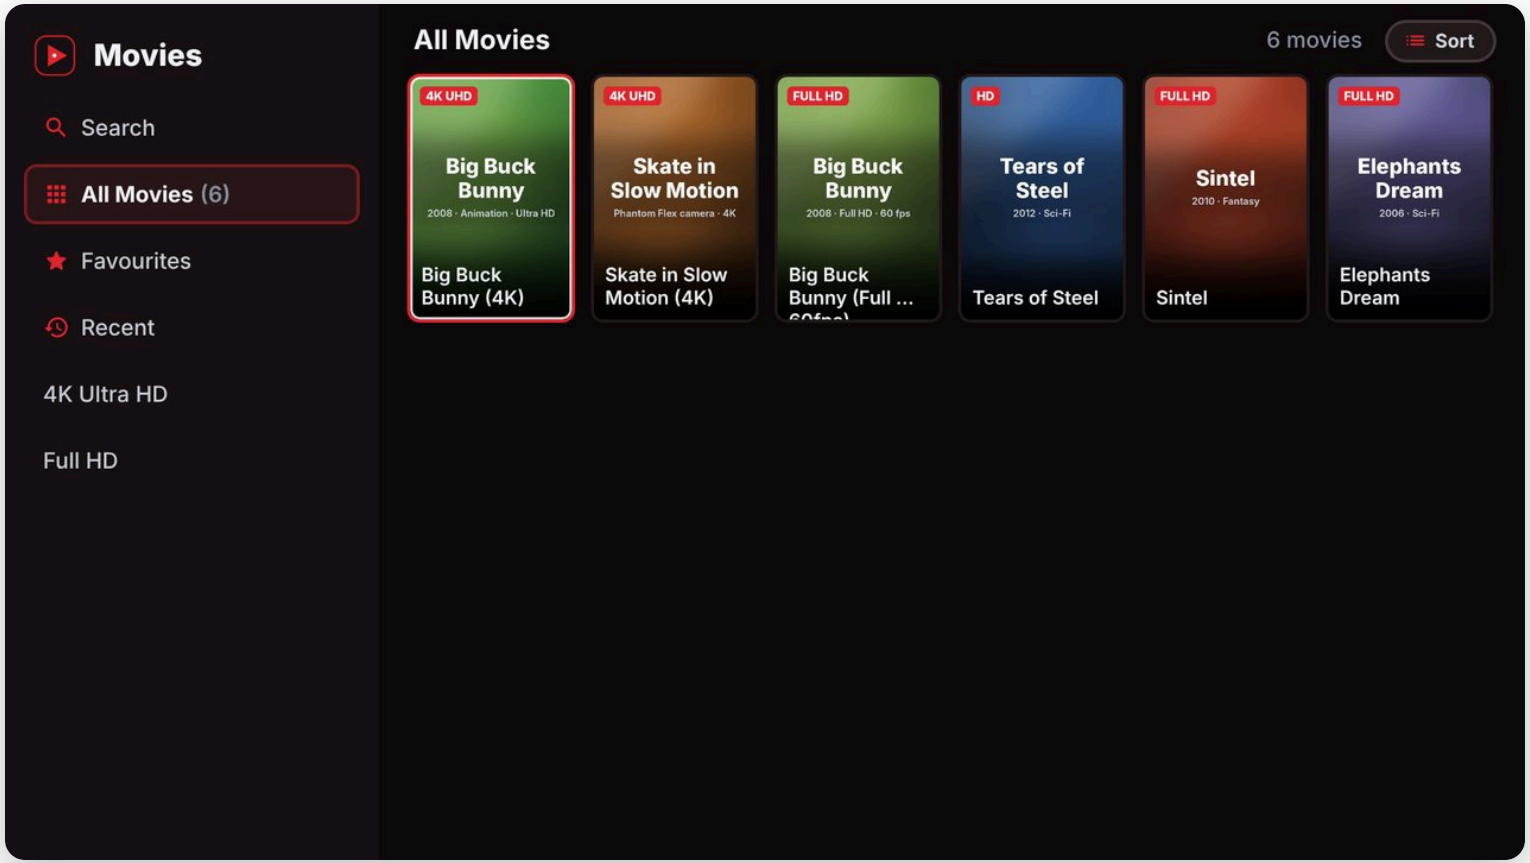

ON THIS SCREEN


- Left: categories (Search, All Movies, Favourites, Recent, Recently Added for Xtream playlists, then the playlist's categories). The number of titles is shown at the top.
- Right: covers with title; **Sort** at the top right (Up from the first row): default order, newest added, A–Z, year, rating.

KEYS


OK	Film details
Hold OK	Favourite on / off (title), move (category)
Up	Sort
BACK	Home

SCREEN 5 · WINDOWS

Search and Sort

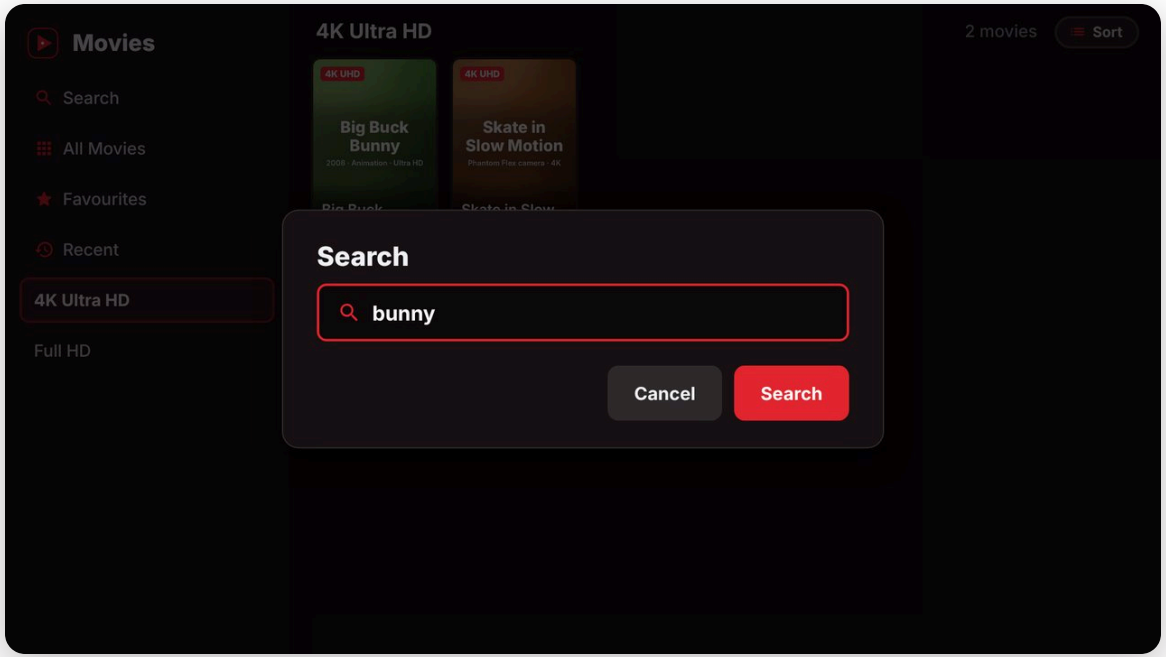

Search (top of the category list, or the Search button) opens a field; the TV's on-screen keyboard opens with it. OK or the Search button starts the search; every word is matched, case and accents are ignored.

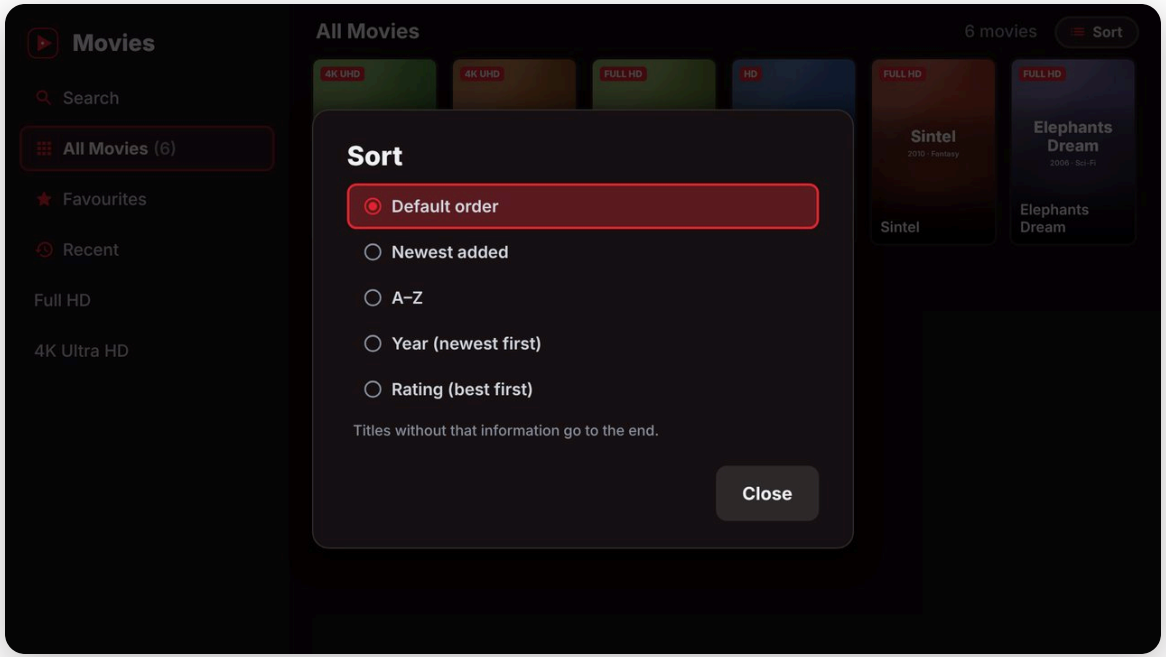

Sort: the order of the covers, kept for next time. Titles without a date, year or rating go to the end.

SCREEN 6

Film details



ON THIS SCREEN


- Cover picture, title, rating, length, year, country, genres, description, director and a **Cast** row (when the playlist has them; with the film database: photos and a **Pictures** row).
- **Watch now** (or **Resume from mm:ss** and **From the start** after a film was stopped) and **Favourite**.

KEYS

OK	Watch now / Resume / Favourite
BACK	Back to the list

SCREEN 7

TV Series

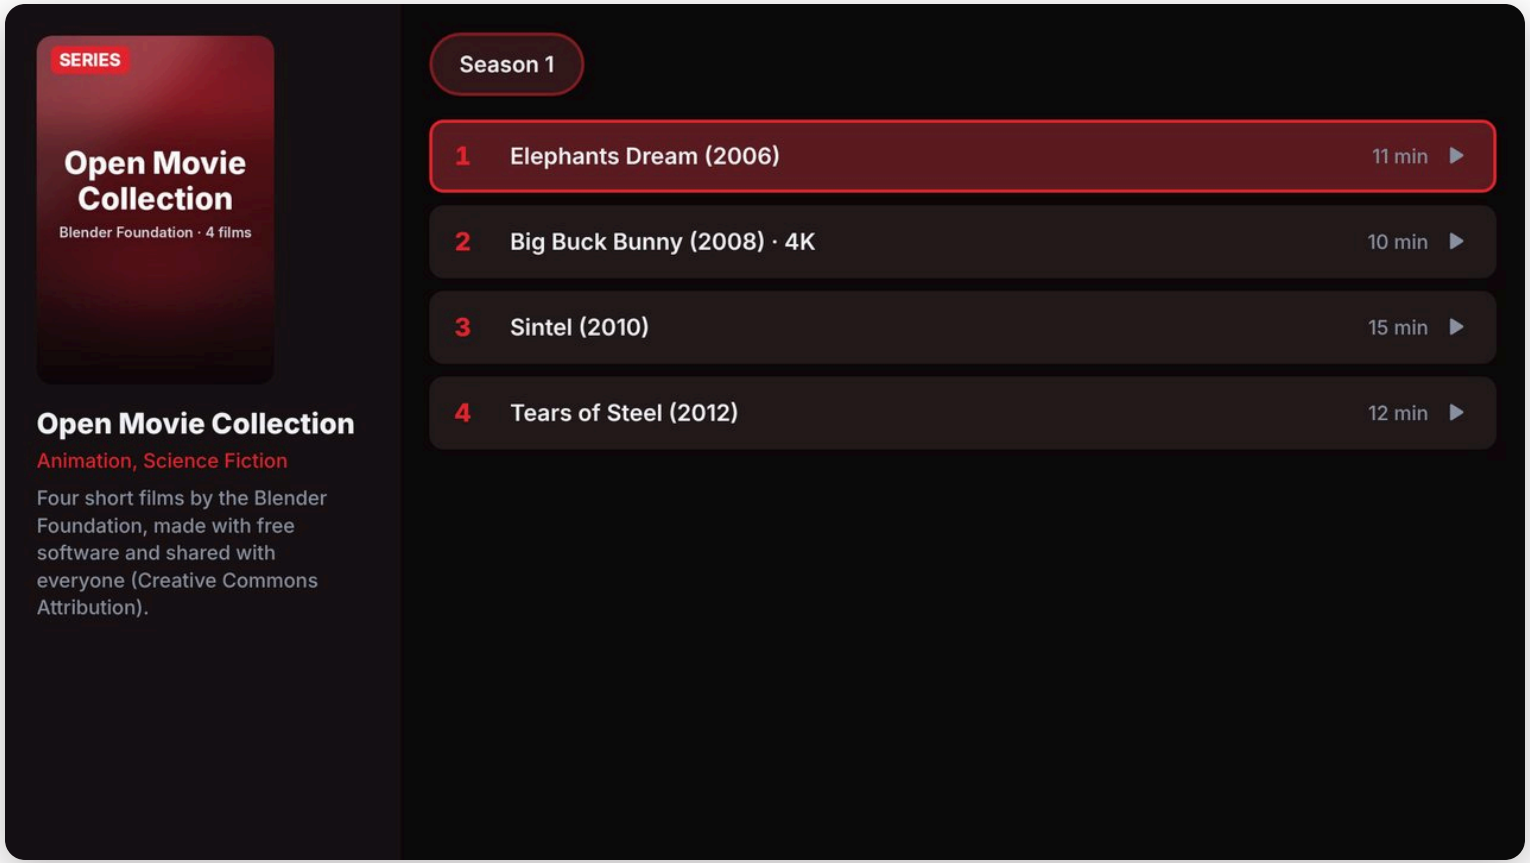

ON THIS SCREEN

- Series cover and description on the left.
- Season buttons at the top, episodes with length below; "Continue" marks an episode already started. Episodes play one after the other.

KEYS


Arrows	Seasons (top) and episodes (below)
OK	Plays the episode (same player as films)
BACK	Back to the list

SCREEN 8

Profiles: Who's watching?




The profile button on Home opens the profiles of this TV (up to 6). Each profile has its own favourites, recently watched, Continue Watching and last channel. **Add profile**: name, colour, Kids. Hold OK on a profile to change or delete it. With several profiles the question also comes when the app starts (can be switched off).

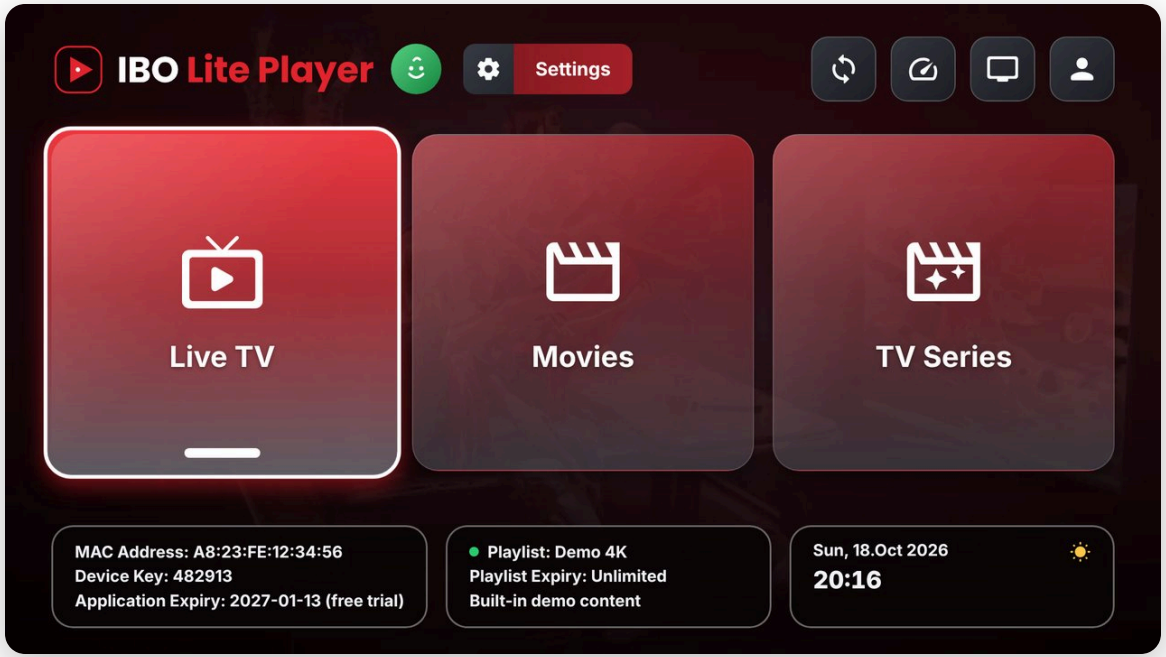


A **Kids profile** shows only categories for children (found by their names: Kids, Cartoons, Family...; a parent can tick others in Kids categories). No playlist change and no Catch Up there. With a parental PIN, leaving the Kids profile and opening Settings need the PIN.

SCREEN 9

Settings and parental control

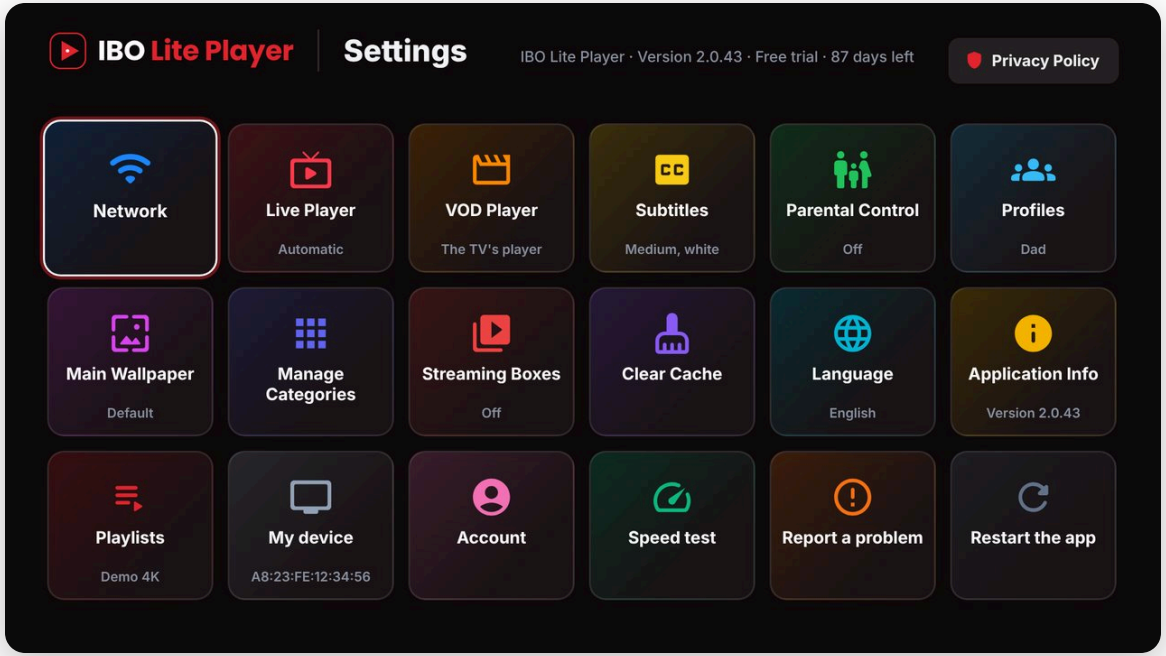

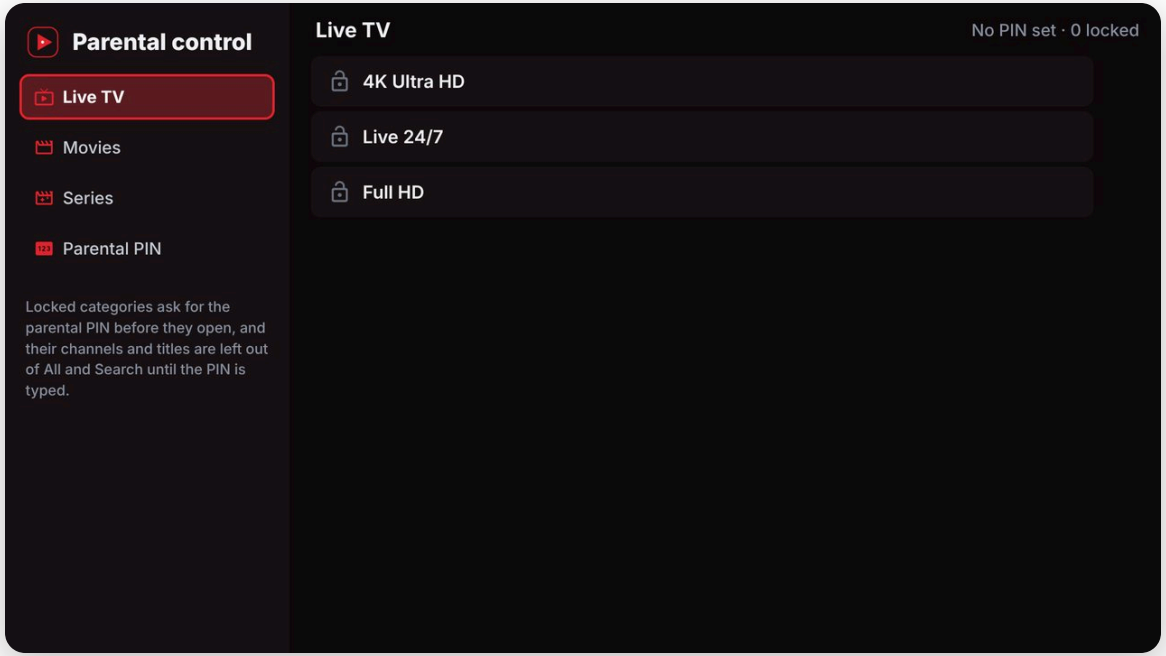


Settings (18 boxes): Network · Live Player (format, last channel, picture, video player) · VOD Player · Subtitles (size, colour, background, position) · Parental Control · Profiles · Main Wallpaper · Manage Categories · Streaming Boxes · Clear Cache · Language · Application Info · Playlists · My device · Account · Speed test · Report a problem · Restart the app. Top right: version, licence status and **Privacy Policy**.


Parental control: lock categories behind a 4–8 digit PIN (made when the first category is locked). A locked category shows a padlock and opens after the PIN; its channels and titles stay out of All and Search until then.

SCREEN 10

Favourites, category order and the Playlists window

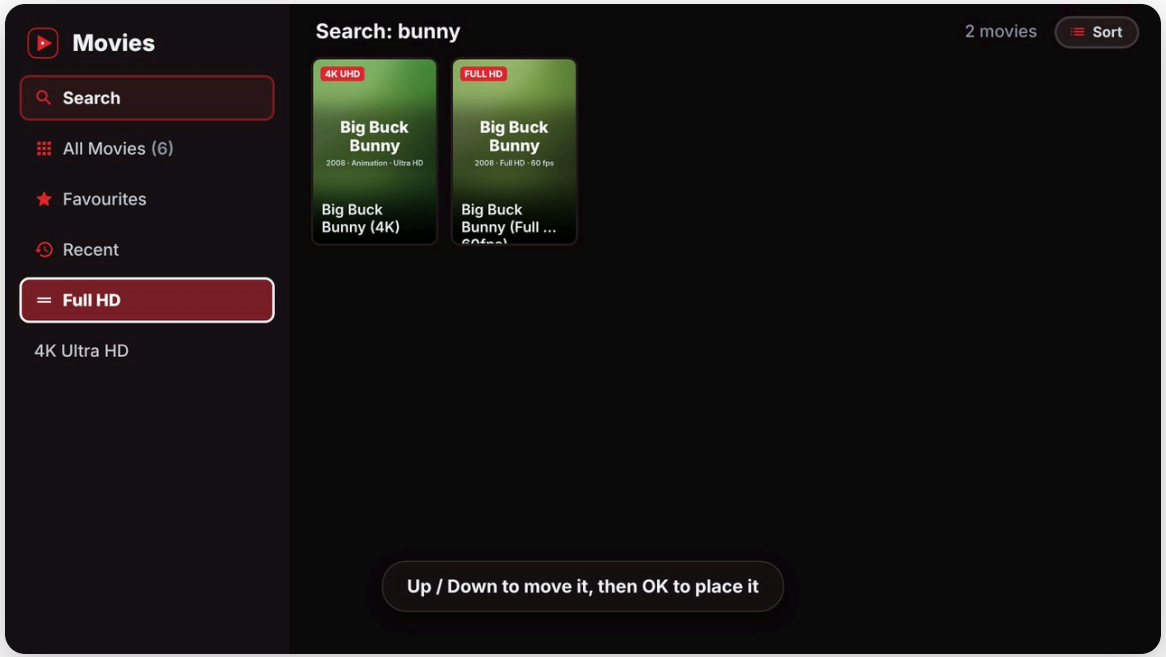


Holding OK on a channel or title adds it to **Favourites**. Holding OK on a **category** picks it up: Up / Down move it, OK places it (Manage categories → Original order puts it back).

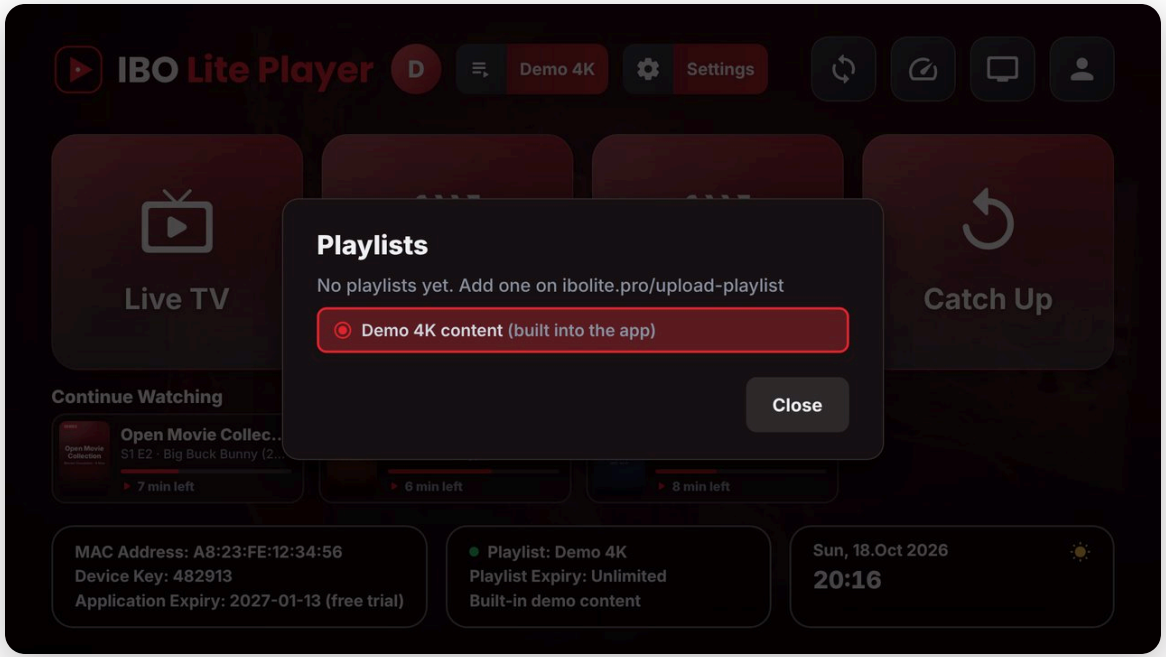

Playlists (playlist button): choose between the playlists added on the website and the built-in demo. Close or BACK closes it.

SCREEN 11

Report a problem

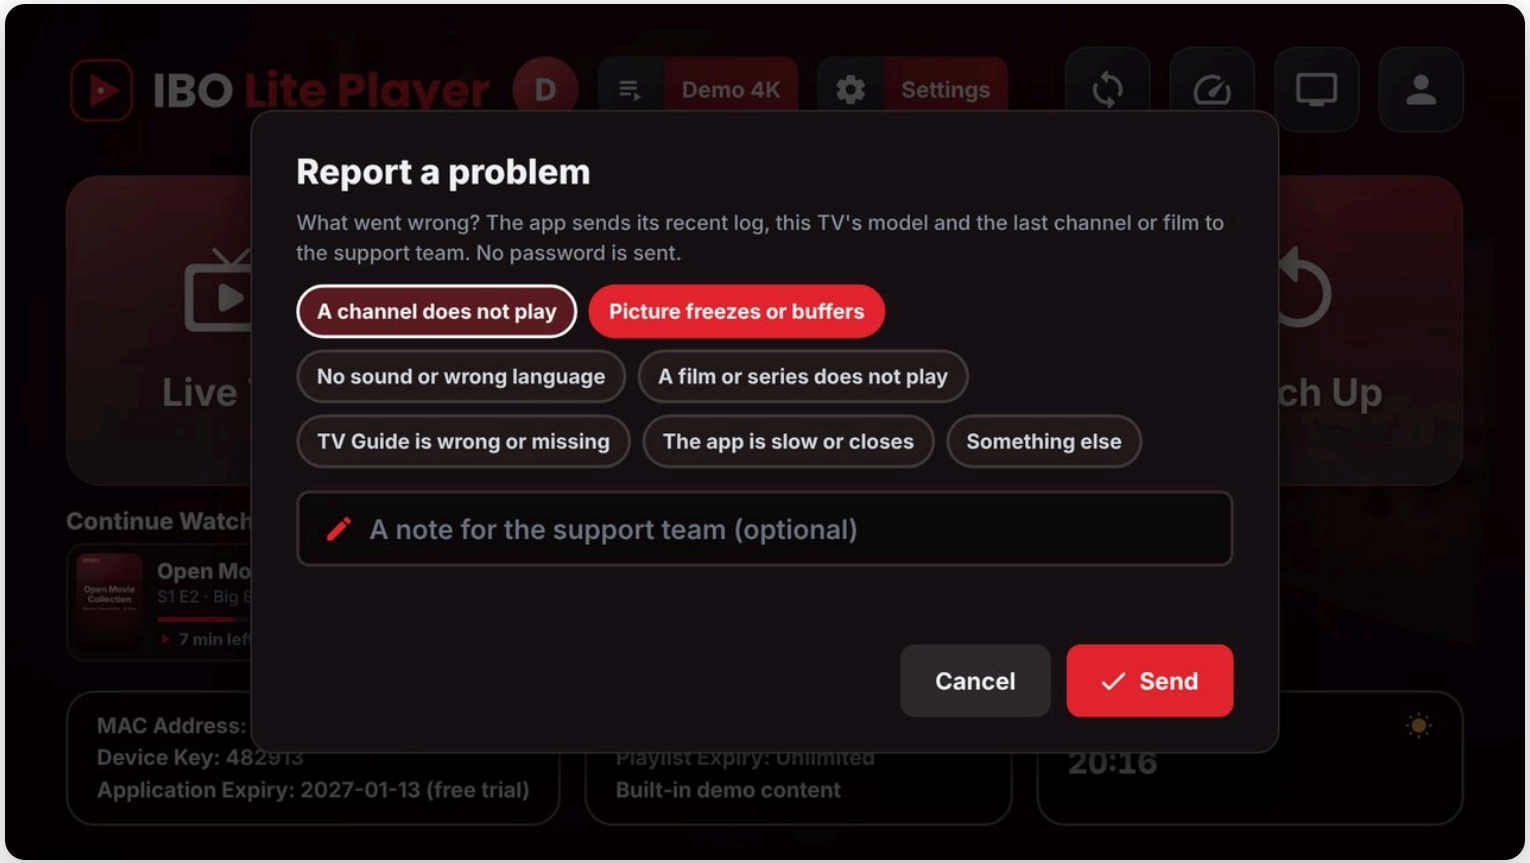

ON THIS SCREEN


- From Settings, or Help in the player's options panel.
- The user picks what went wrong and may add a note; **Send** sends it to the website with the app version, the TV model, the last stream played (its name only) and the recent app log. **No password or stream address is sent.**
- The report number is shown. One report a minute.

KEYS

OK	Pick a reason / type a note / Send
BACK	Closes the window

SCREEN 12

Activation (after the free trial)

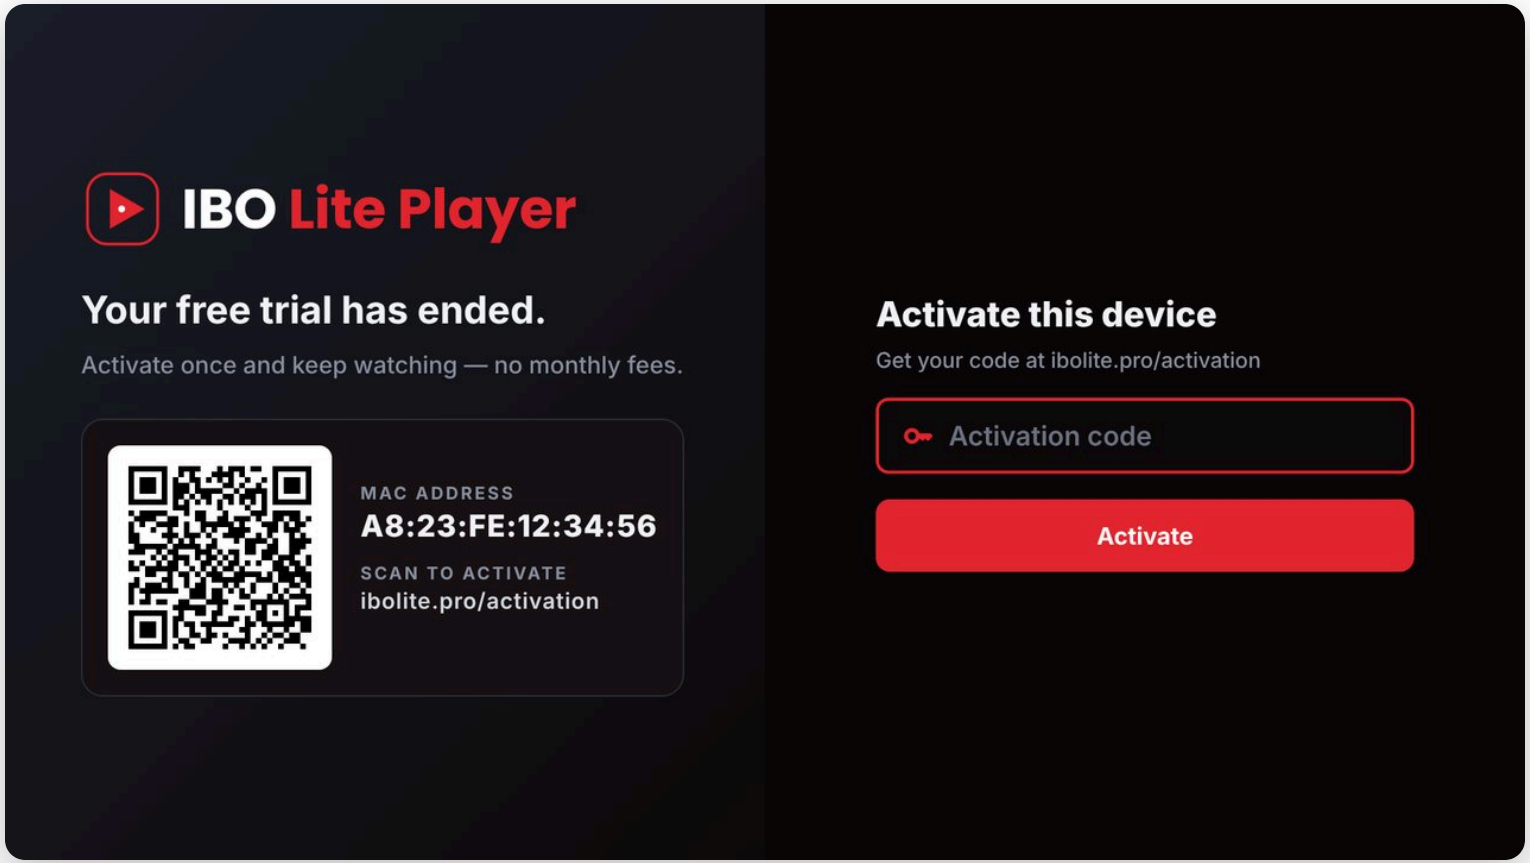

ON THIS SCREEN

- Shown instead of Home when the free trial or the licence has ended.
- QR code and MAC Address: scanning opens ibolite.pro/activation, where the user buys a licence (card payment on the website, not in the app) and gets an activation code.
- The code is entered in the field with the TV's keyboard; **Activate** checks it. When the licence is renewed on the website, the TV notices it by itself.

KEYS

OK	Opens the keyboard / Activate
BACK	Asks "Exit?" (first screen)

> Testers do not reach this screen: every new TV starts with a free trial.