
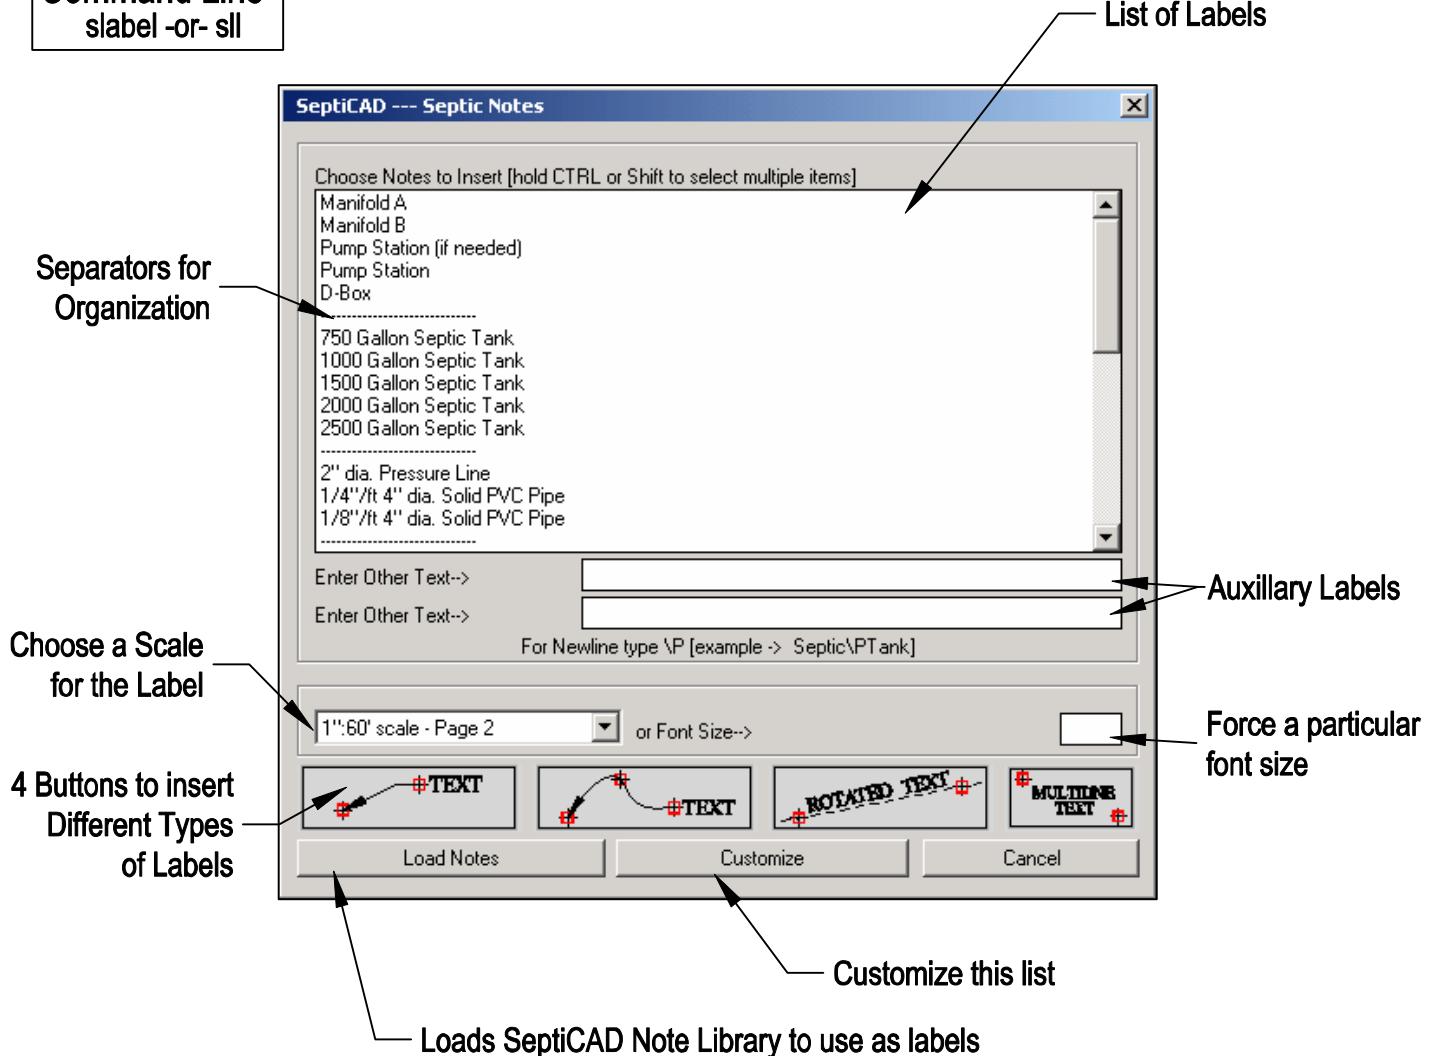


SeptiCAD Label Library

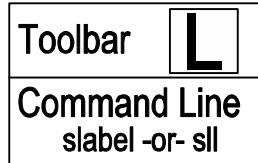

To use the SeptiCAD Label Library tool follow the steps below:

- (1) Select one or more labels in the list. Hold the SHIFT or CTRL keys to select multiple.
- (2) Select the Page the notes will be inserted on (determines the size of the arrowhead and/or text). User may over-ride by entering a value in the Font Size box.
- (3) Select the type of label you want to insert (notice that the red/black cross-hairs on the image buttons depict how points are supposed to be chosen)
- (4) If multiple labels were selected then you will be prompted to insert the next label.

NOTE: The scale of the text and the arrowhead can be modified in the SeptiCAD Preferences.

Customize the SeptiCAD Label Library

