
08 Connect the display harness.

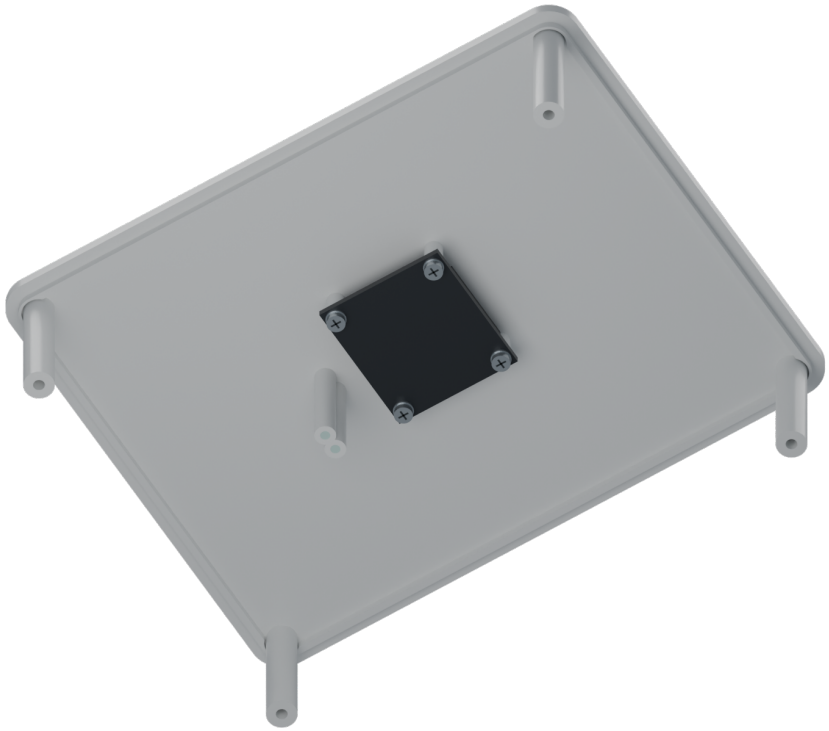

- **J16.1 +3V3**
  QT 2 / VIN / red
- **J16.2 GND**
  QT 1 / GND / black
- **J16.3 SCL / PB6**
  QT 4 / yellow
- **J16.4 SDA / PB7**
  QT 3 / blue

Use female sockets at the controller male header and a keyed QT plug at the display. These pin orders are different: verify continuity, then measure 3.3 V before connecting the module.

Leave a short service loop clear of columns and optical sleeves. Do not pull the display cable when removing the lid.