







Use 16 AWG wire to connect the left slot to ignition, the middle slot to constant 12V, and the right slot to ground. When the unit is connected in this on for a preconfigured amount of time (anywhere from 30 sec - 24 hrs) when



Once connected, turn on the ignition momentarily to power on the Eyeride. When the start-up process is completed successfully, the Power LED should display as a solid color and blink momentarily every second.

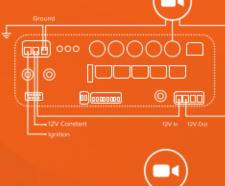

Since the EyeRide can be configured to stay on for up This activator is a relay which will open when the EyeRide turns off cutting power to the cameras.

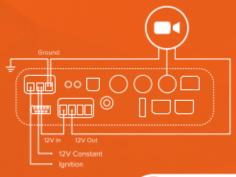

see the LED on the aircard blinking green. Please verify that Alternatively, you can use the Live Chat feature on www.EyeRideOnline.com or send an email to support@eyerideonline.com



Check out our website for more information and tutorials: www.eyerideonline.com/video



EyeRide products should be assembled and/or installed by professionals. Proper assembly/installation affects the performance of the product and the EyeRide system. To ensure your product functions at peak performance, have it installed by our technicians.















www.eyerideonline.com



4737 Orange Drive Davie, FL. 33314



888 668 6698

