




INFINITY

Batesville Compressor Station Haul Route

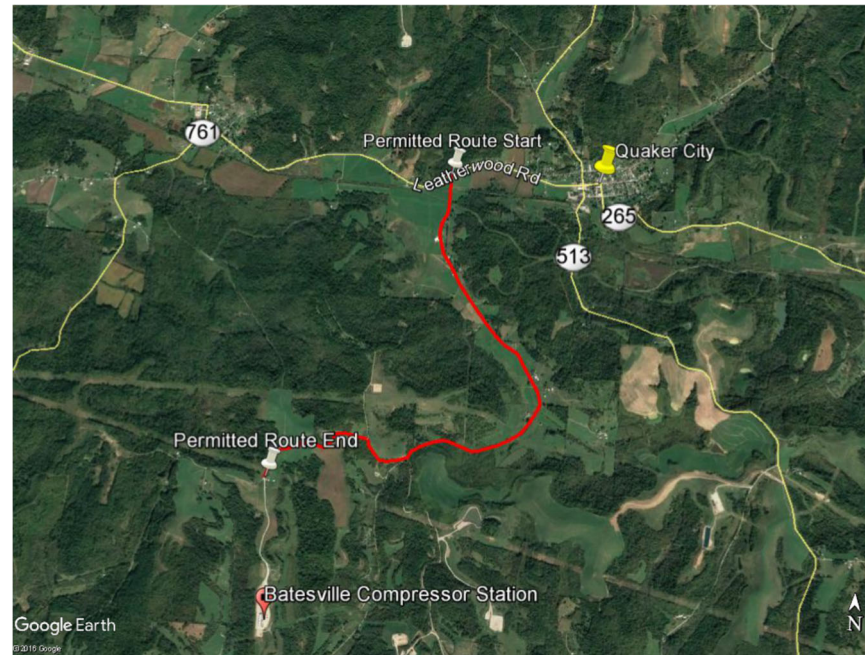

Permitted Antero Route
State Route

Township		County	Noble
Address		City, State	
Site Entrance Coordinates	+39.94683333, -81.32960278	Site Center Coordinates	

Haul Route Directions to Site

1. Traveling on SR-265 turn south onto Yoker Valley Road
2. Note: Yoker Valley Road is approximately 1.5 miles west of the SR-265 & SR-761 intersection and approximately 0.7 miles east of the SR-265 & SR-513 intersection
3. Continue on Yoker Valley Road for approximately 2.2 miles and turn right onto St. John Road (CR-34)
4. Follow St. John Road (CR-34) approximately 1.0 miles and turn left onto Batesville CS lease road
5. No traffic is permitted beyond the lease road on St. John Road (CR-34).