



How to Setup Your ELD & Application Guide

ATTENTION!

For your safety and the safety of others,
please avoid using your phone while driving.

How to Set Up Your ELD

1. Before You Begin

Ensure your truck's engine is turned off and the key is in the "Off" position.

2. Locating the Diagnostic Port

The diagnostic port, also known as the Data Link Connector (DLC), is usually found inside the driver's cabin in one of these areas:

- Under the left side of the dashboard
- Below the steering wheel
- Close to the driver's seat
- Beneath the driver's seat

3. Connecting the ELD

Plug the ELD device into the diagnostic port on your vehicle. Tighten the connector until it's secure. Double-check that the ELD is properly connected.


4. Syncing the ELD

Once plugged in, the ELD will automatically begin communicating with your truck's engine control module (ECM) and the ELD app on the tablet.


5. Activating the ELD App

Take the tablet provided by your fleet manager and power it on. The ELD application should launch automatically.

Application Guide

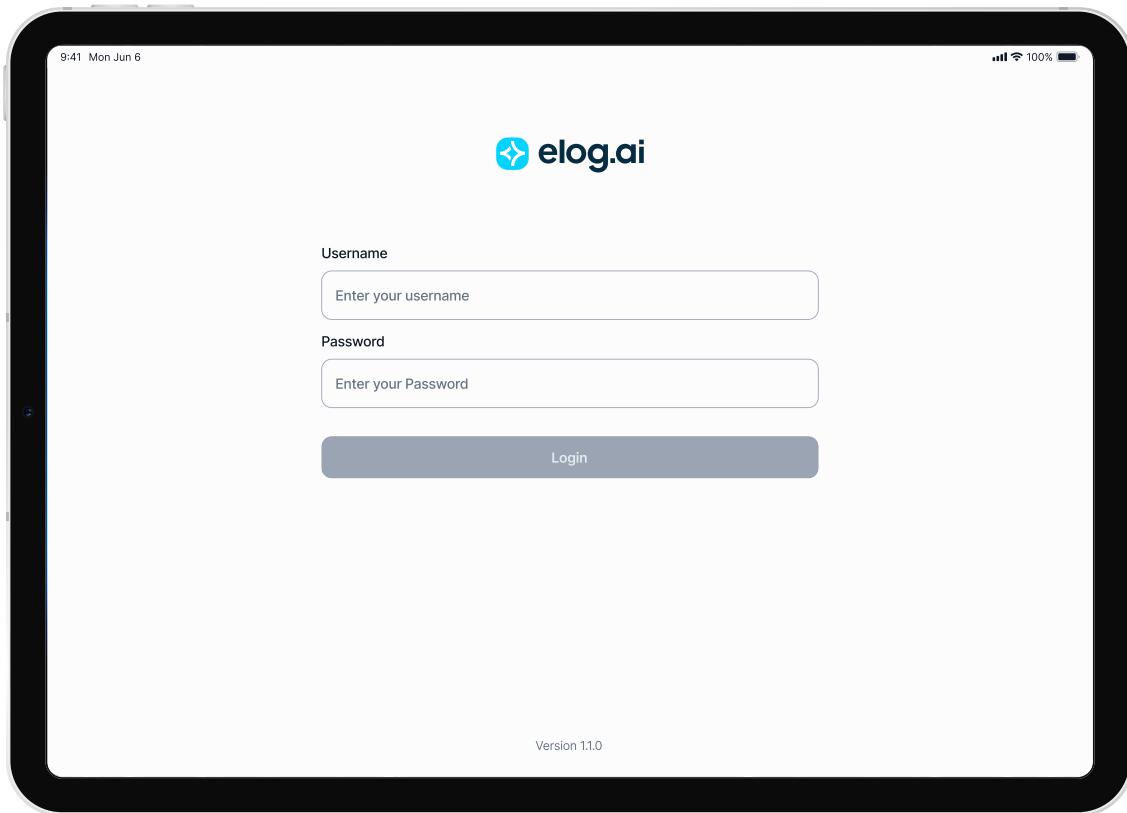


- 01** Use your username and password to log in to the ELD app. If you haven't created a ELog AI account yet, contact your fleet manager for assistance.

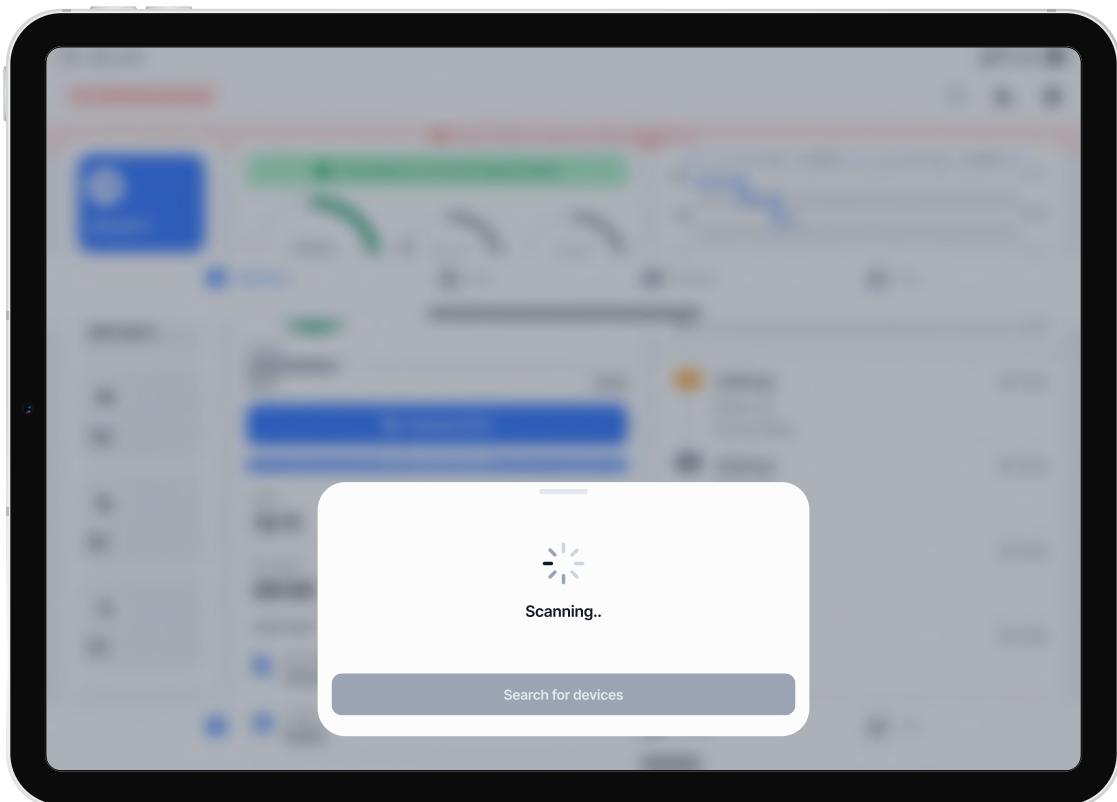


- 02** The ELD app on your tablet will automatically search for available ELD devices.

Application Guide

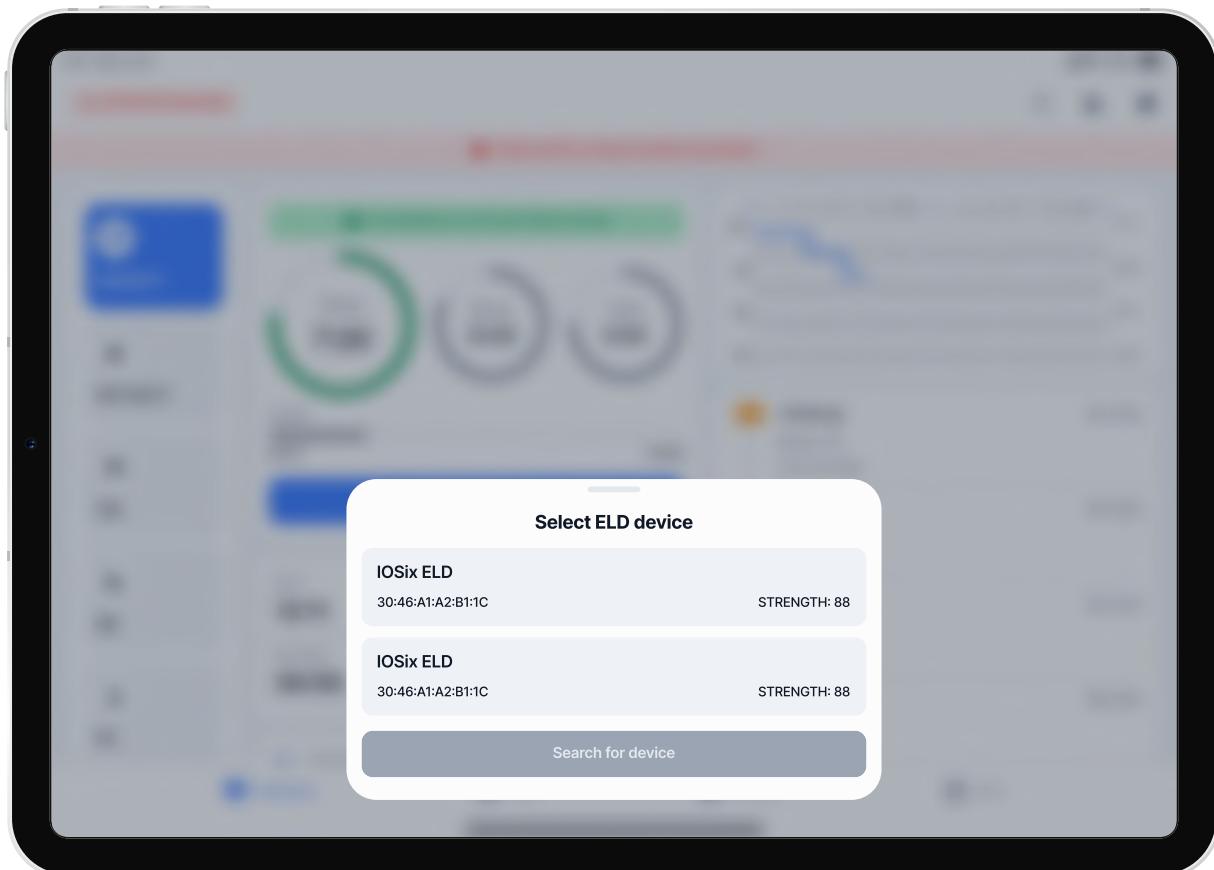

03 Select the ELD you want to use.

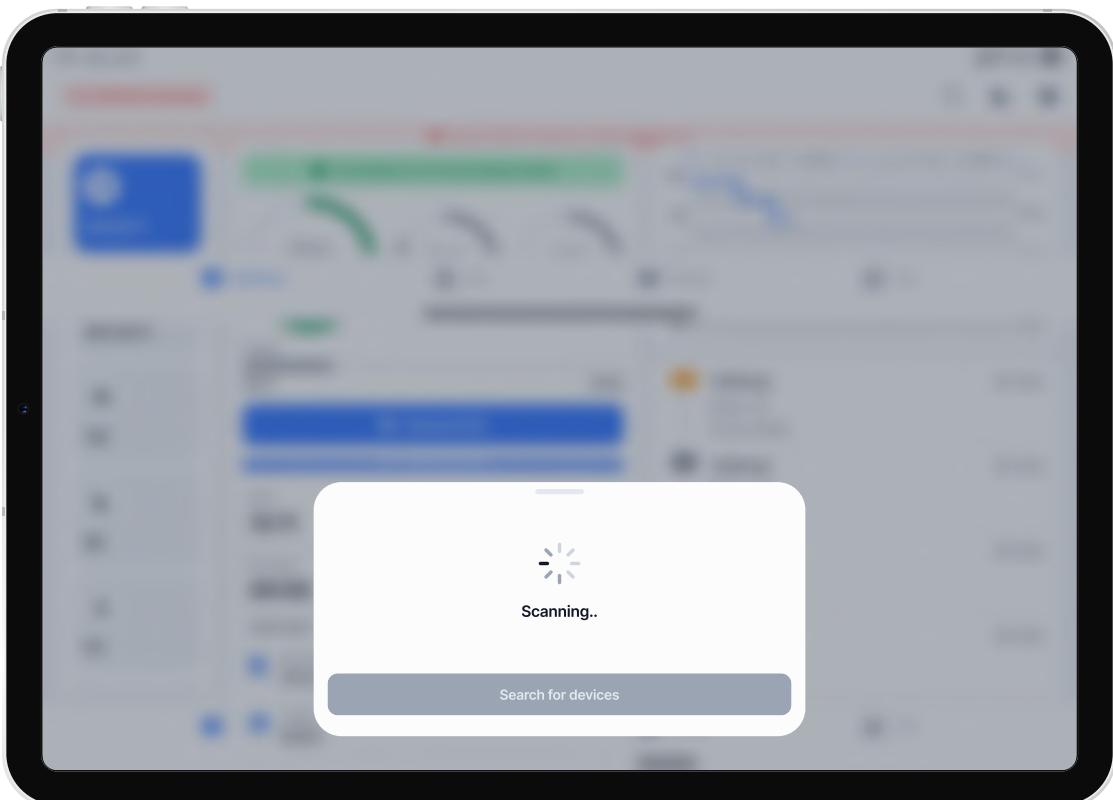

02 If the ELD is connected to the vehicle successfully, a green icon will appear in the top left corner of the app's dashboard.

**As per FMCSA
regulations, you are
required to keep this card
in your truck at all times.**

If you have any questions, you can call ELog AI at
[\(833\) 888 8353](tel:(833)8888353) or send an email to
support@elogai.com