Huawei Eyewear

Quick Guide

EVI-CG010






Charging

- 1. Connect one end of the charging cable with the charging port to the USB-C charging
- 2. Charge the glasses by keeping the charging cable connected to both legs, making sure the indicator light on the charging cable is on (if only one leg is connected it will not charge).

 Charging: yellow indicator on Full charge: green indicator

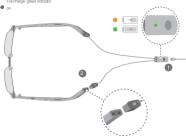



- Do not charge glasses while wearing them.
 - Do not bend the charge cable too much.
 - When the glasses are not worn for more than 3 minutes and are not charging, the glasses enter the low power consumption mode. Wear the glasses again or charge them, and the glasses automatically exit low power Restore factory settings consumption mode.



Use method 1 for the first time pairing.

Method 1: during charging

- 1. Press and hold the function key for 3 seconds. After the function key is released, the indicator blinks white. The glasses enter pairing state.
- 2. Turn on phone Bluetooth, search for the device name, and connect.









Make sure the glasses are charging. Press and hold the function key for 10 seconds. Release the key and wait until the indicator blinks white. The glasses are restored to factory settings and enter pairing state.

Method 2: in a non-charging state

1. When the glasses are wearing, pinch and hold the left leg for 5 seconds to prompt the glasses to enter pairing status after audio cue.



2. Turn on phone Bluetooth, search for the device name, and connect.

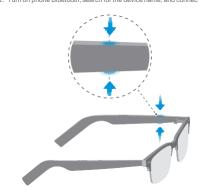










**** / **^**



 Press and hold any of the legs for 2 seconds or more to reject the call.



assistant, etc.) and the sliding function (Pev and Next) in the






Downloading and installing the app

Scan the QR code, download and install the Smart Life app, and get more functions and customized settings.



You can enable more function of pinching the left leg in the SmartLife app.

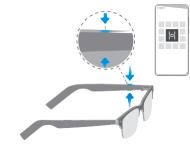


The functions of the glasses may vary depending on the device connected to the glasses. Refer to the function options displayed in the app

Replace the front frame of the glasses

The front frame of this product is replaceable. You can purchase an adaptable replaceable front frame (hereinafter referred to as the front frame). Perform the following steps to replace the frame


Quick removal:

1. Unfold the glass legs and place on the reverse side of the glasses.

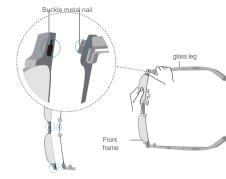

The front frame and the glass legs are fastened by a buckle and a metal nail.

- 2. Hold the front frame with one hand, hold the front end of one leg with the other, hold the front frame with your thumb, push the front frame vertically outward, and separate the metal nail from the front frame buckle.
- Do not press your thumb against the lens to prevent the lens from falling off due to excessive force.
- 3. Separate the metal nail on the other leg side from the buckle of the front frame
- 4. Hold the detached front frame and pull it outwards, and separate the metal nail in the middle part from the front frame buckle to complete the removal.

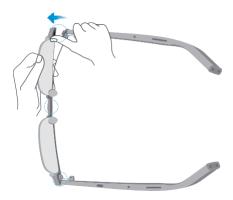

Quick assembly

- 1. Hold the front frame with one hand and the front end of the leg with the other.
- 2. Align the middle metal nail with the middle buckle of the front frame and press it in.
- 3. Press the metal nail on both sides into the buckles to complete the assembly.





 long-term wear (not applicable to sunglasses). For more information on the safe use of products, see Safety Information.